




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EWD1477. You'll find the answers to all your questions on the AEG-ELECTROLUX EWD1477 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EWD1477
User guide AEG-ELECTROLUX EWD1477
Operating instructions AEG-ELECTROLUX EWD1477
Instructions for use AEG-ELECTROLUX EWD1477
Instruction manual AEG-ELECTROLUX EWD1477

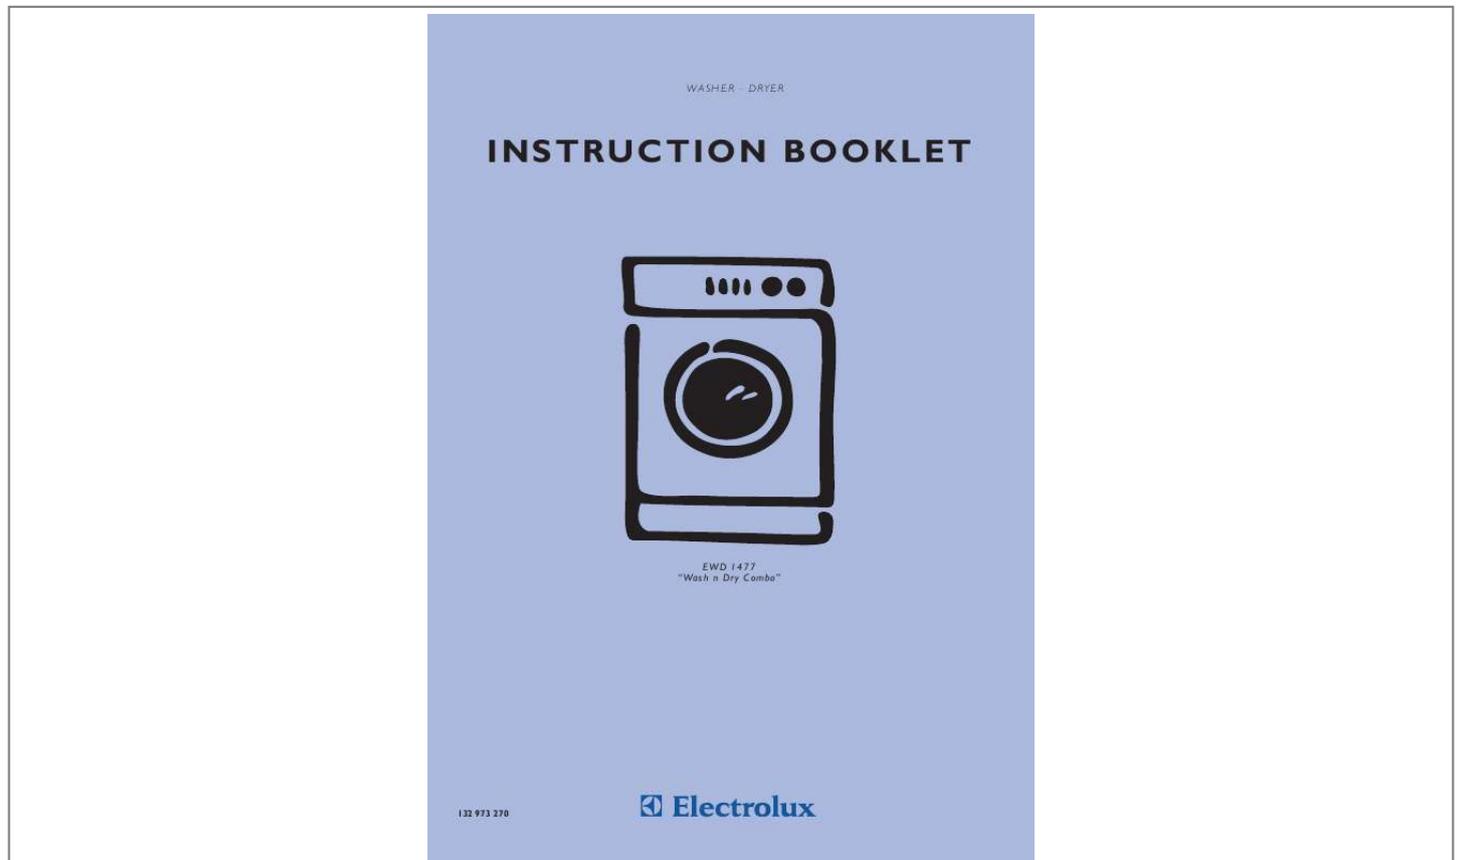

[Your user manual](#)
[AEG-ELECTROLUX EWD1477](#)

Manual abstract:

· Clean the lint trap after every cycle. Lint must not be allowed to accumulate around the unit, ensure the area is kept clean of lint. · Always unplug the appliance and shut the water tap after use. General safety · Repairs to the machine must be carried out only by qualified personnel. Repairs carried out by inexperienced persons could cause serious danger. Contact your local Service Centre. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. · During high temperature wash programmes and during the drying cycle the door glass may get hot. Do not touch it! To minimize the risk of fire in a washer-dryer, following should be observed: · Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a washer-dryer.

The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard. Use · This appliance is designed for domestic use.

It must not be used for purposes other than those for which it was designed. · Only wash and dry fabrics which are designed to be machine washed and dried. Follow the instructions on each garment label. · Do not overload the appliance. Follow the instructions in the instruction book.

· Make sure that all pockets are empty. Objects such as coins, safety pins, pins and screws can cause extensive damage. · Do not machine wash garments saturated with petroleum, methylated spirits, trichlorethylene, etc. If such fluids have been used to remove stains prior to washing, wait until they have completely evaporated from the fabric before placing garments in the appliance. · The washer-dryer is not to be used if industrial chemicals have been used for cleaning. 4 If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a washer-dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard. The 'cool down' cycle of washer-dryers should be used to reduce the temperature of the items. They should not be removed from the washer-dryer or piled or stacked while hot. · Items that have been previously cleaned in, washed in, soaked in or spotted with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in a washer-dryer. Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosine, spot removers (some brands), turpentine, waxes and wax removers.

· Items containing foam rubber (also known as latex foam) or similarly textured rubber, like materials should not be dried in a washer-dryer on a heat setting. Foam rubber materials can, when heated, produce fire by spontaneous combustion. · Fabric softeners or similar products should not be used in a washer-dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product. · Undergarments that contain metal reinforcements should not be placed in a washer-dryer. Damage to the washer-dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items. · Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in a washer-dryer. · Rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a washer-dryer. Child safety · This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

· The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach..



[Your user manual](#)

[AEG-ELECTROLUX EWD1477](#)