

Overview

The following document intends to familiarize one with the use of features in our *Smart Classrooms* via the Philips Remote Control. The remote itself allows for full control of all devices installed in the room.

General Operations Using the Pronto Remote



AUX AUDIO to send auxiliary sound to the amplifier.

Contrast controls for the touch screen display.

Backlight initiate button.

Press on the **VCR** icon to get to the VCR controls.

Press on the **DVD** icon to get to the DVD controls.

Press on the **Guest Comp** icon to send the guest computer desktop to the projector.

Press on the **MASTER SHUT DOWN** icon and hold it for at least 6 seconds to turn every equipment off.

Master **MUTE** button.

Press on the **HELP** icon for support information.

Master **VOLUME** controls.

Press on the **PRE-SENDER** icon to display documents from the document camera on the projector

Press on the **AUX** icon to display auxiliary AV inputs on the projector.

Press on the **COMPUTER** icon to display the console computer on the projector.


ANY TROUBLE USING THE PRONTO PLEASE REFER TO THE NEXT PAGE

Starting up Troubleshooting

Blank Screen !

The Pronto screen will be blank when picked up from the charger base.

To initiate the Pronto just Touch anywhere on the touch screen as indicated.

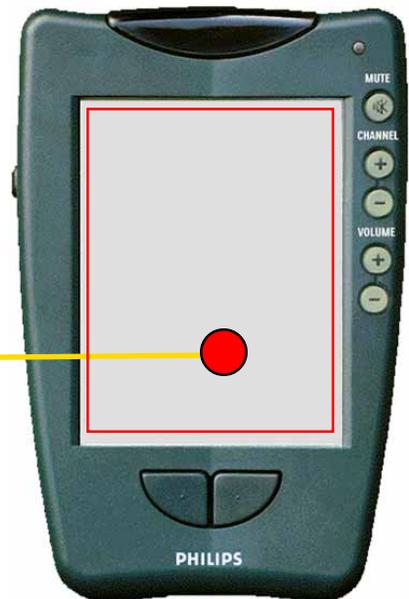

Where is the main page!

Just press on the icon that resembles a house at the top left hand corner of any equipment menu page. Should a display other than the main page appear.

No Display!

If display is dark or do not appear check contrast dial before calling for. There is a contrast dial on the right side of the Pronto receiver that is similar to a volume control dial on a walkman.



Playing a DVD



Step 1
DVD player in this auditorium is on the computer. Therefore start the DVD program and place a DVD in the DVD-ROM.

The **DVD** controls page as shown in the left will be displayed.

Step 2
Press the **DVD** icon in the main menu.

Step 3
Press the **COMPUTER** icon to send the DVD video signal to the projector.



Playing the VCR



Step 1
Press the **VCR** icon in the main menu.

The **VCR** controls page as shown in the left will be displayed.

Step 2
Press the **PLAY** icon.

Step 3
Press the **SHOW** icon to send the VCR video signal to the projector.



Displaying an Auxiliary Video Source



Step 1

Connect the AUX video source to the terminals labeled AUX VIDEO on the backslash of the console.

Step 2

Press the AUX VIDEO icon on the main page.

Step 3

Press the Show icon to display the video source through the projector.



Displaying a Laptop Computer



Step 1

Connect the **VGA, Mouse and Audio** cables onto the **GUEST COMPUTER** plate on the console backslash

Step 2

Press the GUEST COMP icon on the main page.

Step 3

Press the SHOW icon to display the output through the computer.



Visual Presenter



Step 1


Press the PRESENTER icon in the main page.

Step 2

Place Document on the Visual Presenter and press SHOW. Lighting controls are on the Visual Presenter.

Step 3

Use the icons AUTO FOCUS, ZOOM IN and ZOOM OUT. To customize the output

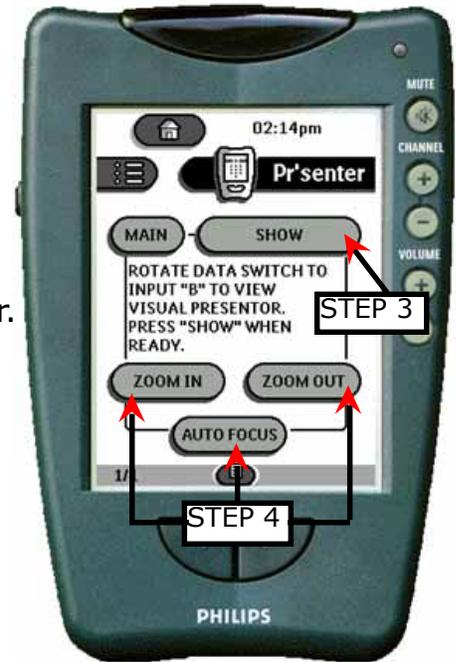

Displaying the Console Computer



Step 1

Turn on the computer.

Step 2

Press the **COMPUTER** icon on the main page.

Step 3

Press the **SHOW** icon to display the output through the computer.

