

Fisher-Price®

J6982



www.fisher-price.co.uk

Consumer Information

WARNING

To prevent serious injury or death from falls and being strangled in the restraint system:

- **Fall Hazard** - It is dangerous to use this product on an elevated surface, since child's movement may cause the product to slide or tip over. Use only on a floor.
- **Suffocation Hazard** - Never use on a soft surface (bed, sofa, cushion) since the product can tip over and cause suffocation in soft surfaces.
- Always use the restraint system.
- Not recommended for children who can sit up by themselves (6 months approximately, until 9 kg/20 lbs).
- Never leave child unattended.
- Never use the toy bar as a handle.

CAUTION

This package contains small parts in its unassembled state. Adult assembly is required.

IMPORTANT! Please keep these instructions for future reference, as they contain important information.

- Please read these instructions before assembly and use of this product.
- Use from birth until child becomes active and can climb out of the seat.
- Maximum weight: 9 kg.
- Adult assembly is required.
- Tool needed for assembly: Phillips screwdriver (not included).
- Requires four "D" (LR20) **alkaline** batteries (not included) for operation.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500303; www.service.mattel.com/uk.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.


Malaysia: Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P)
Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country
Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.

Parts


IMPORTANT! Please remove all parts from the package and identify them before assembly. Some parts may be packed in the pad.




Headrest Pad

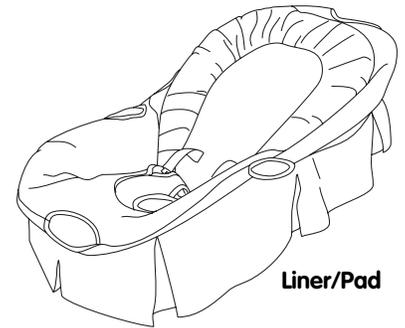


Liner/Pad

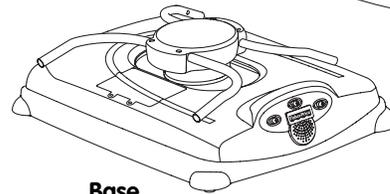


Base

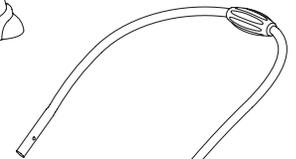


Seatback Tube

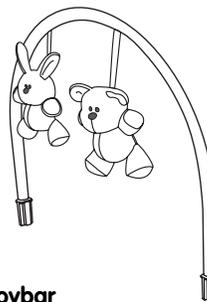

Toybar
(Toys may be different)

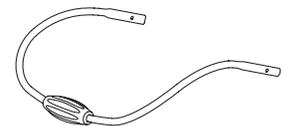

Footrest Tube

 

2 Hubs

Tighten and loosen all screws with a Phillips screwdriver.
Do not over-tighten the screws.





#8 x 3,2 cm Screw - 2

Fastener Shown Actual Size

Battery Installation

Hint: We recommend using **alkaline** batteries for longer battery life.

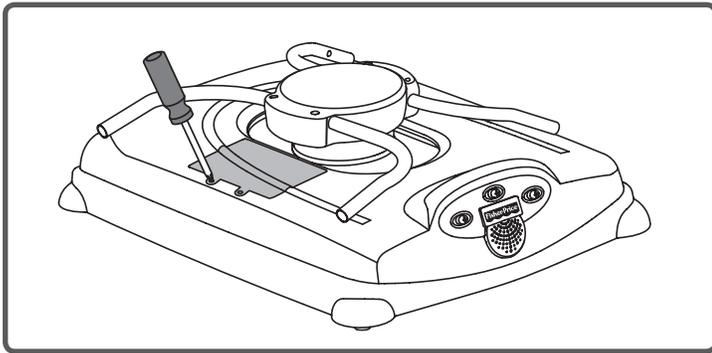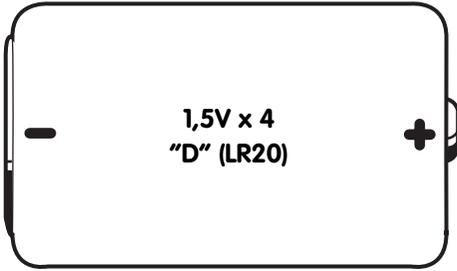

- Loosen the screws in the battery compartment door and remove the battery compartment door.
- Insert four "D" (LR20) **alkaline** batteries into the battery compartment.
- Replace the battery compartment door and tighten the screws.
- Low battery power may cause this product to operate erratically (no movement/no sounds) and the product may not turn off. If this should happen, remove and discard all batteries and replace with four, **new "D" (LR20) alkaline** batteries.

 Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.

To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

Assembly

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. **DO NOT** use if any parts are missing or broken. Contact Mattel for replacement parts and instructions if needed. Never substitute parts.

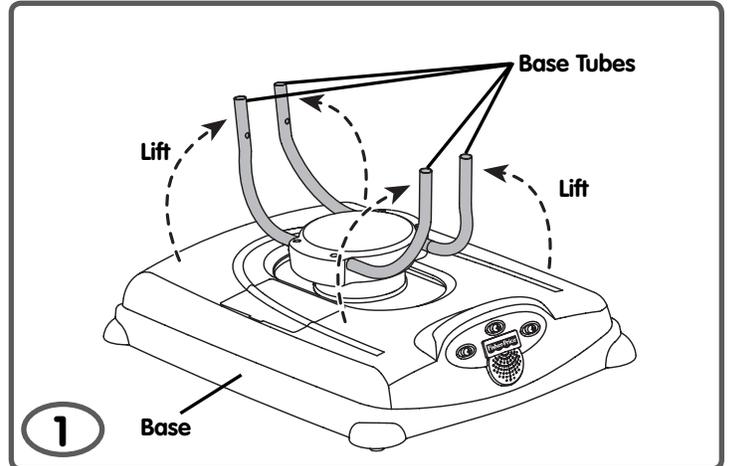

- Lift both base tubes.

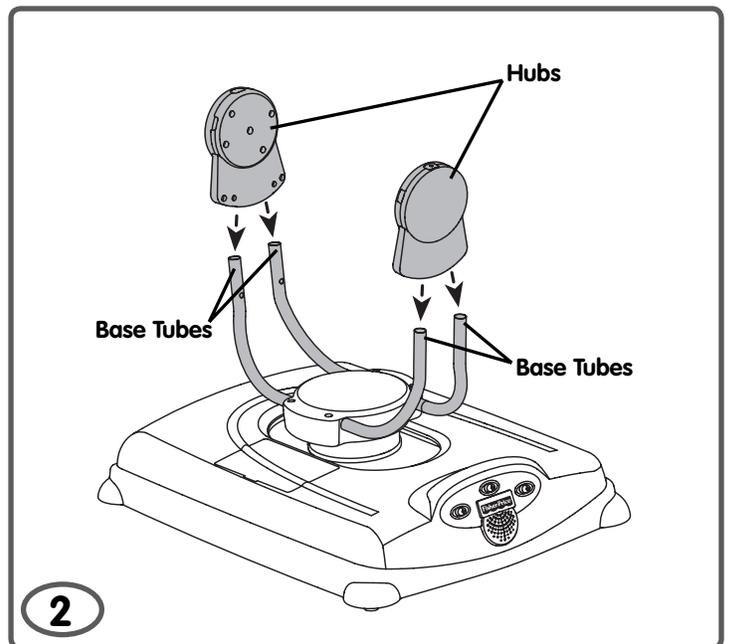


- Position the hubs with the smooth side out.
- Fit the hubs onto the base tubes.


Hint: The hubs are designed to fit the base tubes one way. If the hubs do not fit on the base tubes, check to be sure the smooth side is out.

- Push the hubs down until you hear a "click".
- Pull up on the hubs to be sure each is secure.


Assembly

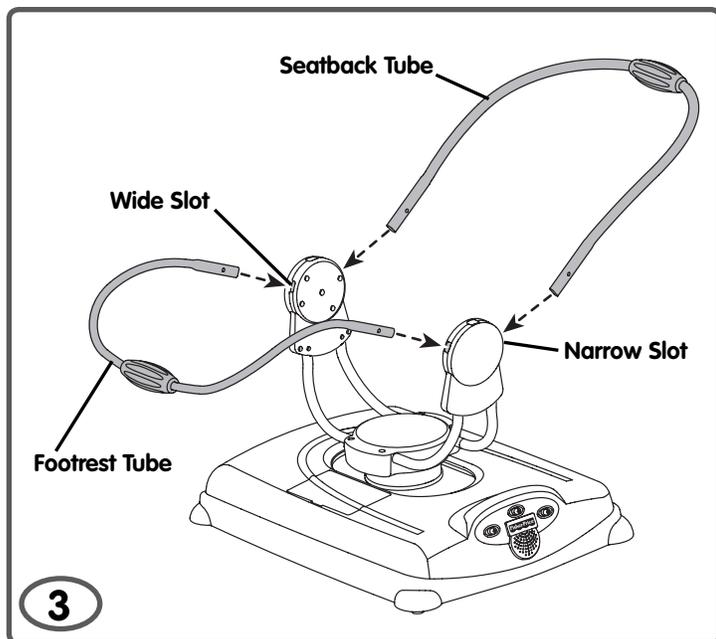

- Position the footrest tube so that it curves down.
- Fit the ends of the **footrest tube** into the **wide slots** in the hubs.
- Position the seat back tube so that it curves down.
- Fit the ends of the **seat back tube** into the **narrow slots** in the hubs.

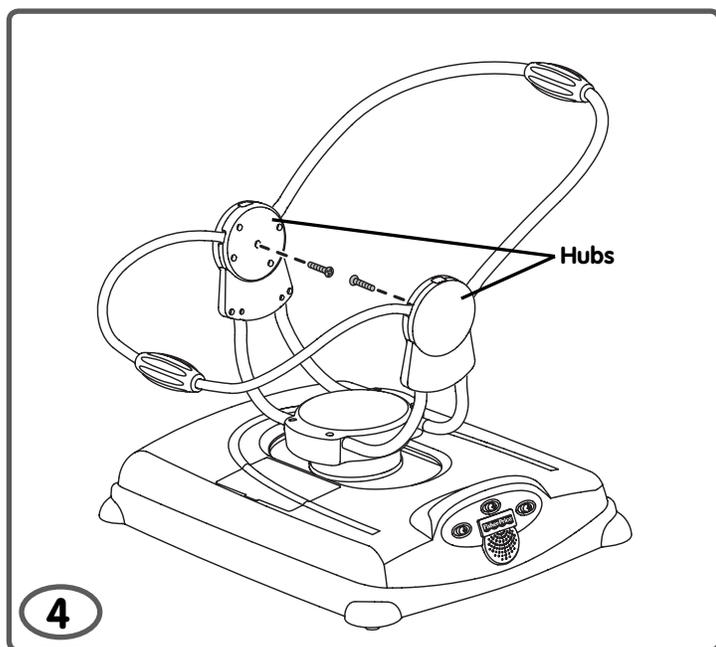

- Insert a #8 x 3,2 cm screw into each hub and tighten.

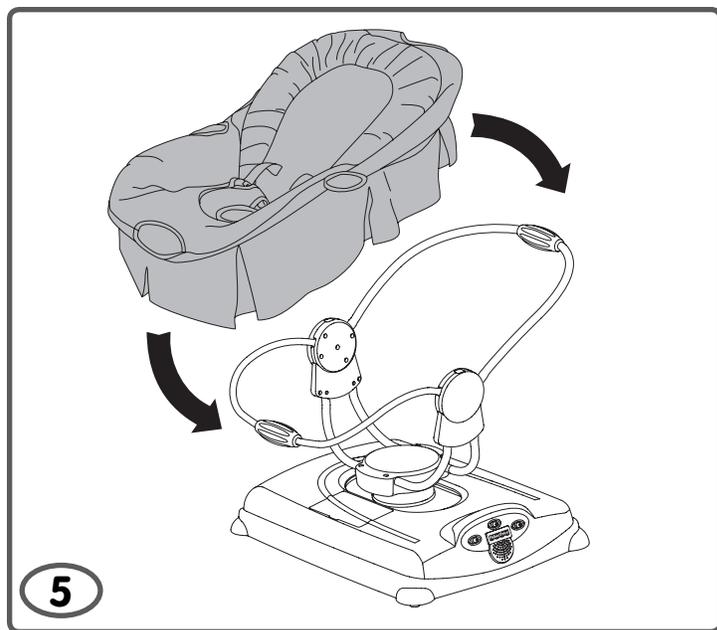


- Position the pad onto the frame assembly. The extra, padded portion should be toward the seat back tube.




- Fit the upper pocket on the pad around the seat back tube.


Assembly

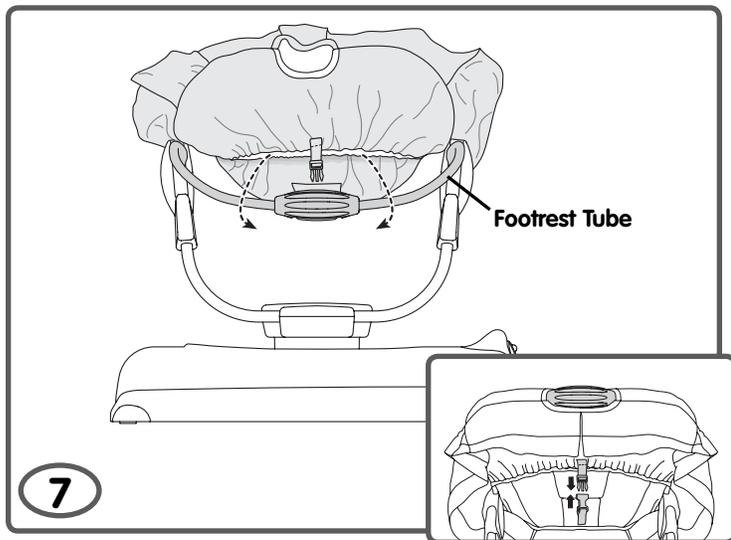


- 7
- Fit the lower pocket on the pad around the footrest tube. Fasten the straps underneath the footrest tube to secure the lower portion of the pad.

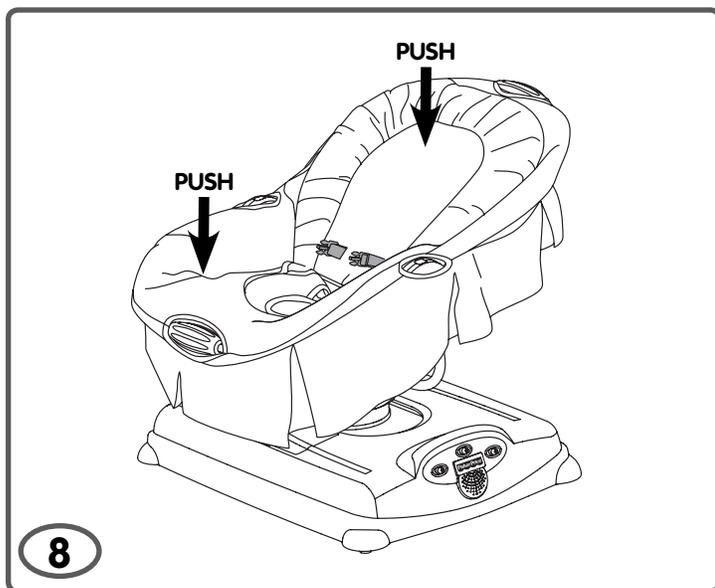

- 8
- Push down on the pad to be sure it is assembled properly. If the pad falls through the frame, you have not assembled it properly. Please re-read these instructions and re-assemble the pad.

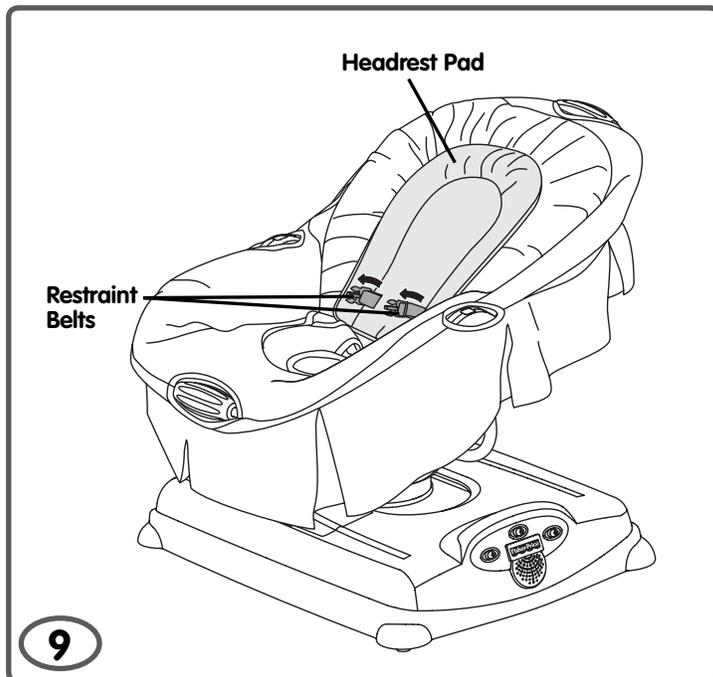

- 9
- Fit the restraint belts through the slots in the headrest pad.
 - Fit the headrest pad to the liner/pad.

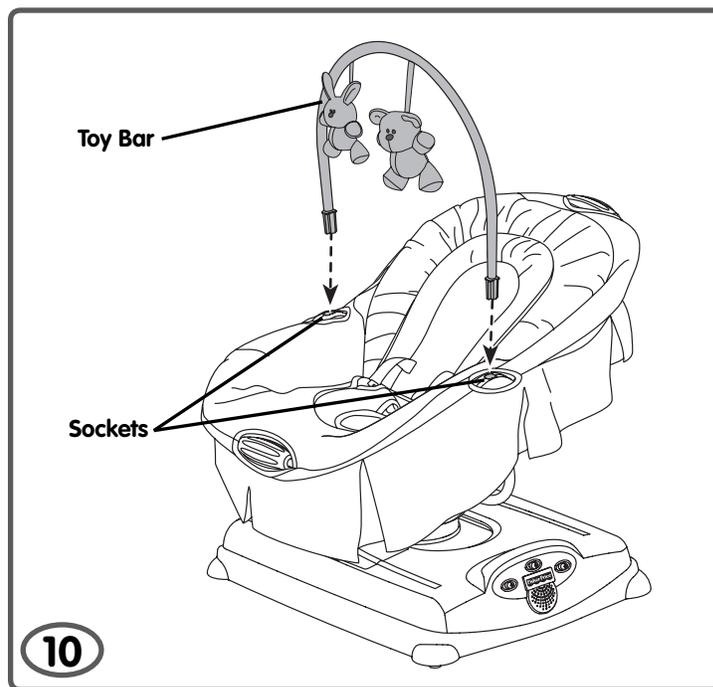

- 10
- Fit the toy bar plugs into the frame sockets..


Set-up



WARNING

To prevent serious injury or death from falls and being strangled in the restraint system:

- **Fall Hazard** - It is dangerous to use this product on an elevated surface, since child's movement may cause the product to slide or tip over. Use only on a floor.
- **Suffocation Hazard** - Never use on a soft surface (bed, sofa, cushion) since the product can tip over and cause suffocation in soft surfaces.
- Always use the restraint system.
- Not recommended for children who can sit up by themselves (6 months approximately, until 9 kg/20 lbs).
- Never leave child unattended.
- Never use the toy bar as a handle.

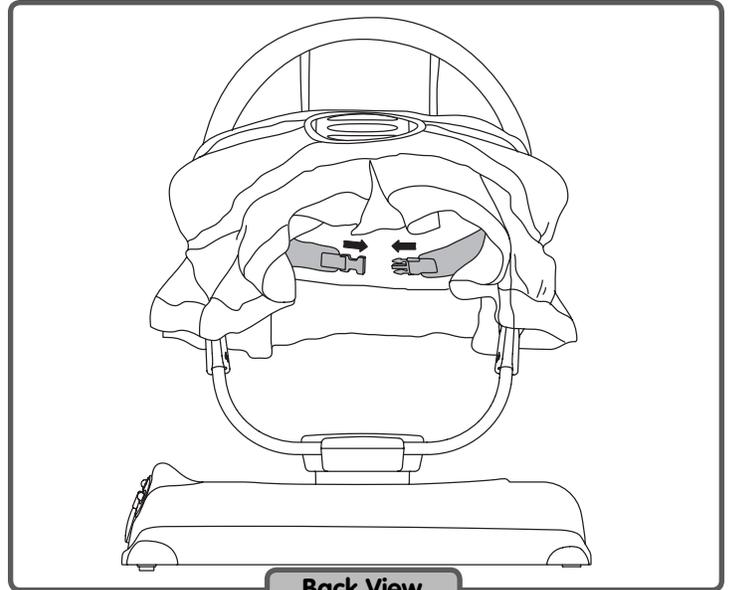

Seat Position


- Adjust the seat position for baby's comfort.
 - Lift the fabric skirt near the seat back of the frame.
- Upright:** Fasten the liner/pad buckles. Make sure you hear a "click".
Recline: Unfasten the liner/pad buckles.




Swinging Direction

- Adjust the seat to change gliding motion to: **Side-to-Side** or **Head-to-Toe**.
- Turn the seat for baby's comfort.

Securing Baby

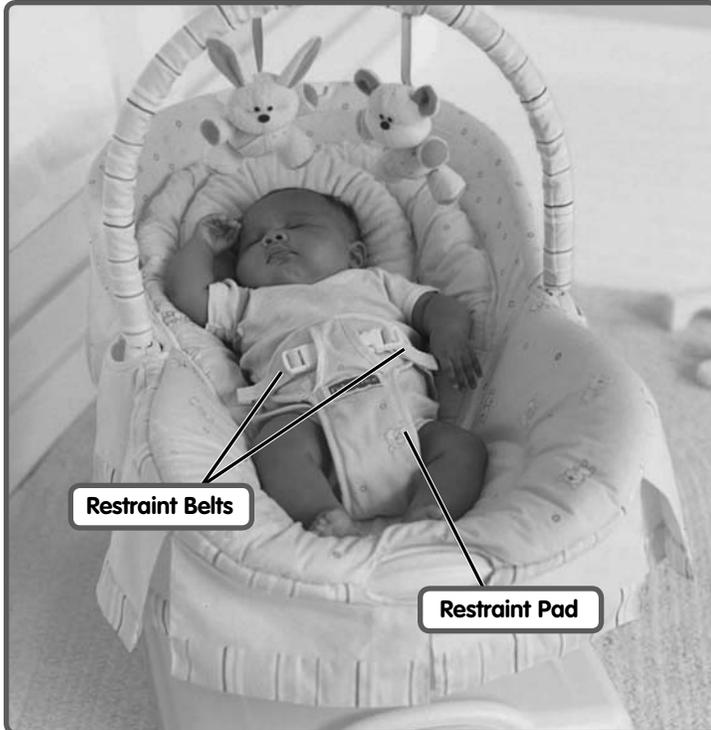

- Place your child in the product. Position the restraint pad between your child's legs.
- Fasten both restraint belts to the buckles on each side of the restraint pad. Make sure you hear a "click" on both sides.
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

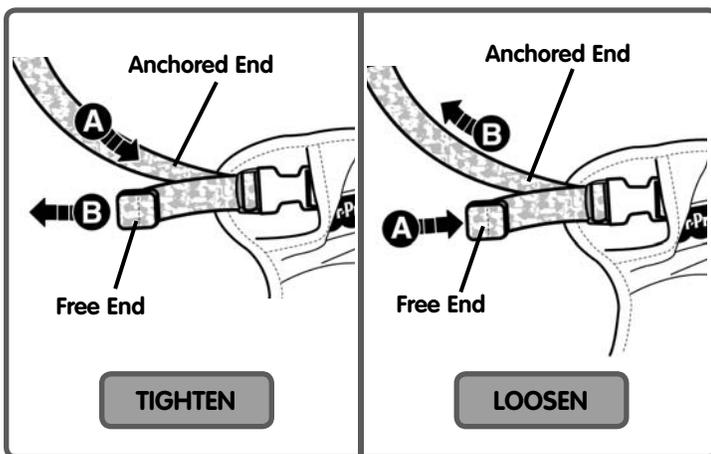


To tighten the belts: Feed the anchored end of the restraint up through the buckle to form a loop **A**. Pull the free end of the restraint **B**.

To loosen the belts: Feed the free end of the restraint up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the restraint to shorten the free end of the belt **B**.


Please Note: After adjusting the restraint system to fit your child, make sure you pull on it to be sure it is securely fastened.

Starting Gliding Motion

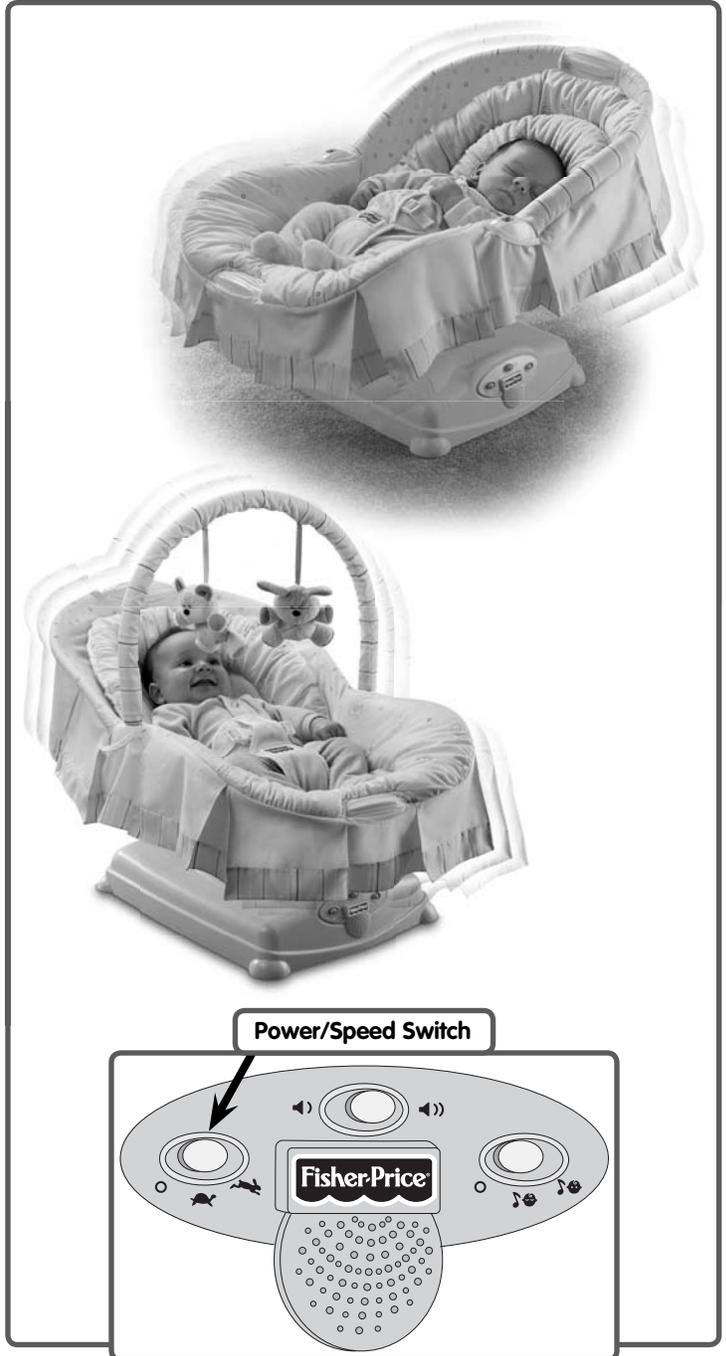

- Make sure your child is properly secured in the seat.
 - Slide the power/speed switch to **slow** or **fast** .
- Hint:** In most cases, the slow setting works best for a smaller child, while the fast setting works best for a larger child. If gliding stops while using the slow setting, try the fast setting. Give the seat a light push to start the gliding motion again.
- Be sure to turn this product off when not in use. Slide the power/speed switch to the off setting .
 - For best performance, make sure this product is used on a completely level surface.
- Note:** If gliding motion is slow in one direction (and you hear a winding or grinding noise), you may be using this product on an inclined surface. Use this product only on a completely level surface.

Music

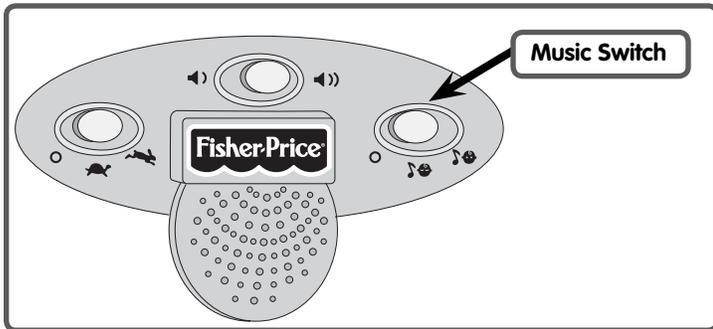

• Choose the style of music for baby. Slide the music switch to:

 Soothing

 Playful

 Off

• Slide the volume switch to  for low volume;  for high volume.

Note: Low battery power may cause this product to operate erratically (no movement/no sounds) and the product may not turn off. If this should happen, remove and discard all batteries and replace with four, new “D” (LR20) alkaline batteries.

Room-to-Room Portability



- Make sure your child is properly secured in the glider.
- Grasp both handles, as shown, and lift.
- Carefully carry the glider to another room. Be sure to set the glider down only on the floor.

Care

- The liner/pad and headrest pad are machine washable. Wash them separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.
 - The frame and toy bar may be wiped clean using a mild cleaning solution and a damp cloth. Do not immerse the frame.
- To remove the liner and headrest pad:**
- Feed the restraint belts back through the slots in headrest pad. Pull to remove the headrest pad.
 - Lift the fabric skirt near the footrest of the frame.
 - Unfasten the liner/pad buckles. Pull to remove the liner/pad bottom pocket from the footrest tube; pull to remove the liner/pad upper pocket from the seatback tube.
 - To replace the pad: refer to Assembly step 5 - 9.