

FOR ELECTROLUX
COOKER HOOD
EFC 630

cod. 4329083 01 - 0998

Thank you for buying an Electrolux product.

To enable you to use your appliance effectively and safely, please read this instruction book carefully before using the appliance and retain for future reference. If you require guidance in the use of the appliance or require further information on Electrolux Products, please contact our Customer Care Department.

Customer Care Department
Electrolux
PO Box 47
Newbury
Berkshire
RG14 5XL

Tel: 01635 522799
Fax: 01635 42970

To register ownership, please ensure you complete and return the guarantee card supplied with the appliance.

For the User

Important Safety Information

Your Appliance

Operating Instructions

Cooker Hood Controls

To Operate

Recirculation

Extraction

Maintenance and Cleaning

External Cleaning

Metal Grease Filters

Charcoal Filters

To Remove/Replace the Charcoal Filters

Changing the Light Bulb

Something Not Working

Service and Spare Parts

Guarantee Conditions

For the Installer

Technical Information

Electrical Connections

Electrical Requirements

Electrical Connection

Installing the Cooker Hood

Installation Requirements

Unpacking

Clearance Height

Fitting the Wall Brackets

Fitting the Canopy Hood

Venting

Recirculation

Fitting the Chimney Stack

Service Force Centres

To register ownership, please ensure you complete and return the guarantee card supplied with the appliance.

Guide to use the instruction book

The following Symbols will be found in the text to guide you through the instruction book



Safety instructions



Step by step instructions

IMPORTANT SAFETY INFORMATION

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings of these warnings contact the Customer Care Department.

■ Installation

- Any installation work must be undertaken by a qualified electrician or a competent person.
- This hood must be installed in accordance with the installation instructions and all measurements must be adhered to.
- If the cooker hood is installed for use above a gas appliance then the provision for ventilation must be in accordance with the Gas Safety Codes of Practice BS.6172, BS.5440 and BS.6891 (Natural Gas) and BS.5482 (LP Gas) 1994, the Gas Safety (Installation & Use) Regulations, the Building Regulations issued by the Department of the Environment, the Building standards (Scotland) (Consolidated) Regulations issued by the Scottish Development Department.
- The fan motor of this cooker hood incorporates a cut-out device which will operate if the cooker hood is installed below the minimum height recommended under section 'Clearance Height', or if the motor becomes overheated. If the cut-out device is activated, switch off the fan motor and allow the cooker hood to cool. The cut-out device will reset itself when the fan motor has cooled significantly.
- It is dangerous to alter the specifications or modify this product in any way.
- When installed between adjoining wall cabinets the wall cabinets must not overhang the hob.
- If the room where the hood is to be used contains a fuel burning appliance such as a central heating boiler then its flue must be of the room sealed or balanced flue type.
- If other types of flue or appliances are fitted ensure that there is an adequate supply of air to the room.
- The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose.
- Do not install above a cooker with a high level grill.

■ Child Safety

- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.


■ During Use

- This product is for domestic use only.
- Never leave frying pans unattended during use as over-heated fats and oils might catch fire.
- Never do flambé cooking under this cooker hood.
- Do not leave naked flames under the hood.

■ Maintenance and Service

- This appliance can be a hazard if the synthetic paper and charcoal filters are not replaced as recommended.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunction. Refer to your local Electrolux Service Force Centre. Always insist on genuine spare parts.

YOUR APPLIANCE

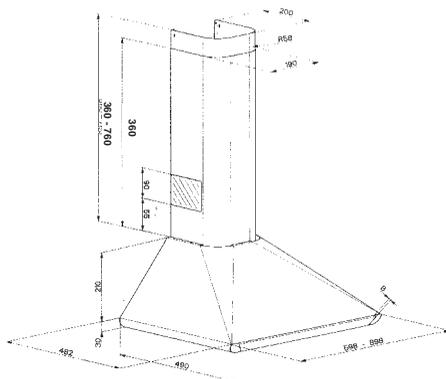


OPERATING INSTRUCTIONS

The cooker hood is designed to extract unpleasant odours from the kitchen, it will not extract steam. The appliance can be installed to recirculate or extract contaminated air.

Cooker Hood Controls

The hood functions are controlled by three slide switches located to the right on the underside of the hood immediately in front of the metal grease filter.

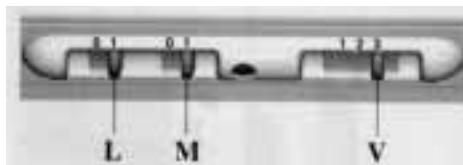

Worktop Lighting

The switch marked with lamp symbol operates the worktop lighting

- L. 0 - Off
- 1 - On

Fan Control

M. Fan ON/OFF control

- 0 - Off
- 1 - On

V. Fan Speed Control

- 1 - Low
- 2 - Normal
- 3 - Boost

To Operate

Select the required fan speed and light if required.

Recirculation

The air is cleaned by passing through the filters and then back into the kitchen.

Extraction

The contaminated air enters the hood passing through the grease filter and out through the ducting into the atmosphere

To obtain the best performance it is advisable to switch on the hood a few minutes before you start cooking and leave it running for approximately 15 minutes after finishing.



When used in the ducting mode the charcoal filters are not required.

Never do flambé cooking under this cooker hood.

Never leave frying pans unattended during use as over-heated fats and oils can catch fire.

Do not leave naked flames under the cooker hood.

Ensure heating areas on your hob are covered with pots and pans when using the hob and cooker hood simultaneously.

MAINTENANCE AND CLEANING



Before carrying out any maintenance or cleaning isolate the cooker hood from the mains supply.

The cooker hood must be kept clean, as a build up of grease or fat can be a fire hazard

External Cleaning

Wipe the cooker hood frequently with warm soapy water using a mild detergent.



Never use scouring pads or abrasive cleaners.

Never use excessive amounts of water when cleaning particularly around the control panel.

Metal Grease Filters

The grease filter absorbs grease and dust during cooking to help keep the appliance clean inside, and should be cleaned approximately once every month or more often if the hood is used for more than 3 hours a day.



Remove the metal grease filters one at a time by:

Releasing the catches on the filters, the filters can now be removed.

The metal grease filters should be washed, by hand, in mild soapy water or in a dishwasher. Allow to dry completely before replacing.

Charcoal Filters

In the recirculation mode the charcoal filters absorb smells and unwanted odours.

The charcoal filters cannot be cleaned, we recommend they should be replaced approximately every three months or more often if the hood is used for more than three hours per day.



To Remove/Replace the Charcoal Filters

1. First remove the metal grease filters.
2. Twist the charcoal filter anti-clockwise and remove.
3. To replace the charcoal filters, remove the metal grease filters.
4. Place one filter over the inlet grille at either end of the fan housing and twist into position.




This appliance can be a fire hazard if the grease and charcoal filters are not cleaned and replaced as recommended.




Changing the Light Bulb

1. Loosen and remove the screws and brackets retaining the glass cover.
2. Lever out the brackets and slide the glass cover to the right.
3. When the cover has cleared the left hand lugs, lower the left hand edge while slide the cover to the left.

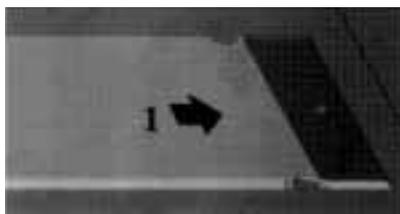

If the light bulb fails to function check that the bulb is fully screwed into the holder. If bulb failure has occurred then it should be replaced with a 220-240 Volt 40 W clear cylindrical shape bulb with a small E14 screw thread.

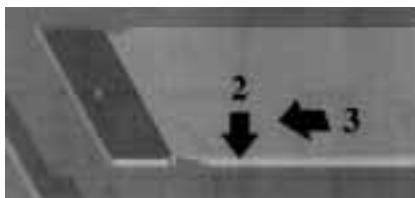

Replacement filters and light bulbs can be obtained from your local Service Force Centre.

SOMETHING NOT WORKING

If, having followed these instructions carefully, your cooker hood fails to work properly please carry out the following checks.

Symptom	Solution
<p>The cooker hood will not start</p> <p>The cooker hood is not working effectively</p>	<ul style="list-style-type: none"> • Check the hood is connected to the electricity supply. • Make sure the switch is in the 'ON' position. • The fan speed is set high enough for the task • The grease filter is clean. • The kitchen is adequately vented to allow the entry of fresh air. • If set up for recirculation, check that the charcoal filter is still effective. • If set up for extraction, check that the ducting and outlets are not blocked.
<p>The cooker hood has switched off during operation</p>	<ul style="list-style-type: none"> • The safety cut-out device has been tripped. • Turn off the hob and then wait for the device to reset.

If after all these checks, the fault persists, contact your local Service Force Centre, quoting the model and serial number.

Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.

In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

SERVICE AND SPARE PARTS

If you require an engineer or spare parts contact your local Service Force Centre by telephoning:

0990 929929

Your telephone call will be routed to your local Service Force Centre. The addresses are listed in the back of the book.

For general assistance with your appliance or for further information on Electrolux products please contact our Customer Care Department.

Customer Care Department,
Electrolux
PO Box 47
Newbury
Berkshire RG14 5XL

Tel: 01635 522 799

GUARANTEE CONDITIONS

We, Electrolux Ltd., undertake that if within twelve months of the date of the purchase this Electrolux built-in appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, the company will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electrical supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by Electrolux Service Force Centre.
- Any appliance or defective part replaced shall become the property of this company.

Home visits are made between **8.30am and 5.30pm Monday to Friday**. Visits may be available outside these hours in which case a premium will be charged.

EXCLUSIONS

This Guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right appliances improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are the subject of rental agreements.
- Products of Electrolux manufacture which are not marked by Electrolux Ltd.

This guarantee is in addition to your statutory and legal rights.

ELECTROLUX EUROPEAN GUARANTEE

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0)3 44 62 22 22
Germany	Nurnberg	+49 (0)911 323 2600
Italy	Pordenone	+39 (0)1678 47053
Sweden	Stockholm	+46 (0)20 78 77 50
UK	Newbury	+44 (0)1635 522 799

INSTALLING THE COOKER HOOD

Please ensure that when the appliance is installed it is easily accessible to an engineer in the event of a breakdown.

 *All installations must comply with the local authorities requirements for the discharge of exhaust air.*


Incorrect installation may affect the safety of this cooker hood.

Installation Requirements

 *Before installation check the wall to which the cooker hood is to be fitted for electric cables, water pipes or gas.*

This cooker hood is designed to be fixed to any rigid vertical surface over a cooking area, and can be used in the extraction (ducted to the outside) or recirculation mode.


The installation work must be undertaken by a qualified and competent person. The manufacturer disclaims any responsibility for damage due to incorrect installation of the cooker hood or if the hood is not installed in compliance with relevant regulations controlling this type of installation.

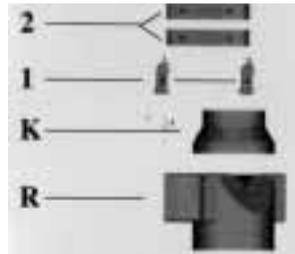

Unpacking

The EFC630 is supplied with the following components for installation:

- Canopy (C), including controls, worktop illumination and fan unit.
- U-shaped upper chimney section (S)
- U-shaped lower chimney section (I)
- Recirculation grilles (G)
- Reduction flange 150-120mm dia (K)
- Recirculation spigot (R)
- Wall fixing brackets for (1)
- Wall fixing brackets for (2)
- Rawl plugs
- Fixing screws
- 120-125mm ducting collar

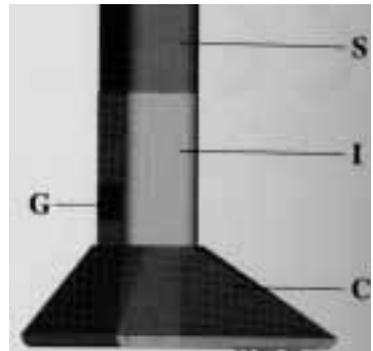

Clearance Height

The cooker hood is designed to be fitted over a cooking appliance at the clearance heights stated, providing the maximum output of the appliance beneath does not exceed the maximums quoted in the Technical Specifications.

If the output of the appliance below the cooker hood exceeds the maximum outputs quoted, please refer to the cooker manufacturer's installation instructions.

A minimum clearance height of 650mm (25½") is required when installed above a built-in electric hob, or 700mm (27½") when installed above a built-in gas hob.

A minimum clearance height of 685mm (27") is required when installed above a slot-in electric cooker, or 787mm (30½") when installed above a slot-in gas cooker.

When installed between adjoining wall cabinets, the wall cabinets must not overhang the hob and the distance between the underside of the cabinet and the worktop must be 450mm. If the height of the wall cabinet is less than 450mm, a gap of 50mm must be maintained either side of the hob.




This cooker hood must not be installed above a cooking appliance with a high level grill.




Fitting the Wall Brackets

1. Draw a vertical line on the wall from the centre of the cooking appliance up to the ceiling, using a spirit level and marking pen. This is to ensure the correct vertical alignment of the appliance.
2. Mark the centre positions Y for the wall bracket keyhole fixing screws item 1 (**lower fixing bracket**) at 100mm either side of the vertical line. Ensure that the distance between the lowest point of the hood and the cooking appliance beneath meet the clearance requirements quoted above.

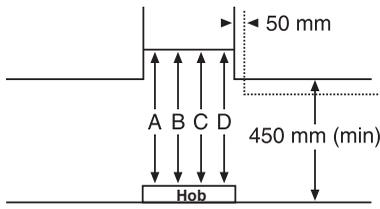


- A: Built-in Electric Hob: 650mm minimum clearance
- B: Built-in Gas hob: 700mm minimum clearance
- C: Slot-in Electric Cooker: 685mm minimum clearance
- D: Slot-in Gas Cooker: 787mm minimum clearance

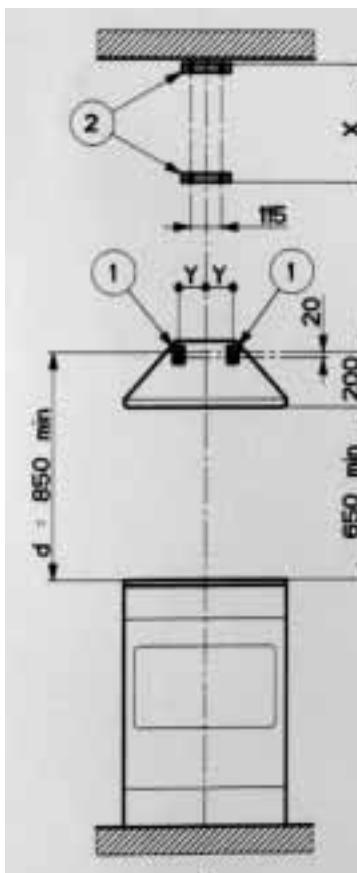

* Clearance height as specified above

3. Draw a horizontal line through the vertical line 15mm from the ceiling. Place one of the two **upper brackets** (item 2) over the line. Ensure the bracket is level and mark the centres for the keyhole fixing screws 55mm either side of the vertical line.
4. Draw a horizontal line through the vertical line for the second **upper brackets** (item 2) at X. X is the distance between the centre of the top and bottom fixing holes on the upper chimney section. Ensure the line is level.
5. Place the second bracket (item 2) over the line, and mark the centres for the keyhole fixing screws 55mm either side of the vertical line.
6. Drill the holes for the wall bracket fixing screws using an 8mm drill and fix the wall brackets items 1 and 2 using the rawl plugs and screws provided.

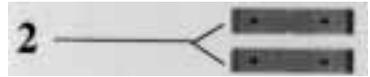

Note: If the hood is to be installed onto a hollow construction or plaster or partition board wall then special fixing will be required (not supplied).



Fitting the canopy hood

1. Hook the canopy hood C, into the wall fixing brackets ensuring the security fixing screws align with the holes in the centre of the back panel as illustrated.
2. Insert the two M4 x 25m canopy adjustment screws, into the wall brackets, from the underside of the hood.
3. The canopy can be aligned and adjusted in height by using the two adjustment screws (W).
4. Before fitting the chimney to the canopy make the electrical connection as described in the section titled "ELECTRICAL CONNECTION".
5. When the electrical connection has been made, test the worktop lighting and the three speed fan.



Venting

The hood is more effective when used in the extraction mode (ducted to the outside).

Venting kits may be purchased through your retailer or DIY store, and must be ducted to an outside vent of 150mm (5ins) or 125mm (5ins).

The best performance will be achieved by using the largest diameter ducting available.

Where flexible ducting is fitted the length should be no more than:

3 metres with one 90° bend

2 metres with two 90° bends

Bends of more than 90° will reduce the

efficiency of the hood and reduce the airflow.




The ducting used must be manufactured from fire retardant material conforming to the relevant British Standard or DIN 4102-B1

When the hood is ducted to the outside the charcoal filters must be removed.

Recirculation

If you are using the hood for recirculating, ensure the charcoal filters are in position following the instructions contained in the section (To Remove/Replace the Charcoal Filters).

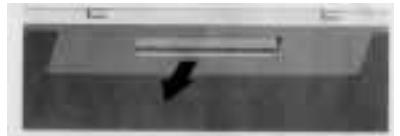




Fitting the Chimney Stack

The chimney stack consists of two 2 sections.

1. Fit the upper section (S) first. Expand the chimney slightly to allow it to be fitted over the wall brackets, and then secure the upper section using the 4 self tapping screws provided.
2. Fit the lower chimney section (I) as above ensuring the base of the chimney is fitted correctly into the recess around the top of the canopy as illustrated.
3. When the chimney stack has been installed, fit the two venting grilles into the apertures located on either side of the lower chimney stack. The grilles are marked with two arrows and should be fitted with one arrow pointing upwards and the other towards the front.

Note: When the cooker hood is used in recirculation mode, ensure the grilles are properly secured to the recirculation spigot R, as illustrated.

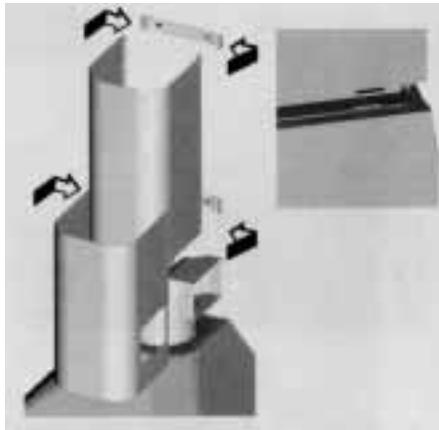

ELECTROLUX SERVICE FORCE



To contact your local Electrolux Service Centre telephone 0990 929929

CHANNEL ISLANDS

GUERNSEY	Guernsey Electricity PO Box 4 Vale, Guernsey Channel Islands
JERSEY	Jersey Electricity Company PO Box 45 Queens Road St Helier Jersey Channel Islands JE4 8NY

SCOTLAND

ABERDEEN (M05)	8 Cornhill Arcade Cornhill Drive Aberdeen AB2 5UT
AUCHTERMUCHY (M03)	33A Burnside Auchtermuchy Fife KY14 7AJ
BLANTYRE (M07)	Unit 5 Block 2 Auchenraith Ind Estate Rosendale Way Blantyre G72 0NJ
DUMFRIES (M01)	93 Irish Street Dumfries Scotland DG1 2PQ
DUNOON (M67)	Briar Hill 7 Hill Street, Dunoon Argyll PA23 7AL
GLASGOW (M04)	20 Cunningham Road Clyde Estate Rutherglen Glasgow G73 1PP
INVERNESS (M06)	Unit 3B Smithton Indust. Est. Smithton Inverness IV1 AJ

ISLE OF ARRAN (OWN SALES)	Arran Domestic Unit 4 The Douglas Centre Brodick Isle of Arran KA27 8AJ
------------------------------	---

ISLE OF BARRA (OWN SALES)	J Zerfah 244 Bruernish Isle of Barra Western Islands HS9 5QY
------------------------------	--

ISLE OF BUTE (M66)	Walker Engineering Glennmor Upper Serpentine Road Rothesay Isle of Bute PA20 9EH
-----------------------	---

ISLE OF LEWIS (M69)	ND Macleod 16 James Street Stornoway Isle of Lewis PA87 2QW
------------------------	--

KELSO (M08)	2-8 Wood Market Kelso Borders TD5 7AX
----------------	---

ORKNEY (M65)	Corsie Domestic 7 King Street Kirkwall Orkney KW15
-----------------	---

SHETLAND (OWN SALES)	Tait Electronic Systems Ltd. Holmsgarth Road Lerwick Shetland ZE1 0PW
-------------------------	--

SHETLAND (OWN SALES)	Bolts Shetland Ltd. 26 North Road Lerwick Shetland ZE1 0PE
-------------------------	---

WHALSAY (OWN SALES)	Leask Electrical Harlsdale Symbister, Whalsay Shetland ZE2 9AA
------------------------	---

NORTHERN IRELAND

BELFAST (M27)	Owenmore House Kilwee Industrial Estate Upper Dunmury Lane Belfast BT17 0HD
------------------	---

ELECTROLUX SERVICE FORCE



To contact your local Electrolux Service Centre telephone 0990 929929

WALES

CARDIFF (M28) Guardian Industrial Estate
Clydesmuir Road
Tremorfa, Cardiff
CF2 2QS

CLYWD (M14) Unit 6-7 Coed - Parc
Abergele Road
Rhuddlan
Clwyd
Wales LL18 5UG

OSWESTRY (M17) Plas Flynnon Warehouse
Middleton Road
Oswestry
SY11 2PP

HAVERFORDWEST (M75) Cromlech
Amerlston
Haverfordwest
SA62 5DS

DYFED (M77) Maes Y Coen
High Mead
Llanybydder
Dyfed
SA40 9UL

NORTH EAST

GATESHEAD (M39) Unit 356a
Dukesway Court
Dukesway
Team Valley
Gateshead
NE11 0BH

GRIMSBY (M42) Unit 2
Cromwell Road
Grimsby
South Humberside DN31
2BN

HULL (M41) Unit 1
Boulevard Industrial Estate
Hull HU3 4AY

LEEDS (M37) 64-66 Cross Gates Road
Leeds
LS15 7NN

NEWTON AYCLIFFE (M45) Unit 16
Gurney Way
Aycliffe Ind Estate
Newton Aycliffe
DL5 6UJ

SHEFFIELD (M38) Pennine House
Roman Ridge Ind.
Roman Ridge Road
Sheffield
S9 1GB

NORTH WEST

BIRKENHEAD (M11) 1 Kelvin Park
Dock Road
Birkenhead
L41 1LT

CARLISLE (M10) Unit 8
South John Street
Carlisle
CA2 5AJ

ISLE OF MAN (M64) South Quay Ind Estate
Douglas
Isle of Man

LIVERPOOL (M15) Unit 1
Honeys Green Precinct
Honeys Green Lane
Liverpool
L12 9JH

MANCHESTER (M09) Unit 30, Oakhill Trading
Estate
Devonshire Road
Worsley
Manchester
M28 3PT

PRESTON (M13) Unit 250
Dawson Place
Walton Summit
Bamber Bridge
Preston
Lancashire PR5 8AL

STOCKPORT (M16) Unit 20 Haigh Park
Haigh Avenue
Stockport SK4 1QR

ELECTROLUX SERVICE FORCE



To contact your local Electrolux Service Centre telephone 0990 929929

MIDLANDS

BIRMINGHAM (M18) 66 Birch Road East,
Wyrley Road Industrial Estate
Witton
Birmingham B6 7DB

BOURNE (M44) Manning Road Ind Estate
Pinfold Road
Bourne
PE10 9HT

BRIDGNORTH (M72) 1 Underhill Street
Bridgnorth
Salop WV16 4BB

GLOUCESTER (M23) 101 Rycroft Street
Gloucester
GL1 4NB

HEREFORD (M31) Unit 3
Bank Buildings
Cattle Market
Hereford HE4 9HX

HIGHAM FERRERS (M51) 30 High Street
Higham Ferrers
Northants
NN10 8BB

ILKESTON (M43) Unit 2
Furnace Road
Ilkeston
DE7 5EP

LEICESTER (M22) Unit 7
Oaks Industrial Estate
Coventry Road
Narborough
Leicestershire
LE0 5GF

LINCOLN (M40) Unit 8 Stonefield Park
Clifton Street
Lincoln
LN5 8AA

NEWCASTLE UNDER LYME (M12) 18-21 Croft Road
Brampton Industrial Estate
Newcastle under Lyme
Staffordshire
ST5 0TW

NUNEATON (M21) 19 Ptarmigan Place
Townsend Drive
Nuneaton
CV11 6RX

REDDITCH (M20) 13 Thornhill Road
North Moons Moat
Redditch
Worcestershire
B98 9ND

TAMWORTH (M19) Unit 3
Sterling Park
Claymore
Tamworth
B77 5DO

WORCESTER (M73) Unit 1
Northbrook Close
Gregorys Mill Ind Estate
Worcester
WR3 8BP

LONDON & EAST ANGLIA

CHELMSFORD (M47) Hanbury Road
Widford Ind Estate
Chelmsford
Essex CM12 3AE

COLINDALE (M53) Unit 14
Capital Park
Capital Way
Colindale
London NW9 0EQ

ENFIELD (M49) 284 Alma Road
Enfield
London EN3 7BB

GRAVESEND (M57) Unit B4,
Imperial Business Estate
Gravesend
Kent DA11 0DL

HARPENDEN (M46) Unit 4
Riverside Estate
Coldharbour Lane
Harpenden
AL5 4UN

LETCHWORTH (M50) 16-17 Woodside Ind Est.
Works Road
Letchworth
Herts
SG6 1LA

CENTRAL LONDON (M76) 2/4 Royal Lane
Yiewsley
West Drayton
Middlesex UB7 8DL

ELECTROLUX SERVICE FORCE



To contact your local Electrolux Service Centre telephone 0990 929929

MAIDENHEAD (M60)	Reform Road Maidenhead Berkshire SL6 8BY
MOLESEY (M61)	10 Island Farm Avenue West Molesey Surrey KT8 2UZ
NEWBURY (M24)	PO Box 5627 Newbury Berkshire RG14 5GF
IPSWICH (M48)	Unit 2B Elton Park Business Centre Hadleigh Road Ipswich IP2 0DD
NORWICH (M52)	2b Trafalgar Street Norwich NR1 3HN
SUNBURY (M63)	Unit 1a The Summit Hanworth Road Hanworth Ind Estate Sunbury on Thames TW16 5D
SYDENHAM (M62)	Unit 6 Metro Centre Kangley Bridge Road Sydenham SE26

SOUTH EAST

ASHFORD (M58)	Unit 2 Bridge Road Bus Estate Bridge Road Ashford Kent TN2 1BB
FLEET (M59)	Unit 1 Redfields Industrial Estate Church Crookham Fleet Hampshire GU13 0RD
HAYWARDS HEATH (M55)	21-25 Bridge Road Haywards Heath Sussex RH16 1UA
TONBRIDGE (M56)	Unit 30 Deacon Trading Estate Morley Road Tonbridge Kent TN9 1RA

SOUTH WEST

BARNSTAPLE (M30)	P.O. Box 12 Barnstaple North Devon EX31 2YB
BOURNEMOUTH (M26)	63-65 Curzon Road Bournemouth Dorset BH1 4PW
BRIDGEWATER (M35)	6 Hamp Industrial Estate Bridgewater Somerset TA6 3NT
BRISTOL (M25)	11 Eldon Way Eldonwall Trading Bristol Avon BS4 3QQ
EMSWORTH (M33)	266 Main Road Southbourne Emsworth PO10 8JL
ISLE OF WIGHT (M34)	Unit 8 Enterprise Court Ryde Business Park Ryde Isle of Wight PO33 1DB
NEWTON ABBOT (M29)	Unit 2 Zealley Industrial Estate Kingsteignton Newton Abbot S. Devon TQ12 3TD
PLYMOUTH (M32)	16 Faraday Mill Cattledown Plymouth PL4 0ST
REDRUTH (M36)	Unit 7D Pool Industrial Estate Wilson Way, Redruth, Cornwall TR15 3WQ
