



RCU704 Series

4 in 1 Universal Remote Control

User's Guide

Congratulations on your purchase of the RCU704. This user-friendly remote makes juggling multiple remote controls a thing of the past! This one unit controls up to four components, including the most popular brands of TV, VCR, DVD and DBS-CABLE equipment. The RCU704 is easy to use, easy to program, and it gives you total control—at the touch of your fingertips!

Série RCU704

Télécommande Universelle 4 en 1

Guide de L'utilisateur

Nous vous félicitons d'avoir acheté la télécommande RCU704. Cette télécommande conviviale élimine les nombreuses télécommandes ennuyeuses! Cette seule télécommande commande jusqu'à quatre appareils, dont les marques les plus populaires de téléviseur, magnétoscope, DVD et DBS-CÂBLE. La RCU704 est facile à utiliser, facile à programmer et vous donne le plein contrôle—au bout des doigts!

RCU704 Series

Control Remoto Universal 4 en 1

Manual del Usuario

Felicitaciones por la compra del RCU704. ¡Este amigable control remoto convierte a los malabarismos con los múltiples controles remotos en una cosa del pasado! Esta unidad controla hasta cuatro componentes, incluyendo las más populares marcas de TV, VCR, DVD y equipos de DBS-CABLE. El RCU704 es fácil de utilizar, fácil de programar y le pone el control al alcance de su mano.

©2004 THOMSON INC.
10330 N. Meridian Street
Indianapolis, IN 46290

Made in Indonesia.
Fabriqué en Indonésie.
Hecho en Indonesia.

**RCU704SP, RCU704SP2, RCU704MSP2 NA IB REVA
R532J REV8**

Trademarks ® Registered.
Marques ® déposées.
Marcas registradas ®.

www.rca.com

Battery Installation

Your RCU704 universal remote requires 2 new AAA alkaline batteries (sold separately).

To install the batteries:

1. Turn the unit over, and remove the battery compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery case.

Note: Reprogramming may be required after batteries are removed.

Programming with Direct Entry


To program your remote to control up to four components, follow these steps:

1. Manually turn on the component you wish to program the remote to operate.
2. Find the three-digit code for your brand of TV, VCR, DVD, satellite receiver or cable box in the enclosed code lists.
3. Press and hold the **CODE SEARCH** key until the indicator light turns on.
4. Release the **CODE SEARCH** key.
5. Press and release the **DVD-AUX**, **DBS-CABLE**, **VCR** or **TV** key. The indicator light blinks and then remains lit.

Note: DBS references satellite receiver.

- To program the DVD-AUX key:** Press the **DVD-AUX** key. The indicator light continues to blink until you select the component you want the **DVD-AUX** key to control. To control a DVD, press the **VCR** key. To control a TV, press the **TV** key. To control a satellite receiver or cable box, press the **DBS-CABLE** key. The indicator light stops blinking and remains lit.
6. Enter the three-digit code, using the numeric keypad. After the code is entered, the indicator light turns off.
 7. Aim the remote at the component and press the **OFF-ON** key. The component should turn off.

Note: If your component does not respond, try all the codes for your brands. If the codes do not work or your brand is not listed, try the Code Search Method that follows.

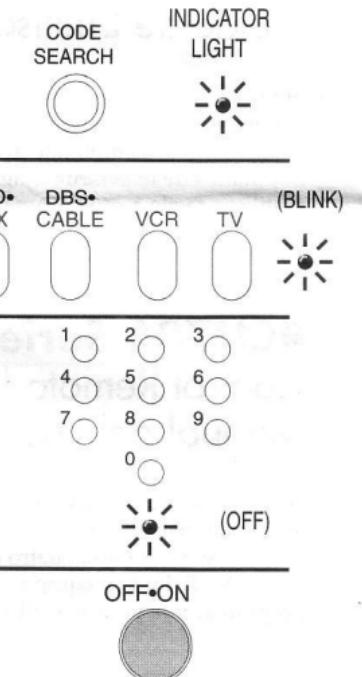

Programming With Code Search

If your TV, VCR, DVD, satellite receiver or cable box does not respond after you have tried all the codes for your brands, or if your brand is not listed, try searching for your code via the Code Search Entry Method. To program your remote via the Code Search Entry Method, follow these steps:

 

1. Manually turn on the component you wish to program the remote to operate.
2. Press and hold the **CODE SEARCH** key until the indicator light turns on.
3. Release the **CODE SEARCH** key.
4. Press and release the component key you wish the remote to control—**TV, VCR** or **DBS-CABLE** key. The indicator light blinks once and remains lit.

To program the **DVD-AUX** key: Press the **DVD-AUX** key, followed by the component key you wish the **DVD-AUX** key to control. For DVD, press the **DVD-AUX** key, followed by the **VCR** key. For an auxiliary component, press the **DVD-AUX** key, followed by the corresponding component key (**TV, VCR, DBS-CABLE**).

5. Press and release the **OFF-ON** key until the component turns off.

Important: You may have to press the **OFF-ON** key up to 200 times.

6. When the component turns off, press the **ENTER** key. The indicator light turns off.

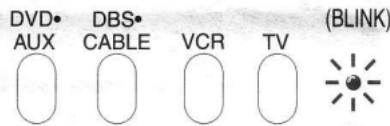

(OFF)

Menu Function – TV, VCR, DVD, DBS

The Menu function on your remote is used to make changes on selected settings. The **MENU** key operates in TV, VCR, DVD and DBS Modes. Each menu varies from brand to brand.

The TV Menu is used to make changes in the TV settings, such as changing color, channels and timers. The DBS Menu navigates through the Guide screens, to make changes in the DBS settings, such as channel lists and passwords. The VCR and DVD Menu makes changes through the Navigation screens, such as languages and subtitles.

While in Menu Mode, these keys function as follows:


Mode	Vol up/ down	Ch +/-
TV	Cursor moves right/left	Cursor moves up/down
VCR	Cursor moves right/left	Cursor moves up/down
DVD	Cursor moves right/left	Cursor moves up/down
DBS	Cursor moves right/left	Cursor moves up/down

Using Menu Functions


To use the Menu function, follow these steps:

1. Press the component button whose menu you wish to access (**TV, VCR, DVD-AUX or DBS-CABLE**).
2. Press the **MENU** key. The menu of the chosen component is shown.
3. To exit the menu mode press the corresponding component key on the remote (**TV, VCR, DVD-AUX or DBS-CABLE**).

Note: Some functions of some brands may not be fully supported.

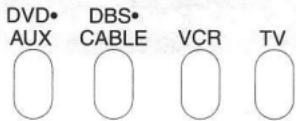

MENU

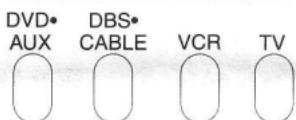


Special Notes for Menu Use

1. In the Menu Mode of RCA, GE and PROSCAN TVs, pressing the **MENU** key selects the highlighted item. The numeric keys may also be used to select the menu choice.
2. For SONY components, pressing the **ENTER** key while in Menu Mode returns to the previous menu.

Sleep Feature

The RCU704 has a **SLEEP** key, which automatically turns off your TV at a duration you choose from 1 to 99 minutes. To set the Sleep Timer, follow these steps:

1. Press and hold the **SLEEP** key. The indicator light turns on and remains lit.
2. Release the **SLEEP** key.
3. Enter the desired time in minutes on the numeric keypad. (For minutes 1-9, press 0 before the actual number). The indicator light turns off. The maximum time for the Sleep Feature is 99 minutes.
4. Leave the remote aimed at the TV. The Sleep Feature will not work unless the remote is aimed at the TV.

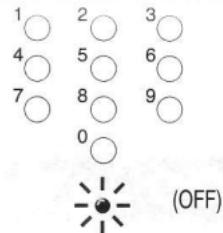

90 Day Limited Warranty

Our company (in the U.S., THOMSON INC./In Canada, Thomson multimedia Ltd.) warrants that for 90 days from date of purchase, it will replace this product if found to be defective in materials or workmanship. For a prompt, no charge replacement of equivalent product, return the defective product postage prepaid to the appropriate address.

In the US:

Product Exchange Center
11721 Alameda Avenue
Socorro, TX 79927

In Canada:

Thomson multimedia Ltd.
6200 Edwards Boulevard
Mississauga, Ontario Canada L5T 2V7

This replacement is the company's sole obligation under this warranty. THOMSON INC./ Thomson multimedia Ltd. will not be responsible for any incidental or consequential damages, or for any loss arising in connection with the use or inability to use this product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty excludes defects or damage due to misuse, abuse, or neglect. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state/province to province.

Garantía Limitada por 90 Días

Nuestra compañía (THOMSON INC., en los Estados Unidos / Thomson multimedia Ltd., en Canadá) garantiza que por 90 días a partir de la fecha de compra, responderá este producto si se encuentra con defectos en el material o la fabricación. Para obtener una rápida restitución sin cargos de un producto equivalente, devuelva el producto defectuoso con el importe postal prepagado a la dirección correspondiente.

En los Estados Unidos:

Product Exchange Center
11721 Alameda Avenue
Socorro, TX 79927

En Canadá:

Thomson multimedia Ltd.
6200 Edwards Boulevard
Mississauga, Ontario Canada L5T 2V7

Esta restitución es la única responsabilidad de la compañía bajo esta garantía.

THOMSON INC./Thomson multimedia Ltd. no será responsable por ningún daño imprevisto o consiguiente, o por cualquier pérdida que surja en conexión al uso o **inhabilidad de usar este producto**. Algunos estados / provincias no permiten la exclusión o limitación de daños imprevistos o consiguientes, así que la limitación o exclusión antes mencionada podría no aplicarle a usted. Esta garantía excluye los defectos o daños originados por maltrato, abuso o negligencia. Esta garantía le otorga derechos legales específicos, y usted podría también tener otros derechos, los cuales varían de un estado a otro, o de una provincia a otra.

TV Codes/Codes de Téléviseur/ Códigos de TV

Abex	172	Grundy.....	038, 046, 047, 171
Admiral	001, 046, 047, 083, 095, 173, 191	Hallmark.....	004, 006
Advertura	174	Harvard.....	038
Aiko.....	016	Hisense	237
Akai.....	002	Hitachi.....	004, 006, 012, 013, 059, 060, 063,
Alleron	046, 047135, 136, 145, 148, 179, 185	038
Amtron.....	038	IMA.....	038
Anam National	003, 038	Infinity.....	062, 130
AOC	004, 005, 006, 007, 082	Janeil.....	174
Apex	236	JBL.....	062, 130
Audiovox.....	038	JCB.....	002
Belcor	004	JC Penney.....	000, 004, 005, 006, 008, 013, 022,
Bell & Howell	001, 048, 049, 073, 083, 162052, 054, 055, 063, 064, 072, 082,	038
Bradford.....	038087, 100, 104, 105, 109, 132, 166,	062
Broksonic.....	000, 004, 239167, 171, 172, 181, 203, 212, 233	002
Brokwood	004	Jensen.....	004, 006
Candle	004, 006, 008, 174	JVC	012, 013, 054, 055, 060, 063,
Celebrity	002065, 066, 123, 157, 159, 242	038
Citizen	004, 006, 008, 016, 038, 105,	Kawasho.....	002, 004, 006
.....132, 171, 174, 177, 191	004, 006	Kenwood.....	004, 006, 019
Colortyme.....	004, 006	Kloss Novabeam	038, 068, 069, 174, 183
Concerto	004, 006	KTV.....	038, 070, 171, 177
Contec/Cony	012, 013, 038, 063	LG	005, 082
Craig	038	Loewe.....	062, 130
Crosley	000, 062	Logik.....	001, 083
Crown	038, 062, 130, 171	Luxman	004, 006
Curtis Mathes	000, 004, 006, 015, 048, 049,	LXI	000, 006, 048, 049, 062, 072, 073,
.....073, 105, 162, 171, 212100, 109, 130, 162, 181, 203, 212, 233	Magnavox	000, 004, 006, 008, 019, 062, 068,
CXC	038069, 075, 076, 077, 088, 130, 132,	038
Daewoo	004, 005, 006, 016, 017, 082, 171, 190133, 134, 183, 219, 235	062
Daytron	004, 006, 171	Majestic	001, 083
Dimensia	000, 212	Marantz	004, 006, 059, 062, 130
Dumont	004, 151, 217	Megatron	006, 059
Dynatech	004	Memorex	001, 005, 006, 046, 047, 048,
Electroband	002049, 073, 082, 083, 162, 191	049
Electrohome	000, 002, 003, 004, 006, 019, 022, 064	MGA	004, 005, 006, 019, 022, 051,
Emerson	004, 006, 012, 023, 025, 026, 029,064, 079, 080, 082, 125, 135	064
.....030, 033, 035, 036, 037, 038, 041,	Mitsubishi079, 080, 082, 125, 135	
.....042, 043, 046, 047, 048, 049, 073,	Montgomery Ward	001, 083	
.....123, 162, 171, 177, 179, 191	Motorola	003, 173	
Envision	004, 006	MTC	004, 005, 006, 082, 105
Fisher	048, 049, 051, 073, 162, 180	Multitech	038
Fujitsu	046, 047	NAD	006, 072, 109, 136, 185
Funai	038, 046, 047, 189	NEC	003, 004, 005, 006, 082
Futuretec	038	Nikko	006, 016
GE	000, 003, 004, 006, 022, 052, 054, 055, 064,	NTC	016
.....087, 100, 165, 166, 167, 181, 203, 212, 233			
Gibralter	004, 151		
Goldstar	004, 005, 006, 012, 019, 056,		
.....082, 155, 156, 171, 172			

TV Codes Continued/Suite Codes de Téléviseur

Continúo Códigos de TV

Onwa	038
Optimus	136, 185
Optonica	095, 173
Orion	030, 035, 191
Panasonic	003, 054, 055, 062, 109, 130, 170
Philco ...003, 004, 005, 006, 008, 012, 019, 062, 068, 069, 075, 076, 077, 082, 088, 130, 132, 134, 183	069, 075, 077, 082, 088, 130, 132, 134, 183
Philips ...002, 003, 004, 008, 012, 019, 062, 068, 069, 075, 076, 087, 088, 130, 132, 134, 167, 183	075, 076, 087, 088, 130, 132, 134, 167, 183
Pilot	004, 171
Pioneer	004, 006, 136, 179, 185
Portland	004, 005, 006, 016, 082, 171
Price Club	105
Prima	238
Prism	054, 055
PROSCAN	000, 100, 181, 203, 212, 233
Proton	004, 006, 012
Pulsar	151
Pulser	004
Quasar	003, 054, 055, 070, 109, 170
RadioShack	000, 048, 049, 073, 162, 212
RadioShack/Realistic	004, 006, 012, 038, 048, 049, 073, 095, 162, 171, 172
RCA	000, 003, 004, 005, 006, 007, 019, 054, 055, 082, 096, 098, 099, 100, 101, 102, 103, 129, 179, 181, 188, 190, 203, 212, 233, 240
Runco	151, 217
Sampo	004, 006, 171, 172
Samsung	004, 005, 006, 012, 013, 015, 017, 019, 082, 104, 105, 106, 171, 172
Sansui	191
Sanyo	004, 048, 049, 073, 080, 162, 169, 180
Scotch	006
Scott	004, 006, 012, 035, 038, 046, 047
Sears ...000, 004, 006, 013, 019, 046, 047, 048, 049, 051, 063, 066, 072, 073, 100, 109, 110, 162, 180, 181, 189, 203, 212, 233	051, 063, 066, 072, 073, 100, 109, 110, 162, 180, 181, 189, 203, 212, 233
Sharp	004, 006, 012, 026, 029, 095, 111, 112, 171, 173
Shogun	004
Signature	001, 083, 173
Simpson	008
Sony	002, 218
Soundesign	004, 006, 008, 038, 046, 047, 132
Squareview	189
SSS	004, 038
Starlite	038
Supre-Macy	174
Supreme	002
Sylvania	004, 006, 008, 019, 062, 068, 069, 075, 076, 077, 088, 130, 132, 134, 183, 189
Symphonic	026, 029, 033, 038, 046, 047, 155, 189
Tandy	173
Tashiko	072
Tatung	003
Technics	054, 055
Techwood	004, 006, 054, 055
Teknika	001, 004, 005, 006, 008, 012, 013, 016, 038, 046, 047, 063, 076, 082, 083, 105, 132, 170, 171
Tera	004, 012
TMK	004, 006
Toshiba	000, 048, 049, 072, 073, 105, 109, 118, 160, 162, 190, 241
Toteline	171
Universal	052, 087, 166, 167
Victor	066
Vidtech	004, 005, 006
Viking	174
Wards	000, 001, 004, 005, 006, 019, 033, 046, 047, 052, 062, 068, 069, 075, 076, 082, 083, 087, 088, 095, 130, 134, 166, 167, 173, 183, 212
White Westinghouse	000, 001, 190, 191
Yamaha	004, 005, 006, 019, 082
Zenith ...000, 001, 004, 051, 083, 151, 152, 154, 217	000, 001, 004, 051, 083, 151, 152, 154, 217

VCR Codes/Codes de Magn/Códigos de VCR

Admiral001
Adventura026
Aiko027
Aiwa026
Akai	003, 007, 111, 112, 119
American High021
Asha013
Audio Dynamics009, 010
Audiovox014, 054
Beaumark013
Bell & Howell011
Broksonic012, 025, 031
Calix014, 054
Candle013, 014, 015, 016, 017, 018, 019
Canon021, 022
Capehart110
Carver062
CCE027, 061
Citizen ...013, 014, 015, 016, 017, 018, 019, 027, 054	054
Colortyme009
Colt061
Craig013, 014, 023, 054, 061
Curtis Mathes000, 009, 013, 016, 018, 021, 022, 024, 087, 091, 115
Cybernex013
Daewoo015, 017, 019, 025, 026, 027, 110
Daytron061, 110
DBX009, 010
Dimensia000
Dynatech026
Electrohome014, 029, 054
Electrophonic014
Emerson003, 007, 012, 014, 015, 021, 024, 025, 026, 029, 031, 032, 033, 038, 041, 054, 065, 116, 130
Fisher011, 023, 049, 051, 118
Fuji021, 119
Funai026
Garrard026
GE ...000, 013, 021, 022, 053, 087, 091, 115, 120	087, 115, 120
Go Video131, 138
Goldstar009, 014, 018, 054, 057
Gradiente026
Harley Davidson026
Harman Kardon009
Harwood061
Headquarter011
Hitachi026, 055, 056, 057, 084, 107, 111, 120
Hi-Q023
Instant Replay021
JCL021
JC Penney ...009, 010, 011, 012, 013, 014, 021, 022, 051, 054, 055, 056, 057, 061, 062, 084, 107, 118	051, 054, 055, 056, 057, 061, 062, 084, 107, 118
Jensen055, 056, 084, 111
JVC009, 010, 011, 018, 111, 123, 132
Kenwood009, 010, 011, 016, 018, 111, 123
KLH061
Kodak014, 021, 054
LG014, 054
Lloyd026
Logik061
LXI014, 054
Magnavox021, 022, 062, 063, 104, 124
Magnin013
Marantz009, 010, 011, 016, 018, 021, 022, 062
Marta014
Matsushita021
MEI021
Memorex001, 011, 013, 014, 021, 022, 023, 026, 031, 054, 104, 130
MGA029, 065
MGN Tech013
Midland053
Minolta055, 056, 084, 107
Mitsubishi029, 055, 056, 065, 066, 084, 123
Montgomery Ward001

VCR Codes Continued/Suite Codes de Magn/ Continúo Códigos de VCR

Motorola001, 021	Samsung013, 015, 033, 053, 055, 112, 134
MTC.....	.013, 026	Sankyo001, 104
NEC.....	.009, 010, 011, 018, 111, 123	Sansui010, 031, 111, 123, 130
Nikkon.....	.014, 054	Sanyo011, 013, 023, 135
Noblex.....	.013	Scott012, 015, 025, 032, 038, 065, 116
Olympus.....	.021	Sears ...000, 011, 014, 021, 023, 026, 049, 051, 054,	.055, 056, 084, 107, 118
Optimus.....	.001, 014, 054	Sharp001, 017, 029, 096
Optonica.....	.096	Shintom056, 061, 084, 098, 119
Orion.....	.000, 031, 130	Shogun013
Panasonic.....	.021, 022, 109, 125, 127	Signature001
Pentax.....	.016, 055, 056, 084, 107, 120	Singer021, 061, 128
Pentex Research.....	.018	Sony098, 099, 119
Philco.....	.021, 022, 062, 063	STS021, 107
Philips.....	.021, 022, 062, 096, 124, 136	Sylvania021, 022, 026, 062, 063, 065, 124
Pilot.....	.014	Symphonic026
Pioneer.....	.010, 055, 123	Tandy011
Portland.....	.016, 017, 019, 110	Tashiko014, 054
PROSCAN.....	.000	Tatung111
Protec061	Teac026, 085, 111
Pulsar104	Technics021, 109
Quarter011	Teknika014, 021, 022, 026, 054, 100
Quartz011	Toshiba015, 049, 051, 055, 065, 113, 116, 118
Quasar021, 022, 125	Totlevision013, 014, 054
RadioShack001, 014, 054, 096	TMK013, 024
RadioShack/Realistic011, 013, 014, 021, 022, 023,	Unitech013
.....	.026, 029, 049, 054, 096	Vector Research009, 010, 015, 016
Radix014, 054	Victor010
Randex014	Video Concepts009, 010, 015, 016
RCA000, 003, 007, 013, 021, 022, 055,	Videosonic013
.....	.056, 082, 083, 084, 085, 086, 087, 088, 089,	Wards ..001, 013, 014, 015, 021, 022, 023, 026, 029,	.054, 055, 056, 061, 084, 088, 090, 096, 107, 116
Realistic090, 091, 100, 107, 115, 120, 125, 133	XR-1000021, 026, 061
.....	.001, 011, 013, 014, 015, 021, 022,	Yamaha009, 010, 011, 018, 111
.....	.023, 026, 029, 049, 054, 096	Zenith026, 098, 104, 119, 128, 130, 137

PVR* Codes/Codes de PVR*/Códigos de PVR*

RePlay139	Tivo140
--------------	------	------------	------

*PVR's are programmed under the VCR•DVD or VCR key.

*Les PVR sont programmés à la touche VCR•DVD, VCR ou DVD•AUX.

*Los PVR están programados bajo la tecla VCR•DVD o DVD•AUX.

DVD Codes/Codes de DVD/Códigos de DVD

Aiwa350	Onkyo147
Apex.....	.383, 384, 389	Oritron152
Broksonic379	Panasonic148, 355
Daewoo385	Philips162, 356, 357, 358, 371, 377
Emerson386, 387	Pioneer149, 150, 165
Funai387	PROSCAN160
Go Video372	Qwestar152
Hitachi141, 351	RCA153, 160, 374, 380, 382
JVC146, 161, 352, 373	Samsung154, 155, 368, 375
Kenwood142	Sansui168
Konka353, 354	Sanyo359, 376
Magnavox143, 162, 357, 358	Sharp156, 158, 369
Memorex144	Sony157, 159, 164, 166, 360, 361
Mintek145	Sylvania387
Mitsubishi163	Toshiba167, 169, 362, 363, 365, 366, 381
NAD386	Zenith364, 367, 378

TV•DVD Combo Codes/Codes de TV•DVD Combinés/Combinación de Códigos TV•DVD

Broksonic239	TV379
RCA240	DVD380
Toshiba241381

VCR·DVD Combo Codes/Codes de Magn·DVD Combinés/Combinación de Códigos VCR·DVD

	VCR	DVD
Go Video	131	372
JVC	132	373
Philips	136	377
RCA	133	374
Samsung	134	375
Sanyo	135	376
Zenith	137	378

Portable DVD Codes/Codes de lecteur DVD portable/Códigos para DVD Portátil

RCA	382
-----------	-----

Satellite Codes/Codes de Satellite/ Códigos de Satélite

Alphastar.....	.079	Motorola047, 071
Dish Network.....	.078	Panasonic.....	.075
Echostar.....	.089	Philips085
Express Vu091	Primestar076
GE.....	.047, 071, 080, 081	PROSCAN047, 071, 080, 081
Hitachi.....	.083, 084	RCA047, 071, 080, 081
Hughes Network Systems.....	.077, 083, 090	Sony072
JVC082	Star Choice092
Magnavox085	Toshiba073
		Uniden086

Cable Codes/Codes de câblosélecteur/ Códigos para Cable

ABC001, 003, 004, 005, 006	Philips.....	.011, 012, 025
Antronix008, 009	Pioneer033, 034
Archer008, 009, 011	PROSCAN003
Cabletenna008	RCA000, 049
Cableview008	Realistic009
Century011	Regal022, 035
Citizen011	Regency017
Colour Voice012	Rembrandt003
Eastern017	Samsung034
Garrard011	Scientific Atlanta006, 036, 037, 038
GC Electronics009	Signal018
GE000, 003	Signature003
Gemini018	Sprucer000
General Instruments000, 001, 003, 046, 049	Starcom001, 018
Hamlin020, 021, 022, 035	Stargate018
Hitachi003	Starquest018
Jasco011	Tocom004, 023
Jerrold000, 001, 003, 005, 018, 023, 046, 049	Tusa018
Magnavox025	TV86027
Motorola000, 003, 046	Unika008, 009, 011
Movie Time027	United Cable001
NEC005	Universal008, 009, 011
NSC027	View Star025, 027
Panasonic.....	.000, 048	Zenith000, 050, 051

Garantía Limitada por 90 Días

Nuestra compañía (THOMSON INC., en los Estados Unidos / Thomson multimedia Ltd., en Canadá) garantiza que por 90 días a partir de la fecha de compra, responderá este producto si se encuentra con defectos en el material o la fabricación. Para obtener una rápida restitución sin cargos de un producto equivalente, devuelva el producto defectuoso con el importe postal prepagado a la dirección correspondiente.

En los Estados Unidos:

Product Exchange Center
11721 Alameda Avenue
Socorro, TX 79927

En Canadá:

Thomson multimedia Ltd.
6200 Edwards Boulevard
Mississauga, Ontario Canada L5T 2V7

Esta restitución es la única responsabilidad de la compañía bajo esta garantía.

THOMSON INC./Thomson multimedia Ltd. no será responsable por ningún daño imprevisto o consiguiente, o por cualquier pérdida que surja en conexión al uso o **inhabilidad de usar este producto**. Algunos estados / provincias no permiten la exclusión o limitación de daños imprevistos o consiguientes, así que la limitación o exclusión antes mencionada podría no aplicarle a usted. Esta garantía excluye los defectos o daños originados por maltrato, abuso o negligencia. Esta garantía le otorga derechos legales específicos, y usted podría también tener otros derechos, los cuales varían de un estado a otro, o de una provincia a otra.

TV Codes/Codes de Téléviseur/ Códigos de TV

Abex	172	Grundy.....	038, 046, 047, 171
Admiral	001, 046, 047, 083, 095, 173, 191	Hallmark.....	004, 006
Advertura	174	Harvard.....	038
Aiko.....	016	Hisense	237
Akai.....	002	Hitachi.....	004, 006, 012, 013, 059, 060, 063,
Alleron	046, 047135, 136, 145, 148, 179, 185	038
Amtron.....	038	IMA.....	038
Anam National	003, 038	Infinity.....	062, 130
AOC	004, 005, 006, 007, 082	Janeil.....	174
Apex	236	JBL.....	062, 130
Audiovox.....	038	JCB.....	002
Belcor	004	JC Penney.....	000, 004, 005, 006, 008, 013, 022,
Bell & Howell	001, 048, 049, 073, 083, 162052, 054, 055, 063, 064, 072, 082,	038
Bradford.....	038087, 100, 104, 105, 109, 132, 166,	062
Broksonic.....	000, 004, 239167, 171, 172, 181, 203, 212, 233	002
Brokwood	004	Jensen.....	004, 006
Candle	004, 006, 008, 174	JVC	012, 013, 054, 055, 060, 063,
Celebrity	002065, 066, 123, 157, 159, 242	038
Citizen	004, 006, 008, 016, 038, 105,	Kawasho.....	002, 004, 006
.....132, 171, 174, 177, 191	004, 006	Kenwood.....	004, 006, 019
Colortyme.....	004, 006	Kloss Novabeam	038, 068, 069, 174, 183
Concerto	004, 006	KTV.....	038, 070, 171, 177
Contec/Cony	012, 013, 038, 063	LG	005, 082
Craig	038	Loewe.....	062, 130
Crosley	000, 062	Logik.....	001, 083
Crown	038, 062, 130, 171	Luxman	004, 006
Curtis Mathes	000, 004, 006, 015, 048, 049,	LXI	000, 006, 048, 049, 062, 072, 073,
.....073, 105, 162, 171, 212100, 109, 130, 162, 181, 203, 212, 233	Magnavox	000, 004, 006, 008, 019, 062, 068,
CXC	038069, 075, 076, 077, 088, 130, 132,	038
Daewoo	004, 005, 006, 016, 017, 082, 171, 190133, 134, 183, 219, 235	062
Daytron	004, 006, 171	Majestic	001, 083
Dimensia	000, 212	Marantz	004, 006, 059, 062, 130
Dumont	004, 151, 217	Megatron	006, 059
Dynatech	004	Memorex	001, 005, 006, 046, 047, 048,
Electroband	002049, 073, 082, 083, 162, 191	049
Electrohome	000, 002, 003, 004, 006, 019, 022, 064	MGA	004, 005, 006, 019, 022, 051,
Emerson	004, 006, 012, 023, 025, 026, 029,064, 079, 080, 082, 125, 135	064
.....030, 033, 035, 036, 037, 038, 041,	Mitsubishi079, 080, 082, 125, 135	
.....042, 043, 046, 047, 048, 049, 073,	Montgomery Ward	001, 083	
.....123, 162, 171, 177, 179, 191	Motorola	003, 173	
Envision	004, 006	MTC	004, 005, 006, 082, 105
Fisher	048, 049, 051, 073, 162, 180	Multitech	038
Fujitsu	046, 047	NAD	006, 072, 109, 136, 185
Funai	038, 046, 047, 189	NEC	003, 004, 005, 006, 082
Futuretec	038	Nikko	006, 016
GE	000, 003, 004, 006, 022, 052, 054, 055, 064,	NTC	016
.....087, 100, 165, 166, 167, 181, 203, 212, 233			
Gibralter	004, 151		
Goldstar	004, 005, 006, 012, 019, 056,		
.....082, 155, 156, 171, 172			

TV Codes Continued/Suite Codes de Téléviseur

Continúo Códigos de TV

Onwa	038
Optimus	136, 185
Optonica	095, 173
Orion	030, 035, 191
Panasonic	003, 054, 055, 062, 109, 130, 170
Philco ...003, 004, 005, 006, 008, 012, 019, 062, 068, 069, 075, 076, 077, 082, 088, 130, 132, 134, 183	069, 075, 077, 082, 088, 130, 132, 134, 183
Philips ...002, 003, 004, 008, 012, 019, 062, 068, 069, 075, 076, 087, 088, 130, 132, 134, 167, 183	075, 076, 087, 088, 130, 132, 134, 167, 183
Pilot	004, 171
Pioneer	004, 006, 136, 179, 185
Portland	004, 005, 006, 016, 082, 171
Price Club	105
Prima	238
Prism	054, 055
PROSCAN	000, 100, 181, 203, 212, 233
Proton	004, 006, 012
Pulsar	151
Pulser	004
Quasar	003, 054, 055, 070, 109, 170
RadioShack	000, 048, 049, 073, 162, 212
RadioShack/Realistic	004, 006, 012, 038, 048, 049, 073, 095, 162, 171, 172
RCA	000, 003, 004, 005, 006, 007, 019, 054, 055, 082, 096, 098, 099, 100, 101, 102, 103, 129, 179, 181, 188, 190, 203, 212, 233, 240
Runco	151, 217
Sampo	004, 006, 171, 172
Samsung	004, 005, 006, 012, 013, 015, 017, 019, 082, 104, 105, 106, 171, 172
Sansui	191
Sanyo	004, 048, 049, 073, 080, 162, 169, 180
Scotch	006
Scott	004, 006, 012, 035, 038, 046, 047
Sears ...000, 004, 006, 013, 019, 046, 047, 048, 049, 051, 063, 066, 072, 073, 100, 109, 110, 162, 180, 181, 189, 203, 212, 233	051, 063, 066, 072, 073, 100, 109, 110, 162, 180, 181, 189, 203, 212, 233
Sharp	004, 006, 012, 026, 029, 095, 111, 112, 171, 173
Shogun	004
Signature	001, 083, 173
Simpson	008
Sony	002, 218
Soundesign	004, 006, 008, 038, 046, 047, 132
Squareview	189
SSS	004, 038
Starlite	038
Supre-Macy	174
Supreme	002
Sylvania	004, 006, 008, 019, 062, 068, 069, 075, 076, 077, 088, 130, 132, 134, 183, 189
Symphonic	026, 029, 033, 038, 046, 047, 155, 189
Tandy	173
Tashiko	072
Tatung	003
Technics	054, 055
Techwood	004, 006, 054, 055
Teknika	001, 004, 005, 006, 008, 012, 013, 016, 038, 046, 047, 063, 076, 082, 083, 105, 132, 170, 171
Tera	004, 012
TMK	004, 006
Toshiba	000, 048, 049, 072, 073, 105, 109, 118, 160, 162, 190, 241
Toteline	171
Universal	052, 087, 166, 167
Victor	066
Vidtech	004, 005, 006
Viking	174
Wards	000, 001, 004, 005, 006, 019, 033, 046, 047, 052, 062, 068, 069, 075, 076, 082, 083, 087, 088, 095, 130, 134, 166, 167, 173, 183, 212
White Westinghouse	000, 001, 190, 191
Yamaha	004, 005, 006, 019, 082
Zenith ...000, 001, 004, 051, 083, 151, 152, 154, 217	000, 001, 004, 051, 083, 151, 152, 154, 217

VCR Codes/Codes de Magn/Códigos de VCR

Admiral001
Adventura026
Aiko027
Aiwa026
Akai	003, 007, 111, 112, 119
American High021
Asha013
Audio Dynamics009, 010
Audiovox014, 054
Beaumark013
Bell & Howell011
Broksonic012, 025, 031
Calix014, 054
Candle013, 014, 015, 016, 017, 018, 019
Canon021, 022
Capehart110
Carver062
CCE027, 061
Citizen ...013, 014, 015, 016, 017, 018, 019, 027, 054	054
Colortyme009
Colt061
Craig013, 014, 023, 054, 061
Curtis Mathes000, 009, 013, 016, 018, 021, 022, 024, 087, 091, 115
Cybernex013
Daewoo015, 017, 019, 025, 026, 027, 110
Daytron061, 110
DBX009, 010
Dimensia000
Dynatech026
Electrohome014, 029, 054
Electrophonic014
Emerson003, 007, 012, 014, 015, 021, 024, 025, 026, 029, 031, 032, 033, 038, 041, 054, 065, 116, 130
Fisher011, 023, 049, 051, 118
Fuji021, 119
Funai026
Garrard026
GE ...000, 013, 021, 022, 053, 087, 091, 115, 120	087, 115, 120
Go Video131, 138
Goldstar009, 014, 018, 054, 057
Gradiente026
Harley Davidson026
Harman Kardon009
Harwood061
Headquarter011
Hitachi026, 055, 056, 057, 084, 107, 111, 120
Hi-Q023
Instant Replay021
JCL021
JC Penney ...009, 010, 011, 012, 013, 014, 021, 022, 051, 054, 055, 056, 057, 061, 062, 084, 107, 118	051, 054, 055, 056, 057, 061, 062, 084, 107, 118
Jensen055, 056, 084, 111
JVC009, 010, 011, 018, 111, 123, 132
Kenwood009, 010, 011, 016, 018, 111, 123
KLH061
Kodak014, 021, 054
LG014, 054
Lloyd026
Logik061
LXI014, 054
Magnavox021, 022, 062, 063, 104, 124
Magnin013
Marantz009, 010, 011, 016, 018, 021, 022, 062
Marta014
Matsushita021
MEI021
Memorex001, 011, 013, 014, 021, 022, 023, 026, 031, 054, 104, 130
MGA029, 065
MGN Tech013
Midland053
Minolta055, 056, 084, 107
Mitsubishi029, 055, 056, 065, 066, 084, 123
Montgomery Ward001

VCR Codes Continued/Suite Codes de Magn/ Continúo Códigos de VCR

Motorola001, 021	Samsung013, 015, 033, 053, 055, 112, 134
MTC.....	.013, 026	Sankyo001, 104
NEC.....	.009, 010, 011, 018, 111, 123	Sansui010, 031, 111, 123, 130
Nikkon.....	.014, 054	Sanyo011, 013, 023, 135
Noblex.....	.013	Scott012, 015, 025, 032, 038, 065, 116
Olympus.....	.021	Sears ...000, 011, 014, 021, 023, 026, 049, 051, 054,	.055, 056, 084, 107, 118
Optimus.....	.001, 014, 054	Sharp001, 017, 029, 096
Optonica.....	.096	Shintom056, 061, 084, 098, 119
Orion.....	.000, 031, 130	Shogun013
Panasonic.....	.021, 022, 109, 125, 127	Signature001
Pentax.....	.016, 055, 056, 084, 107, 120	Singer021, 061, 128
Pentex Research.....	.018	Sony098, 099, 119
Philco.....	.021, 022, 062, 063	STS021, 107
Philips.....	.021, 022, 062, 096, 124, 136	Sylvania021, 022, 026, 062, 063, 065, 124
Pilot.....	.014	Symphonic026
Pioneer.....	.010, 055, 123	Tandy011
Portland.....	.016, 017, 019, 110	Tashiko014, 054
PROSCAN.....	.000	Tatung111
Protec061	Teac026, 085, 111
Pulsar104	Technics021, 109
Quarter011	Teknika014, 021, 022, 026, 054, 100
Quartz011	Toshiba015, 049, 051, 055, 065, 113, 116, 118
Quasar021, 022, 125	Totlevision013, 014, 054
RadioShack001, 014, 054, 096	TMK013, 024
RadioShack/Realistic011, 013, 014, 021, 022, 023,	Unitech013
.....	.026, 029, 049, 054, 096	Vector Research009, 010, 015, 016
Radix014, 054	Victor010
Randex014	Video Concepts009, 010, 015, 016
RCA000, 003, 007, 013, 021, 022, 055,	Videosonic013
.....	.056, 082, 083, 084, 085, 086, 087, 088, 089,	Wards ..001, 013, 014, 015, 021, 022, 023, 026, 029,	.054, 055, 056, 061, 084, 088, 090, 096, 107, 116
Realistic090, 091, 100, 107, 115, 120, 125, 133	XR-1000021, 026, 061
.....	.001, 011, 013, 014, 015, 021, 022,	Yamaha009, 010, 011, 018, 111
.....	.023, 026, 029, 049, 054, 096	Zenith026, 098, 104, 119, 128, 130, 137

PVR* Codes/Codes de PVR*/Códigos de PVR*

RePlay139	Tivo140
--------------	------	------------	------

*PVR's are programmed under the VCR•DVD or VCR key.

*Les PVR sont programmés à la touche VCR•DVD, VCR ou DVD•AUX.

*Los PVR están programados bajo la tecla VCR•DVD o DVD•AUX.

DVD Codes/Codes de DVD/Códigos de DVD

Aiwa350	Onkyo147
Apex.....	.383, 384, 389	Oritron152
Broksonic379	Panasonic148, 355
Daewoo385	Philips162, 356, 357, 358, 371, 377
Emerson386, 387	Pioneer149, 150, 165
Funai387	PROSCAN160
Go Video372	Qwestar152
Hitachi141, 351	RCA153, 160, 374, 380, 382
JVC146, 161, 352, 373	Samsung154, 155, 368, 375
Kenwood142	Sansui168
Konka353, 354	Sanyo359, 376
Magnavox143, 162, 357, 358	Sharp156, 158, 369
Memorex144	Sony157, 159, 164, 166, 360, 361
Mintek145	Sylvania387
Mitsubishi163	Toshiba167, 169, 362, 363, 365, 366, 381
NAD386	Zenith364, 367, 378

TV•DVD Combo Codes/Codes de TV•DVD Combinés/Combinación de Códigos TV•DVD

Broksonic239	TV379
RCA240	DVD380
Toshiba241381

VCR·DVD Combo Codes/Codes de Magn·DVD Combinés/Combinación de Códigos VCR·DVD

	VCR	DVD
Go Video	131	372
JVC	132	373
Philips	136	377
RCA	133	374
Samsung	134	375
Sanyo	135	376
Zenith	137	378

Portable DVD Codes/Codes de lecteur DVD portable/Códigos para DVD Portátil

RCA	382
-----------	-----

Satellite Codes/Codes de Satellite/ Códigos de Satélite

Alphastar.....	.079	Motorola047, 071
Dish Network.....	.078	Panasonic.....	.075
Echostar.....	.089	Philips085
Express Vu091	Primestar076
GE.....	.047, 071, 080, 081	PROSCAN047, 071, 080, 081
Hitachi.....	.083, 084	RCA047, 071, 080, 081
Hughes Network Systems.....	.077, 083, 090	Sony072
JVC082	Star Choice092
Magnavox085	Toshiba073
		Uniden086

Cable Codes/Codes de câblosélecteur/ Códigos para Cable

ABC001, 003, 004, 005, 006	Philips.....	.011, 012, 025
Antronix008, 009	Pioneer033, 034
Archer008, 009, 011	PROSCAN003
Cabletenna008	RCA000, 049
Cableview008	Realistic009
Century011	Regal022, 035
Citizen011	Regency017
Colour Voice012	Rembrandt003
Eastern017	Samsung034
Garrard011	Scientific Atlanta006, 036, 037, 038
GC Electronics009	Signal018
GE000, 003	Signature003
Gemini018	Sprucer000
General Instruments000, 001, 003, 046, 049	Starcom001, 018
Hamlin020, 021, 022, 035	Stargate018
Hitachi003	Starquest018
Jasco011	Tocom004, 023
Jerrold000, 001, 003, 005, 018, 023, 046, 049	Tusa018
Magnavox025	TV86027
Motorola000, 003, 046	Unika008, 009, 011
Movie Time027	United Cable001
NEC005	Universal008, 009, 011
NSC027	View Star025, 027
Panasonic.....	.000, 048	Zenith000, 050, 051