



GO.VIDEO®

# Portable DVD



**DP5030/DP7030**  
User's Guide

# Table of Contents

<b>Important Safety Instructions</b> .....	<b>4</b>	<b>Audio CD Playback</b> .....	<b>16</b>
<b>Player Overview</b> .....	<b>6</b>	Before You Begin.....	16
<b>Remote Control Overview</b> .....	<b>7</b>	Basic CD Playback .....	16
<b>Connections</b> .....	<b>8</b>	Playing MP3 Discs .....	16
Battery Connections .....	8	Stopping Playback .....	16
TV Connections .....	8	Forward/Reverse Scan .....	17
Amplifier/Receiver Connections .....	9	Skip Next/Previous .....	17
External Equipment Connections.....	9	Pause .....	17
<b>DVD Playback</b> .....	<b>10</b>	Displaying Track Information.....	17
Before You Begin.....	10	<b>Language Setup</b> .....	<b>18</b>
Basic DVD Playback .....	10	On Screen Display (OSD) Language.....	18
Viewing the Disc Menu .....	10	Disc Menu Language .....	18
Stopping Playback .....	10	Audio Language [DVD] .....	19
Forward/Reverse Scan .....	11	Subtitle Language [DVD] .....	19
Skip Next/Previous .....	11	<b>Screen Setup</b> .....	<b>20</b>
Pause .....	11	TV Type .....	20
Repeat .....	11	Screen Saver .....	20
A-B Repeat .....	11	Brightness .....	21
<b>Special DVD Features</b> .....	<b>12</b>	Color .....	21
Displaying Scene Information .....	12	<b>Custom Setup</b> .....	<b>22</b>
Audio .....	12	Parental Control [DVD].....	22
Subtitles.....	12	Change Password [DVD].....	22
Angle .....	13	Angle Mark [DVD] .....	23
Mute .....	13	Restore Defaults .....	23
Title .....	13	<b>Audio Setup</b> .....	<b>24</b>
Disc Menu .....	13	Audio Output [DVD] .....	24
Playing Picture CDs .....	14	<b>Troubleshooting</b> .....	<b>25</b>
Playing Picture CDs with MP3 Files.....	15	<b>Disc Handling &amp; Maintenance</b> .....	<b>26</b>
		<b>Limited Warranty</b> .....	<b>27</b>

## Unpack Accessories

Make sure the following items are included with your portable DVD player:

- Credit card size Remote Control with 3V Battery
- User's Guide
- Universal AC/DC Power Adapter
- Audio/Video cable
- Rechargeable Lithium-ion Battery Pack
- 12V Car Cigarette Lighter Adapter

## FCC and Safety Information

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK

DO NOT REMOVE COVER

NO USER-SERVICEABLE PARTS INSIDE

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL

### CAUTION:

**This unit employs a laser. Due to possible eye injury, only qualified service personnel should remove the cover or attempt to service this device. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.**

*This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.*

Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and disc can have an optional region code. If you load a disc of a different region code to your player, you will see the region code notice on the screen. The disc will not play, and should be unloaded.

(Possible region codes:)



There are 6 regions (also called "locals"). Each DVD player and disc will be played in one region ONLY.

1: Canada, U.S., U.S. Territories

2: Japan, Europe, South Africa, Middle East (including Egypt)

3: Southeast Asia, East Asia (including Hong Kong)

4: Australia, New Zealand, Pacific Islands, Central America, Mexico, South America, Caribbean

5: Former Soviet Union, Indian Subcontinent, Africa (also North Korea, Mongolia)

6: China

**Never make or change connections with the power switched on.**

**CAUTION** VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AVOID EXPOSURE TO BEAM  
(WARNING LOCATION: INSIDE ON LASER COVERSIELD)

CLASS 1 LASER PRODUCT  
KLASSE 1 LASER PRODUKT  
LUOKAN 1 LASER LAITE  
KLASS 1 LASER APPARAT  
CLASSE 1 PRODUIT LASER

## Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a damp cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized-type plug. A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plug, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way; such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.



**PORTABLE CART WARNING**  
(Symbol provided by RETAC)

# Precautions

Please read these precautions before operating this unit.

## Power cord protection

To avoid any malfunctions of the unit, and to protect against electric shock, fire or personal injury, please observe the following:

- Hold the plug firmly when connecting or disconnecting the AC power cord.
- Keep the AC power cord away from heating appliances.
- Never put any heavy object on the AC power cord.
- Do not attempt to repair or reconstruct the AC power cord in any way.

## Placement

Avoid placing the unit in areas of:

- direct sunlight or heating radiators, or closed automobiles
- high temperature (over 95°F) or high humidity (over 90%)
- significant dust as the internal parts may be seriously damaged.

## Non-use periods

When the unit is not being used, turn it off. When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

## No fingers or other objects inside

- Touching internal parts of this unit is dangerous, and may cause serious damage to the unit. Do not attempt to disassemble the unit.
- Do not put any foreign object in the disc tray.

## Keep away from water

- Keep the unit away from flower vases, tubs, sinks, etc. If liquids are spilled into the unit, serious damage could occur.

## Keep away from magnets

- Never bring a magnet or magnetized object near the unit.

## Stacking

- Place the unit in a horizontal position, and do not place anything heavy on it.

## Condensation

Moisture may form on the lens in the following conditions:

 
 
- immediately after a heater has been turned on
- in a steamy or very humid room
- when the unit is suddenly moved from a cold environment to a warm one

If moisture forms inside this unit, it may not operate properly. In this case, turn on the power and wait about one hour for the moisture to evaporate.


## If there is noise interference on the TV while a broadcast is being received

Depending on the reception condition of the TV, interference may appear on the TV monitor while you watch a TV broadcast and the unit is left on. This is not a malfunction of the unit or the TV. To watch a TV broadcast, turn off the unit.

# Player Overview

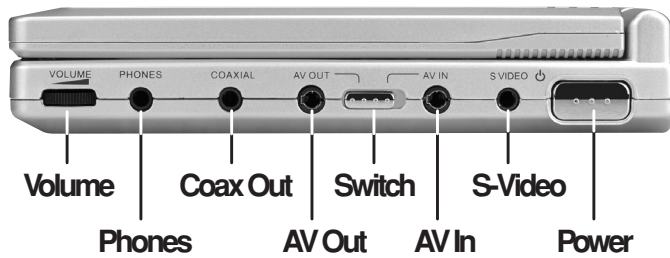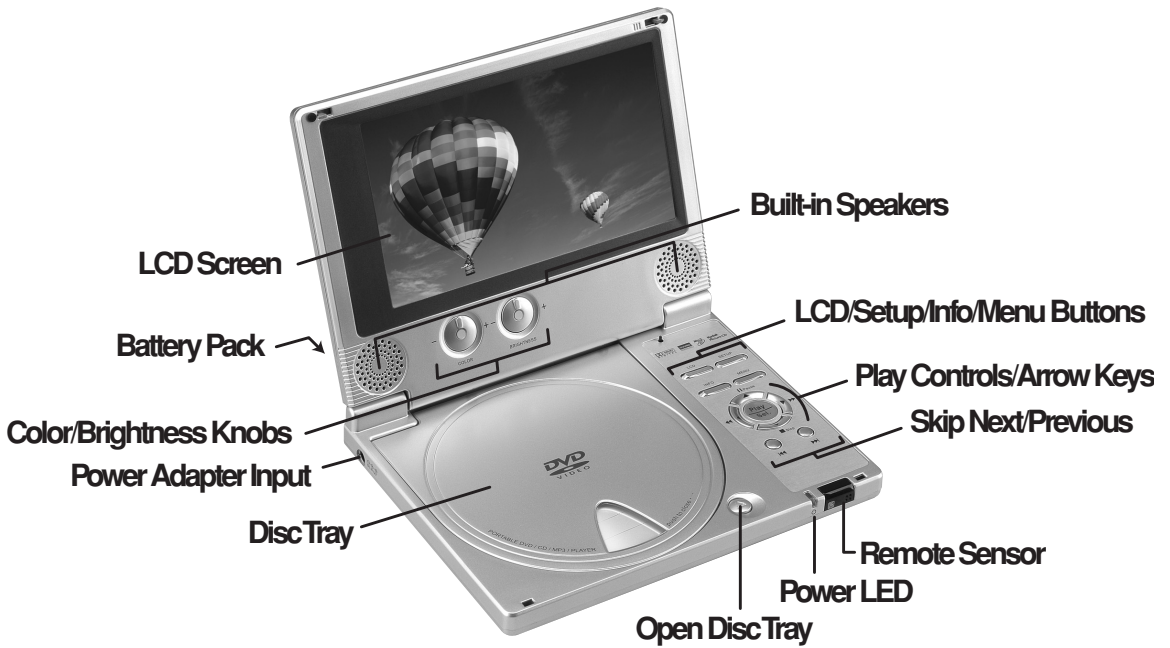

# Remote Control Overview

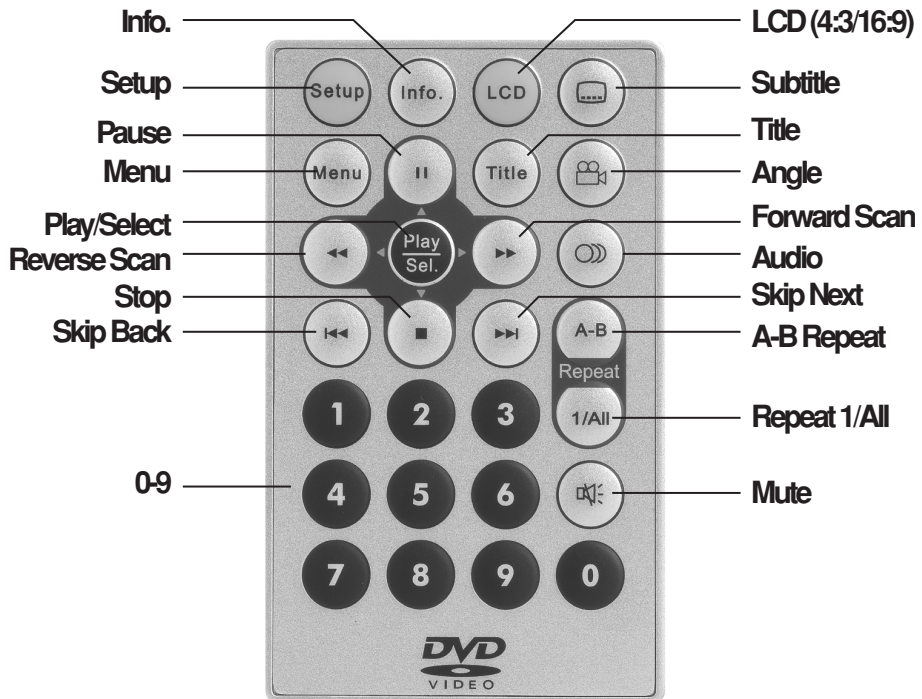 

# Connections

## Battery Connections

### Charging the Battery

- Attach the supplied 7.4V Li-ION battery pack to the back of the portable DVD player as shown.
- Plug the supplied AC adapter into a standard power outlet, and then connect it to the DC IN 12V jack on the left side of the player.
- Turn off the player. The battery pack will NOT charge while the portable DVD player is powered on.
- The red "Batt Chrg." light will glow while the battery pack is charging and will turn green when fully charged. Allow several hours to charge the battery pack.
- When fully charged the battery will last ~2.5 hours.



### Removing the Battery

 
- Press the PUSH button to remove the battery pack.



### CAUTION

- Use specified charger only.
- May explode if battery is incorrectly replaced or disposed of in fire.
- Do not short circuit.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Do not place the battery pack under direct sunlight or in excessively hot places (over 60° C (140° F)) such as the dashboard of cars.
- Only use with the specific power adapter by manufacturer (12VDC, 1.66A).
- The battery pack is not charged while the DVD player is turned on.

## TV Connections

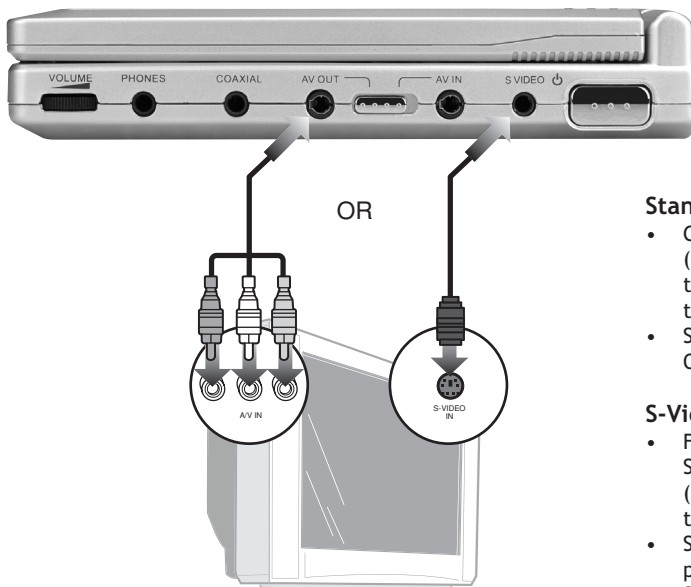

### Standard AV Connections

- Connect the supplied audio/video cable (mini-plug to RCA) from the AV OUT jack to the Audio/Video Inputs on your television.
- Slide the AV OUT/AV IN switch to the AV OUT position.

 
### S-Video Connections

- For improved picture quality connect an S-Video cable with mini-plug adapter (not included) from the S-VIDEO jack to the S-Video input on your television.
- See "Amplifier/Receiver Connections" on page 9 for audio options.
- Slide the AV OUT/AV IN switch to the AV OUT position.



# Connections

## Amplifier/Receiver Connections

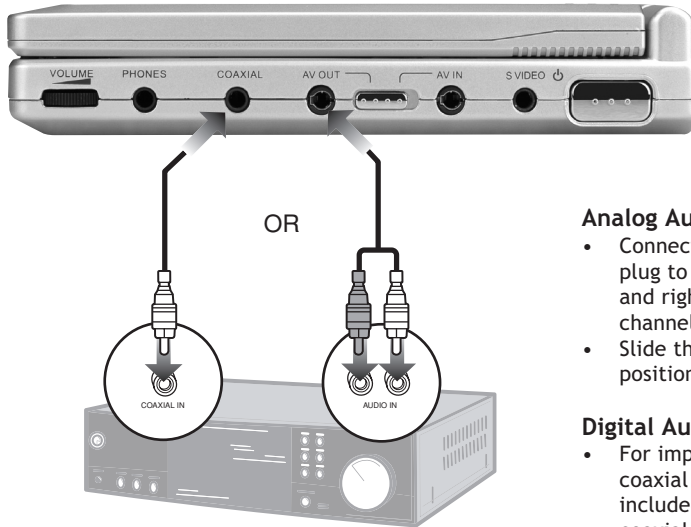

### Analog Audio Connections

- Connect the supplied audio/video cable (mini-plug to RCA) from the AV OUT jack to the left and right Audio Inputs on your stereo or 2-channel analog receiver.
- Slide the AV OUT/AV IN switch to the AV OUT position.

### Digital Audio Connections

 
- For improved audio quality connect a digital coaxial cable with mini-plug adapter (not included) from the COAXIAL jack to the coaxial digital audio input on your 5.1-channel receiver.
- When connecting the COAXIAL jack to a digital receiver, set the Audio Output to "DIGITAL" in the "AUDIO SETUP" menu; see page 24.
- Slide the AV OUT/AV IN switch to the AV OUT position.

## External Equipment Connections



### Connecting Camcorders, Video Games, etc.

- Connect the supplied audio/video cable (mini-plug to RCA) from the AV IN jack to the Audio/Video Outputs of your external equipment.
- Slide the AV OUT/AV IN switch to the AV IN position.

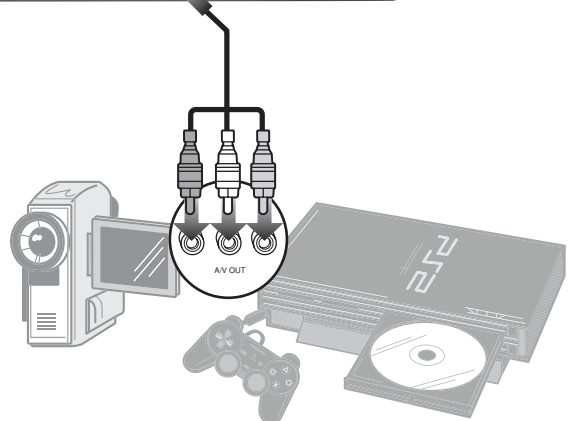

# DVD Playback

## Before You Begin...



---

Connect the portable DVD player to a power outlet and plug in headphones or listen to the built-in speakers. You can also connect the player to external equipment, such as a TV and/or audio system. If you do this, remember to:





- Turn on your TV and select the appropriate video input.
- Turn on your stereo or audio system and select the appropriate audio input.
- Slide the AV OUT/AV IN switch to the AV OUT position.

## Basic DVD Playback

---

- 1 Press **POWER**  on.
  - 2 Press **OPEN**  to open the disc cover.
  - 3 Hold the edge of the disc and place it in the tray with the label side up.
  - 4 Close the disc cover.
- The portable DVD player starts playback or opens the DVD disc menu automatically.

NOTE: Proceed with steps 5 and 6 when a menu is available on the disc.

- 5 Press  /  /  /  or use the number button(s) to select the desired chapter/title.

NOTE: To select a chapter/title, input the number; e.g., press "1" for chapter 1, "10" for chapter 10, etc.

- 6 Press **PLAY/SEL**.


The player starts playback of the selected item.

## Viewing the Disc Menu

---

Press **MENU**. The portable DVD player stops playback, and then displays the menu screen.


### When not in use...

When the portable DVD player is not in use, remove the disc and press **POWER**  to turn off the player. Then close the display panel.

### NOTE:

- The disc continues to rotate while the menu is displayed even after the player has finished playing a particular disc. When no further selections are to be played, be sure to press the **STOP** button to clear the menu screen.
- If the disc is placed in the tray upside down (and it is a single sided disc), the "NO DISC" message will appear.

### For your reference:

- When  appears when a button is pressed, it means that the corresponding function is prohibited by the player.

## Stopping Playback

---

Press **STOP**.

## Forward/Reverse Scan

---

With the remote control:

Press **◀◀** or **▶▶** during playback.

- Normal playback is resumed when you press **PLAY/SEL**.
- The Forward Scan (**▶▶** x2, **▶▶** x4, etc.) and Reverse Scan (**◀◀** x2, **◀◀** x4, and etc.) speed changes each time you press the **▶▶**/**◀◀** buttons.

## Skip Next/Previous

---

You can skip to a specific chapter or track during playback.

### Skipping Ahead

Press **▶▶▶** during playback.

Skips a chapter each time you press the **▶▶▶** button.

### Skipping Back

Press **◀◀◀** during playback.

When you press the **◀◀◀** button midway through a chapter, the portable DVD player returns to the beginning of the chapter. The player then skips a chapter each time you press the **◀◀◀** button.

## Pause

---

Press **PAUSE** once during playback.

The screen is paused.

To return to normal playback

Press **PLAY/SEL**.

## Repeat

---

**1** Press **1/ALL REPEAT** during playback.

Each time you press the button, the disc will repeat a chapter or title.

Press once: REP CHAPTER (Repeat Chapter)

Press twice: REP TITLE (Repeat Title)

Press three times: REP DISC (Repeat Disc)

Press four times: REPEAT off (Repeat Cancelled)

To return to normal playback

Press **1/ALL REPEAT** until "REPEAT Off" appears.

### NOTE:

- Repeat playback works only with discs for which the elapsed playing time appears on the player's display during playback.
- Repeat playback may not work correctly with some DVDs.

## A-B Repeat

---

**1** Press **A-B** during playback at the point where repeat play is to start (A).

"REP A" appears on the screen.

**2** Press **A-B** again at the point where repeat play is to end (B).

"REP B" appears on the screen. Repeat playback between points A to B starts playback.

To return to normal playback

Press **A-B** again. ("REPEAT Off" appears on the screen.)

**NOTE:** A-B repeat works only within a chapter.

# Special DVD Features

## Displaying Scene Information

---

### 1 Press **INFO.** during playback.

Press **INFO.** repeatedly to display the title number, chapter number, and other information on the screen.

### Stop Displaying Scene Information

Press **INFO.** repeatedly until the scene information disappears.

## Audio

---

You can change the audio soundtrack to any available language on the disc.

### 1 Press **AUDIO** during playback.

### 2 Press **AUDIO** repeatedly until the preferred language is selected.

#### For your reference:


- When the preferred language is not selected even after pressing the button several times, it may indicate that language is not available on the disc.
- When you load or remove the disc, the portable DVD player will search for the Audio language selected in the Setup Menu. If your preferred language is not available on the disc, the portable DVD player will playback the disc's default language.

## Subtitles

---

If a disc provides subtitles, you can choose to hide or display them. (This operation works only with discs that provide subtitles.)

### 1 Press **SUBTITLE** during playback.

- When you press **SUBTITLE** once, the first subtitle language recorded on the disc will be displayed. The rest of the subtitles recorded will display in sequence as you press the button.
- When no subtitles are recorded "  " will display instead of the language number.

### 2 Press **SUBTITLE** repeatedly until the preferred language is selected.

- You can change to another language with this function, or you can clear the subtitles by pressing this button repeatedly until "SUBTITLE OFF" appears on the screen.
- In some cases, the subtitle language may not change immediately to the selected one.

#### For your reference:

- When the preferred subtitle language is not selected even after pressing the button several times, it may indicate that the language is not available on the disc.
- When you load or remove the disc, the portable DVD player will search for the Subtitle language selected in the Setup Menu. If your preferred language is not available on the disc, the portable DVD player will playback the disc's default language.

# Special DVD Features

## Angle

---

Some DVD discs contain scenes which have been shot simultaneously from a number of different angles. Use the **ANGLE** "◻◻◻" button to view these alternative scenes.

- 1 Press **ANGLE** during playback.
- 2 Press **ANGLE** repeatedly until the preferred viewing angle is selected.

### NOTE:

- ANGLE will only function on discs where different angles have been recorded.

## Mute

---

To mute the volume on the portable DVD player.

- 1 Press **MUTE** during playback.
- To resume normal sound, press MUTE repeatedly until "MUTE OFF" appears on the screen.

## Title

---

Some DVDs have Title menus, which allow you to choose among multiple titles (usually movies).

- 1 Press **TITLE** in stop mode

The Title menu appears, if available.

- 2 Press ◀ / ▶ / ▲ / ▼ to select the preferred item.
- 3 Press **PLAY/SEL.**

## Disc Menu

---

Most DVDs have Disc menus, which include special disc features, including audio languages, subtitle languages and more.

- 1 Press **PLAY/SEL.**
- 2 Press **MENU.**

The Disc menu appears, if available.

- 3 Press ◀ / ▶ / ▲ / ▼ or use the number button(s) to select the preferred item.

**Note:** Menu details vary by disc.

# Special DVD Features

## Playing Picture CDs

---

You can play Kodak Picture CDs and JPEG picture CDs on your portable DVD player.

### Basic Playback

- 1 Load a Kodak Picture CD or JPEG Picture CD. After a few seconds, the portable DVD player starts a slide show of available images.
- 2 Use the number keys to jump to a specific image. The portable DVD player will begin the slide show from the selected picture.

To stop the slide show

Press **STOP**.

### PAUSE, NEXT and PREV.

- 1 Press **PAUSE** to pause the slide show.
- 2 Press **▶▶** and **◀◀** to view the next or previous picture.

To resume the slide show

Press **PLAY/SEL.** again.

### Rotating

- 1 When an image is paused, press **◀/▶** to rotate the image in 90 degree increments.

### INFO.

- 1 Press **INFO.** to view the pictures listed in sequential order.

### NOTE:

 
- The **Rotate** feature only works with Kodak Picture CDs.

# Special DVD Features


## Playing Picture CDs with MP3 Files

You can display a JPEG picture while playing MP3 tracks.

- 1 Load a disc containing both MP3 tracks and JPEG pictures. The portable DVD player starts playing a slide show of JPEG pictures automatically.
- 2 Press **STOP** when you see the picture you would like to display. The following screen appears.

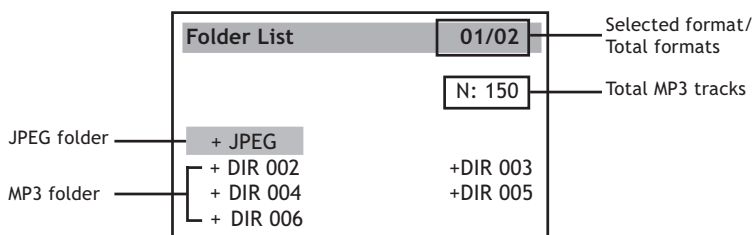

 - 3 Press ◀ / ▶ to select an MP3 folder, and then press **PLAY/SEL**. The next screen appears:

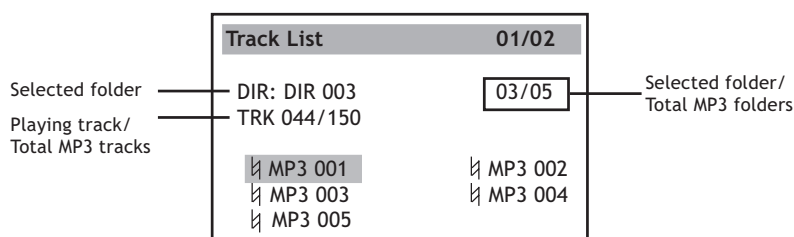

- 4 To play the track, you can:
  - a. press ▶▶▶ or ◀◀◀ to play the next or previous track,
  - b. press ◀ / ▶ to select the MP3 track, and then press **PLAY/SEL**.
  - c. press the track number (e.g., "1"), and then press **PLAY/SEL**.

### NOTE:

- This feature only allows display of one JPEG picture at a time during MP3 music playback.
- In some cases, MP3 music and JPEG pictures cannot be played. This may occur if the data on the disc was recorded using options not supported by the portable DVD player.

# Audio CD Playback

## Before You Begin...



---

Connect the portable DVD player to a power outlet and plug in headphones or listen to the built-in speakers. You can also connect the player to external equipment, such as a TV and/or audio system. If you do this, remember to:

- Turn on your TV and select the appropriate video input.
- Turn on your stereo or audio system and select the appropriate audio input.
- Slide the AV OUT/AV IN switch to the AV OUT position.



## Basic CD Playback

---

- 1 Press **POWER**  on.
- 2 Press **OPEN**  to open the disc cover.
- 3 Hold the edge of the disc and place it in the tray with the label side up.
- 4 Close the disc cover.
  - The CD starts playing automatically.

## Playing MP3 Discs



---

- 1 Press **POWER**  on.
- 2 Press **OPEN**  to open the disc cover.
- 3 Hold the edge of a MP3 disc and place it in the tray with the label side up.
- 4 Press **PLAY/SEL.**



Close the disc cover and wait about 5 seconds. Playback will start automatically.

MP3 discs are normally divided into directories which are subdivided into MP3 tracks. You can select any specific MP3 track to play.

### With Directories

- Press **STOP** to enter the directories.
- Select a specific track to play by pressing the  /  or number buttons.
- Press **PLAY/SEL.**

### Without Directories

- During playback, select a specific track to play by pressing the  /  or number buttons.
- Press **PLAY/SEL.**

## Stopping Playback

---

Press **STOP.**



# Audio CD Playback

## Forward/Reverse Scan

---

With the remote control:

Press **◀◀** or **▶▶** during playback.

- Normal playback is resumed when you press **PLAY/SEL.**
- The Forward Scan (**▶▶** x2, **▶▶** x4, etc.) and Reverse Scan (**◀◀** x2, **◀◀** x4, and etc.) speed changes each time you press the **▶▶**/**◀◀** buttons.

## Skip Next/Previous

---

You can skip to a specific track during playback.

### Skipping Ahead

Press **▶▶▶** during playback.

Skips a track each time you press the **▶▶▶** button.

### Skipping Back

Press **◀◀◀** during playback.

When you press the **◀◀◀** button midway through a track, the portable DVD player returns to the beginning of the track. The player then skips a track each time you press the **◀◀◀** button.

## Pause

---

Press **PAUSE** once during playback.

The screen is paused.

To return to normal playback

Press **PLAY/SEL.**

## Displaying Track Information

---

**1** Press **INFO.** during playback.

Press **INFO.** repeatedly to display the elapsed time, track number, and other information on the screen.

### Stop Displaying Track Information

Press **INFO.** repeatedly until the track information disappears.

# Language Setup

## On Screen Display (OSD) Language

---

You can select among various languages for the player's on-screen display (OSD).

- 1 Press **SETUP** in Stop mode.
- 2 Press **▲ / ▼** to select "LANGUAGE SETUP", then press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "OSD", then press **PLAY/SEL.**
- 4 Press **▲ / ▼** to select your preferred language.
- 5 Press **PLAY/SEL.**

To return to the SETUP MENU

Select "RETURN", then press **PLAY/SEL.**

To exit the SETUP MENU

Press **SETUP** or select "EXIT" on the SETUP MENU screen.

## Disc Menu Language

---

You can select your preferred language for DVD disc menus.

- 1 Press **SETUP** in Stop mode.
- 2 Press **▲ / ▼** to select "LANGUAGE SETUP", then press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "MENU", then press **PLAY/SEL.**
- 4 Press **▲ / ▼** to select your preferred language.
- 5 Press **PLAY/SEL.**

To return to the SETUP MENU

Select "RETURN", then press **PLAY/SEL.**

To exit the SETUP MENU

Press **SETUP** or select "EXIT" on the SETUP MENU screen.

# Language Setup

## Audio Language [DVD]

---

You can select your preferred language for DVD audio soundtracks.

- 1 Press **SETUP** in Stop mode.
- 2 Press **▲ / ▼** to select "LANGUAGE SETUP", then press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "AUDIO", then press **PLAY/SEL.**
- 4 Press **▲ / ▼** to select your preferred language.
- 5 Press **PLAY/SEL.**

**ORIGINAL:** Select "Original" if you want the default language to always be played first.

### To return to the SETUP MENU

Select "RETURN", then press **PLAY/SEL.**

### To exit the SETUP MENU

Press **SETUP** or select "EXIT" on the SETUP MENU screen.

### For your reference:

- If the language selected is not recorded on the disc, the DVD player will playback the disc's default language.

## Subtitle Language [DVD]

---

You can select your preferred language for DVD subtitles.

- 1 Press **SETUP** in Stop mode.
- 2 Press **▲ / ▼** to select "LANGUAGE SETUP", then press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "SUBTITLE", then press **PLAY/SEL.**
- 4 Press **▲ / ▼** to select your preferred language.
- 5 Press **PLAY/SEL.**

### To return to the SETUP MENU

Select "RETURN", then press **PLAY/SEL.**

### To exit the SETUP MENU

Press **SETUP** or select "EXIT" on the SETUP MENU screen.

### For your reference:

- If the selected language is not available on the disc, the player will select the disc's default language.

# Screen Setup

## TV Type

---

The TV Type feature allows you to set your preferred aspect ratio for DVD movies. Choose from the following:

- **4:3 PS** (Pan & Scan) - Crops widescreen movies to fit a standard television.
- **4:3 LB** (Letterbox) - Shows the full width of widescreen movies on a standard television with black bars above and below the picture.
- **16:9** - Select if you have a widescreen television.

- 1** Press **SETUP**.
- 2** Press **▲** / **▼** to select "SCREEN SETUP", then press **PLAY/SEL**.
- 3** Press **▲** / **▼** to select "TV TYPE", then press **PLAY/SEL**.
- 4** Press **▲** / **▼** to select your preferred TV TYPE setting.
- 5** Press **PLAY/SEL**.

### To return to the SETUP MENU

Select "RETURN", then press **PLAY/SEL**.

### To exit the SETUP MENU

Press **SETUP** or select "EXIT" on the SETUP MENU screen.

## Screen Saver

---

The Screen Saver comes on automatically to protect the LCD screen if the player is left idle for 10 or more minutes.

- 1** Press **SETUP**.
- 2** Press **▲** / **▼** to select "SCREEN SETUP", then press **PLAY/SEL**.
- 3** Press **▲** / **▼** to select "SCREEN SAVER", then press **PLAY/SEL**.
- 4** Press **▲** / **▼** to select "ON" or "OFF", then press **PLAY/SEL**.

### To return to the SETUP MENU

Select "RETURN", then press **PLAY/SEL**.

### To exit the SETUP MENU

Press **SETUP** or select "EXIT" on the SETUP MENU screen.

# Screen Setup

## Brightness

---

To adjust the brightness of the on-screen image:

- 1 Rotate the BRIGHTNESS knob as follows:
  - Clockwise to increase the brightness.
  - Counterclockwise to decrease the brightness.

## Color

---

To adjust the color of the on-screen image:

- 1 Rotate the COLOR knob as follows:
  - Clockwise to increase color saturation.
  - Counterclockwise to decrease color saturation.

# Custom Setup

Note: "Custom Setup" only works when no disc is loaded in the portable DVD player.

## Parental Control [DVD]

---

The Parental Control feature enables you to block playback of movies based on their rating. For example, if you set the rating level to PG-13, the player will block playback of movies rated PG-13, R, NC-17 and X unless the correct password is entered.

- 1 Press **SETUP** in Stop mode.
- 2 Press **▲ / ▼** to select "CUSTOM SETUP", then press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "PARENTAL CONTROL", then press **PLAY/SEL.**
- 4 Enter a 4-digit password, then press **PLAY/SEL.**  
Factory pre-set password : 9999  
You must enter "9999" to set the rating for the first time when purchasing your DVD from the store.
- 5 Press **▲ / ▼** to select ratings and press **PLAY/SEL.**

### To return the screen to the SETUP MENU

Select "RETURN" and then press **PLAY/SEL.**

### To exit the SETUP MENU

Press **SETUP** or select "EXIT" on the SETUP MENU screen.

**NOTE:** You can only use the Parental Control feature with rated DVD discs.

## Change Password [DVD]

---

To change the Parental Control password:

- 1 Press **SETUP** in Stop mode.
- 2 Press **▲ / ▼** to select "CUSTOM SETUP", then press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "CHANGE PASSWORD", then press **PLAY/SEL.**
- 4 Enter your old password, then press **PLAY/SEL.**
- 5 Enter your new password, then press **PLAY/SEL.**

### To return the screen to the SETUP MENU

Select "RETURN" and then press **PLAY/SEL.**

### To exit the SETUP MENU

Press **SETUP** or select "EXIT" on the SETUP MENU screen.

# Custom Setup

## Angle Mark [DVD]

---

You can choose to display or hide angle marks "ⓐ" on screen.

- 1 Press **SETUP** in Stop mode.
- 2 Press ▲ / ▼ to select "CUSTOM SETUP", then press **PLAY/SEL.**
- 3 Press ▲ / ▼ to select "ANGLE MARK", then press **PLAY/SEL.**
- 4 Press ▲ / ▼ to select "ON" or "OFF", then press **PLAY/SEL.**

### NOTE:

Whether ANGLE MARK is set to ON or OFF, pressing the **ANGLE** button will always allow selection of multiple angles if they are available.

## Restore Defaults

---

To reset the portable DVD player to its factory default settings:

- 1 Press **SETUP** in Stop mode.
- 2 Press ▲ / ▼ to select "CUSTOM SETUP", then press **PLAY/SEL.**
- 3 Press ▲ / ▼ to select "DEFAULT", then select "READ."
- 4 Press **PLAY/SEL.**

### Exceptions:

The Parental Lock and Password settings will NOT be changed when "DEFAULT" is selected.

### To return to the SETUP MENU

Select "RETURN" and then press **PLAY/SEL.**

### To exit the SETUP MENU

Press **SETUP** or select "EXIT" on the SETUP MENU screen.

# Audio Setup

## Audio Output [DVD]

---

The portable DVD player provides two types of audio output:

- 2-channel stereo sound, and
- Digital Audio Out

- 1 Press **SETUP** in Stop mode.
- 2 Press **▲ / ▼** to select "AUDIO SETUP", then press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "OUTPUT", then press **PLAY/SEL.**
- 4 Press **▲ / ▼** to select your preferred Audio Output setting.
- 5 Press **PLAY/SEL.**

### NOTE:

- The digital audio output jack (labeled "COAXIAL") is used to output the digital audio signal recorded on DVD discs to an external amplifier. If you set "OUTPUT" to "DIGITAL" in the SETUP MENU the signal will be output in its original format (e.g., Dolby Digital).

### WARNING:

- Do not set "AUDIO SETUP" to "DIGITAL" unless you are connecting an A/V decoder with Dolby Digital (AC-3) decoding function.
- High volume sound may damage your hearing as well as the speakers.

### To return the screen to the SETUP MENU

Select "RETURN" and then press **PLAY/SEL.**

### To exit the SETUP MENU

Press **SETUP** or select "EXIT" on the SETUP MENU screen.



# Troubleshooting

Before requesting service for the portable DVD player, check the chart below for a possible cause of the problem you are experiencing. Some simple checkups or a minor adjustment on your part may eliminate the problem and restore proper operation.

SYMPTOM	REMEDY
No power.	<ul style="list-style-type: none"> <li>• Insert power plug securely into power outlet.</li> <li>• Check if POWER button on right side of player is pressed in.</li> <li>• Check power at AC outlet by testing another appliance.</li> </ul>
Player does not start playback when PLAY is pressed.	<ul style="list-style-type: none"> <li>• Condensation has formed: wait -1-2 hours to allow player to dry out.</li> <li>• Player cannot play discs other than DVDs, audio CDs, and photo CDs.</li> <li>• Check if disc is defective by trying another disc.</li> <li>• Check region (local) code.</li> </ul>
Player starts playback but stops immediately. No picture.	<ul style="list-style-type: none"> <li>• Disc may be dirty and may require cleaning.</li> <li>• Ensure that disc is installed with label side up.</li> <li>• Ensure that equipment is connected properly.</li> <li>• Ensure that input setting for TV is set correctly.</li> <li>• Check if external equipment is on.</li> <li>• Select same channel and source on TV as on player.</li> <li>• Check if LCD is on.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>• Ensure that equipment is connected properly.</li> <li>• If using a HiFi amplifier, try another audio source.</li> <li>• Check Audio Setup menu to make sure that "2 CH" is selected.</li> <li>• Check Volume adjustment.</li> </ul>
Distorted sound.	<ul style="list-style-type: none"> <li>• Ensure that input settings for your TV and stereo system are correct.</li> <li>• No sound is heard during Pause mode.</li> </ul>
No audio from Digital Output.	<ul style="list-style-type: none"> <li>• Check digital connections.</li> <li>• Check SETUP MENU to make sure that "Audio Setup" is set to "DIGITAL".</li> <li>• Check if the audio format of the selected audio language matches your receiver capabilities.</li> </ul>
Distorted picture.	<ul style="list-style-type: none"> <li>• Check disc for fingerprints and clean with a soft cloth, wiping from center to edge.</li> <li>• Sometimes a small amount of picture distortion may appear. This is not a malfunction.</li> </ul>
Completely distorted picture or no color in picture.	<ul style="list-style-type: none"> <li>• Disc format does not match TV format (PAL/NTSC).</li> </ul>
Picture distorted during forward or reverse scan.	<ul style="list-style-type: none"> <li>• Picture will be somewhat distorted at times. This is normal.</li> </ul>
No forward or reverse scan playback.	<ul style="list-style-type: none"> <li>• Some discs may have sections which prohibit Forward/Reverse Scan.</li> </ul>
No 4:3 (16:9) picture.	<ul style="list-style-type: none"> <li>• Choose the correct "TV TYPE" setting in the SETUP MENU.</li> </ul>
Remote control does not function.	<ul style="list-style-type: none"> <li>• Make sure batteries are installed with correct polarities (+ and -).</li> <li>• Batteries are depleted: replace with new ones.</li> <li>• Point remote control at signal sensor.</li> <li>• Operate remote control within 23 feet of signal sensor.</li> <li>• Remove obstacles between remote control and signal sensor.</li> </ul>
DVD player and remote control keys not functioning.	<ul style="list-style-type: none"> <li>• Power unit off and on. Alternatively, turn off unit, unplug power cable and plug it back in. (Player may not be operating properly due to lightning, static electricity or some other external factor.)</li> </ul>
Playback does not start when Title is selected.	<ul style="list-style-type: none"> <li>• Parental Control function may be set. Confirm the "PARENTAL" setup.</li> </ul>
Audio soundtrack and/or subtitle language not selected.	<ul style="list-style-type: none"> <li>• If audio soundtrack and/or subtitle language are not available on the disc, language selected in SETUP MENU will not be seen/heard.</li> </ul>
No subtitles.	<ul style="list-style-type: none"> <li>• Subtitles not available on all discs.</li> <li>• Subtitles are available but turned off. Press SUBTITLE to display the subtitles.</li> </ul>
Alternative audio soundtrack (or subtitle) languages cannot be selected.	<ul style="list-style-type: none"> <li>• Only one language is available.</li> </ul>
Angle cannot change.	<ul style="list-style-type: none"> <li>• Depends on software availability. Even if a disc has a number of angles recorded, these angles may be recorded for specific scenes only.</li> </ul>

# Disc Handling & Maintenance

## Handling Precautions

 
- Hold the disc by the edges so the surface will not be soiled with fingerprints. (A) Fingerprints, dirt and scratches can cause skipping and distortion.
- Do not write on the label side with a ball-point pen or other writing utensil.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids, or any other solvent.
- Be careful not to drop or bend the disc.
- Do not install more than one disc on the disc tray.
- Do not try to close the disc cover when the disc is not installed properly.
- Be sure to store the disc in its original case when not in use.

## If the surface is soiled (B)

Wipe gently with a soft, damp (water only) cloth.

When wiping discs, always move the cloth from the center hole toward the outer edge.

(If you wipe the disc using a circular motion, circular scratches are likely to occur, which will cause noise.)

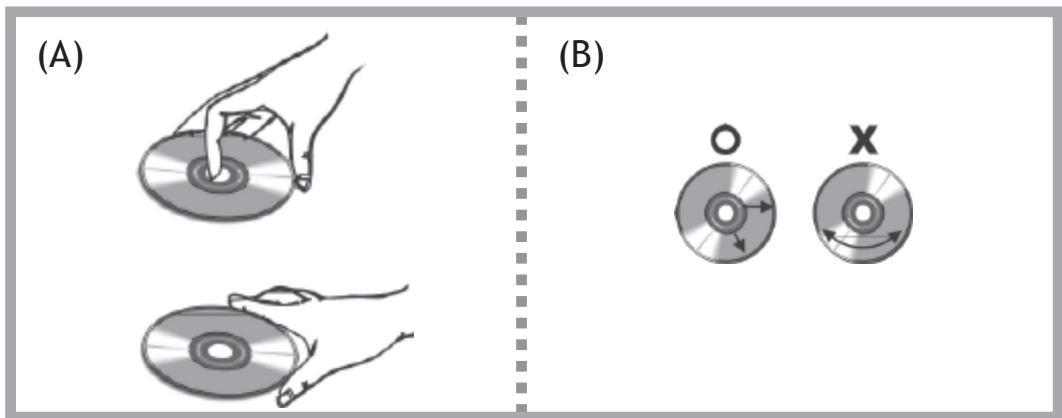

**If the disc is brought from a cold to a warm environment, moisture may form on the disc**  
Wipe moisture off with a soft, dry, lint-free cloth before using the disc.

## Improper disc storage

You can damage discs if you store them in the following places:

- Areas exposed to direct sunlight
- Humid or dusty areas
- Areas directly exposed to a heat outlet or heating appliance

## Disc which cannot be played with this player

- CD-ROM (Application Program)
- CVD
- CD-G
- DVD with a Region Code other than that shown on the DVD unit's Region Code Label on the rear panel

## Maintenance

- Be sure to turn the unit off and disconnect the AC power cord before maintaining the unit.
- Wipe the unit with a dry soft cloth. If the surfaces are extremely dirty, wipe clean with a cloth which has been dipped in a weak soap-and-water solution and wrung out thoroughly, and then wipe again with a dry cloth.
- Never use alcohol, benzine, thinner, cleaning fluid or other chemicals. And do not use compressed air to remove dust.

## Limited Warranty

### Who Provides the Limited Warranty

During the warranty period, the GoVideo Warranty Administrator will honor service for 90 days labor, 1 year parts from the original date of consumer purchase. See below for Commercial, Industrial or Educational use coverage. Remote controls are warranted for 90 days from the date of purchase.

90 days labor  
1 year parts

### Who is Protected

This warranty protects the original consumer owner of this GoVideo product.

### What is Covered and How Long

This warranty covers internal operating parts and service/labor to repair or replace covered parts in this GoVideo product for 90 days labor, 1 year parts, from the date of purchase, defined as follows: (1) Original Consumer Retail Purchase; (2) First Rental Purchase Agreement; or (3) First Lease Purchase Agreement (the "Warranty Period"). Labor and replacement parts supplied during the Warranty Period are covered only for the remaining portion of the original Warranty Period. The GoVideo Warranty Administrator shall have no liability for service under this warranty if non-OEM (Original Equipment Manufacturer) replacement parts are used in the repair of your GoVideo product.

### What the Owner Must Do If Service is Required

If service under this warranty is required, log onto "www.govideo.com" to determine the nearest authorized GoVideo service center.

### Other Warranty Coverage

Commercial, Industrial or Educational use has the same warranty coverage as stated in this warranty.

### What are the Exceptions

This warranty does not cover: (1) Normal maintenance service, such as cleaning. (2) Damage from misuse, abuse neglect or accident, natural disasters or Acts of God. (3) Cabinetry, decorative parts, A/C adapters, knobs or buttons. (4) The foreign country use of this product. (5) GoVideo product which has been electronically or mechanically modified in any way or incorporated into other products. (6) Installation and setup service adjustments. (7) Owner instruction. Your Owner's Guide provides information regarding operating instructions and user controls. For additional information, contact your authorized GoVideo dealer.

Go Video is not responsible for any shipping, handling or insurance charges.

This Exclusive Limited Warranty excludes all incidental and consequential damages. Some states do not allow the exclusion of incidental and consequential damages, so the above exclusion may not apply to you.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY PERIOD. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Exclusive Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

#### GOVIDEO WARRANTY ADMINISTRATOR

GoVideo • 7835 East McClain Drive • Scottsdale, Arizona 85260-1732  
customerservice@govideo.com

**GO.VIDEO<sup>®</sup>**