

LITTLE LINK


Quick Start Guide

English Version 1.0




LOREX Baby

Know Your Baby Monitor

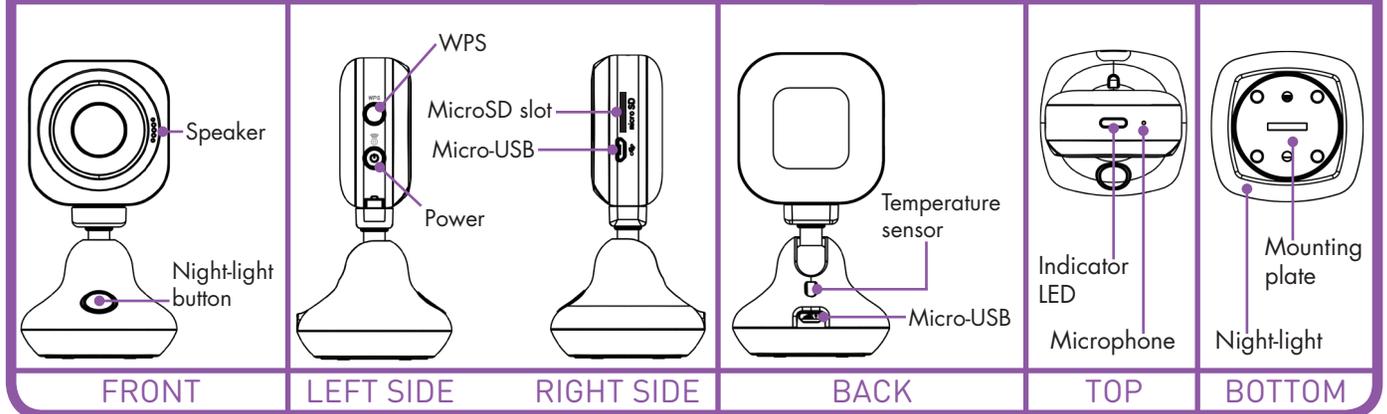

Product Includes

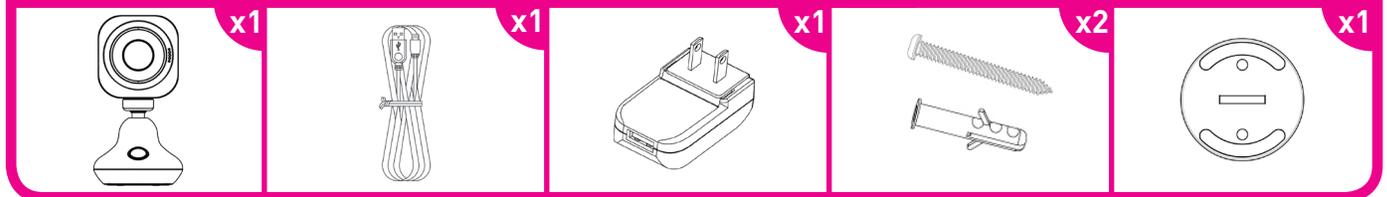


Getting Started




To avoid injury to children and infants:

- **MAKE SURE** to keep the camera and all power cords at least 3ft / 1m away from cribs and out of reach of your child.

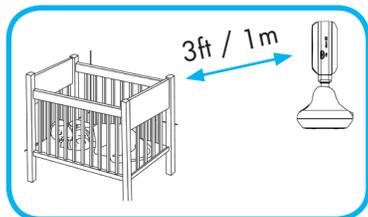


1

Connect the USB cable to the power adapter.

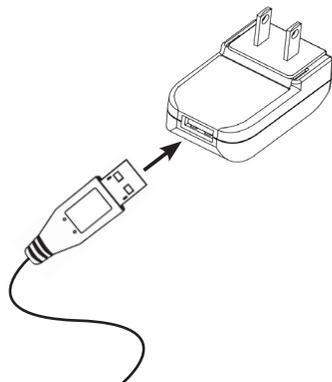



2

Connect the other end of the USB cable to the camera base. Connect the power adapter to a power outlet.

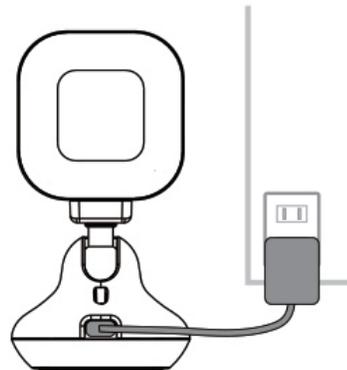

3

Press and hold the power button on the camera for one second.

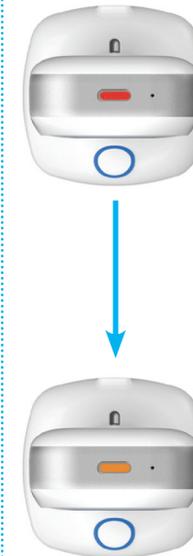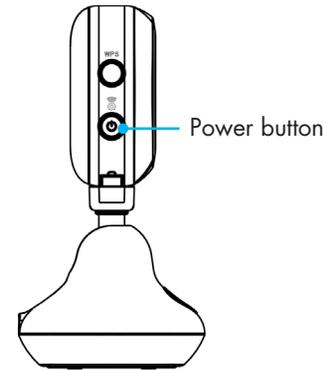

The LED on top of the camera glows **red** to show that the camera is powered on.

For a few seconds, the LED will blink on and off.

Once the LED glows steadily **orange**, turn the page over to connect with a smartphone or tablet.

Mobile Setup

Requirements

- iOS v6.0 or higher / Android v2.3 or higher

Smartphone / Tablet Setup

1 Download the free **Lorex Baby Link** app from the App Store (iPhone® / iPad®) or the Google Play Store (Android™).

2 Ensure WiFi on your smartphone / tablet is turned on. See the user guide provided with your smartphone / tablet for details.

3 Connect to the camera's WiFi hotspot. The hotspot appears in your available WiFi networks as "Lorex" followed by the Device ID (Lorex-XXXXXXX).

4 Tap the **Lorex Baby Link** icon ().

5  Tap  beside the camera name

You will be prompted to create a personalized password for the camera.

Your password must be at least 6 characters in length. Write down your password for future reference:

PASSWORD: _____

6 Tap  under **WiFi AP**.

7  Select your home WiFi network (e.g., *House WiFi*).

8 Enter the password for your WiFi network, then tap **Back**.

9 Tap **Save**, then tap **Back** to return to the main screen.

 The indicator LED will glow **green** and flash on and off. After a few seconds, the LED steadily glows green. This means the camera is ready for remote connection.

NOTE: If the indicator LED continues to flash for more than one minute, you may have entered your WiFi password incorrectly. Press the power button on the camera and return to Step 3.

10 Ensure your smartphone / tablet is connected to your WiFi network.

OR
Use your mobile Internet connection.

11 Tap the camera name and enter the password you created in Step 5.

Live video from your camera appears on your smartphone or tablet!



Adding a New Device

Follow the instructions below to connect additional smartphones / tablets to your camera:

1 Download the free **Lorex Baby Link** app from the App Store (iPhone® / iPad®) or the Google Play Store (Android™).

2 Ensure your smartphone / tablet is connected to the Internet.

3 Tap the **Lorex Baby Link** icon ().

4 Tap .

5 Tap  to scan the QR code on the back of the camera. You may be asked to download Barcode Scanner if it is not already installed on your smartphone / tablet.

OR

Manually enter the camera's Device ID written underneath the QR code.

6 Enter the password you created in Step 5 of "Smartphone / Tablet Setup" then tap **Save**.

7 Tap the camera name.

Live video from your camera appears on a second smartphone or tablet!

