

Table of Contents

1. Connecting the video recorder	4	5. Manual recording	13
Important for the United Kingdom	4	General information	13
Preparing the remote control for operation	4	Recording without automatic switch-off	13
Connecting your video recorder to the TV set	4	Recording with automatic switch-off (OTR One-Touch-Recording)	13
Connecting with a scart cable	4	Preventing accidental erasing of cassettes	13
Connecting without a scart cable	5	Lining up recordings (assemble cut)	13
2. Important notes for operation	6	Selecting the recording speed (SP or LP)	14
Navigation in the screen menu	6	'Direct Record'	14
The symbols on your video recorder display	6	Switching 'Direct Record' on or off	14
3. Installing your video recorder	7	6. Programming a recording (TIMER)	15
Preparation for use	7	General information	15
Manual TV channel search	7	Programming a recording (with 'VIDEO Plus+®')	15
Sorting TV channels automatically (Follow TV)	8	Problems and solutions for programmed recordings	16
Automatic Tuning	9	Programming a recording (without VIDEO Plus+)	16
Sorting and clearing TV channels manually	9	Problems and solutions for programmed recordings	17
Setting the clock	10	How to check, or delete a programmed recording (TIMER)	17
Setting the RF out channel	10	How to change a programmed recording(TIMER)	17
4. Playback	11	7. Other functions	18
Playing cassettes	11	Switching the status display off or on	18
Playing back NTSC cassettes	11	Continuous playback	18
Displaying current tape position	11	Blue Background on or off	19
Searching for a tape position with picture(scanning)	12	Automatic switch-off	19
Still picture / slow motion	12	8. Before you call an engineer	20
Searching for tape position without picture (forward wind and rewind)	12		
Automatic search for a tape position (index search)	12		
Manual Tracking	12		

Supplied accessories

- Operating instructions
- Remote control and batteries
- Aerial cable

Interference

The Department of Trade and industry operates a Radio Investigation Service to help TV licence holders improve reception of BBC and ITC programmes where these are being spoilt by interference.

If your dealer cannot help, ask at a Main Post Office for the booklet 'How to Improve Television and Radio Reception'.

VR330/07



Let's make things better.



PHILIPS

OPERATING INSTRUCTIONS

Thank you for buying a Philips video recorder. This video recorder is one of the most sophisticated and easy-to-use video recorders (VCR) on the market. Please take the time to read this operating manual before using your video recorder. It contains important information and notes regarding operation. The video recorder should **not be turned on immediately after transportation** from a cold to a hot area or vice versa, or in conditions of extreme humidity. Wait at least **three hours** after transporting the device. The video recorder needs this time in order to become acclimatised to its new environment (temperature, air humidity, etc.).



This video recorder is used for the recording and playback of VHS videocassettes. Cassettes with the VHS-C label (VHS cassettes for camcorders) may only be used with a suitable adapter.

We hope you enjoy your new video recorder.

Important notes regarding operation

-  **Danger: High voltage!**
Do not remove the top cover as there is a risk of an electrical shock!
-  The video recorder does not contain any components that can be repaired by the customer. Please leave all maintenance work for qualified personnel.
-  As soon as the video recorder is connected to the power supply, there are some components that are in constant operation. To switch off the video recorder completely you must disconnect it from the power supply.
-  Make sure that air can circulate freely through the ventilation slots on the video recorder. Do not place the device on an unsteady base.
-  Make sure that no objects or liquids enter the video recorder. Do not place vases or the like on the video recorder. If liquid is spilt into it, immediately disconnect the video recorder from the power supply and call After-sales Service for advice.
-  Do not place any combustible objects on the device (candles, etc.).
-  Make sure that children do not place any foreign objects within the openings or ventilation slots.

-  These operating instructions have been printed on non-polluting paper.
-  Deposit old batteries at the appropriate collection points.
-  Please make use of the facilities available in your country for disposing of the packaging of the video recorder in a way that helps to protect the environment.
-  This electronic device contains many materials that can be recycled. Please enquire about the possibilities for recycling your old device.



VIDEO Plus+ and PlusCode are registered trademarks of Gemstar Development Corporation. The VIDEO Plus+ system is manufactured under license from Gemstar Development Corporation.

So that you can identify your machine for service questions or in the event of theft, enter the serial number here. The serial number (PROD.NO.) is printed on the type plate fixed at the back of the device.

MODEL NO. : VR330/07

PROD. NO.

This product complies with the requirements of Directive 73/23/EEC +89/336/EEC +93/68 EEC.

Specifications

- Voltage:** 230-240V/50Hz
- Power consumption :** 20W
- Power consumption (Standby):** less than 4W (PWR. in the display switched off)
- Rewind time:** approx. 100 seconds (cassette E-180)
- Dimensions in cm/ft (WxDxH):** 36.0x22.6x9.2 / 1.2x0.3x0.9
- Number of video heads :** 2
- Recording/playback time:** 3 hours (SP) (cassette E-180)
6 hours (LP) (cassette E-180)

1. Connecting the video recorder

Important for the United Kingdom

This apparatus is fitted with an approved moulded 10 Amp plug. To change a fuse in this type of plug proceed as follows:

1. Remove fuse cover and fuse.
2. Fix new fuse which should be a BS1362 3A, ASTA or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 3A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 3A.

The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

How to connect a plug:

The wires in the mains lead are coloured in accordance with the following code:

BLUE- 'NEUTRAL' ('N')

BROWN- 'LIVE' ('L')


4. The BLUE wire must be connected to the terminal which is marked with the letter 'N' or coloured BLACK.
5. The BROWN wire must be connected to the terminal which is marked with the letter 'L' or coloured RED.
6. Do not connect either wires to the earth terminal in the plug which is marked with the letter 'E' or by the safety earth symbol ⚡ or coloured green or green-and-yellow.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead-not imply over the two wires.

Preparing the remote control for operation

The remote control and its batteries are packed separately in the original video recorder packaging. You must install the batteries in the remote control before use.

1. Take the remote control and the enclosed batteries (2 batteries).

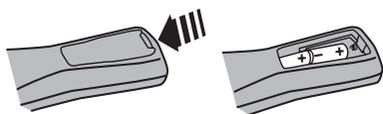

2. Open the remote control's battery compartment and place the batteries in it as shown in the picture and close the battery compartment.

The remote control is now ready to use. Its range is approximately 5 metres.

Connecting your video recorder to the TV set

The necessary cable connections must be made before you can record or playback TV programmes using your video recorder.

We recommend that you use a scart cable to connect your TV and video recorder.




What is a scart cable?

The scart or Euro AV cable serves as the universal connector for picture, sound and control signals. With this type of connection, there is practically no loss of quality during the picture or sound transfer.


Connecting with a scart cable

Have the following cables ready: an aerial cable (1, supplied), a scart cable (2, not supplied).


1. Remove the aerial cable plug from your TV set. Insert it into the AERIAL at the back of the video recorder.

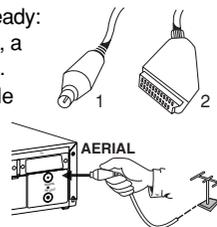

2. Insert one end of the supplied aerial cable into the RF OUT at the back of the video recorder and the other end into the aerial input socket at the back of the TV set.

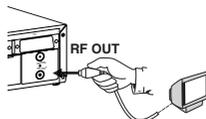

3. Plug one end of a scart cable into the scart socket AV1(TV) at the back of the video recorder and the other end into the suitable scart socket on your TV reserved for the video recorder operation (see your TV's operating instructions).

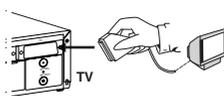

4. Switch on the TV.

5. Insert AC cable into the wall socket.


My TV has several scart sockets. Which one should I use?

Select that scart socket which is suited for the video output as well as for the video input.

My TV offers me a selection menu for the scart socket.

Select 'TV' as a connection source of this scart socket.

6. If the connection was properly made and your TV was automatically switched to the programme number for the scart socket, you will see the following picture:

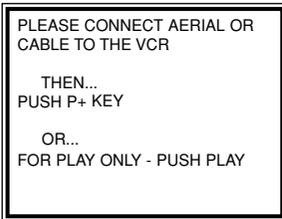


Then, read the paragraph 'Preparation for use' in the chapter 'Installing your video recorder'.

My screen is empty

* Many TV sets are switched to the programme number for the scart socket by way of a control signal sent through the scart cable.

* If the TV set does not automatically switch to the scart socket programme number, manually change to the corresponding programme number on your TV set (see your TV's operating instructions).


3. Insert one end of the supplied aerial cable into the RF OUT at the back of the video recorder and the other end into the aerial input socket at the back of the TV set.

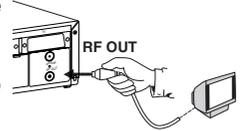

4. Insert AC cable into the wall socket.

5. Switch on your TV set and select the programme number used for video playback on your TV set (see your TV's operating instructions).

6. Select this programme number and manually start the TV's channel search as if you wanted to save a new TV channel until the 'test image' appears.

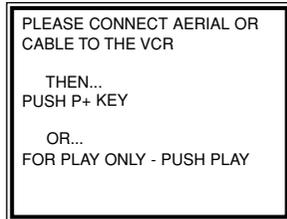

I do not see the picture.

- * Check the cable connections.
- * Repeat the channel search on your TV.

7. Save this programme number setting on your TV set for video recorder operation.

You can find more details in chapter 'Preparation for use'.

Programme number for video recorder operation

You have now saved a programme number for use by your video recorder as you would a regular TV channel. This programme number must now be used in future for video recorder playback ('video recorder' TV channel).


Connecting without a scart cable

Have the following cables ready:
an aerial cable.



1. Switch off your TV set.

2. Remove the aerial cable plug from the aerial input socket of the TV set. Insert it into the AERIAL at the back of the video recorder.

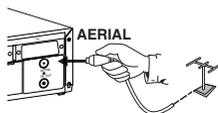

2. Important notes for operation

Switching on

You can switch on the video recorder with the **STANDBY/ON** button.

Automatic switch-off

If the video recorder is not used for several minutes, it switches itself off automatically. This function can be deactivated (e.g. if you want to use the video recorder as a TV receiver). For more information, please read the section 'Automatic switch-off' in chapter 'Other functions'.

Time in the display

If you have switched the video recorder off with **STANDBY/ON**, the time will show in the display, e.g. '18:00'.

If the clock has not been set, ' --:-- ' will appear.

Power consumption

The video recorder should always be connected to the mains so as not to affect the use of the TV or programmed recordings.

Your video recorder uses less than 4W.

Power outage/no power

Channel information remains saved for up to 10 year, the time and timer information is saved for up to 1 minute.

Navigation in the screen menu

You can check/change many functions and settings of your video recorder via the on-screen menu. The individual functions are selected, via the remote control as follows:


Call up the menu: with **MENU**.

To select: with **▲▶ ▼■**. **To enter or change your selection:** with the number buttons **0..9** or with **▲▶ ▼■**.

To save or confirm: with **▶▶>**.

To cancel: with **CLEAR**.

To end: with **STATUS/EXIT**.

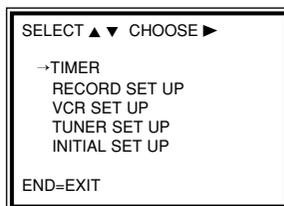

The symbols on your video recorder display



These symbols can light up on your video recorder display:

PWR When you keep your video recorder on.

📀 When you have put a cassette in the video recorder.

00:00 Display of programme number of the TV channel / time / RF channel.

REC When you record.

☑ When you have programmed a recording.

3. Installing your video recorder

Preparation for use

This chapter shows you how to prepare the video recorder for use. The video recorder automatically seeks out and stores all available TV channels.

'Aim' correctly


In the following sections, you require the remote control for the first time. When using, always aim the front of the remote control at the video recorder and not at the TV.

Connecting additional devices

After you have connected additional devices (satellite receiver, etc.) through the aerial cable, switch them on. The automatic channel search will recognise them and save them.

1. Press **[P+]**.

The automatic channel search starts.

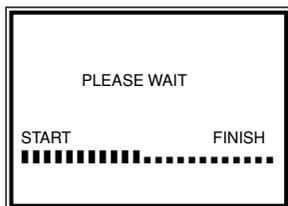


The video recorder does not find any TV channels during the search

* Select channel 1 on the TV. Can you see the saved TV channel on the TV?

If not, check the cable connection of the aerial (aerial socket), video recorder, TV.

* The video recorder searches the entire frequency range in order to find and save the largest possible number of TV channels.

2. 'TIME' and 'DATE' will appear on the TV screen.

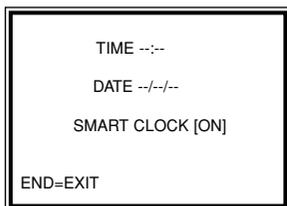

3. Check 'TIME'. If required, please change the time with the number buttons **[0.9]**.

4. Check if the displayed settings for 'DAY', 'MONTH' and 'YEAR' are correct.

5. When all information is correct, save by pressing **[STATUS/EXIT]**.

The preparation for use is now complete.

Manual TV channel search

In some cases it can occur that all TV channels are not found and saved during the first installation. In this case, the missing TV channels must be searched for and stored manually.

1. Switch on the TV set. If required, select the programme number for the video recorder.

2. Press **[MENU]**.

The main menu will appear.


3. Use **[<▶]** **[▼■]** to select 'TUNER SET UP'.

Then press **[▶▶]**.

4. Use **[<▶]** **[▼■]** to select 'MANUAL TUNING'.

Then press **[▶▶]**.

5. Select 'PROG.' with **[<▶]** **[▼■]**. Then press **[▶▶]**.

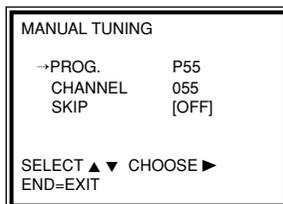

6. With **[<▶]** **[▼■]** or **[0.9]**, select the desired programme number that you want to use for the TV channel, e.g. 'P01'. Then press **[▶▶]**.

What is a special channel?

TV channels are transmitted in certain pre-defined frequency ranges. These ranges are divided into channels.

A specific frequency/channel is assigned to each TV station.

Certain frequency ranges are specified as special channels (hyperband channels).

7. Select 'CHANNEL' with **[<▶]** **[▼■]**, and confirm with **[▶▶]**. Then enter the desired channel with **[0.9]**.

If you set 'SKIP' on for a channel, this channel will be ignored when going through the channels with **[P+]** or **[P-]**.

I don't know the channels for my TV stations

In this case, press **▲▶** **▼■** in 'CHANNEL' to start the automatic channel search. A changing channel number will appear on the TV screen. Continue the automatic search until you have found the desired TV channel.

8. Save the TV channel with **▶▶>**.
9. To search for other TV channels, begin again at step 5.
10. To end, press **[STATUS/EXIT]**.


Sorting TV channels automatically (Follow TV)

When the automatic channel search function is activated, the TV channels are saved in a specific order. This may vary from the order of TV channels on the TV.

This function changes the order of TV channels saved in the video recorder to match that of the TV.

Make sure that the video recorder and the TV are connected by a scart cable.

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'TUNER SET UP' with **▲▶** **▼■** and confirm with **▶▶>**.
4. Select 'FOLLOW TV' with **▲▶** **▼■** and confirm with **▶▶>**.

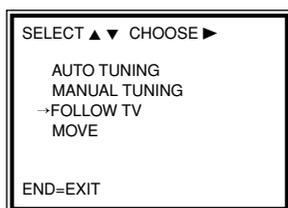

5. 'P:01' will appear in the video recorder display.
6. Select programme number '1' on the TV.
7. Confirm with **▶▶>** on the video recorder remote control. The video recorder compares the TV channels on the TV and the video recorder.

If the video recorder finds the same TV channel as on the TV, then it stores it at 'P01'.

'NO TV SIGNAL' will appear in the TV screen. The video recorder is not receiving a video signal from the TV.

Check the plug on the scart cable.

Check your TV's operating instructions to see which scart socket is used for video signals.


If this does not help, it's not possible to use this function. Please read the section 'Sorting TV channels manually'.

8. Wait until the next number, e.g. 'P:02' appears in the display.
9. Select the next programme number on the TV, e.g. '2'.
10. Confirm with **▶▶>**.
11. Repeat steps 8 to 10 until you have assigned a programme number to all TV channels.
12. To end, press **[STATUS/EXIT]**.

Automatic Tuning

During installation, all available TV channels are searched for and saved. If the channel assignments of your cable or satellite TV provider change or if you are re-installing the video recorder, e.g. after moving house, you can start this procedure again. This will replace the TV channels already saved with the new ones.

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **MENU**. The main menu will appear.
3. Select 'TUNER SET UP' with **▲▶** **▼■** and confirm with **▶▶**.
4. Select 'AUTO TUNING' with **▲▶** **▼■** and confirm with **▶▶**.

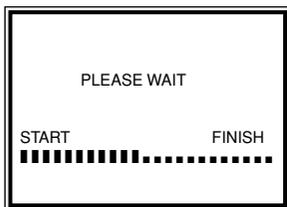

5. The automatic TV channel search starts. This allows the video recorder to save all available TV channels. This procedure may take several minutes.
6. When the TV channel search is complete, 'COMPLETED' will briefly appear on the TV screen.


Sorting and clearing TV channels manually

After you have performed the automatic channel search you may not agree with the sequence in which the individual TV channels have been allocated to the programme positions (programme numbers) of the video recorder. You can use this function to individually sort the TV channels already saved or to delete unwanted TV channels or those with poor reception.

The clock resets automatically

If you save a TV channel that transmits TXT/PDC on programme number 'P01', date and time will constantly be updated. As a result, time changes, i.e. daylight savings time, will be set automatically.

1. Switch on the TV set. If required, select the programme number for the video recorder.
2. Press **MENU**. The main menu will appear.
3. Select 'TUNER SET UP' with **▲▶** **▼■** and confirm with **▶▶**.
4. Select 'MOVE' with **▲▶** **▼■**, and confirm with **▶▶**.

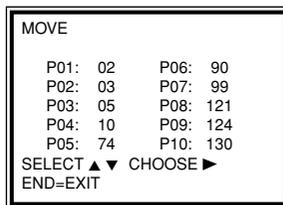

5. With **▲▶** **▼■**, select the saved TV channel that you want to change.
6. Confirm with **▶▶**.
7. Move the selected channel with **▲▶** **▼■** to the programme number you want to assign.
8. Confirm with **▶▶**.
9. To assign other TV channels to a programme number, repeat steps 5 to 8.
10. Confirm the assignment of the TV channel with MOVE menu.
11. To exit the MOVE menu, press **STATUS/EXIT**.


Setting the clock

If the display shows an incorrect time or '---', the time and date must be reset manually.

If a TV channel that transmits TXT/PDC (teletext/PDC) is stored under programme number 'P01', time/date will automatically be taken from the TXT/PDC information.

(SMART CLOCK)

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **MENU**. The main menu will appear.
3. Select 'INITIAL SET UP' with **▲▶ ▼■** and confirm with **▶▶**.
4. Select 'CLOCK' with **▲▶ ▼■** and confirm with **▶▶**.

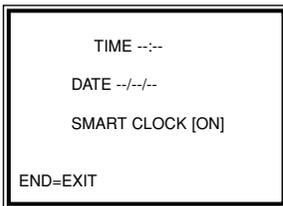

5. Check the time in 'TIME'. If required, please change the time with **0.9**.
6. Check 'DAY', 'MONTH' and 'YEAR' in the same way.
7. Choose 'SMART CLOCK' ON or OFF with **▶▶**.
8. To end, press **STATUS/EXIT**.

Time/date is displayed incorrectly despite manual setting

* With Smart Clock, time/date is taken from the TV channel saved on 'P01'.

If you wish to switch this automatic time correction off, select 'OFF' for Smart Clock. You can reactivate this function at anytime by selecting 'ON' for Smart Clock.

Setting the RF out channel

In some reception locations it is possible that a TV channel will be sent on the same or similar frequency as the video recorder.


Result: As soon as the video recorder is switched on, the reception quality for this or several other TV channels will decrease.

The following steps will show you how to change the pre-set 'transmission' (RF out channel) frequency on the video recorder.

What is RF out channel?

This electronic component in the video recorder allows the device to transmit audio and video signals via the aerial cable. These signals can be received on a TV set just like TV channels. This frequency or channel indicates the channel on which the audio or video signal is transmitted.

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **MENU**. The main menu will appear.
3. Select 'INITIAL SET UP' with **▲▶ ▼■** and confirm with **▶▶**.
4. Select 'RF OUT' with **▲▶ ▼■** and confirm with **▶▶**.

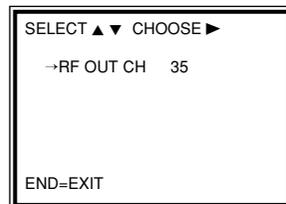

5. Press **▶▶**.
6. Press **▲▶ ▼■** or **0.9** to select the channel which is not broadcasted between channel 22 and channel 69 in your area.
7. Press **▶▶**. When you want to receive TV signals directly from the VHF/UHF TV aerial, select the channel 22 first. Then, press **▼■** and confirm with **▶▶**.
8. To end, press **STATUS/EXIT**.

4. Playback

Playing cassettes

You can use this video recorder to play back recorded VHS videocassettes. You can operate the video recorder using the remote control or the buttons on the front of the video recorder. Your video recorder can only record and play standard VHS cassettes.

1. Put a cassette into the cassette slot. The cassette is inserted automatically. '00' will appear on the display.

DIGITAL STUDIO PICTURE CONTROL

Philips has developed a system which produces the best possible playback quality. For old and often-used video cassettes, this system reduces interference. For new or high quality cassettes, it emphasises the details.

Picture/ sound quality is poor

When playing rental videos or older, poorer quality cassettes, it may not be possible to completely filter out picture and sound interference. This is not a fault in your machine. Read the section 'Manual tracking'.

2. Press  to view the tape.
3. To stop the playback, press  or  on the video recorder.
4. To eject the cassette, press  when the video recorder stops the playback.

Automatic switch-off of special functions

Many functions (e.g. pause, still picture) switch themselves off automatically after a short time in order to protect the cassette and to save energy.

Do I need to change the playback speed when playing back LP recordings?

During playback, the correct speed will automatically be selected. For more information, please read the section 'Selecting the recording speed (SP or LP)' in the chapter 'Manual recording'.

Playing back NTSC cassettes

Cassettes that have been recorded in the NTSC standard (for example, American cassettes) can be played back using this video recorder. However, this only works on PAL-television sets that are suitable for a picture frequency of 60Hz.

Displaying current tape position

The following information is displayed on the screen: e.g.: 0:02:45 shows the counter in hours, minutes and seconds.

SP/LP: will show the recorded speed of your cassette

'REM 0:06': will show the actual amount of playing/recording time left on the tape in hours and minutes.

When you play an NTSC cassette, the video recorder will show 'REM -:-'.

How can I set the counter to '0:00:00'?

You can set the counter to '0:00:00' with

.

When you put a cassette in the video recorder, the counter will automatically reset to '0:00:00'.

The counter does not move

This occurs when there are no recordings on a portion of a tape. This is not a fault in your video recorder.

The screen shows '-0:01:20'

If you rewind a cassette from the tape position '0:00:00', the counter will show for instance, '-0:01:20' (the cassette was rewound to 1 minute and 20 seconds before '0:00:00').

'-:-' is displayed in the 'REM' counter

This counter will automatically recognise the length of the tape. In addition, when you put in a cassette the video recorder must first calculate the time played. Therefore, '-:-' appears first and only after the tape has been running for a few seconds, the correct playing time will be shown.

Searching for a tape position with picture (scanning)

1. While a cassette is playing, press (reverse) or (forward) one or more times.
2. Press to resume playback.

Still picture

1. During playback, press to stop the tape and display a still picture.
2. Press to resume playback.

Scanning and still interfere with the picture quality. The sound is switched off. This is not a fault in your video recorder.

Searching for tape position without picture (forward wind and rewind)

1. Stop the tape with .
2. Press (reverse) or (forward).
3. To stop the tape, press .

Automatic search for a tape position (index search)

Every time a tape is recorded an index marking is written on the tape.

These marked positions can be found again quickly and easily later.

1. To search for the previous marking, press and then .
2. For the next marking, press and then .
3. As soon as the video recorder finds this marking, it automatically switches to playback.

Manual Tracking

To manually adjust the tracking during playback and slow motion playback, press or .

Tracking will return to Automatic Tracking

Adjustment when you press , insert a tape, or press .

To remove vertical jitter in a Still picture, press

or .

5. Manual recording

General information

Use **'Manual Recording'** to make a spontaneous recording (for example, a programme currently being shown).

If you want to start and stop a recording manually, read the section **'Recording without automatic switch-off'**.

If you want to start a recording manually but have it stopped automatically, read the section **'Recording with automatic switch-off'**. (e.g. not to record to the end of the tape)

Read the section **'Direct record'** if you want to record a programme currently being shown.

Recording without automatic switch-off


1. Insert a cassette.
2. Use **[P+]** **[P-]** to select the programme number you want to record, for example, 'P01'.
3. To start recording, press **[RECORD/OTR ●]**.
4. Stop recording with **[▼■]**.

Recording with automatic switch-off (OTR One-Touch-Recording)

1. Insert a cassette.
2. Use **[P+]** **[P-]** to select the programme number you want to record.
3. Press **[RECORD/OTR ●]**.
4. Each time you press **[RECORD/OTR ●]** you will add 30 minutes to the recording time.

Preventing accidental erasing of cassettes

All cassettes (except for rental and store cassettes) have a security tab on the back of the cassette.

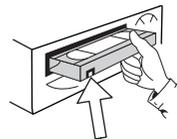

To prevent recording over important recordings (erasing), you can remove this security tab.

If you later decide to record on a protected cassette, simply cover the hole with adhesive tape or slide the tab to the right.

Lining up recordings (assemble cut)


When you add a further recording to a cassette, which already has a recording on it, a short blank (flicker) can appear between the old and the new recording or the picture itself can flicker. To help reduce these from occurring, proceed as follows:

1. Find the tape position of the old recording where you want to insert the new recording.
2. Look at the last minute of the old recording (playback).
3. Press **[STILL ▶▶]** at the tape position where the new recording is to go and press **[RECORD/OTR ●]**.
4. Now start recording as usual by pressing **[RECORD/OTR ●]** on the remote control.
5. Stop recording with **[▼■]**.

Selecting the recording speed (SP or LP)

LP allows to double the recording duration on tape (for example six hours instead of three hours on an E180 cassette).

1. Switch on the TV set. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'RECORD SETUP' using **[▲▶]** **[▼■]** and confirm with **[▶▶]**.
4. Select 'RECORD SPEED' using **[▲▶]** **[▼■]**.
5. Select the required recording speed with **[▶▶]**.

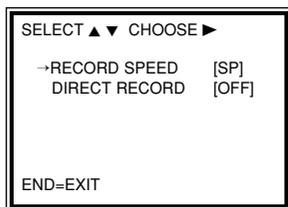

6. To end, press **[STATUS/EXIT]**.

SP/'LP'

'SP': StandardPlay (normal recording speed) offers the usual first-class picture quality.

'LP': LongPlay (half recording speed, double recording time). 6 hours can be recorded on a 3-hour cassette (E180) with a somewhat reduced picture quality.

'Direct Record'

With Direct Record, you can record the right TV channel in seconds even if your video recorder is switched off. If the recording is started manually, the video recorder uses the current TV channel set on the TV. You will find more information on how to switch 'Direct Record' on or off in the next section. Make sure that your video recorder socket (AV1/TV) and the TV are connected by a scart cable.


1. On the TV, select the programme number you want make the recording from.
2. Press **[RECORD/OTR ●]** with the video recorder switched off.
3. Stop recording with **[▼■]**.

How does Direct Record work?

The video recorder compares the TV channel selected on the TV set with its stored TV channels via the scart cable. If the same TV channel is found, it switches the video recorder to the corresponding programme number and starts recording. Please do not change the TV channel on the TV set during the search so as not to affect the process.

Switching 'Direct Record' on or off

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'RECORD SET UP' with **[▲▶]** **[▼■]** and confirm with **[▶▶]**.
4. In 'DIRECT RECORD', select 'OFF' (Direct Record off) or 'ON' (Direct Record on) with **[▶▶]**.
5. To end, press **[STATUS/EXIT]**.

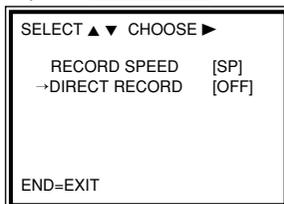

6. Switch off with **[STANDBY/ON ○]**.

6. Programming a recording (TIMER)

General information

Use a TIMER programming to automatically start and stop a recording at a later time or date. The video recorder will switch to the right programme number and begin recording at the correct time. With this video recorder, you can pre-programme up to eight recordings within a period of one year. To make a programmed recording, your video recorder needs to know:

- * the date you want to make the recording
- * the programme number of the TV channel
- * the start and stop time of the recording
- * VPS or PDC on or off

This information is saved in a 'TIMER block

What is 'VPS/PDC'?

'VPS' (Video Programming System)/ 'PDC' (Programme Delivery Control) are used to control the start and duration of TV channel recordings. If a TV programme starts earlier or ends later than scheduled, the video recorder will turn on and off at the correct time.

What do I need to know about 'VPS/PDC'?

Usually the VPS or PDC time is the same than the start time. But if your TV guide shows a VPS or PDC time which is different from the programme's scheduled start time, e.g. 20.10 (VPS/PDC 20.14), you must enter the VPS/PDC time exact to the minute. If you want a start time different from the VPS/PDC time, you must switch VPS/PDC off.

Programming a recording (with 'VIDEO Plus+®')

VIDEO Plus+

Thanks to this programming system, you no longer need to tediously enter the date, programme number, start and end time. All the information needed for programming is contained in the Plus Code.

You can find this Plus Code in most TV listing magazines written next to the concerned programme.

1. Switch on the TV set. If required, select the programme number for the video recorder.
2. Press [SV/+] on the remote control.
3. Enter the entire ShowView number. This number is up to 9 digits long and can be found next to the start time of the TV programme in your TV listing magazine. [e.g: 1-234-5 or 1 234 5]

If you make a mistake, you can clear your input with [CLEAR].

```
Plus Code

No. :1 2 3 4 5 ----

SET=VIDEO PLUS+
CORRECT=CLEAR
END=EXIT
```

4. Press [SV/+].

5. Select ONCE, DAILY, or WEEKLY recording with [▲▶] [▼■]. Then press [▶▶].

```
Plus Code

->ONCE
DAILY
WEEKLY

SELECT ▲ ▼ CHOOSE ▶
END=EXIT
```

Selecting once/daily/weekly recordings

Using [▲▶] [▼■], select from the following options:

- 'ONCE': Recording once
'DAILY': Repeated daily recordings (Monday to Friday)
'WEEKLY': Repeated weekly recordings (every week on the same day)

The following message appears on the screen: Prog. No. '- -'

* The programme number of the TV channel has not yet been assigned to the ShowView number. Using the number buttons [0..9] on the remote control, select the corresponding programme number (name) of the TV channel.

The following message appears on the screen: 'ERROR'

- * The entered ShowView number is incorrect. Correct your input or end with [STATUS/EXIT].
- * Check the time/date (see chapter 'Installing your video', section 'Setting the time and date').
- * A daily recording was entered for the wrong day. Daily programming can only be used for recordings to be made from Monday to Friday.

The following message appears on the screen: 'TIMER NOT COMPLETED'

* The channel is wrong.

- The decoded data appears after confirmation. You can go back to change the data. Select the corresponding input field using **[▶▶] [CLEAR]**. Change the data with **[0.9]**.
- When all information are correctly, press **[STATUS/EXIT]**. The programming information is stored in a TIMER block.

Switching on 'VPS/PDC' in the 'START' input field

Select 'VPS/PDC' using **[▶▶] [CLEAR]**. Press '1' to switch off 'VPS/PDC' or press '2' to switch on 'VPS/PDC'.

- Insert a cassette with an intact security tab (unprotected).
- Switch off with **[STANDBY/ON ⓪]**. The programmed recording will only function when the video recorder is switched off with **[STANDBY/ON ⓪]**.

If any of the TIMER blocks are in use, 'REC' will light up on the video recorder display.

Problems and solutions for programmed recordings

The video recorder will not operate

* While a programmed recording is being made, you cannot operate your video recorder manually. If you want to cancel the programmed recording, press **[■/▲]**.

'TURN OFF VCR FOR TIMER RECORDING' flashes on the TV screen

* The video recorder was switched on several minutes before the start of a programmed recording. Switch off the video recorder with **[STANDBY/ON ⓪]**. A programmed recording (timer) will only function if the video recorder is switched off.

Cassette is ejected during recording

* The end of the tape was reached during recording.

Error message: '⓪' will flash in the video recorder display

* No cassette was inserted. Insert a cassette and switch off the video recorder using **[STANDBY/ON ⓪]**.

Cassette was ejected as soon as the [STANDBY/ON ⓪] button was pressed


* A cassette was inserted with the security tab removed. Undo the erase protection (chapter 'Manual Recording', section 'Preventing accidental erasing of cassettes') or insert a different cassette.

Error message: 'FULL'

* If this error message appears after pressing **[SV/V+]**, then all TIMER blocks are already programmed. No more recordings can be programmed. If you want to clear a programmed recording (TIMER block), select the programme number on TIMER LIST menu and press **[CLEAR]**.

Programming a recording (without VIDEO Plus+)

- Switch on the TV. If required, select the programme number for the video recorder.
 - Press **[MENU]**. The main menu will appear.
 - Select 'TIMER' with **[▶] [▼]**. Then press **[▶▶]**.
 - Select ONCE, DAILY, or WEEKLY recording with **[▶] [▼]**. Then press **[▶▶]**.
- If any of the TIMER blocks are in use, 'FULL' will appear on the TV screen.

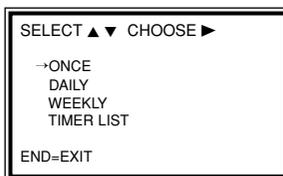

- Select TIMER block with **[0.9]**.

Selecting once/daily/weekly recordings

Use **[▶] [▼]** to select from the following options:

'ONCE': Recording once

'DAILY': Repeated daily recordings from Monday to Friday

'WEEKLY': Repeated weekly recordings (every week on the same day)

- With **[0.9]** buttons you can enter 'START' (start time), 'STOP' (end time), 'PROG.' (programme number) 'VPS/PDC' and 'DATE'.

Programme numbers of the 'AV/IN' and scart socket

You can also programme recordings from external sources via scart socket AV/IN.

- When all inputs are correct, press **[STATUS/EXIT]**. The programming information is stored in a TIMER block.
- Insert a cassette with an intact security tab (unprotected).
- Switch off with **[STANDBY/ON ⓪]**. The programmed recording will only function when the video recorder is switched off with **[STANDBY/ON ⓪]**.

Problems and solutions for programmed recordings

The video recorder does not react

- While a programmed recording is being made, you cannot operate your video recorder manually. If you want to cancel the programmed recording, press **[PAUSE]**.
- The end of the tape was reached during recording.

Switch off the video recorder with **[STANDBY/ON]**.

A programmed recording (timer) will only function if the video recorder is switched off.

'TURN OFF VCR FOR TIMER RECORDING' appears on the screen

* The video recorder was switched on several minutes before the start of a programmed recording.

' **[]** ' will flash in the video recorder display

* No cassette was inserted. Insert a cassette and switch off the video recorder using **[STANDBY/ON]**.

Cassette is ejected during recording

* The end of the tape was reached during recording.


The 'PROTECTED CASSETTE CANNOT RECORD' error message appears briefly in the screen then the cassette is ejected

* A cassette was inserted with the security tab removed.

Undo the erase protection (chapter 'Manual Recording', section 'Preventing accidental erasing of cassettes') or insert a different cassette.

How to check, or delete a programmed recording (TIMER)


1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'TIMER' with **[▶] [▼]**. Then press **[▶▶]**.
4. Select 'TIMER LIST' with **[▶] [▼]**, and confirm with **[▶▶]**.

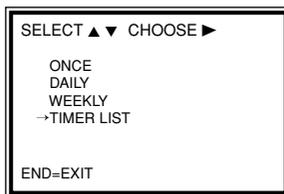

5. Select timer block with **[▶▶]**.
6. To cancel the recording, press **[CLEAR]**.
7. To end, press **[STATUS/EXIT]**.
8. Switch off with **[STANDBY/ON]**.

How to change a programmed recording (TIMER)

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'TIMER' with **[▶] [▼]**. Then press **[▶▶]**.
4. Select ONCE, DAILY, or WEEKLY recording with **[▶] [▼]**. Then press **[▶▶]**.
5. Select a TIMER block with **[0..9]**. (The flashing number indicates an empty TIMER block.)

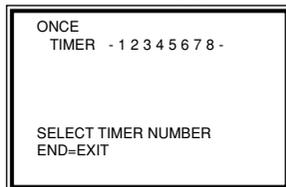


6. Press **[CLEAR]** to delete information and input correct information with **[0..9]**.
7. To end, press **[STATUS/EXIT]**.
8. Switch off with **[STANDBY/ON]**.

7. Other functions

Switching the status display off or on

Along with the on screen menu, the status display also displays information on the current operating status (counter, playback, recording, TV channel, etc.) on the TV screen. You can switch off the information about the operating status so that the status display is not recorded when copying videocassettes.

1. Switch on the TV set. If required, select the programme number for the video recorder.
2. Press **[MENU]**. The main menu will appear.
3. Select 'VCR SET UP' with **[▲▶]** **[▼■]** and confirm with **[▶▶]**.

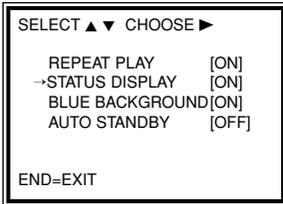

4. Select 'STATUS DISPLAY' with **[▲▶]** **[▼■]**.
5. Select 'ON' or 'OFF' with **[▶▶]**.

Which settings can I choose?

'ON': Shows the status display for a few seconds only.


'OFF': Switches off the status display.

6. To end, press **[STATUS/EXIT]**.

Continuous playback

This function can be used to play a cassette over and over again. When the end of the cassette is reached, the video recorder will rewind and start from the beginning again. This function is activated or deactivated as follows.


1. Press **[MENU]**. The main menu will appear.
2. Select line 'VCR SET UP' using **[▲▶]** **[▼■]** and confirm with **[▶▶]**.
3. Select 'REPEAT PLAY' using **[▲▶]** **[▼■]**.

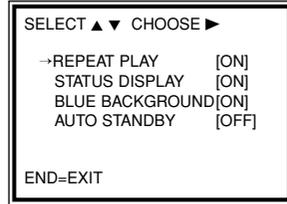

4. Select function 'ON' with **[▶▶]**.
If you select 'OFF', continuous playback will be switched off.
5. To end, press **[STATUS/EXIT]**.
6. Insert a cassette.
7. Start the continuous playback with **[▲▶]**.

Blue Background on or off

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **MENU**. The main menu will appear.
3. Select 'VCR SET UP' using **▲▶** **▼■** and confirm with **▶▶▶**.
4. Select 'BLUE BACKGROUND' using **▲▶** **▼■** and confirm with **▶▶▶**.

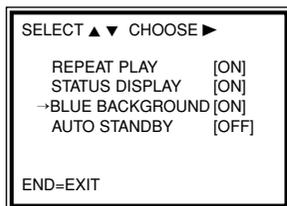


5. Select 'OFF' (no blue background) or 'ON' (blue background on) with **▶▶▶**. If you select 'OFF', the menu display will disappear.
6. To end, press **STATUS/EXIT**.

Automatic switch-off

If you haven't used the video recorder for a few minutes in certain modes (e.g.: STOP), it will switch to standby automatically. You can cancel this function to use the video recorder as a television receiver.

1. Switch on the TV. If required, select the programme number for the video recorder.
2. Press **MENU**. The main menu will appear.
3. Select 'VCR SET UP' using **▲▶** **▼■** and confirm with **▶▶▶**.
4. Select 'AUTO STANDBY' using **▲▶** **▼■**.

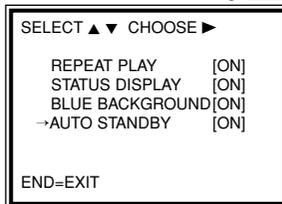

5. Select 'OFF' (no automatic switch-off) or 'ON' (automatic switch-off) with **▶▶▶**.
6. To end, press **STATUS/EXIT**.

8. Before you call an engineer

If, contrary to expectation, you have any problems using this video recorder, it may be caused by the following reasons.

Your video recorder does not respond to any button being pressed:

- * There is no power supply: check the power supply.
- * A programmed recording is currently being made: if desired, cancel the programmed recording. Please see the section 'How to check or delete a programmed recording' in chapter 'Programming a recording'
- * There is a technical problem: disconnect from the mains power supply for 60 seconds, then connect again.

If this doesn't help, you could reset your video recorder to the default factory settings.

Resetting devices to default factory settings

*** Attention:**

All the information stored (TV channels, time and date, TIMER) will be cleared.

1. Switch off this video recorder with

STANDBY/ON .

2. Press and hold **RECORD** and **PROGRAMME** for 2 seconds or more at the same time.

Cassette is jammed in the video recorder:

* Don't use force. Pull out the mains plug for a moment.

Remote control does not work:

- * Remote control not pointed toward the video recorder: point it at the video recorder.
- * There is a technical problem: Take out the batteries, wait for 10 seconds and place them back.
- * Batteries have run out: change the batteries.

No picture when you play a cassette:

- * There is no recording on the cassette: change the cassette.
- * You have selected the wrong programme number on the TV for playing cassette: on the TV, select the correct programme number for the video recorder.
- * The cable connecting the TV set and the video recorder has come loose: check the cable.

Poor picture quality when you play a cassette:

- * Your TV set is not properly adjusted.
- * The cassette is badly worn or of poor quality: use new cassette.
- * Tracking is not properly adjusted: turn to section 'Manual Tracking'.

No recording possible:

- * The TV channel you want to record is not stored or you selected the wrong programme number: check TV channels stored.
- * A cassette was inserted that does not have the security tab (cannot be used to record): Insert a cassette with an intact security tab or change cassette. For more information, please see the section 'Preventing accidental erasing of cassettes' in chapter 'Manual Recording'.
- * 'VPS/PDC' switched on but 'VPS/PDC time' wrong: enter 'VPS/PDC time' exactly to the minute. Have your aerial checked.

There is picture or sound interference on TV reception:

- * Turn to chapter 'Installing your video recorder' and read 'Setting the RF out channel'.
- * Have your aerial checked.

The wrong TV channel has been selected after you programmed a recording using VIDEO Plus+

1. Enter the Plus Code of the desired TV channel.
2. Check the programme number/channel name in the 'PROG.' input field
3. If this does not correspond to the desired TV channel, select the input field and change the programme number/channel name.
4. Confirm with **STATUS/EXIT**.

PHILIPS NORGE AS
Sandstuveien 70,
PO Box 1, Manglerud
N-0612 Oslo
NORWAY
Phone: 2274 8250

PHILIPS AUSTRIA GMBH
Triesterstrasse 64
1101 Wien
AUSTRIA
Tel: 0810 001 203

PHILIPS PORTUGUESA, S.A.
Consumer Information Centre
Rua Dr. António Loureiro Borge, nr.
Arquiparque, Miraflores
P-2795 L-A-VEHLA
PORTUGAL
Phone: 021-4163063

OY PHILIPS AB
Sinikalliontie 3,
02630 Espoo
FINLAND
puh. 09 615 80 250

PHILIPS INFO CENTER
Alexanderstrasse 1
20099 Hamburg
GERMANY
Tel: 0180-53 56 767

PHILIPS CE, The Philips Centre,
420 - 430 London Road,
Croydon, Surrey
CR9 3 QR
UNITED KINGDOM
Phone: 0208-665-6350

PHILIPS KUNDTJÄNST
Kottbygatan 7,
Akalla,
16485 Stockholm
SWEDEN
Phone: 08-598 52 250

SERVICE CONSOMMATEURS PHILIPS
BP 0101
75622 Paris Cédex 13
FRANCE
Phone: 0825-889 789

PHILIPS KUNDECENTER
Frederikskaj 6,
DK-1780 Copenhagen V
DENMARK
Tlf: 8088 2814

PHILIPS POLSKA
AL. Jerozolimskie 195B
02-222 Warszawa
POLSKA
TEL.: (022)-571-0-571

PHILIPS ELECTRONICS IRELAND LIMITED
Consumer Information Centre
Newstead, Clonskeagh
DUBLIN 14
Phone: 01-7640292

PHILIPS REPRESENTATION OFF
Ul. Usacheva 35a
119048 MOSCOW
RUSSIA
Phone: 095-937 9300

PHILIPS SERVICE
V Mezihori 2
180 00 Prague
CZECH REPUBLIC
Phone: (02)-3309 9240

PHILIPS CONSUMER ELECTRONICS
Servizio Consumatori
Via Casati 23
20052 Monza - Milano
ITALY
Phone: 800 820026

PHILIPS INFO CENTER
Fegistrasse 5
8957 Spreitenbach
SUISSE
Tel.: 0844-800 544

PHILIPS Iberia, S.A.
C/Martinez Villergas, 49
28027 MADRID
SPAIN
Phone: 902-11 33 84

PHILIPS MAGYARORSZÁG KFT.
Fehérvári út 84.
Budapest 1119
HUNGARY
Phone: (01)-382-1700

PHILIPS CUSTOMER CARE CENT
Twee Stationsstraat 80/
80 Rue des Deux Gares
1070 BRUSSEL/BRUXELLES
BELGIUM (for BENELUX)
Tel: 070-222303

ΦΙΛΙΠΣ ΕΛΛΑΣ ΑΕΒΕ
25ΗΣ ΜΑΡΤΙΟΥ 15
177 78 ΤΑΥΡΟΣ
ΑΘΗΝΑ
Τηλ. 00800 3122 1280

PHILIPS CONSUMENTENLIJN
t.a.v. betreffende afdeling
Postbus 102 5600 AC Eindhoven
NETHERLANDS
Phone: 0900-8406

www.philips.com