

HP Photosmart 6220

Digital Camera Dock

English



Disposal of Waste Equipment by Users in Private Households in the European Union

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Part number: Q6220-xxxxxx



Legal and notice information

© Copyright 2006 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty.

HP shall not be liable for technical or editorial errors or omissions contained herein.

Safety Information



WARNING! To prevent fire or shock hazard, do not expose this product to rain or any type of moisture.

WARNING! Always follow basic safety precautions when using this product to reduce risk of injury from fire or electric shock.

WARNING! Potential shock hazard

1. Read and understand all instructions in this guide.
2. Unplug this product from wall outlets before cleaning.
3. Do not install or use this product near water or when you are wet.
4. Install the product securely on a stable surface.
5. Install the product in a protected location where no one can step on or trip over the power cord, and where the power cord will not be damaged.
6. No operator-serviceable parts inside. Refer servicing to qualified service personnel.
7. Use in a well-ventilated area.
8. Use only with the power adapter supplied by HP.

1 Welcome

The HP Photosmart 6220 Digital Camera Dock allows you to easily download images to your computer, print images directly to a printer, and recharge the camera battery.


IMPORTANT: More detailed information about your HP dock, including troubleshooting, safety information and regulatory information can be found in the electronic user guide on the CD that came with your camera.

Setting Up the Dock

One or more clear plastic dock inserts came in the box with your dock. Each of these dock inserts has a sticker of a different shape and color on it. See Chapter 1 of your camera electronic User Guide to determine which dock insert to use.



1. Attach the dock insert to the top of the camera dock by snapping it into place.

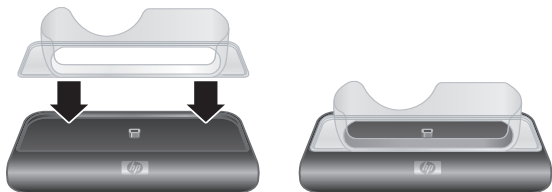


2. Connect the AC power adapter and USB cable to the right-hand side of the dock.



- 1 Your dock uses the AC power adapter that came with your camera. Plug it into the 5V 2A connector and the wall.
- 2 Mini USB port for connecting to a computer or printer.

3. Remove any cables that may be attached to your camera. Then, insert the camera into the camera dock as shown here. The Image Display side of the camera must point toward the edge of the dock with the HP logo.

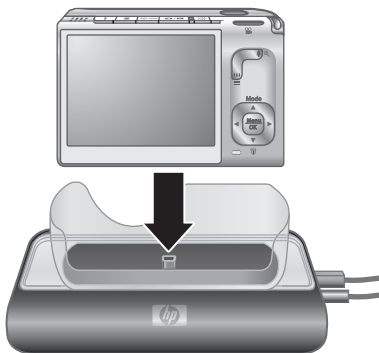

2 Transfer and Print Images

You can use your dock to transfer images to a computer and to print them directly to a printer.

Transferring Images to a Computer

You can transfer images to your computer with or without using the HP Photosmart Software.

Transferring Images using HP Photosmart Software

1. Connect the dock to the computer using the USB cable.
2. Place the camera in the dock.
3. Turn on the camera and follow the directions on your computer screen. Refer to the onscreen help for more information.


Transferring Images without HP Photosmart Software

1. Set the camera's **USB Configuration** to either **Digital Camera** or **Disk Drive**. Refer to your camera electronic User Guide for more information.

NOTE: If you are using Windows 98 or Me, you must install the software to transfer images.

2. Place the camera in the dock and turn it on.
3. On Windows computers, the camera will appear either as a device or a removable disk, allowing you to copy the images. On the Mac, either Image Capture or iPhoto starts automatically, allowing you to transfer images to the computer.

Printing images

1. Connect the dock to the printer's PictBridge  port (usually on the front of the printer).
2. Set the camera's **USB Configuration** setting to **Digital Camera** (see the camera electronic User Guide).
3. Insert the camera into the camera dock and turn on the camera. The **Print Setup** menu displays on the camera. If you already selected images to print in the camera, the number of images selected will be shown in the **Print Setup** menu. Otherwise, **Images: ALL** will be displayed.
4. If all the settings in the **Print Setup** menu look correct, press the **Menu/OK** button on the camera to begin printing. Or, you can change settings in the **Print Setup** menu using the arrow keys on the camera, then press **Menu/OK** to begin printing.

NOTE: There is a print preview in the **Print Setup** screen showing the page layout that will be used for printing. This print preview updates as you change the settings for **Print Size** and **Paper Size**.

5. When the printing completes, you can leave the camera in the dock to recharge the camera battery.