



## ST57-12U1 12.1" Liquid Crystal Display TV

This Guide is designed as a reference to help you start using your LCD TV quickly. Please Refer to the User's Manual for more detailed installation and safety instructions.

### Front View

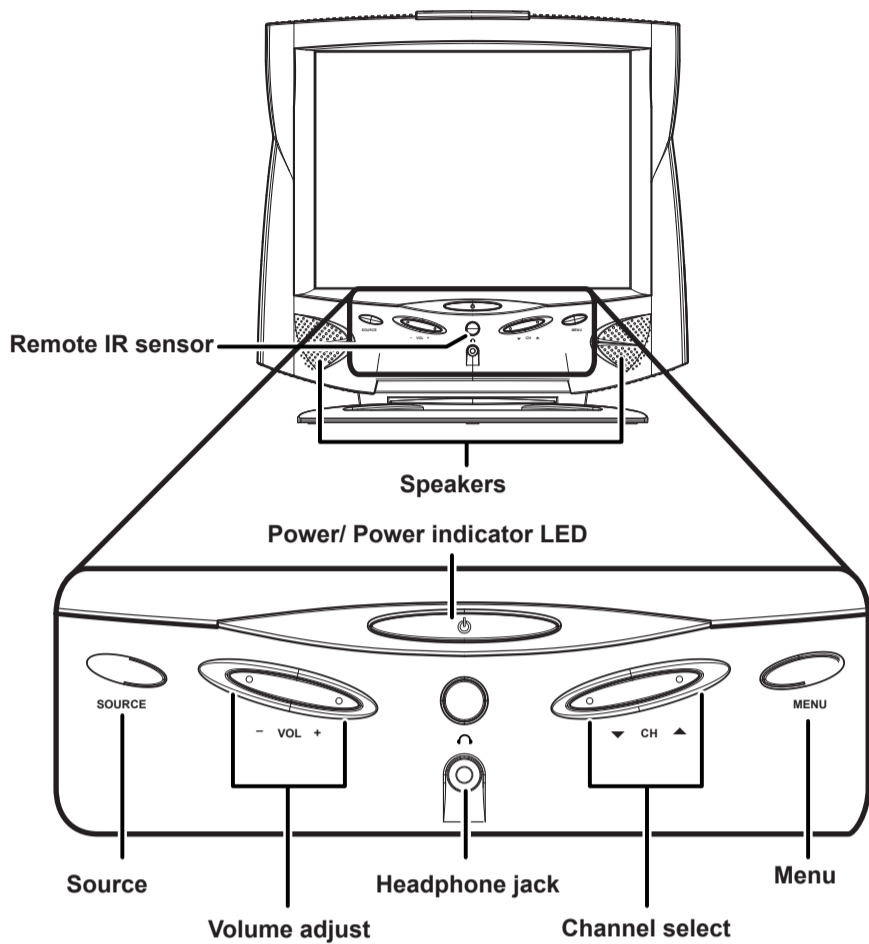


### Rear View

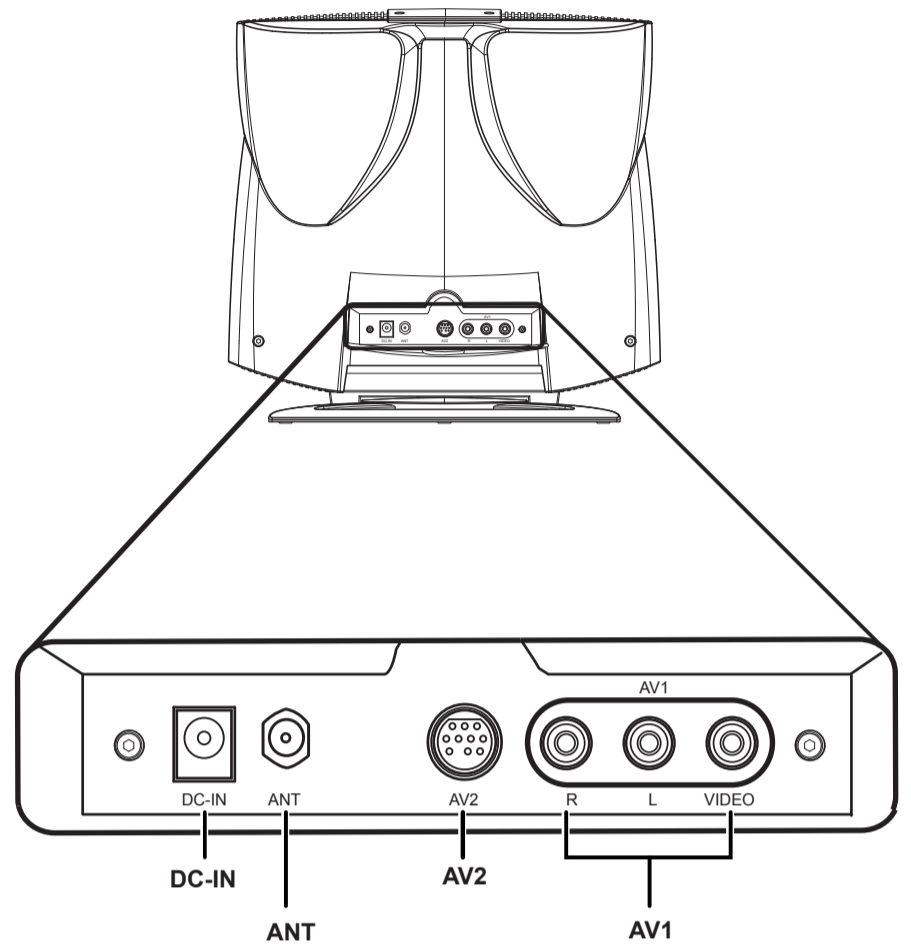

## Making Connections


### Connecting to Antenna/Cable TV

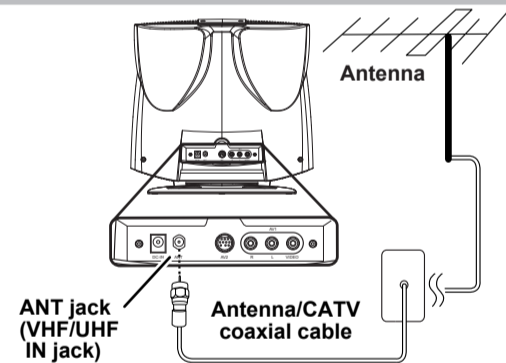

1. Connect one end of the VHF/UHF (Antenna) or CATV cable to ANT Jack (VHF/UHF IN Jack) on the back of the TV.
2. Connect the other end of the VHF/UHF (Antenna) or CATV cable to the Antenna or CATV socket.


### Connecting to a VCR, VCD, DVD Player, or Gaming Device

1. The illustration presented here shows you how to connect your TV to a VCR, VCD, DVD player or gaming device.

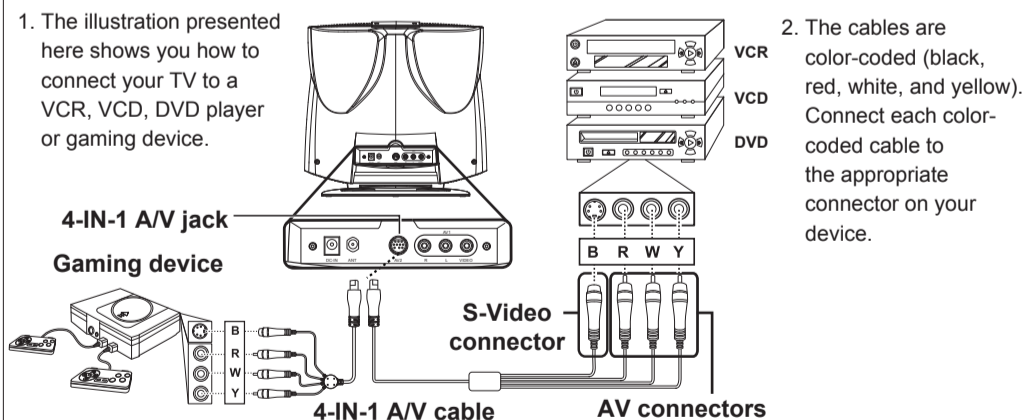

2. The cables are color-coded (black, red, white, and yellow). Connect each color-coded cable to the appropriate connector on your device.

### Connecting the Power Adapter

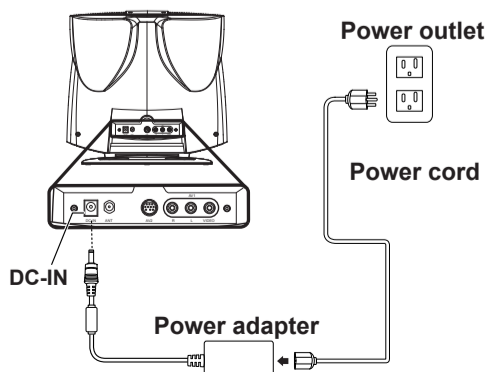

1. Connect the power cord to the power adapter as illustrated.
2. Plug the power adapter connector into the DC-IN input jack on the rear panel of the TV.
3. Insert the three-pronged plug at the other end of the power cord into a power outlet.

## A/V and Channel Setup


### Watching Broadcast or Cable TV

1. After you have made the appropriate power and source connections, press the power button to turn on your television.
2. Press the **SOURCE** button to select TV.
3. Press the **MENU** button to open the OSD menu.
4. Use the **CH** ▼ button to select "TV".
5. Press the **VOL +** button to enter "TV MENU".
6. Press the **VOL +** button to enter "TV/CATV".
7. Press the **VOL +** button to select "TV" (broadcast TV) or "CATV" (cable TV).



### Selecting A/V Sources

1. Make sure your TV is turned on and a device such as a DVD player is connected.
2. Press the **SOURCE** button on the control panel to select different source signals. The channel number, "AV1" or "AV2" appears on the screen.

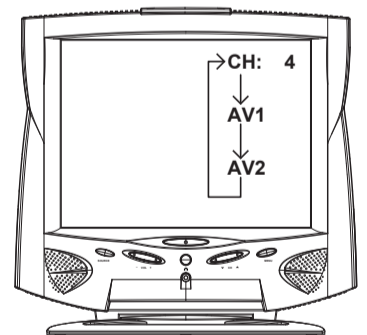

### Auto Channel Setup

Please follow the instructions by using the control panel.

1. Press the **MENU** button to enter the OSD menu.
2. Use the **CH** ▼ button to select "TV".
3. Press **VOL +** button into the "TV MENU".
4. Press **CH** ▼ button until the "AUTO PROGRAM" feature is selected.
5. Press **VOL +** to begin "AUTO PROGRAM".
6. Your television will begin automatically memorizing the available channels.

### Auto Program

