


FRIGIDAIRE
HEAVY DUTY WASHER

EXTRA LARGE CAPACITY - 2 SPEED - 5 CYCLES

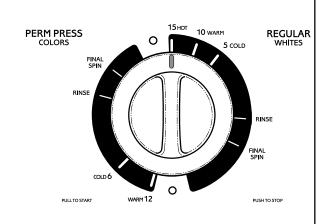

Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131889200.

Spanish Owner's Guides Frigidaire Home Products P. O. Box 212378 Augusta, GA 30917

Before Operating Your Washer

Read your washer Owner's Guide. It contains important safety and warranty information. It also contains many suggestions for obtaining the best results from your washer.

A WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

Operating Steps

- 1. Sort laundry into loads that can be washed together.
- 2. Prepare items for washing.
- 3. Pretreat stains and heavy soil.
- 4. Add the measured amount of detergent to washer before adding laundry load.
- 5. Add laundry load to wash tub.
- 6. Set Load Size control according to type, size, and soil level of each load. There should be enough water for items to move freely.
- 7. Push in cycle selector knob and turn it clockwise to desired wash cycle. See Cycle Selection for cycle descriptions and the Control Settings Chart for suggested cycle settings.
- 8. Start washer by closing the lid and pulling out the cycle selector knob. The washer will operate with the lid open; however, the tub will not spin unless the lid is closed.

To stop the washer, push in the cycle selector knob. To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart washer.

- If desired, add diluted bleach after the tub has filled and the load has agitated a few minutes. DO NOT pour bleach directly onto wash load.
- 10. If desired, add diluted liquid fabric softener during the final rinse.
- 11. Remove items when the cycle is completed. As a safety measure, the lid will AUTOMATICALLY LOCK during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the tub stops spinning.

(continued, reverse side)

Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the **Control Settings Chart** if the care label is not available.

Regular Whites Cycle

The Whites cycle provides up to 15 minutes of normal wash agitation for most fabrics. This is followed by a spray rinse, a deep rinse, and a fast final spin.

• 15 Hot 15 minutes of wash agitation. A

hot water wash and a cold water rinse are provided for heavily soiled

items.

• 10 Warm 10 minutes of wash agitation. A

warm water wash and a cold water rinse are provided for

normally soiled items.

• 5 Cold 5 minutes of wash agitation. A

cold water wash and a cold water rinse are provided for lightly soiled

items.

Perm Press Colors Cycle

The Colors cycle provides up to 12 minutes of gentle wash agitation for permanent press, knit and delicate items. This is followed by a spray rinse, a deep rinse, and a slow final spin.

• 12 Warm 12 minutes of wash agitation. A

warm water wash and a cold water rinse are provided for

normally soiled items.

• 6 Cold 6 minutes of wash agitation. A

cold water wash and a cold water rinse are provided for lightly soiled

items.

Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and cycle settings.

This is only a general guide. For best results, follow fabric care label directions on specific items to be washed.

Fabric Type	Temper (Wash /		Wash Cycle	Cycle Setting
REGULAR Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular Whites	15 Hot
Normally Soiled Colorfast & White Cotton & Linen	Warm	Cold	Regular Whites	10 Warm
Lightly Soiled Noncolorfast Bright Colors	Cold	Cold	Regular Whites	5 Cold
PERMANENT PRESS White or Normally Soiled	Warm	Cold	Perm Press Colors	12 Warm
Colored or Lightly Soiled	Cold	Cold	Perm Press Colors	6 Cold
KNITS/DELICATES Knitted Fabrics Delicates	Cold Cold	Cold Cold	Perm Press Colors Perm Press Colors	6 Cold 6 Cold
Washable Woolens	Cold	Cold	Perm Press Colors	6 Cold