

Extron IR Sensor Installation Guide

The Extron IR Sensor can be used as an accessory for the IRL 20 IR receiver or the IR 102 Universal Remote Control Kit. The diagram below is a reference for wire assignments during installation.



The diagram on the other side of this card shows the maximum accepted input signal angle and distance from an Extron IR remote control to the IR Sensor.



www.extron.com

Extron Electronics, USA
1230 South Lewis Street
Anaheim, CA 92805
800.633.9876 714.491.1500
FAX 714.491.1517

Extron Electronics, Europe
Beeldschermweg 6C
3821 AH Amersfoort, The Netherlands
+800.3987.6673 +31.33.453.4040
FAX +31.33.453.4050

Extron Electronics, Asia
135 Joo Seng Rd. #04-01
PM Industrial Bldg., Singapore 368363
+800.7339.8766 +65.6383.4400
FAX +65.6383.4664

Extron Electronics, Japan
Kyodo Building, 16 Ichibancho
Chiyoda-ku, Tokyo 102-0082
Japan
+81.3.3511.7655 FAX +81.3.3511.7656

68-1037-01
Rev. D
05 07

Extron IR Sensor Installation Guide, cont'd

