

---

# **Flash-1C™**



**Caution!** Always disconnect from main power before servicing unit. Remember to always replace with same fuses.

*Model:* **Flash-1C™**

**SPECIFICATIONS:**

Power: 110V/60Hz

Weight: 3 lbs.

Size: 11.25" x 5.25" x 3"

Fuse: 10A

Thank you for purchasing this *American DJ®* product. For your convenience this products ready to be used, there is no assembly required. Please read the following instructions before installing or using your new unit.

**Operating Instructions:**

The American DJ® Flash-1C, flash tube controller is ideal for mobile DJ's and club use. One Flash-1C will control up to 20 Flash Tubes. The Flash Tubes can be controlled in two ways AUTO or MANUAL (blue button). When switch is on MANUAL, the user has control of the SPEED and and MODE knobs. Only by pushing the yellow TRIGGER button, will the Flash Tubes light. When switch is on AUTO, the user has control of SPEED, MODE, and pulse RATE knobs.

SPEED knob - Controls speed of chase.

MODE knob - Coose 1 of 5 mode to chase in.

1. Forward 2. Reverse
3. Crossover 4. Rebound
5. Auto chase

RATE knob - Controls rate of pulse (ie. speed of strobe) of the Flash Tubes.

For service, contact your *American DJ®* dealer.