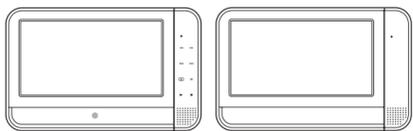


8" Dual Screen Mobile DVD System
DRC97983

 AVC Multimedia
 Markham, Ontario L3R 1E3
 http://www.RCAav.com

Read these instructions before using your new product for the first time.

Safety Precautions


CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

DANGER
DO NOT EXPOSE THIS UNIT TO RAIN OR EXPOSURE
AVIS RISQUE DE CHOC ELECTRIQUE-NE PAS OUVRI

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT PLACE OBJECTS FILLED WITH LIQUIDS ON OR NEAR THIS UNIT.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

* SEE REAR OF UNIT FOR GRAPHIC SYMBOLS *



CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN.
AVOID EXPOSURE TO BEAM.

This Class B digital apparatus complies with Canadian ICES-003.

On Placement

- Do not use the unit in places that are extremely hot, cold, dusty or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on carpeting.
- To avoid magnetized, do not place the unit near speaker or magnet.
- Do not use this unit in direct sunlight or leave the unit in a closed automobile (or yacht, etc) where it would be exposed to high temperatures above 104°F (40°C).
- No naked flame sources such as lighted candles should be placed on the car power adaptor and main unit.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

On Safety

- When connecting or disconnecting the car power adaptor, grip the plug and not the cord itself. Pulling the cord may damage it and create a hazard.
- When you are not going to use the unit for a long period of time, disconnect the car power adaptor.

On Condensation

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit. When there is condensation inside the unit, the unit may not function normally. Let the unit stand for 1 to 2 hours before turning the power on, or gradually heat the room and allow the unit to dry before use.

Ventilation Warning

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not operate the unit in a confined space, such as a bookcase or built-in cabinet, allow about 4 inch (10cm) of free space all around the unit for adequate ventilation.

Rating Plate Location

- The rating plate is located on the rear of unit.

FCC Statements

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING:

- Should any trouble occur, disconnect the car power adaptor and refer servicing to a qualified technician.
- The AC/DC adaptor is used as disconnect device.
- The AC/DC adaptor of apparatus should not be obstructed OR should be easily accessed during intended used.
- To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains.

Notes on Copyright

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, or rent copyrighted material without permission.

Apparatus Claims of U.S. Patent Nos. 6,836,549; 6,381,747; 7,050,698; 6,516,132 and 5,583,936 licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block the ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or with apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.


Disc Formats

 This unit can play
 DVDs
 [8cm/12cm disc]

 Audio CDs
 [8cm/12cm disc]

 CD-R CD-RW
 Compatible

Region Management Information

Region Management Information: This unit is designed and manufactured to respond to the Region Management Information that is encoded on DVDs. If the region number printed on the DVD does not correspond to the region number of this unit, it cannot play that disc.

The region number of this unit is 1.

Disc Function or Operation that is Not Available

When the symbol appears on the screen, it indicates that the function or operation attempted is not available at that time. This occurs because the DVD manufacturer determines the specific functions of DVDs. Certain functions may not be available on some DVDs. Be sure to read the documentation provided with the DVD.

Icons Used on DVDs

Sample Icons

	1 English	Language selections for audio
	2 French	Language selections for subtitles
	Screen aspect ratio	Screen aspect ratio
	Multiple camera angles	Multiple camera angles
	Region code indicator	Region code indicator

Title, Chapter and Tracks

DVDs are divided into "titles" and "chapters". If the disc has more than one movie on it, each movie would be a separate "title". "Chapters" are sections of titles.

Audio CDs are divided into "tracks". A "track" is usually one song on an Audio CD.

NOTE: Numbers identify each title, chapter, and track on a disc. Most discs have these numbers recorded on them, but some do not.

Notes on Unauthorized Discs

You may not be able to play some DVDs on this unit, particularly if they were purchased from outside your geographic area or made for business purposes.

Sound System
Dolby Digital

Dolby Digital is a technology developed by Dolby Laboratories. Soundtracks encoded in Dolby Digital can reproduce from one to 5.1 discrete channels of excellent quality audio. The unit automatically recognizes the Dolby Digital bitstream and provides a downmix suitable for two-channel listening. An additional Dolby Digital decoder is required for reproduction of the discrete multi-channel soundtracks available on many DVDs.


Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.


Accessories
Please check and identify the supplied accessories.

<input type="checkbox"/>	Remote Control (with battery)x1
<input type="checkbox"/>	Car Power Adaptorx1
<input type="checkbox"/>	DC-AV Cablex1
<input type="checkbox"/>	Mounting Strapx2

Remote Control
Using the Remote Control

- Point the remote control at the REMOTE SENSOR located on the unit.
- When there is a strong ambient light source, the performance of the infrared REMOTE SENSOR may be degraded, causing unreliable operation.

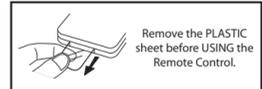

BATTERY REPLACEMENT
When the battery becomes weak, the operating distance of the remote control will be greatly reduced and you will need to replace the battery.

TO CHANGE REMOTE BATTERY

- Open the battery door.
- Insert one CR2025 (3V) size battery.

Notes:

- If the remote control is not going to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be strictly followed.


WARNING: Do not dispose of the battery in a fire or it may leak and/or explode.
WARNING: Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Control Reference Guide
Remote Control

- VIDEO MODE Button**
Adjusts Brightness, Contrast, Color or View Mode of the LCD screen.
- PREV Button**
Moves back through titles, chapters or tracks on a disc.
- SEARCH Buttons**
◀ SEARCH: Fast reverse playback.
▶ SEARCH: Fast forward playback.
- GOTO Button**
Skips directly to a location on a DVD or CD.
- Cursor (V, A, L, R) Buttons**
Moves between selections on a menu screen and adjust certain settings.
- ENTER Button**
Confirms selections on a menu screen.
- MEMORY Button**
In STOP mode, sets titles/chapters in a favorite order.
- Number (0-9) Buttons**
Use when creating programs and locating a title/chapter or specific time.
- REPEAT A-B Button**
Performs point-to-point repeat playback on a DVD or CD.
- REPEAT DISC Button**
Repeats a DVD chapter or title.
Repeats a CD track or the entire disc.
- SETUP Button**
In stop mode, it brings up the SETUP menu.
- MENU Button**
Enters and exits the main DVD menu.
- NEXT Button**
Moves forward through titles, chapters or tracks on a disc.
- STOP Button**
Stops playing a disc.
▶ PLAY Button
Starts or resumes playback of a disc.
- PAUSE Button**
Pauses playback of a disc.
- DISPLAY Button**
Shows status information on the screen.
- ANGLE Button**
Switches between multiple camera angles when the DVD you are playing has been programmed with multiple camera angles.
- AUDIO Button**
Selects one of the audio sound tracks on a DVD (if more than one is available) or select the audio output mode on an CD.
- SUBTITLE Button**
Selects one of the subtitle languages programmed on a DVD (if available).
- RETURN Button**
Returns to normal operation after using the SETUP menu of a DVD.

DVD Player



- OPEN Button**
Press the OPEN button and hold the front panel to unfold it, and press the DVD door switch on the mid cabinet to open the disc door.
- STANDBY Indicator**
When the STANDBY / ON switch is slid to OFF position, the light will illuminate.
- Headphone Jack**
- VOLUME Control**
Adjusts the volume.
- STANDBY / ON Switch**
- AUDIO & VIDEO OUT Jacks**
- DC IN 9V-12V Jack**
- SEARCH Button**
Performs fast reverse playback.
▶ SEARCH Button
Performs fast forward playback.
- PREV Button**
Goes back to current or previous chapters/tracks.
- NEXT Button**
Advances chapters/titles/tracks.
- Button**
Flips the screen image.
- PAUSE Button**
Pauses playback and frame advance.
- PLAY Button**
Starts or resumes playback of a disc.
- STOP Button**
Stops playing a disc.
- LCD Screen**
- Remote Sensor**
Receives the remote control signal.

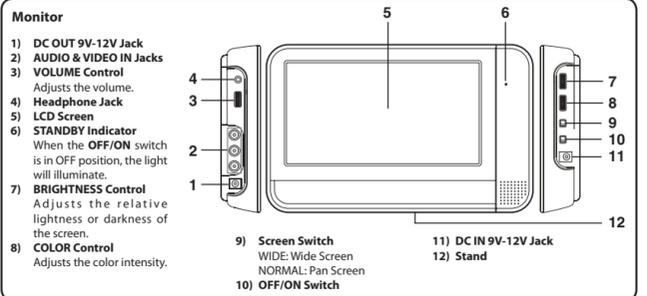
Power Supply

The included 12V car power adaptor is designed for use with vehicles that have a 12V, negative ground electrical system.

Using the DVD Player and the Monitor Together

IMPORTANT
This car adaptor is for use with 12 volt batteries only.

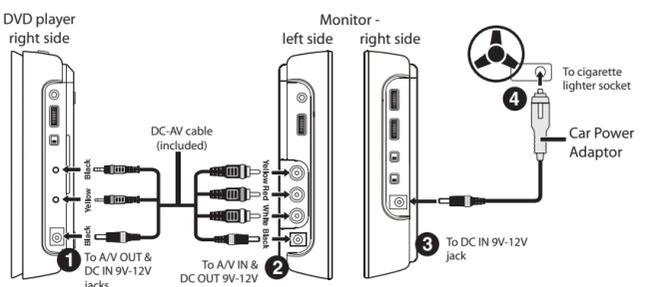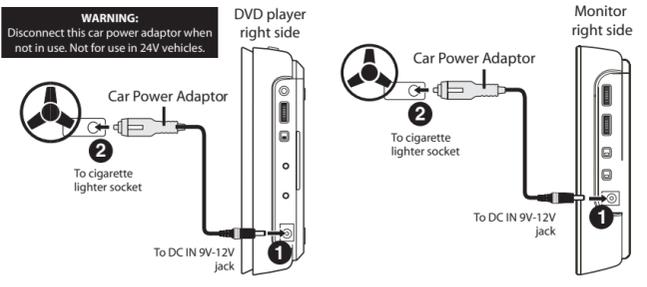
Using the DVD Player or the Monitor Separately


Warnings:


- Use this unit only with the included 12V car power adaptor. Use with other car adaptors could damage the unit, or even your vehicle.
- The included 12V car power adaptor is for use with this unit only. Do not use it with any other equipment.
- In the interest of traffic safety, drivers should not operate the unit or view videos while driving.
- When the inside of the 12V power outlet is dirty with ashes or dust, the plug section may become hot due to poor contact. Be sure to clean the 12V power outlet before use.
- After use, disconnect the 12V car power adaptor from both the unit and 12V power outlet.
- If the unit is not properly attached to a vehicle, it may become airborne in the event of an accident and cause damage, injury, or death.
- Check your local traffic laws for rules governing the use of video devices in vehicles.

Connections
A. Watching a DVD on the DVD Player and the Monitor

You can watch the same DVD on the DVD player and the monitor.

Watching a DVD on the DVD Player and the Monitor

- Connect the DVD player and the monitor using the included DC-AV Cable.
- Turn on the DVD player and the monitor.
- Play a DVD on the DVD player; the monitor will play the same DVD at the same time.

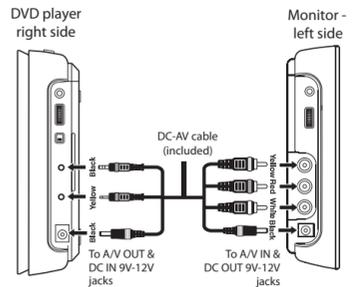
B. Connecting a TV (for the DVD Player Only)


If your TV has Audio/Video inputs, you can connect the DVD player to your TV using the included DC-AV cable.

Watching a DVD on Your TV

- Connect your TV to the DVD player using the included DC-AV cable.
- Turn on the TV and follow the instructions included with it to play the DVD.

Notes:

- Make sure to use the correct DC-AV cable. Connecting the plugs incorrectly may cause a weak signal.
- If your TV does not have Audio/Video inputs, you will need to purchase an RF modulator (sold separately) and follow the instructions included with it to connect the unit to your TV.

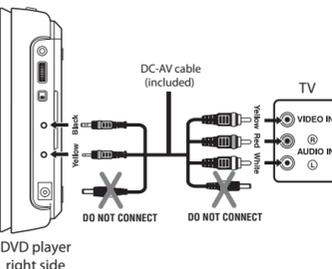
C. Connecting a Stereo Receiver or Amplifier (for the DVD Player Only)


The DVD player can output stereo and down-mixed two channel Dolby Digital audio.

Listening on External Audio Equipment

- Connect the DVD player to the left/right Audio In jacks on the other equipment using the included DC-AV cable.
- Turn on your audio equipment and follow the instructions provided with it to select the AUDIO IN function.

Notes:

- Make sure to use the correct DC-AV cable. Connecting the plugs incorrectly may cause a weak signal.
- If you have a stereo VCR, make sure you set it to stereo mode.
- Due to copyright protection, DVD movies cannot be copied. If you copy a DVD movie onto a videotape, the resulting copy will be unclear, with poor sound quality. This is NOT caused by a defective DVD system.

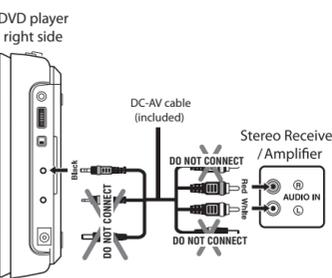
D. Connecting Game Systems/Video Equipment (for the Monitor Only)


You can connect game systems or other video equipment for playback using the monitor.

Watching Video Equipment


- Connect the other equipment to the monitor using a standard AV Cable (not included).
- Turn on the monitor.
- Turn on the video equipment and follow the instructions provided with it to playback.

Notes:

- Make sure to use the correct Audio/Video cable. Connecting the plugs incorrectly may cause a weak signal.
- If you have a mono VCR, the volume level from the speakers will be low.

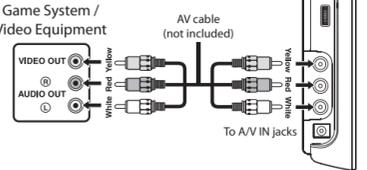
E. Using the Monitor with Other Equipment while Playing DVD on the DVD Player

You can use a game console or other video equipment on the monitor while viewing a DVD on the DVD player.

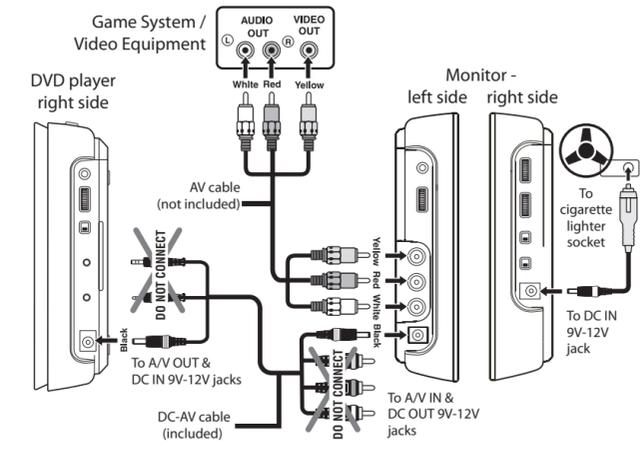
Watching Video Equipment on the Monitor while Viewing a DVD on the DVD Player


- Connect the power connector between the DVD player and the monitor. Do not connect the Audio/Video portion of the DC-AV cable.
- Connect the monitor to the other equipment using a standard AV cable (not included).
- Turn on the DVD player, the monitor and the other equipment.
- Play a DVD on the DVD player.
- Use the monitor for the other equipment.

Notes:

- Make sure to use the correct Audio/Video cable. Connecting the plugs incorrectly may cause a weak signal.
- If you have a mono VCR, the volume level from the speakers will be low.

F. Using Headphones/Earphones

Turn down the volume before connecting the headphones/earphones. Slowly raise the volume with the headphones on until you reach your desired volume. When headphones are connected, the speaker is automatically disabled.

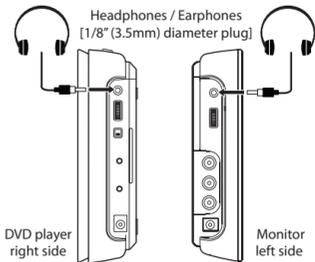


Warning:
Excessive sound pressure from earphones and headphones can cause hearing loss. Avoid listening to sound at excessive levels which could be harmful to your ears.

Installing in a Vehicle


Mounting in the Vehicle

Use the supplied mounting straps to install the DVD player and monitor on the back of the vehicle's headrests. Tightly wrap the mounting strap around the headrest.


Mounting the DVD Player

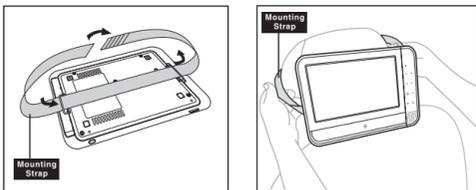

Mounting the Monitor

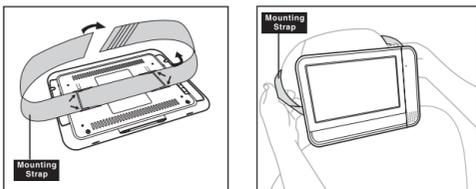

Installation Guide

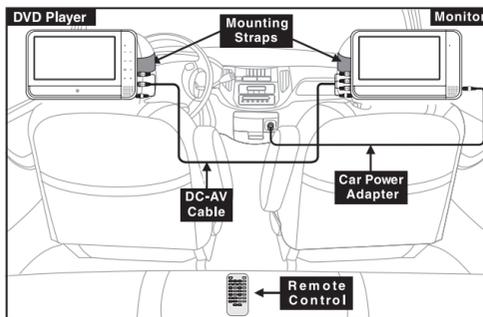

SAFETY WARNING!

- This unit should never be used by the vehicle's driver or left unsecured in the vehicle while driving.
- If this unit is being used in your vehicle, be sure that it is secured or held safely, and does not obstruct any safety device, including air bags or seat belts.
- All passengers should wear seat belts when using this unit in a moving vehicle.
- All passengers should contact your vehicle manufacturer for further advice.
- If in doubt, please contact your vehicle manufacturer for further advice.

Using the Stand for Desktop Use

You can stand the DVD player and monitor up on a desk or table following the instructions described as below:

For DVD player: Press the **OPEN** button on the top of the unit, then unfold the screen and place the unit on a flat surface.

For monitor: Flip the stand on the back of the monitor show as the following illustration.



Unit Operation

Turning on the Unit

- Slide the **STANDBY / ON** switch on the DVD player to the **ON** position. Slide the **ON / OFF** switch on the monitor to the **ON** position.
- The start-up picture will appear on the screens.



- After use, slide the **STANDBY / ON** switch on the DVD player to **STANDBY** (power off). Slide the **ON / OFF** switch on the monitor to the **OFF** position.

Playing a Disc

This owner's manual explains the basic instructions for operating this unit. Some DVDs are produced in a manner that allows specific or limited operation during playback. Therefore, this unit may not respond to all operating commands. THIS IS NOT A DEFECT. Please refer to the instructions accompanying the specific DVD in question for more information about the options available on that DVD. " " may appear on the screen during operation. A " " means that the desired operation is not permitted by the unit or disc.

Playing a Disc

- Slide the **STANDBY / ON** switch on the top of the unit to the **ON** position. (Slide the **ON/OFF** switch on the monitor to the **ON** position.) See **Customizing the Function Settings** before proceeding to step 2.
- Press the **OPEN** button and hold the front panel to unfold it, and press the DVD door switch on the mid cabinet to open the disc door.

Press here to open



- Hold the disc by its edge and gently push it onto the spindle, with the label side facing toward you, until you hear a "click".
- Push the disc door gently to close it. It takes a short while for your unit to load the disc. After loading, for most DVDs, the unit will automatically take you main menu or start playing. If the unit does not automatically start playing the DVD, press the **PLAY** button.

Pausing Playback (Still Mode)

Press the **II PAUSE** button. To resume normal playback, press the **PLAY** button. Each time you press the **II PAUSE** button, the picture advances one frame on a DVD.

Stopping Playback

Press the **STOP** button at the location where you want to interrupt playback. To resume playback at the position where the disc was stopped, press the **PLAY** button. If you press the **STOP** button twice, the unit's memory will be cleared and pressing the **PLAY** button will reset the disc to the beginning.

Fast Forward / Fast Reverse

1. Press the **SEARCH** or **SEARCH** button when a disc is playing. Each time you press the **SEARCH** or **SEARCH** button, the playback speed changes in the following sequence:



- Press the **PLAY** button when you reach the desired point to resume normal playback.

Notes:

- The DVD player mutes sound and subtitles during reverse and forward scan of DVDs.
- The fast playback speed may differ depending on the disc.


Skip (Forward / Reverse)

- Press the **NEXT** button to advance titles/chapters/tracks.
- Press the **PREV** button to go back to current or previous titles/chapters/tracks.
- For Audio CDs, use the number buttons on the remote control to jump directly to the desired track.

Audio Selection

On some DVDs, the sound is recorded in two or more formats.

- While a disc is playing, press the **AUDIO** button to show the current audio format number.
- Press the **AUDIO** button repeatedly to select the desired audio format.

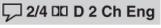

Notes:

- If only one audio format is recorded on the DVD, the number does not change.
- Some DVDs allow you to change audio selections using the disc menu only. If this is the case, press the **MENU** button and choose the appropriate language on the disc menu.
- You can select different audio channels (Stereo, Left or Right) on an Audio CD by pressing the **AUDIO** button repeatedly.

Subtitle Selection

- While a DVD is playing, press the **SUBTITLE** button to display the current language setting, as shown in the example.
- Press the **SUBTITLE** button repeatedly to select the desired subtitle language. You can turn subtitles off by pressing the **SUBTITLE** button repeatedly until the "Off" is displayed.



Notes:

- Some DVDs are set to display subtitles automatically, and you cannot turn them off even if you set the subtitle function to off.
- During some scenes, the subtitles may not appear immediately after you select your desired scene.
- The number of subtitle languages recorded differs depending on the disc. If only one language is recorded, the language does not change.
- This function can only be used for discs on which subtitles have been recorded in multiple languages.
- Some DVDs allow you to change subtitles using the disc menu only. If this is the case, press the **MENU** button and choose the appropriate subtitle on the disc menu.

Angle Selection

Some DVDs contain scenes which have been shot from a number of different angles. For these discs, the same scene can be viewed from each of these different angles.

- While you are playing a DVD with different angles recorded, press the **ANGLE** button to view the number of current angles available.
- Press the **ANGLE** button repeatedly to change the scene to the next recorded angle.

- After approx. two seconds, playback will continue from the new angle you selected.
- If no button is pressed within 10 seconds, playback continues without changing the current angle.

Notes:



- This function can only be used for discs on which scenes shot from multiple angles have been recorded.
- If only one angle is recorded, "1/1" is displayed.

Display Function

While the disc is playing, press the **DISPLAY** button repeatedly to display information on operation status.

Elapsed Time: Elapsed time from the beginning of the title which is currently playing.

Remain Time: Remaining time of the title which is currently playing.

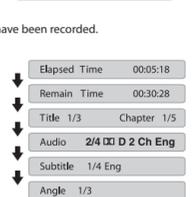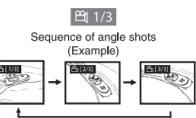

Adjust the LCD Screen

You can adjust Brightness, Contrast, Color or View Mode of the LCD screen.

- Press the **VIDEO MODE** button.
- Press the **▲** or **▼** button to select Brightness, Contrast, Color or View Mode.
- Press the **4** or **5** button to change the setting. (For View Mode, press the **ENTER** button to change the setting).
- Press the **VIDEO MODE** button to exit the menu.

Note: For the monitor, you can adjust the LCD screen by the **BRIGHTNESS** control, **COLOR** control and **Screen (16:9 / 4:3)** switch on the monitor.

Repeat Playback

You can play a specific title or chapter repeatedly. (Title repeat, chapter repeat, A-B repeat)

Repeating a Chapter

- While the DVD is playing, press the **REPEAT DISC** button until the "Repeat Chapter" indicator displays on the screen. The current chapter is played repeatedly.

Repeating a Title

- While the DVD is playing, press the **REPEAT DISC** button until the "Repeat Title" indicator displays on the screen. The current title is played repeatedly.

To Resume Normal Playback

- While the DVD is playing, press the **REPEAT DISC** button until the "Repeat Off" indicator displays on the screen.

Repeating a Single Track

- While the CD disc is playing, press the **REPEAT DISC** button until the "Repeat single" indicator displays on the screen. The current track is played repeatedly.

Repeating a Whole Disc

- While the CD disc is playing, press the **REPEAT DISC** button until the "Repeat all" indicator displays on the screen. The whole disc is played repeatedly.

To Resume Normal Playback

- Press the **REPEAT DISC** button until the "Repeat Off" indicator displays on the screen.

Repeating a Specific Section

- While the disc is playing, press the **REPEAT A-B** button at the beginning of the section ("Rep A-" is displayed) you want to play repeatedly.
- Press the **REPEAT A-B** button again at the end of the section ("Rep A-B" is displayed) you want to play repeatedly.
- The unit will immediately begin replaying your selection.

To Resume Normal Playback

- While the disc is playing, press the **REPEAT A-B** button until the "RepAB off" indicator displays on the screen.

Notes:

- Some discs may not permit A-B repeat operation.
- You cannot set the A-B repeat function for a segment that includes multiple camera angles.
- You can specify a segment only within the current title or track.
- There may be a slight difference between point A and the location where playback actually resumes depending on the disc.

Locating a Desired Section

Locating a Specific Title

If a DVD contains title numbers, you can locate a specific title by directly selecting its title number.

- Press the **GOTO** button.
- Press the corresponding number button(s) for the title you want.
- Press the **ENTER** button to confirm. Playback starts from the selected section.



Locating a Specific Chapter

If you know the chapter number for the chapter that you want to play, you can locate it by directly selecting that number.

- Press the **GOTO** button.
- Press the **▲** or **▼** button to display Chapter and press the corresponding number button(s) for the chapter you want.
- Press the **ENTER** button to confirm. Playback starts from the selected section.



Locating a Specific Time

You can move to a specific location by entering its corresponding time (hours, minutes, seconds).

- Press the **GOTO** button.
- Press the **▲** or **▼** button to display Time and press the corresponding number buttons for the setting point you want.
- Press the **ENTER** button to confirm. Playback starts from the selected section.



Notes:

- If the numbers you entered is not permitted by the DVD, after you press the **ENTER** button, it will restore to -:-:-:-:-. You should re-enter correct numbers.
- Some discs may not respond to this process.
- Some scenes may not be located as precisely as you specified.
- This method for accessing specific locations is available only within the current title of the DVD.

DVD Programmable Memory

You can combine your favorite titles/chapters and play them in the order you determine.

- In stop mode, press the **MEMORY** button, the following display appears.
- Select the items in the order you want by pressing the number buttons. Each time you press the **Cursor** buttons (**▲**, **▼**, **◀**, **▶**), the space is highlighted. Highlight where you want to enter, then press the corresponding number buttons.
- Press the **Cursor** buttons (**▲**, **▼**, **◀**, **▶**) to move the highlighted bar to Play Memory, then press the **ENTER** button. The DVD player starts memory playback.
- To resume normal playback from memory playback
 - Press the **MEMORY** button in stop mode.
 - Press the **Cursor** buttons (**▲**, **▼**, **◀**, **▶**) to move the highlighted bar to "Clear All", then press the **ENTER** button. All the input programs will be cleared.
 - Press the **PLAY** button to resume normal playback.




Notes:

- If the title or chapter numbers you entered is not permitted by the DVD, after you press the **ENTER** button, it will restore to -:-:-:-:-. You should re-enter correct numbers.
- Some discs may not permit memory playback operation.
- If you select repeat during memory playback, the DVD player repeats the current memory playback.
- If you press the **MEMORY** button while the display appears on the TV screen, the display disappears.
- The programmed selections will be cleared when you open the disc tray or turn off the DVD player.

Viewing JPG Files

This unit can play JPG files recorded on a CD-R or CD-ROM disc (CD-RW is not recommended).

- Open the disc door.
- Hold a JPG file disc by its edge and gently push it onto the spindle with the label side facing toward you until you hear a "click".
- Close the disc door. A list of folders/files will appear on the screen.
- Press the **▲** or **▼** button to select your desired file. The selected picture will appear at the lower right corner. Press the **PLAY** button to start playback. Press the **STOP** button to display a folder list.

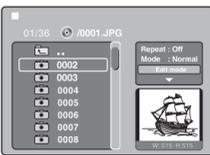

Notes:

- You can press the **II PAUSE** button to freeze the picture. Press the **PLAY** button to resume picture slide show.
- You can press the **STOP** button to quit playback.
- You can press the **PREV** or **NEXT** button to change the picture.
- You can press the **ANGLE** button on the remote control to rotate direction of the picture by 90°.
- Some discs may not permit this operation.

Customizing the Function Settings

Language

OSD (On Screen Display) Language

- Press the **SETUP** button in stop mode.
- Press the **▶** button to select OSD Language.
- Press the **ENTER** button, then the **▲** or **▼** button to shift and change the Language.
- Press the **ENTER** button.
- Press the **SETUP** button or **RETURN** button to exit the menu.



Subtitle

- Press the **SETUP** button in stop mode.
- Press the **▶** button, then the **▲** or **▼** button to select Subtitle.
- Press the **ENTER** button, then the **▲** or **▼** button to shift and change the Language.
- Press the **ENTER** button.
- Press the **SETUP** button or **RETURN** button to exit the menu.

Notes:

- Some DVDs may be set to display subtitles in a different language other than the ones you selected. A prior subtitle language may be programmed on the disc.
- Some DVDs allow you to change subtitle selections using the disc menu only. If this is the case, press the **MENU** button and choose the appropriate subtitle language from the selection on the disc menu.

Audio


Follow the steps mentioned in the "Subtitle" section to set up the desired audio language.

Note: Some DVDs may not be played in the language you selected. A prior language may be programmed on the disc.

DVD Menu

Follow the steps mentioned in the "Subtitle" section to set up the desired DVD menu language.

Note: Some DVDs may not include your pre-selected language. In this case, the DVD player automatically displays disc menus consistent with the disc's initial language setting.

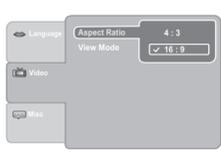

Video

Aspect Ratio


- Press the **SETUP** button in stop mode.
- Press the **▲** or **▼** button to select Video.
- Press the **▶** button, then the **▲** or **▼** button to select Aspect Ratio.
- Press the **ENTER** button, then the **▲** or **▼** button to shift and change the aspect ratio.
- Press the **ENTER** button.
- Press the **SETUP** button or **RETURN** button to exit the menu.

Notes:

- The displayable picture size is preset on the DVD. Therefore, the playback picture of some DVDs may not conform to the picture size you select.
- When you play DVDs recorded in the 4:3 picture size only, the playback picture always appears in the 4:3 picture size regardless of the Aspect Ratio setting.
- Select 16:9 to conform to the LCD screen on the unit. Always be sure that your Aspect Ratio conforms to the actual TV in use if you connect the unit to a TV.

View Mode

- Press the **SETUP** button in stop mode.
- Press the **▲** or **▼** button to select Video.
- Press the **▶** button, then the **▲** or **▼** button to select View Mode.
- Press the **ENTER** button, then the **▲** or **▼** button to shift and change the View Mode.
- Press the **ENTER** button.
- Press the **SETUP** button or **RETURN** button to exit the menu.

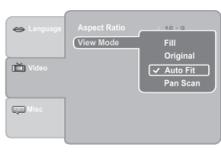

Fill:

Fill the screen with decoded image.

Original: Display image as its original size.

Auto Fit: Automatically fit the decoded image on screen without distortion.

Black bars will be present on top/bottom or left/right of screen.


Pan Scan: Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Sides of the picture are cut off.

Note: Depending on the DVD, you may not be able to view the mode as selected.

Misc

Use Default Settings

- Press the **SETUP** button in stop mode.
- Press the **▲** or **▼** button to select Misc.
- Press the **▶** button, then press the **▲** or **▼** button to select "Use Default Settings" dialogue box.
- Press the **ENTER** button, then press the **◀** or **▶** button to select "Yes". Press the **ENTER** button and the original setting will be restored. The unit will exit the default setting menu automatically and re-load the disc in the disc tray.

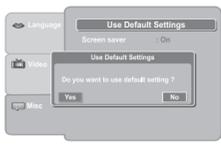


Notes:

It will take 3-5 seconds to reset the DVD player to the factory default.

Screen Saver

- Press the **SETUP** button in stop mode.
- Press the **▲** or **▼** button to select Misc.
- Press the **▶** button, then press the **▲** or **▼** button to select Screen Saver.
- Press the **ENTER** button, then press the **▲** or **▼** button to change the On/Off mode.
- Press the **ENTER** button.
- Press the **SETUP** button or **RETURN** button to exit the menu.

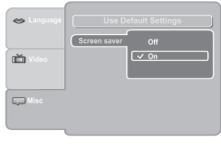

Maintenance

Cleaning the Disc

A defective or soiled disc inserted into the unit can cause sound to drop out during playback. Handle the disc by holding its inner and outer edges.

- Do NOT touch the surface of the unlabeled side of the disc.
- Do NOT stick paper or tape on the surface.
- Do NOT expose the disc to direct sunlight or excessive heat.
- Clean the disc before playback. Wipe the disc from the center outward with a cleaning cloth.
- NEVER use solvents such as benzene or alcohol to clean the disc.
- Do NOT use irregular shaped discs (example: heart shaped, octagonal, etc.). They may cause malfunctions.

Cleaning the Unit

- Be sure to turn the unit off and disconnect the car power adapter before maintaining the unit.
- Wipe the unit with a dry soft cloth. If the surfaces are extremely dirty, wipe clean with a cloth that has been dipped in a weak soap-and-water solution and wrung out thoroughly, then wipe with a dry cloth.
- Never use alcohol, benzene, thinner, cleaning fluid or other