

Thank you for purchasing a JVC product. Before operation, please read the instructions carefully.

INSTRUCTIONS

LVT1977-002B [J]

For customer use:
Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. _____
Serial No. _____

CLASS II apparatus with double insulation, and no protective earth provided.

Appareil de CLASSE II avec isolant double et sans protection de mise à la terre.

EN
©2009 Victor Company of Japan, Limited

Warnings, Cautions and Others Mises en garde, précautions et indications diverses

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

ATTENTION
RISQUE D'ÉLECTROCUTION
NE PAS OUVRIER

ATTENTION: POUR ÉVITER TOUT RISQUE D'ÉLECTROCUTION, NE PAS OUVRIER LE BOÎTIER. AUCUNE PIÈCE INTÉRIEURE N'EST À RÉGLER PAR L'UTILISATEUR. SE RÉFÉRER À UN AGENT QUALIFIÉ EN CAS DE PROBLÈME.

Le symbole de l'éclair à l'intérieur d'un triangle équilatéral est destiné à alerter l'utilisateur sur la présence d'une "tension dangereuse" non isolée dans le boîtier du produit. Cette tension est suffisante pour provoquer l'électrocution de personnes.

Le point d'exclamation à l'intérieur d'un triangle équilatéral est destiné à alerter l'utilisateur sur la présence d'opérations d'entretien importantes au sujet desquelles des renseignements se trouvent dans le manuel d'instructions.

WARNING:
TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

AVERTISSEMENT :
POUR PRÉVENIR LES RISQUES D'INCENDIE OU DE CHOCS ÉLECTRIQUES, NE PAS EXPOSER CE APPAREIL À LA PLUIE OU À L'HUMIDITÉ.

For U.S.A.
Caution: Changes or modifications not expressly approved by party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Pour les Etats-Unis
Attention : Les changements ou les modifications qui ne sont pas explicitement approuvés par la partie responsable de l'observation pourraient mettre fin au droit de l'utilisateur d'utiliser le matériel.

Remarque : Cet appareil a été testé et il s'est avéré conforme aux limites applicables à un appareil numérique de classe B, en vertu de la Partie 15 des Règles de la FCC. Ces limites sont conçues de manière à assurer une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet appareil produit, utilise et peut émettre une énergie de haute fréquence et, s'il n'est pas installé et utilisé en conformité avec les instructions, il peut causer des interférences nuisibles aux communications radio. Il n'y a, toutefois, aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet appareil cause effectivement des interférences nuisibles à la réception de la radio ou de la télévision, ce qu'on peut établir en mettant l'appareil en marche et à l'arrêt, nous encourageons l'utilisateur à tenter de corriger l'interférence par une ou plusieurs des mesures suivantes :

- réorienter ou déplacer l'antenne de réception ;
- accroître la séparation entre l'appareil et le récepteur ;
- brancher l'appareil dans une prise ou un circuit autre que celui auquel le récepteur est branché ;
- consulter un vendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide.

For Canada/pour le Canada
THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS," ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

CET APPAREIL NUMÉRIQUE RESPECTE LES LIMITES DE BRUITS RADIOÉLECTRIQUES APPLICABLES AUX APPAREILS NUMÉRIQUES DE CLASSE B PRÉSCRITES DANS LA NORME SUR LE MATÉRIEL BROUILLEUR, "APPAREILS NUMÉRIQUES", NMB-003 ÉDICTÉE PAR LE MINISTRE DES COMMUNICATIONS.

CAUTION
To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

ATTENTION
Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

CAUTION
The ϕ /OFF switch in any position does not disconnect the mains line.
Disconnect the mains plug to shut the power off completely. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

ATTENTION
Le commutateur ϕ /OFF, quel que soit sa position, ne coupe pas la ligne principale.
Débrancher la fiche principale pour couper complètement l'alimentation du secteur.
La fiche secteur ou un coupleur est utilisé comme dispositif de déconnexion de l'appareil, et l'appareil déconnecté doit être prêt à être utilisé.

CAUTION: Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.
ATTENTION: Les piles ne doivent en aucun cas être exposées à une chaleur excessive (lumière du soleil, feu, etc.).

 **[European Union only]**
[Union européenne seulement]

SPECIFICATIONS

CD player

CD capacity: 1CD
Signal-to-noise ratio: 60 dB
Dynamic range: 60 dB

Tuner

FM tuning range: 88 MHz – 108 MHz
AM tuning range: 530 kHz – 1 700 kHz
Antennas: Telescopic antenna for FM
Ferrite core antenna for AM

General

Speakers: 9 cm (3-9/16 in) cone x 2
Speaker impedance: 4 Ω
Output power: 1.5 W per channel, min. RMS, driven into 4 Ω at 1 kHz with no more than 10% total harmonic distortions

Input terminal: AUDIO IN (ϕ 3.5 x 1)
Power supply: AC 120 V \sim , 60 Hz
DC 9 V (R14(SUM-2)/C(14D) -size batteries x 6)

Power consumption: 10 W (at operation)
1 W or less (on standby)

Dimensions (W/H/D): 306 mm x 238 mm x 140 mm (12-1/16 in x 9-3/8 in x 5-9/16 in)

Mass: Approx. 1.7 kg (3.8 lbs) (without batteries)

Accessories provided: Power cord x 1

Design and specifications are subject to change without notice.

JVC WARRANTY REPAIR / REPLACEMENT FORM

PLEASE COMPLETE THE FOLLOWING:
PLEASE NOTE : P.O. BOXES ARE NOT ACCEPTABLE

NAME: _____
STREET ADDRESS: _____
CITY: _____ STATE _____ ZIPCODE _____
DAY TIME PHONE NUMBER: _____

REASON FOR RETURN _____

Please do not return your product to the retailer. Instead, please box the product carefully, preferably in the original carton, and ship, insured to the JVC repair/replacement facility nearest you.

A COPY OF YOUR BILL OF SALE, A COMPLETED WARRANTY REPAIR/REPLACEMENT FORM AND ALL OF THE ORIGINAL ACCESSORIES WHICH CAME WITH YOUR UNIT MUST ACCOMPANY THE PRODUCT TO BE ELIGIBLE FOR REPAIR/REPLACEMENT UNDER WARRANTY.

To obtain the address of the location nearest you, please call (800) 252-5722 or visit our website <http://www.jvc.com>. If you have any questions concerning your JVC Product, please contact our Customer Care Center at (800) 252-5722.

87-5196-1 (0009)

JVC LIMITED WARRANTY EXCHANGE-90

JVC Americas Corp. (JVC) warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL PURCHASER AT RETAIL to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of the original retail purchase for the period shown below. ("The Warranty Period")

LABOR 90 DAYS PARTS 90DAYS

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND IN THE COMMONWEALTH OF PUERTO RICO.

WHAT WE WILL DO:
If this product is found to be defective within the warranty period, JVC will, at its option, either repair or replace the defective part(s) or replace the product with a new or refurbished functionally equivalent product. Within 90 days from date of retail sale, repair or replacement will be at no charge to the customer.

WHAT YOU MUST DO FOR WARRANTY SERVICE:
Please do not return your product to the retailer. Instead, please box the product carefully, preferably in the original carton, and ship, insured to the JVC repair/replacement facility nearest you.

To obtain the address of the location nearest you, please call (800) 252-5722 or visit our website at <http://www.jvc.com>

A COPY OF YOUR BILL OF SALE, A COMPLETED WARRANTY REPAIR/REPLACEMENT FORM AND ALL OF THE ORIGINAL ACCESSORIES WHICH CAME WITH YOUR UNIT MUST ACCOMPANY THE PRODUCT TO BE ELIGIBLE FOR REPAIR/REPLACEMENT UNDER WARRANTY.

If you have any questions concerning your JVC Product, please contact our Customer Care Center at (800) 252-5722.

WHAT IS EXCLUDED:
The warranty does not cover:
1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model or serial number has been altered, tampered with, defaced or removed.
2. Initial installation, installation and removal, from "built in" entertainment centers, and other mounting systems.
3. Operational adjustments covered in the Owner's Manual, normal maintenance, including head cleaning.
4. Damage that occurs in shipment, due to act of God, and cosmetic damage.
5. Signal reception problems and failures due to line power surge.
6. Products used for commercial purposes (including but not limited to rental).
7. Accessories.
8. Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase).
9. Loss of data resultant from malfunction of hard drive or other data storage device.

There are no express warranties except as listed above.

AFTER THE WARRANTY:
Please contact JVC's Customer Care Center at (800) 252-5722 to obtain the cost of out of warranty repair or replacement.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

JVC SHALL NOT BE LIABLE FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE, OR ANY OTHER DAMAGES WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL, INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

JVC AMERICAS CORP.
1700 Valley Road, Wayne, NJ 07470
<http://www.jvc.com>

 
REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY. THIS WARRANTY DOES NOT APPLY. FOR DETAIL OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

For customer use:
Enter below the Model No. and Serial No. which is located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No.: _____ Serial No.: _____
Purchase Date: _____ Name Of Dealer: _____

CAUTION: Proper Ventilation
To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:
1. Front: No obstructions and open spacing.
2. Sides/Top/Back: No obstructions should be placed in the areas shown by the dimensions below.
3. Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

ATTENTION: Aération correcte
Pour prévenir tout risque de décharge électrique ou d'incendie et éviter toute détérioration, installez l'appareil de la manière suivante:
1. Avant: Bien dégagé de tout objet.
2. Côtés/dessus/dessous: Assurez-vous que rien ne bloque les espaces indiqués sur le schéma ci-dessous.
3. Dessous: Posez l'appareil sur une surface plane et horizontale. Veillez à ce que sa ventilation correcte puisse se faire en le plaçant sur un support d'au moins dix centimètres de hauteur.

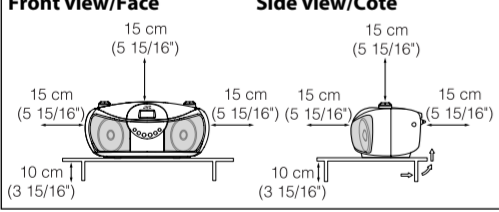

IMPORTANT FOR LASER PRODUCTS

1. CLASS I LASER PRODUCT
2. **CAUTION:** Do not open the top cover or cabinet. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** (For U.S.A.) Visible and/or invisible class II laser radiation when open. Do not stare into beam. (For Canada) Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments.
4. **CAUTION:** Use of any controls, adjustments, or procedures other than those specified herein may result in hazardous radiation exposure.
5. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

IMPORTANT POUR PRODUITS LASER

1. PRODUIT LASER CLASSE 1
2. **ATTENTION:** N'ouvrez pas le couvercle supérieur ni le coffret de l'appareil. Il n'y a aucune pièce réparable par l'utilisateur à l'intérieur de l'appareil; confiez toute réparation à un personnel qualifié.
3. **ATTENTION:** (Pour les Etats-Unis) Radiation laser de classe II visibles et/ou invisible si l'appareil est ouvert. Ne regardez pas le rayon. (Pour le Canada) Rayonnement laser visible et/ou invisible de classe 1M une fois ouvert. Ne pas regarder directement avec des instruments optiques.
4. **ATTENTION:** Toute utilisation des commandes, réglages ou procédures autres que celles spécifiées dans ce document risque de entraîner une exposition dangereuse aux rayonnements.
5. REPRODUCTION DE L'ÉTIQUETTE: ÉTIQUETTE DE PRÉCAUTION PLACÉE À L'INTÉRIEUR DE L'APPAREIL.

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	ATTENTION RISQUE D'ÉLECTROCUTION NE PAS OUVRIER	AVISO RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIER	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN	BEF RISQUE D'ÉLECTROCUTION NE PAS OUVRIER	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN
---	--	---	---	--	---

REFERENCES

Playable discs
You can play back CDs with one of the marks below on the surface.



 
You can also play back files in audio CD format on a finalized CD-R or CD-RW.
- The reflection factor of CD-RW is lower than that of other CDs, possibly causing CD-RW to take a longer time to read.

Care and maintenance

To get the best performance from the unit, keep your discs and mechanism clean.

- Cleaning the unit**
- Disconnect the power cord before cleaning.
 - Wipe off stains with a soft cloth. If the unit is heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
 - Since the unit may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following:
 - DO NOT wipe it with a hard cloth.
 - DO NOT wipe it forcefully.
 - DO NOT wipe it with thinner or benzine.
 - DO NOT apply any volatile substances such as insecticides to it.
 - DO NOT allow any rubber or plastic to remain in contact for a long time.

Cleaning the CD pickup lens
Keep the CD pickup lens clean, or the sound may be degraded. Use a blower (available at a camera store, etc.) to blow dust off the lens.

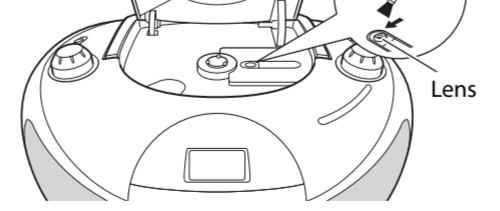

- Handling discs**
- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
 - Do not scratch or touch the reflective recorded surface.
 - Do not stick or write anything on the label side.
 - Do not bend discs.
 - Avoid exposure to direct sunlight, extreme temperature or moisture.
 - When cleaning the disc, wipe it with a soft cloth in a straight line from center to edge. DO NOT use thinner, benzine, record cleaner or antistatic spray.

Troubleshooting

If you have a problem with this unit, check this list for a possible solution before calling for service.

General

Power does not come on.
➔ No power is supplied. Check the power cord connection or battery power.

Playback sound is at a very low level.
➔ When power is supplied with batteries: Batteries are run down. Replace the batteries with new ones.

No sound is heard.
➔ The volume is set to minimum.

Radio operations

Hard to listen to broadcasts because of noise.
➔ Direction of the antenna is inappropriate. Adjust the antenna correctly.

Disc operations

- The disc does not play.**
- ➔ The FUNCTION selector is not set to CD.
 - ➔ The disc is placed upside down. Place the disc with the label side facing up.
 - ➔ The disc or the lens is dirty. Clean the disc or the lens.
 - ➔ There is moisture condensation. Turn the unit on and wait a few hours before use.

 
The sound is discontinuous.
➔ The disc is scratched or dirty.

Other equipment operations

The sound from the other equipment cannot be heard.
➔ The FUNCTION selector is not set to AUDIO IN.
➔ Check the connection.

PREPARATION

Connecting the power cord

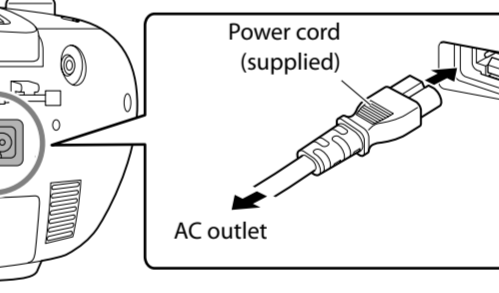

NOTE

 
- The power can also be supplied through the batteries (see below).
- A small amount of power is always consumed even while on standby.

CAUTION

- **Only use JVC power cord provided for this unit to avoid malfunction or damage to the unit.**
- **Remove batteries when using the power cord.**
- **Be sure to unplug the power cord from the outlet when going out or when the unit is not in use for an extended period of time.**

Inserting batteries

Match the polarities (+ and -) of the batteries.

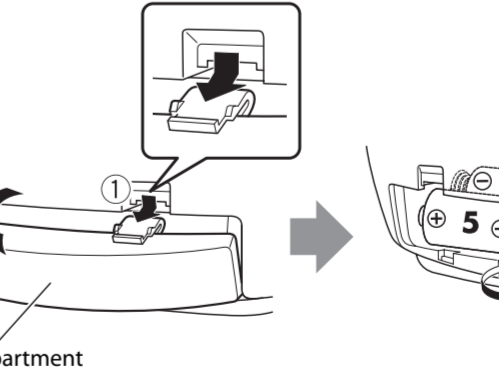

R14(SUM-2)/C(14D) (not supplied)

NOTE

 
- The power will not be supplied through the batteries when the power is supplied through the AC IN \sim jack on the unit.
- The battery is consumed more quickly than usual when operating the unit continuously or operating it in a cold place.

CAUTION

To avoid battery leakage or explosion, handle batteries properly.


- If you are not going to use this unit for a month or more, remove the batteries from the battery compartment.
- Dispose of batteries in the proper manner, according to federal, state, and local regulations.
- Do not mix with batteries of different types or with new and old ones.
- Do not attempt to charge any batteries other than rechargeable ones.
- Discard leaky batteries immediately. Battery leakage can cause skin burns or other personal injuries.
- If chemicals leak onto the unit, clean the unit completely.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

GENERAL CONTROLS

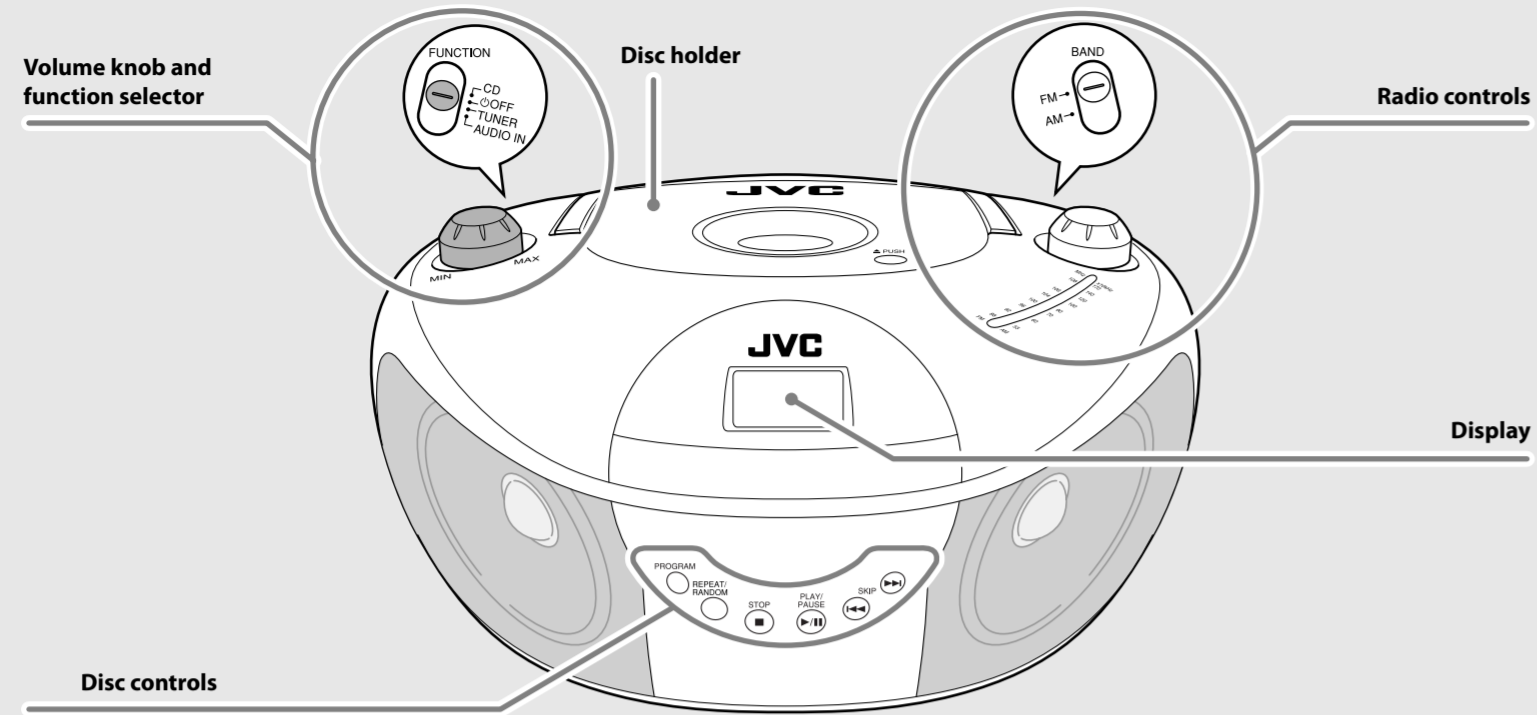

Selecting the source to play

 Slide the FUNCTION selector to select CD, TUNER or AUDIO IN.

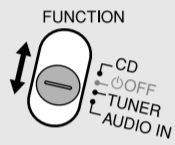


CD:
To play back a disc. (See "DISC OPERATIONS.")

TUNER:
To listen to the radio broadcast. (See "TUNER OPERATIONS.")

AUDIO IN:
To listen to the other equipment connected to the AUDIO IN jack. (See "LISTENING TO OTHER EQUIPMENT.")


Adjusting the volume

 Turn the VOLUME knob to increase or decrease the volume.
• Set the volume to minimum when you turn on the unit.

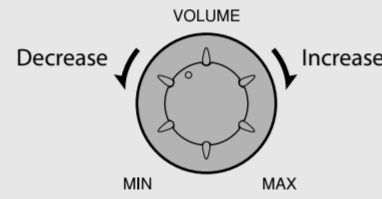


Turning the unit off

 Slide the FUNCTION selector to OFF.

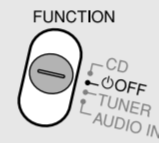


TUNER OPERATIONS

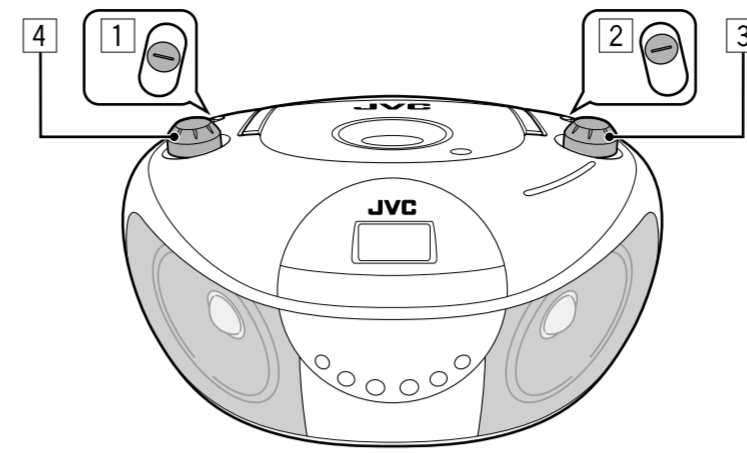 


Basic procedure

 
1 Set the source to TUNER.

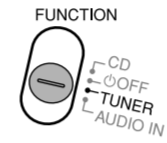


2 Select the band—FM or AM.

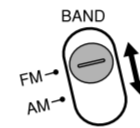 


3 Select a station.

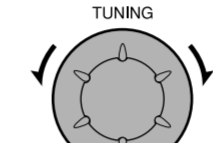 

Moves to indicate the current frequency

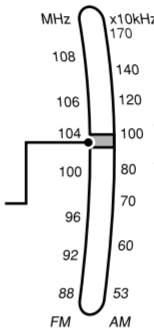 


4 Adjust the volume.

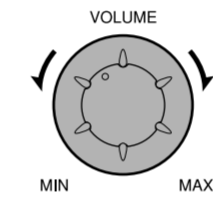 

Improving the FM reception

 
When an FM stereo (FM ST) broadcast is hard to receive or noisy, select the monaural reception (MONO).

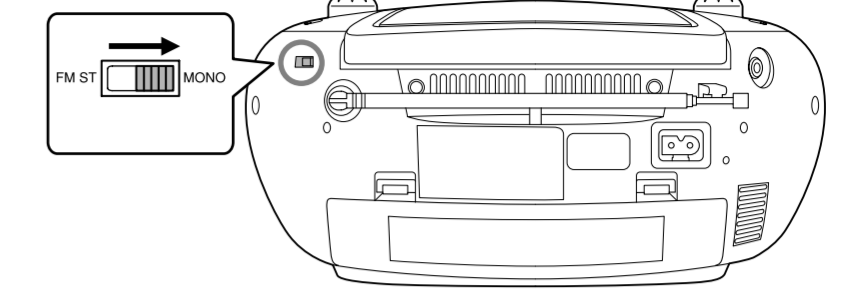

• To restore stereo reception, switch to FM ST.


Adjusting the antenna

 FM

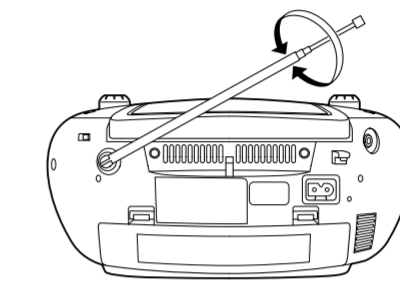


AM

 The AM antenna is built in, so adjusting the position of the unit may help AM reception.

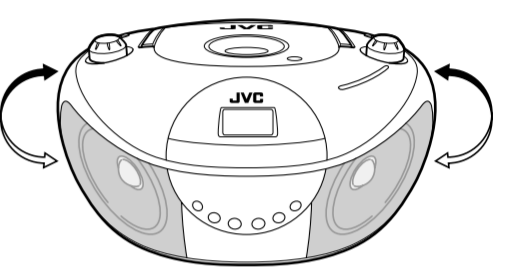


DISC OPERATIONS

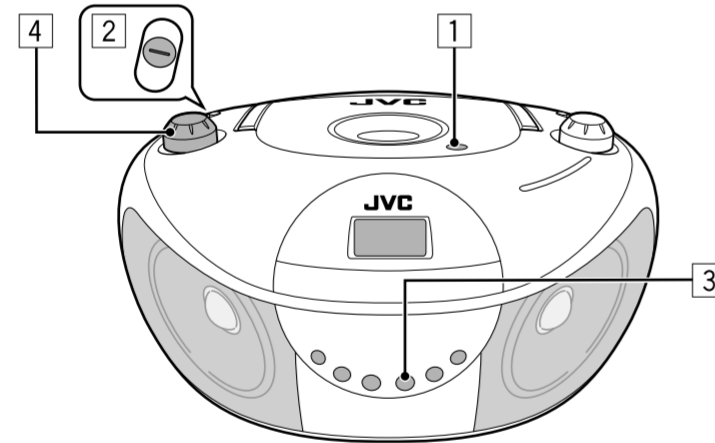 


Basic procedure

 
1 Load a disc.

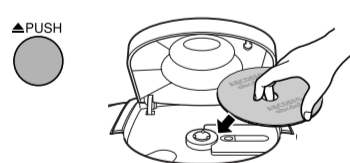


4 Adjust the volume.

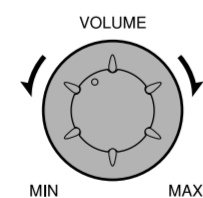 


2 Set the source to CD.

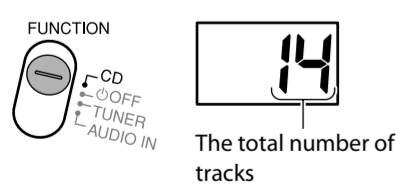 

3 Start playback.

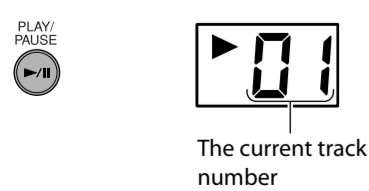 

To select a track

 

To locate a desired position on the disc
During playback...



Press and hold

To stop playback



To pause playback



 
• To resume, press the same button again.

Program playback

Up to 20 tracks can be programmed to play in a desired order.

To program the playing order
While playback is stopped...

1 Show the program creation display.

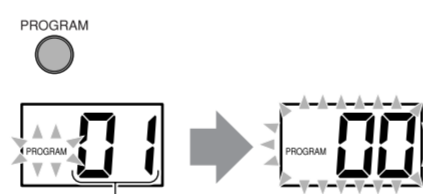


Program number
• Now you can select the first track of the program.

2 Select a desired track.



 3 Add the track to the program.

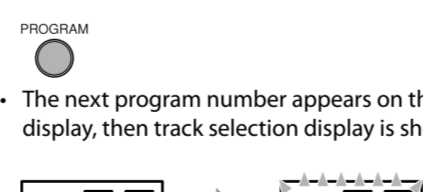

• The next program number appears on the display, then track selection display is shown.

4 Repeat steps 2 and 3.

• When the 20th track is programmed, "---" flashes on the display and the 21st track cannot be programmed.

5 Start playback.



• After program playback ended or stopped, the program playback mode is automatically canceled. (The PROGRAM indicator disappears from the display.)

To play back the program again, press PROGRAM, then PLAY/PAUSE.

To edit the program

1 While playback is stopped, press PROGRAM repeatedly to select the program number of the track you want to replace.
• To add a track at the end of the program, select the last program number.
2 Perform steps 2 and 3 on the left column to select a new track.

To erase the entire program

While playback is stopped...
1 Press PROGRAM.
• PROGRAM indicator lights up on the display.
2 Press ■.
• The entire program is also erased in the following cases:
– when you open the disc holder.
– when the unit is turned off.
– when you select another source.

Repeat/Random playback

Select the desired playback mode.




Playback mode indicator (See below.)

Each time you press the button, the playback mode changes as follows:

Indicator	Playback mode
REPEAT	Repeats the current track.
REPEAT ALL	Repeats all tracks.
RANDOM	Plays tracks at random.


To cancel, press the same button repeatedly until the indicator above disappears from the display.
• Repeat playback is also canceled if the playback is stopped.
• Random playback cannot be used during program playback. If you program the playing order during random playback, random playback is canceled.

 LISTENING TO OTHER EQUIPMENT

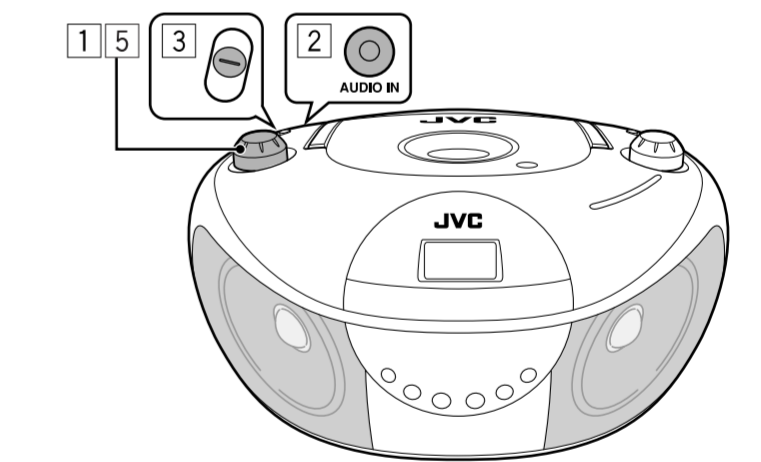


Basic procedure

 1 Turn the volume to minimum.

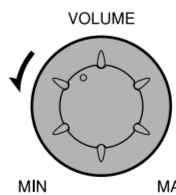


2 Connect the equipment.

 • Connect the equipment with the stereo mini plug (3.5 mm (3/16 in) diameter) to the AUDIO IN jack on the rear.

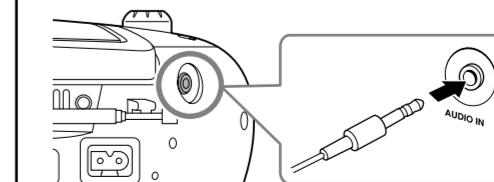

3 Set the source to AUDIO IN.

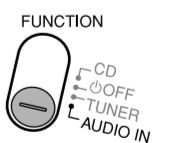 

4 Start playing the equipment.

5 Adjust the volume.

