




COOKTOP PARTS

For Models: GR673LXSQ1, GR673LXSS1, GR673LXSB1
(White) (Stainless Steel) (Black)

30" ELECTRIC CERAN
FREESTANDING RANGE
SELF CLEAN CONVECTION OVEN

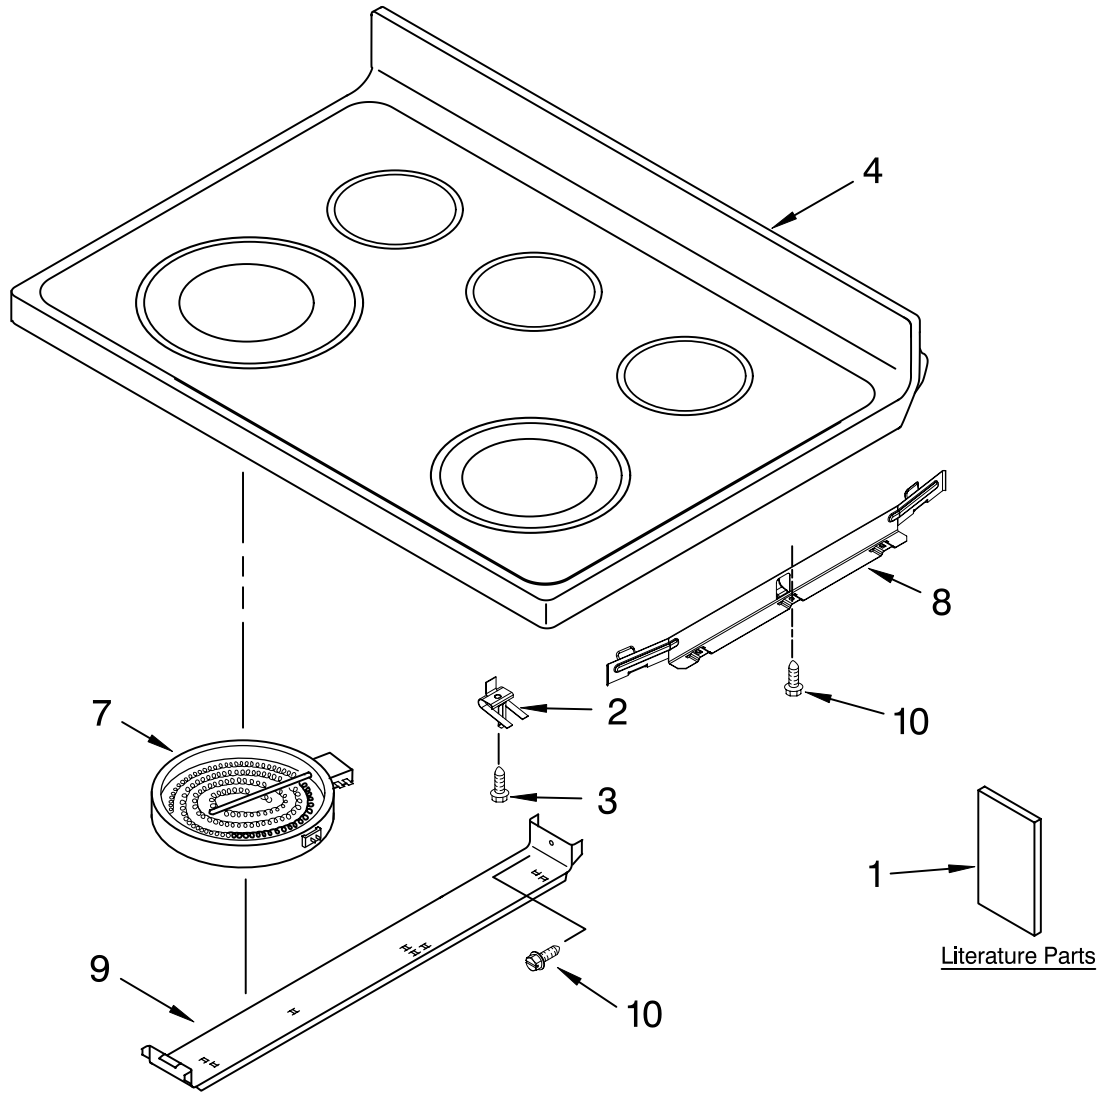

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	9763001	Owner's Manual
	9762982	Tech Sheet
	9762996	Installation Instructions
		Template, Anti-Tip
	9757143	English/French
	9757142	English/Spanish
	9762761	Brochure, Tips Safe Cooking


Illus. No.	Part No.	DESCRIPTION
2	W10035930	Spring, Locator
3	3196170	Screw
4		Cooktop
	9763334	White
	9763336	Black

Illus. No.	Part No.	DESCRIPTION
7		Element, Surface
	9759351	2400/1200 W - LF
	8523698	1200 W - LR
	8523698	1200 W - RR
	9759351	2400/1200 W - RF
	9762851	120 V - CR
8	8524132	Shield, Wiring
9		Bracket, Element
	8272791	(2)
	8273720	(1)
10	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: GR673LXSQ1, GR673LXSS1, GR673LXSB1
(White) (Stainless Steel) (Black)

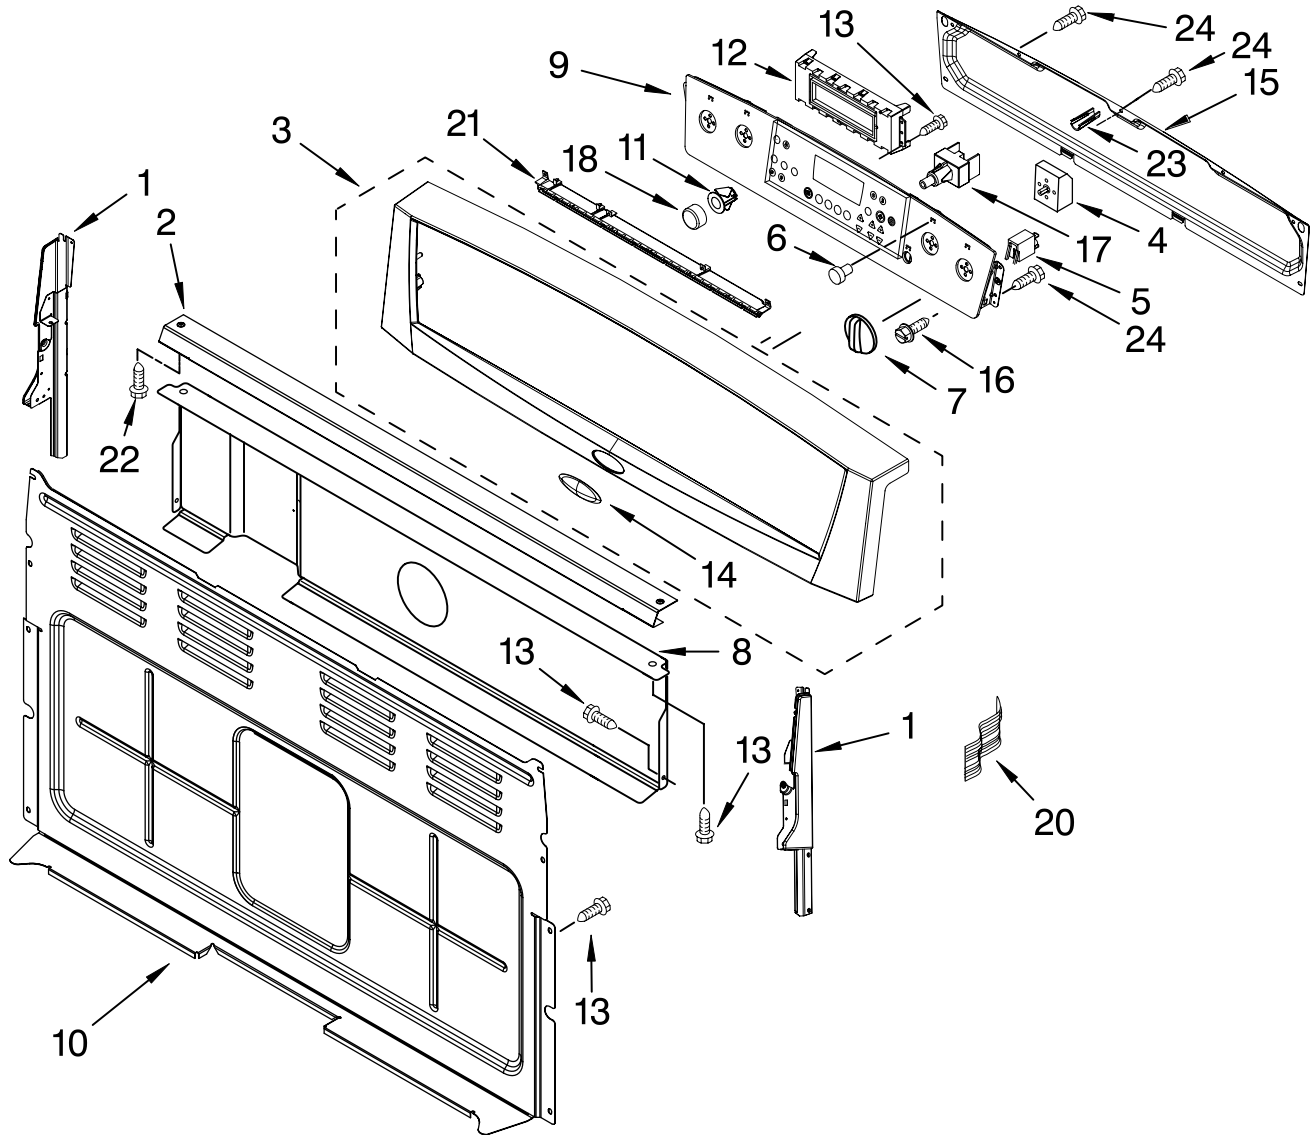

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009040	White Left Hand
	W10009050	White Right Hand
	W10009080	Black Left Hand
	W10009090	Black Right Hand
2	9762095	Bracket, Console
3		Panel, Backguard
	9762585	White
	9762588	Stainless Steel
	9762586	Black
4		Switch, Infinite
	9758060	Left Front (Dual)
	3148951	Left Rear
	3148951	Right Rear
	9758060	Right Front (Dual)


Illus. No.	Part No.	DESCRIPTION
5	8523265	Light, Indicator
6	3196068	Lens, Light
7		Knob, Infinite (4)
	9757132	White
	9758129	Black
8	8523280	Shield, Heat
9		Glass Switch Membrn
	9763548	White
	9763549	Black
10	9756999	Cover, Rear
11		Bezel, Keep Warm
	9757489	White
	9758489	Black
12	9763042	Control, Range
13	3196178	Screw

Illus. No.	Part No.	DESCRIPTION
14	9757613	Nameplate
15	9756366	Cover, Rear (Console)
16	3400882	Screw
17	8272820	Switch
18		Button
	9757492	White
	9758491	Black
20	9762426	Cntr Cable, Flex
21	9757358	Reflector, Light
22		Screw
	3196166	White
	3196168	Black
23	9757490	Support, Glass
24	3196178	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: GR673LXSQ1, GR673LXSS1, GR673LXSB1
(White) (Stainless Steel) (Black)

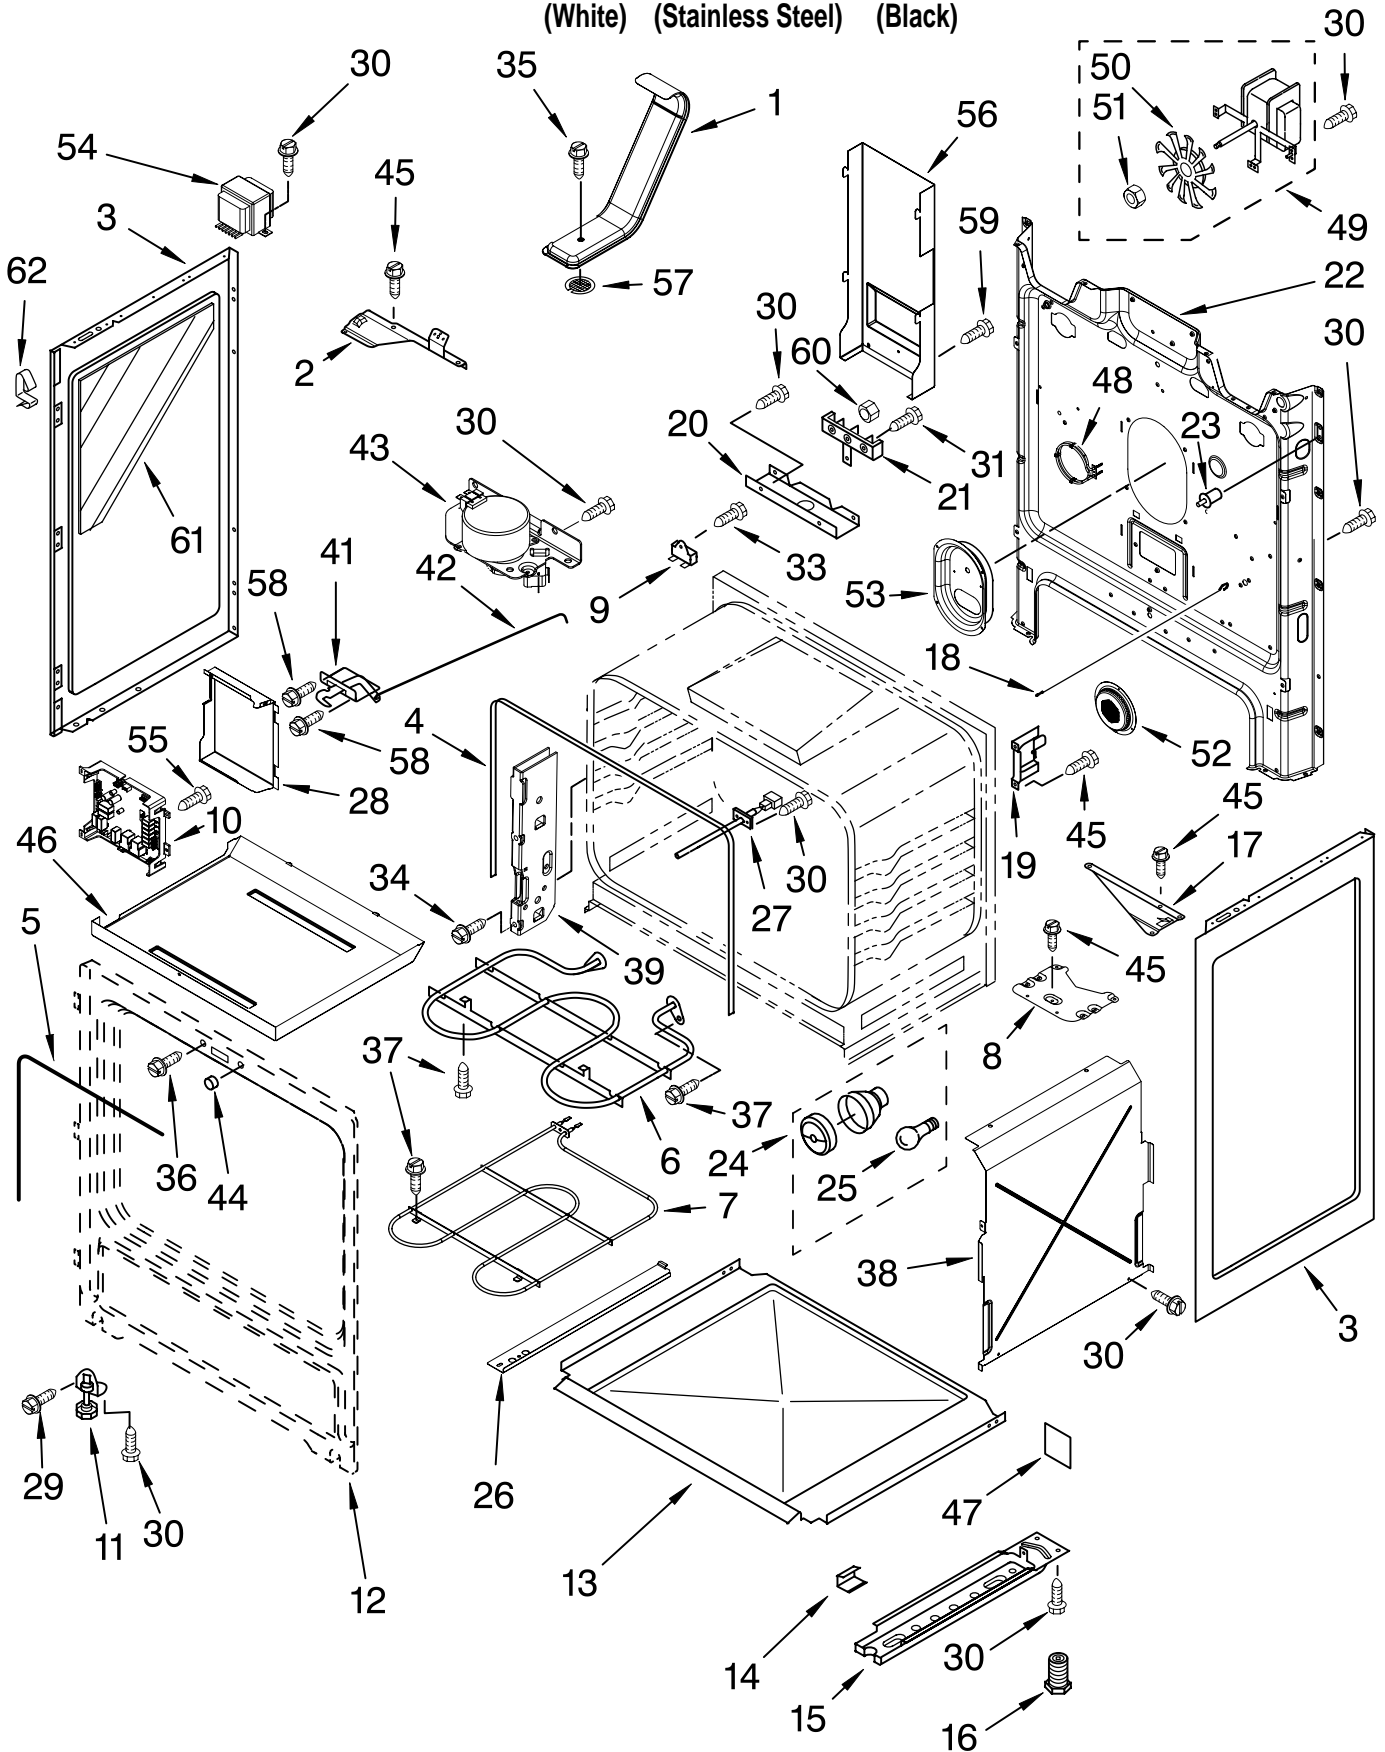


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: GR673LXSQ1, GR673LXSS1, GR673LXSB1

(White) (Stainless Steel) (Black)

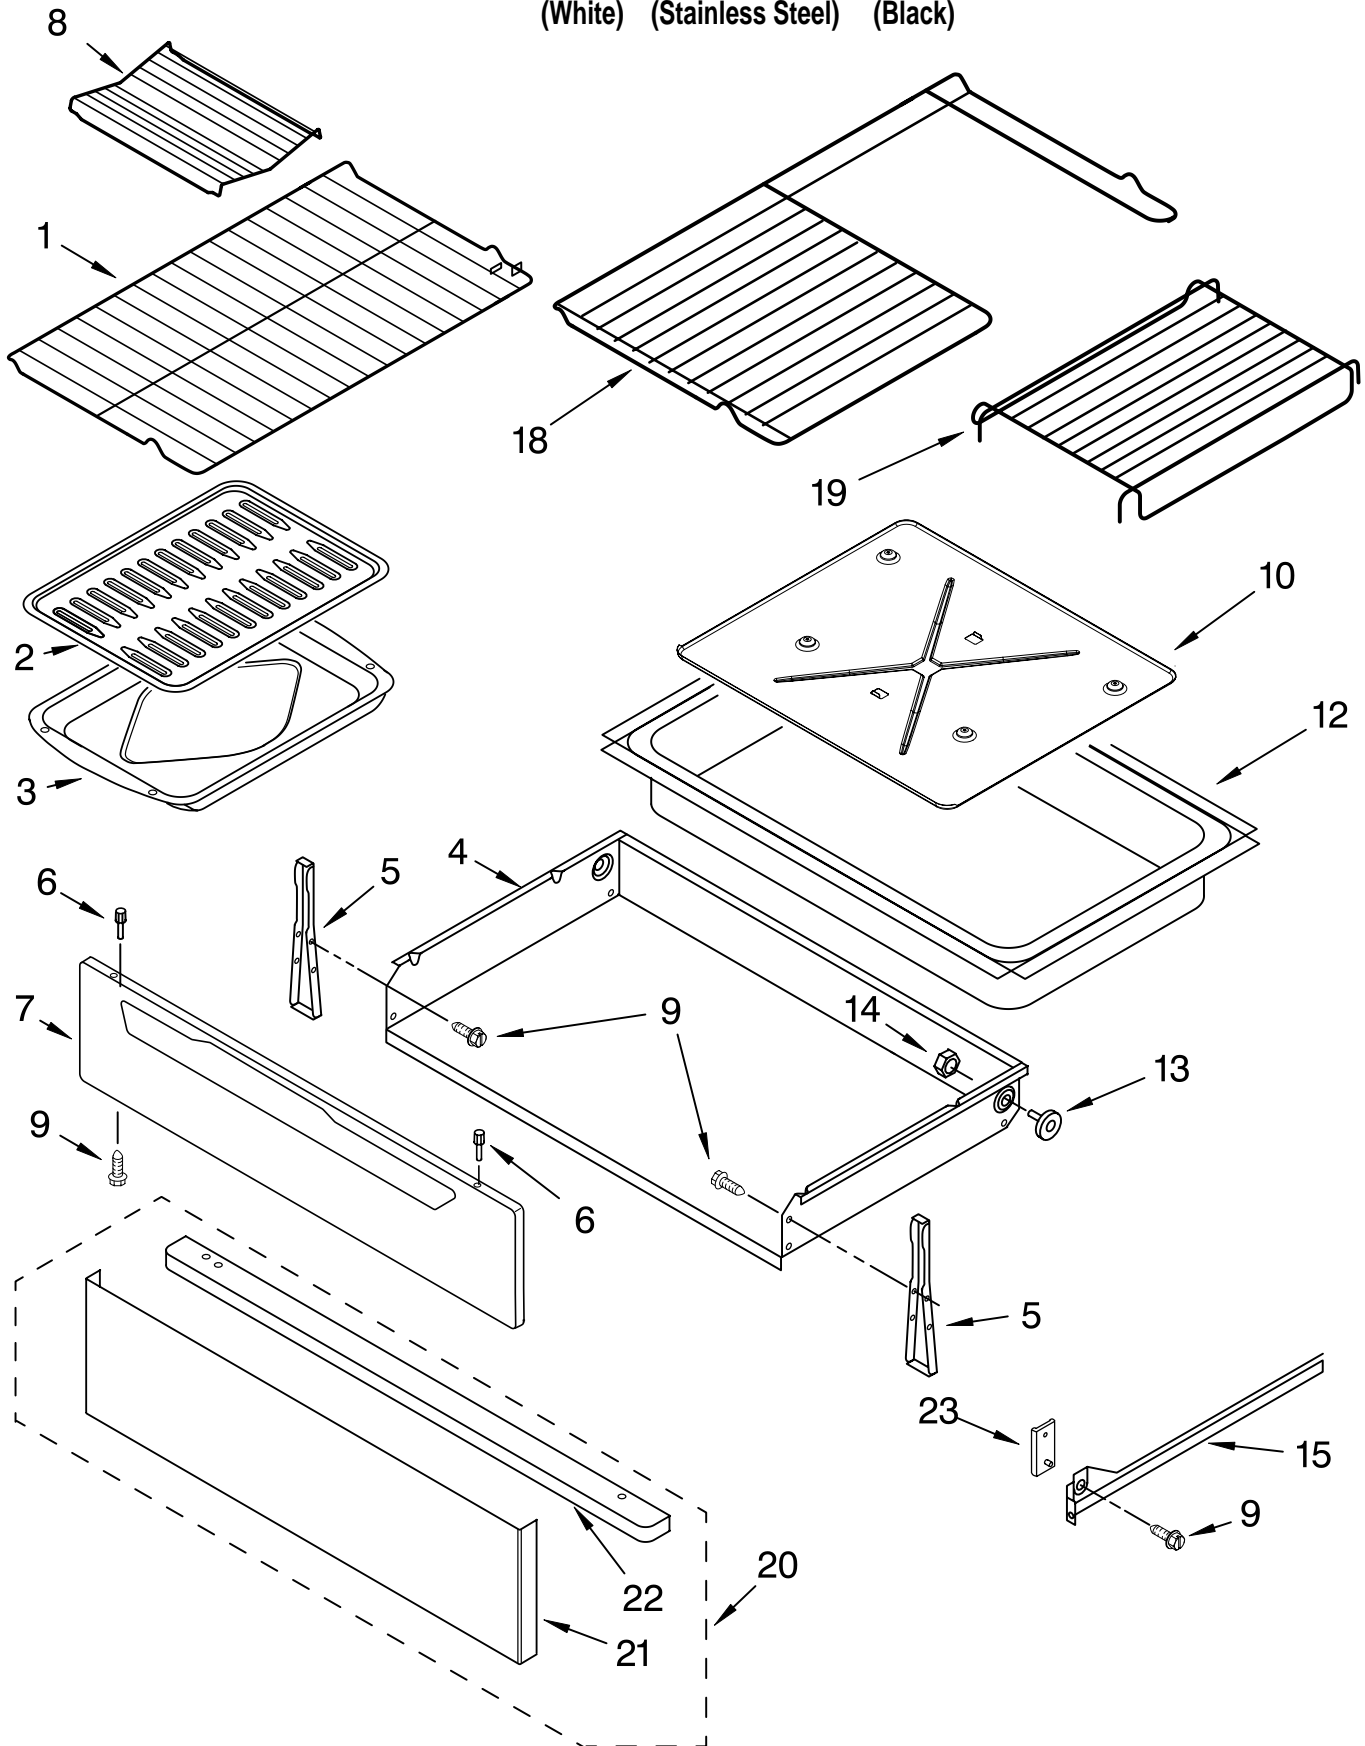

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: GR673LXSQ1, GR673LXSS1, GR673LXSB1


(White) (Stainless Steel) (Black)

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	9761030	Drawer, Storage
5	9758200	Brkt-Mntg, Drawer
6		Rivet, Push (2)
	3196814	White
7		Panel, Drawer Frnt
	8053339	White
	8053341	Black
8	3181534	Rack, Roasting
9	3196168	Screw
10	9756711	Heat Shield,Drwr
12	9761032	Liner, Drawer
13	9751138	Roller (2)
14	487939	Nut (2)
15		Slide, Drawer
	8274190	Left Hand
	8274191	Right Hand
18	8274021	Rack, Partial
19	8274022	Rack, Insert
20		Stainless Model Only
21	9755798	Panel Stainless
22	9757237	Handle
23	8522669	Spacer, Glide

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: GR673LXSQ1, GR673LXSS1, GR673LXSB1
(White) (Stainless Steel) (Black)

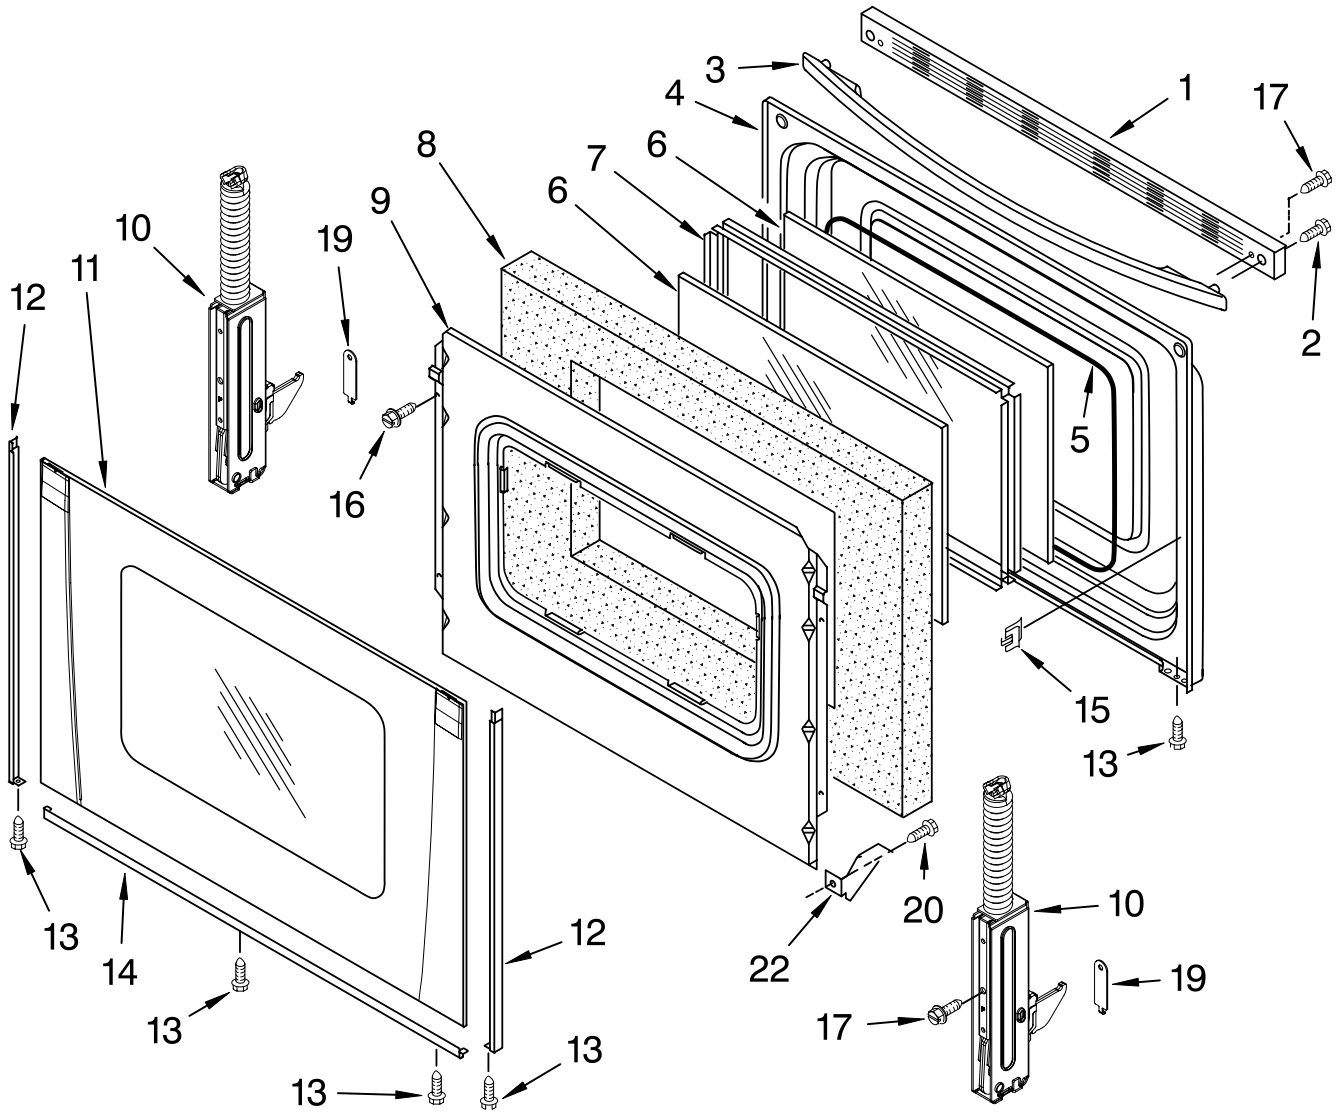

Illus. No.	Part No.	DESCRIPTION
1	9761975	Trim, Top
	9761977	White
	9762391	Black
2	3196164	Screw
	3	Handle, Door
4	9761978	White
	6761979	Black
	9761981	Stainless Steel
	9761344	Liner, Door
5	8522414	Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass

Illus. No.	Part No.	DESCRIPTION
8	8272618	Insulation, Door
9	9761357	Retainer, Insul.
10	9761496	Hinge, Door (2)
	W10010660	White
	W10010680	Black
11	W10010690	Stainless Steel
	12	Trim, Side
	8523166	White Left Hand
	8523172	White Right Hand
	8523171	Black Left Hand
	8523165	Black Right Hand
	9762249	Unvrsl Slvr LH
	9762250	Unvrsl Slvr RH

Illus. No.	Part No.	DESCRIPTION
13	3196160	Screw
	14	Trim, Lower
	8523175	White
	8523177	Black
15	3196025	Clip, Glass (4)
16	W10031790	Screw
17	W10031780	Screw
19	9761517	Clip, Dr Mntg (2)
20	3196165	Screw
22	3196794	Bracket, Window(2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: GR673LXSQ1, GR673LXSS1, GR673LXSB1
(White) (Stainless Steel) (Black)

Illus. No.	Part No.	DESCRIPTION
Following Parts Not Illustrated		
<u>SPLICING WIRES--25FT.</u>		
<u>LENGTH</u>		
242828		Wire, Black 12 Ga. 150° c
242821		Wire, Blue 14 Ga. 150°c
242822		Wire, Brown 14 Ga. 150°c
242830		Wire, Brown 14 Ga. 200°c
242823		Wire, Green 14 Ga. 150°c
242824		Wire, Orange 14 Ga. 150°c
242825		Wire, Red 14 Ga. 150°c
242831		Wire, Red 14 Ga. 200°c
242827		Wire, Yellow 14 Ga. 150°c
<u>REFINISHING MATERIAL</u>		
799832		Kit, Porcelain Repair (White)
242756		Touch-Up Self-Clean(1/2 Pt)
261582		Grease

Illus. No.	Part No.	DESCRIPTION
<u>INSULATION</u>		
	261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
<u>PAINT, TOUCH-UP (1/2oz.)</u>		
	72017	White
	4392899	Biscuit
	511873	White Porcelain (2 Oz.)
<u>PAINT, PRESSURIZED SPRAY (12 oz.)</u>		
	350930	White
	4392901	Biscuit
	285006	Superior Black
	206922	Primer (White)
<u>PAINT, BULK (1 qt.)</u>		
	799344	White (Uncut)
	4392900	Biscuit (Uncut)

Illus. No.	Part No.	DESCRIPTION
<u>ACCESSORY PARTS</u>		
	241430	Foil, Aluminum Oven (18" x 25')
	3184478	Cleaner, Glass
<u>ANTI-TIP KIT</u>		
	W10017440	Anti-Tip Kit
<u>WIRING HARNESS PARTS</u>		
Following Parts Not Illustrated		
	9762815	Harness, Wire (Cooktop Left)
W10044070		Harness, Wire (Cooktop Right)
	9762964	Harns-Wire, Warm
	9758438	Harness, Wire (Main)
	9758193	Harness, Wire (Console)
	9756550	Harness, Bake Element (Hidden)
	8523279	Wire, Ground
	313660	Clip, Ground Wire
	3196154	Screw