




COOKTOP PARTS

For Models: GY398LXPB04, GY398LXPQ04, GY398LXPS04
(Black) (White) (Stainless)

30" Slide-In
ELECTRIC OVEN
SELF CLEAN

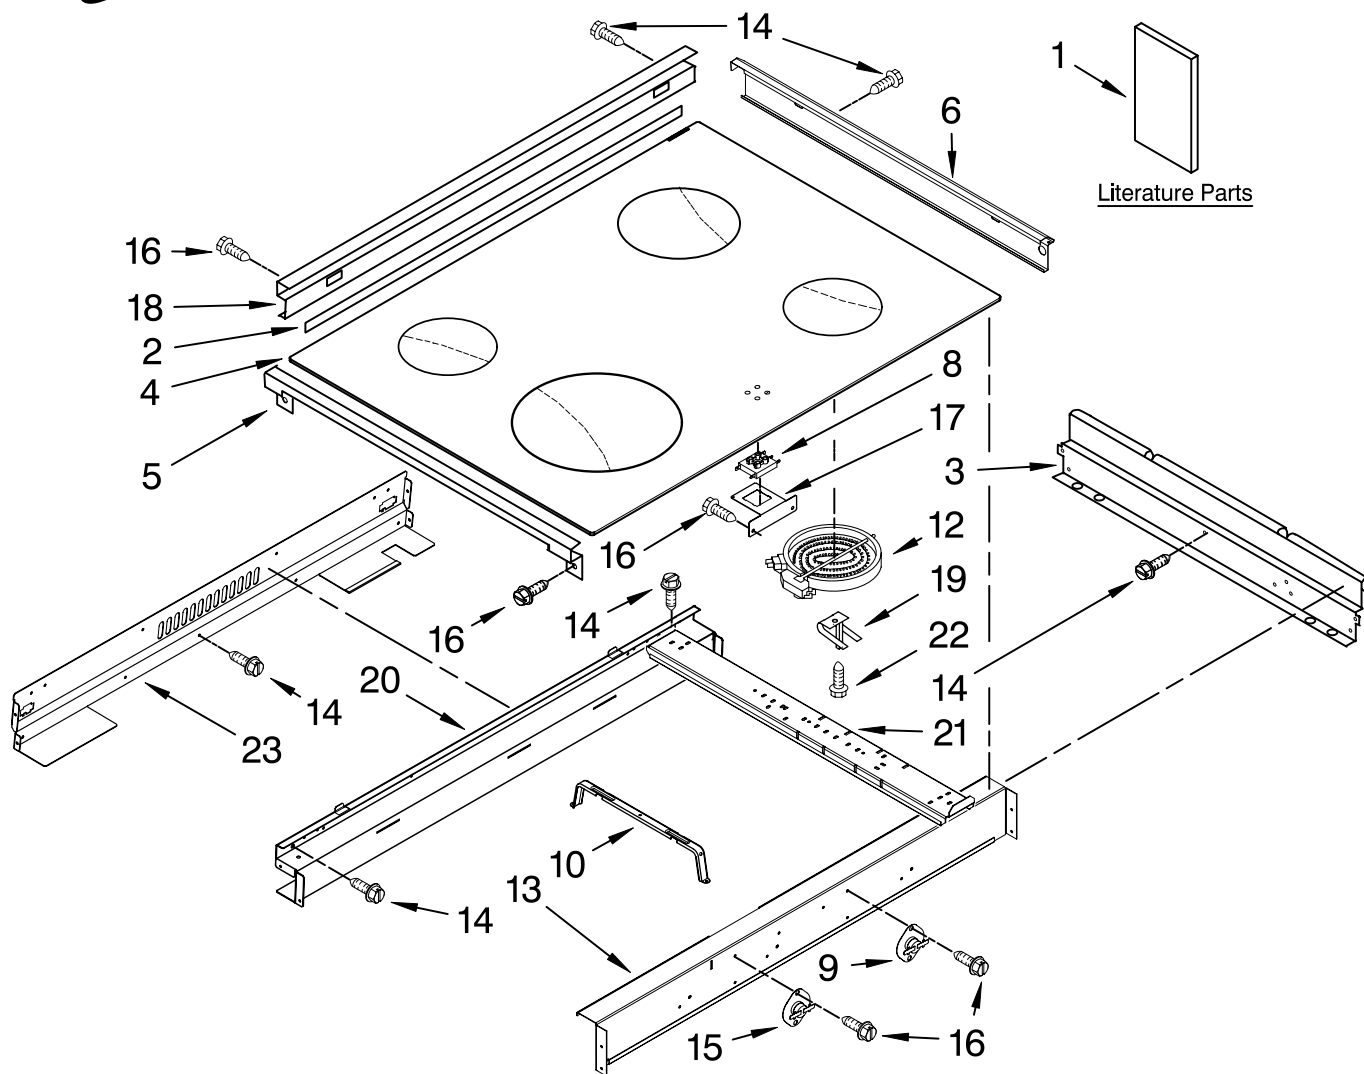

Literature Parts

Illus. No.	Part No.	DESCRIPTION
1	9762035	Literature Parts Installation Instructions
	9762257	Use & Care Guide
	9761389	Tech Sheet
	9757680	Anti-Tip Instructions
		Safe Cooking Tips
	3191638	English
	9759133	French
2	9756450	Gasket
3	4454023	Bracket, Mounting Cooktop
4	9762069BL	Black/Stainless
	9756788WH	White
5	4453764	Clip, Ceran (2)


Illus. No.	Part No.	DESCRIPTION
6		Trim, Cooktop Right
	9759530BL	Black
	9759530WH	White
	W10140540	Stainless
		Left
	9759531BL	Black
	9759531WH	White
	W10140541	Stainless
8	8523739	Light, Indicator
9	9759944	Thermostat
10	9756821	Support, Wiring
12		Element, Surface
	8523698	1200W LR,RF
	8523696	1800W RR
	8523692	2500W LF

Illus. No.	Part No.	DESCRIPTION
13	9757800	Bracket, Front Support
14	3196537	Screw
15	341196	Thermostat
16	3196160	Screw
17	9758799	Bracket, Indicator Lamp
18		Trim, Extension
	9760520BL	Black
	9760520WH	White
	W10140543	Stainless
19	9759094	Spring, Locator
20	9759963	Bracket, Rear Support
21	8285962	Rail, Element (2)
22	246119	Screw
23	9761725	Cover, Cooktop Rear

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: GY398LXPB04, GY398LXPQ04, GY398LXPS04
(Black) (White) (Stainless)

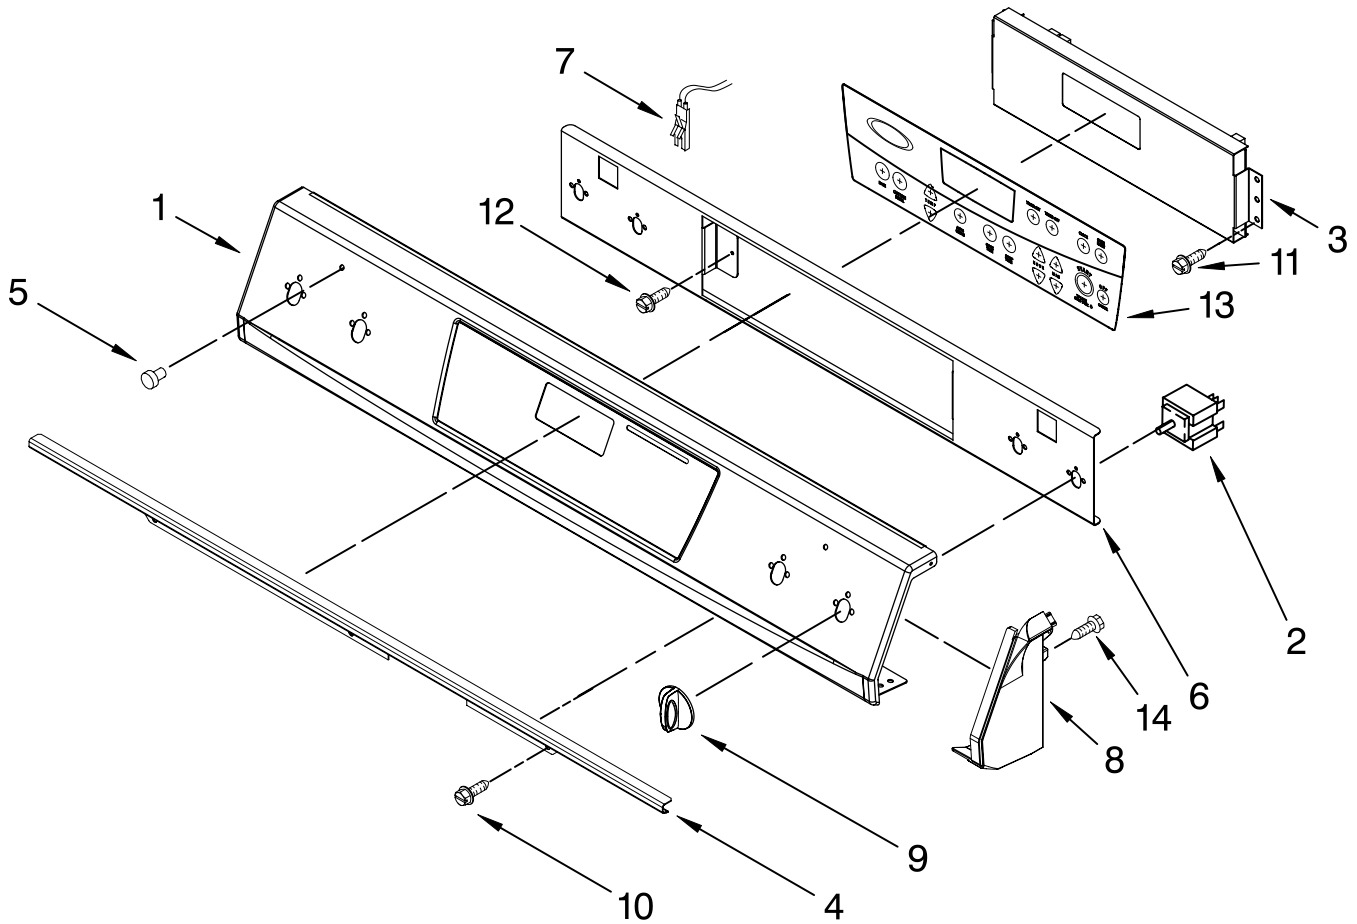


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Control Panel	7	8523265	Housing, Indicator	9		Knob
	W10036010	Black			Light (2)		9756659BL	Black
	W10036000	White	8		Endcap		9756659WH	White
	W10035980	Stainless			Right	10	3196537	Screw
2		Switch, Infinite		9756611BL	Black	11	9780271	Screw
	9750638	LR, RF		9756611WH	White	12	3400855	Screw
	9750639	RR			Left	13	W10078540	Membrane, Switch
	9750641	LF		9756614BL	Black	14	3196172	Screw
3	9757475	Control, Migration		9756614WH	White			
4	9757119	Bracket, Console						
5	3196068	Lens, Indictor (2)						
6	W10036100	Bracket, Oven Control						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: GY398LXPB04, GY398LXPQ04, GY398LXPS04
(Black) (White) (Stainless)

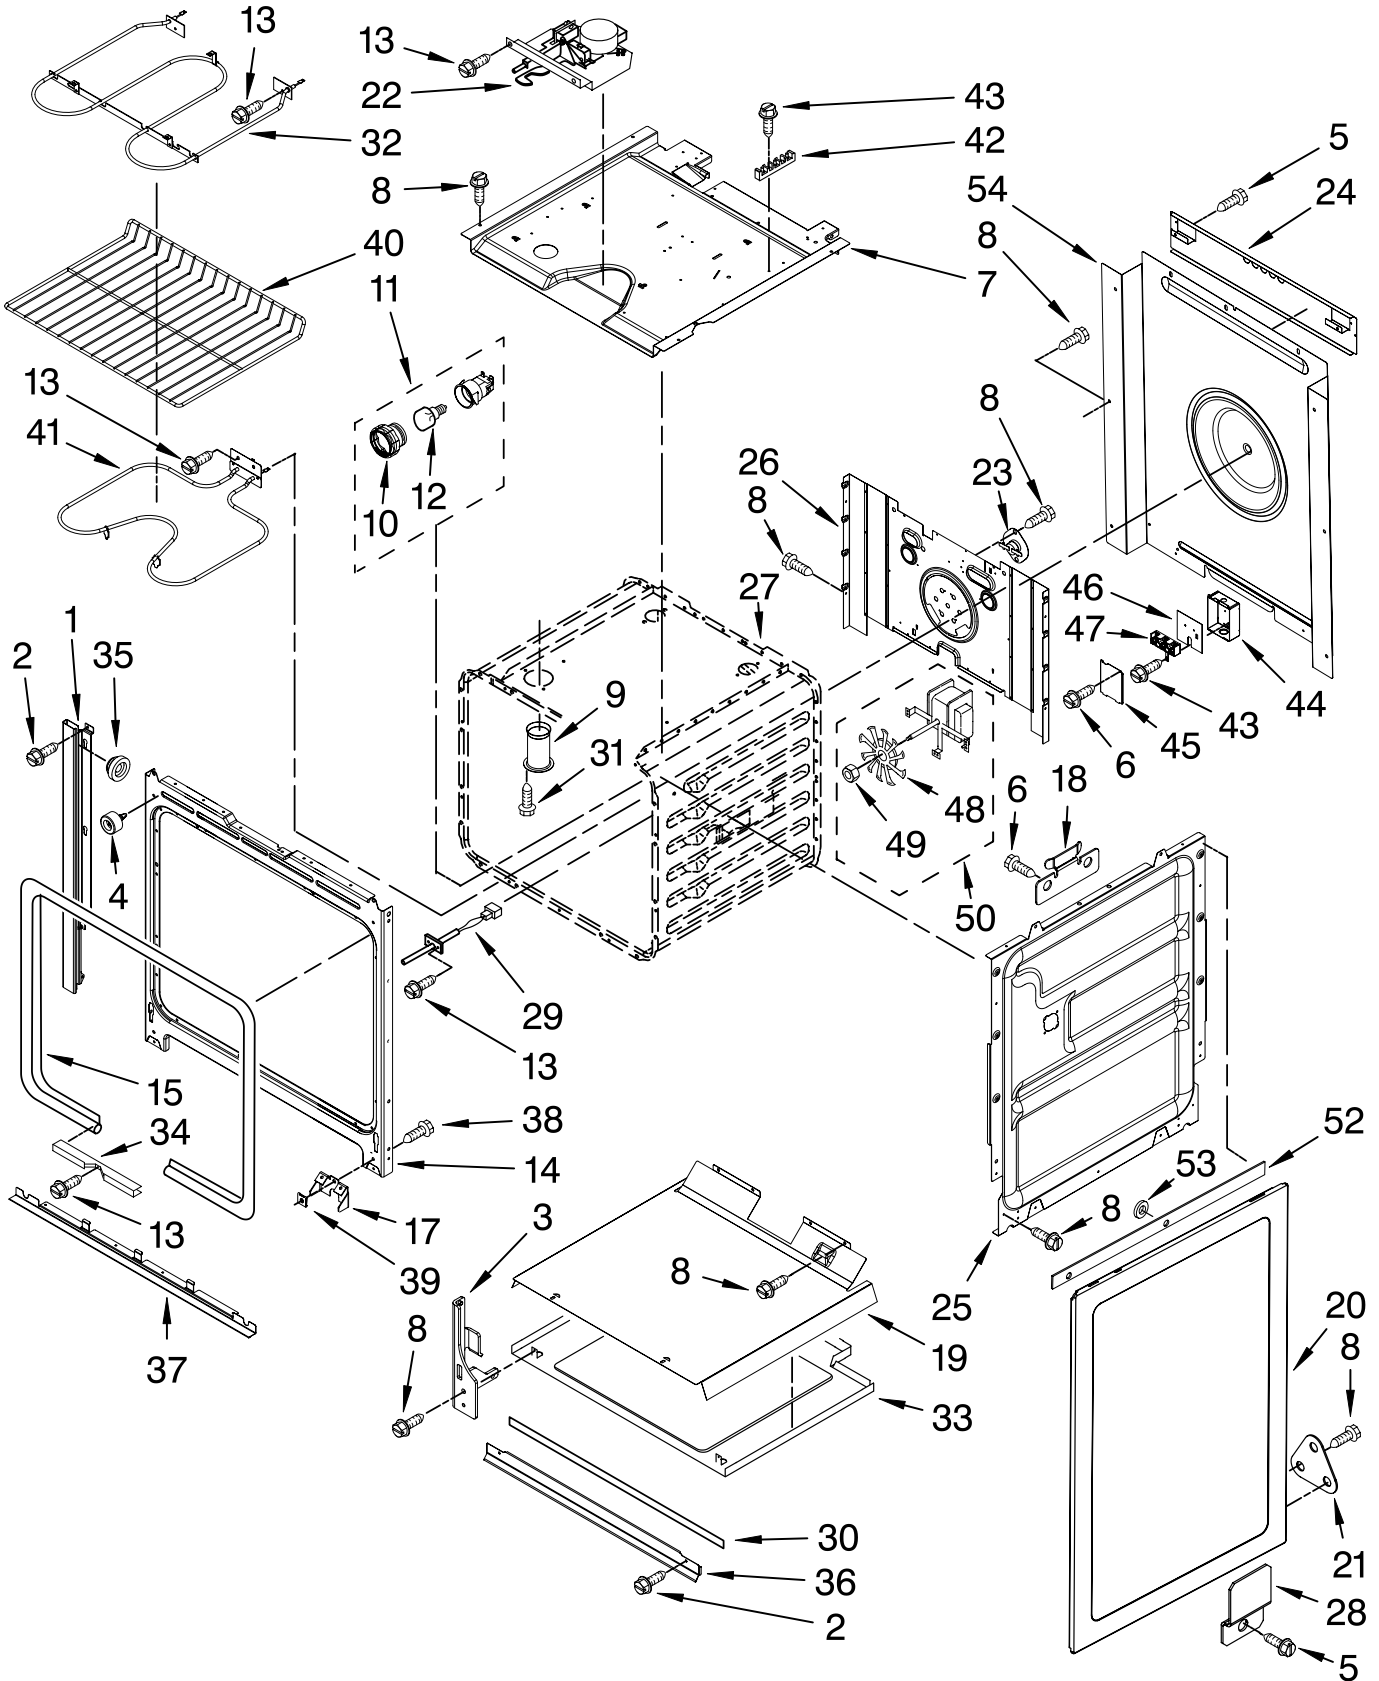

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: GY398LXPB04, GY398LXPQ04, GY398LXPS04
(Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Trim, Side Right	19	4451478	Support, Insulation	38	4449743	Screw
	9757735BL	Black	20		Body, Side	39	4450118	Nut
	9757735WH	White		9760723PB	Black	40	4448717	Rack, Oven
	W10140536	Stainless		9760723PW	White	41	9760766	Element, Convention Bake
		Left	21	9757461	Bracket, Side Panel	42	4449868	Block, Terminal
	9757734BL	Black	22	9760888	Latch, Motorized	43	3400080	Screw
	9757734WH	White	23	9759243	Thermostat	44	9757404	Box, Terminal
	W10140535	Stainless	24	9757811	Brace, Side Panel	45	9757405	Cover, Terminal
2	3400832	Screw (2)	25	4455641	Side, Chassis			Box
3		Hinge Receiver	26	4452234	Back, Chassis	46	9759721	Insulator, Terminal Box
	4455606	Right	27		Liner, Oven (Not Serviceable)	47	9761958	Block, Terminal
	4455605	Left	28	9759890	Clip, Side Panel	48	4452226	Fan Blade
4	W10105790	Bumper, Door (2)	29	4455636	Sensor	49	4452227	Nut
5	3196537	Screw	30	9757717	Insulation	50	4451583	Motor, Convection Fan
6	3196160	Screw	31	3196176	Screw	52	9759722	Insulation, Body Side
7	8303099	Top Chassis	32	9760771	Broil, Element	53	9760481	Washer
8	4449809	Screw	33	9759713	Base, Chassis	54	4451747	Cover, Back
9	4452158	Tube, Vent	34	4448933	Retainer, Gasket			
10	W10067870	Lens, Light (2)	35	4448444	Grommet, Mounting Rail			
11	W10009930	Oven Light, Assembly (2)			Vent, Bottom Upper			
12	4452166	Bulb, Light (2)	36					
13	4449154	Screw		9756481BL	Black			
14	W10130368	Frame, Front		9756481WH	White			
15	W10074200	Gasket, Door		W10140533	Stainless			
17	4452152	Bracket, Mounting	37		Trim, Bottom Vent			
18	9757685	Guide, Side Panel		9756485BL	Black			
				9756485WH	White			
				W10140534	Stainless			


**FOLLOWING PARTS
NOT ILLUSTRATED**

INSULATION

9756817 Insulation, Wrap
9756470 Insulation, Back

DOOR PARTS

For Models: GY398LXPB04, GY398LXPQ04, GY398LXPS04
(Black) (White) (Stainless)

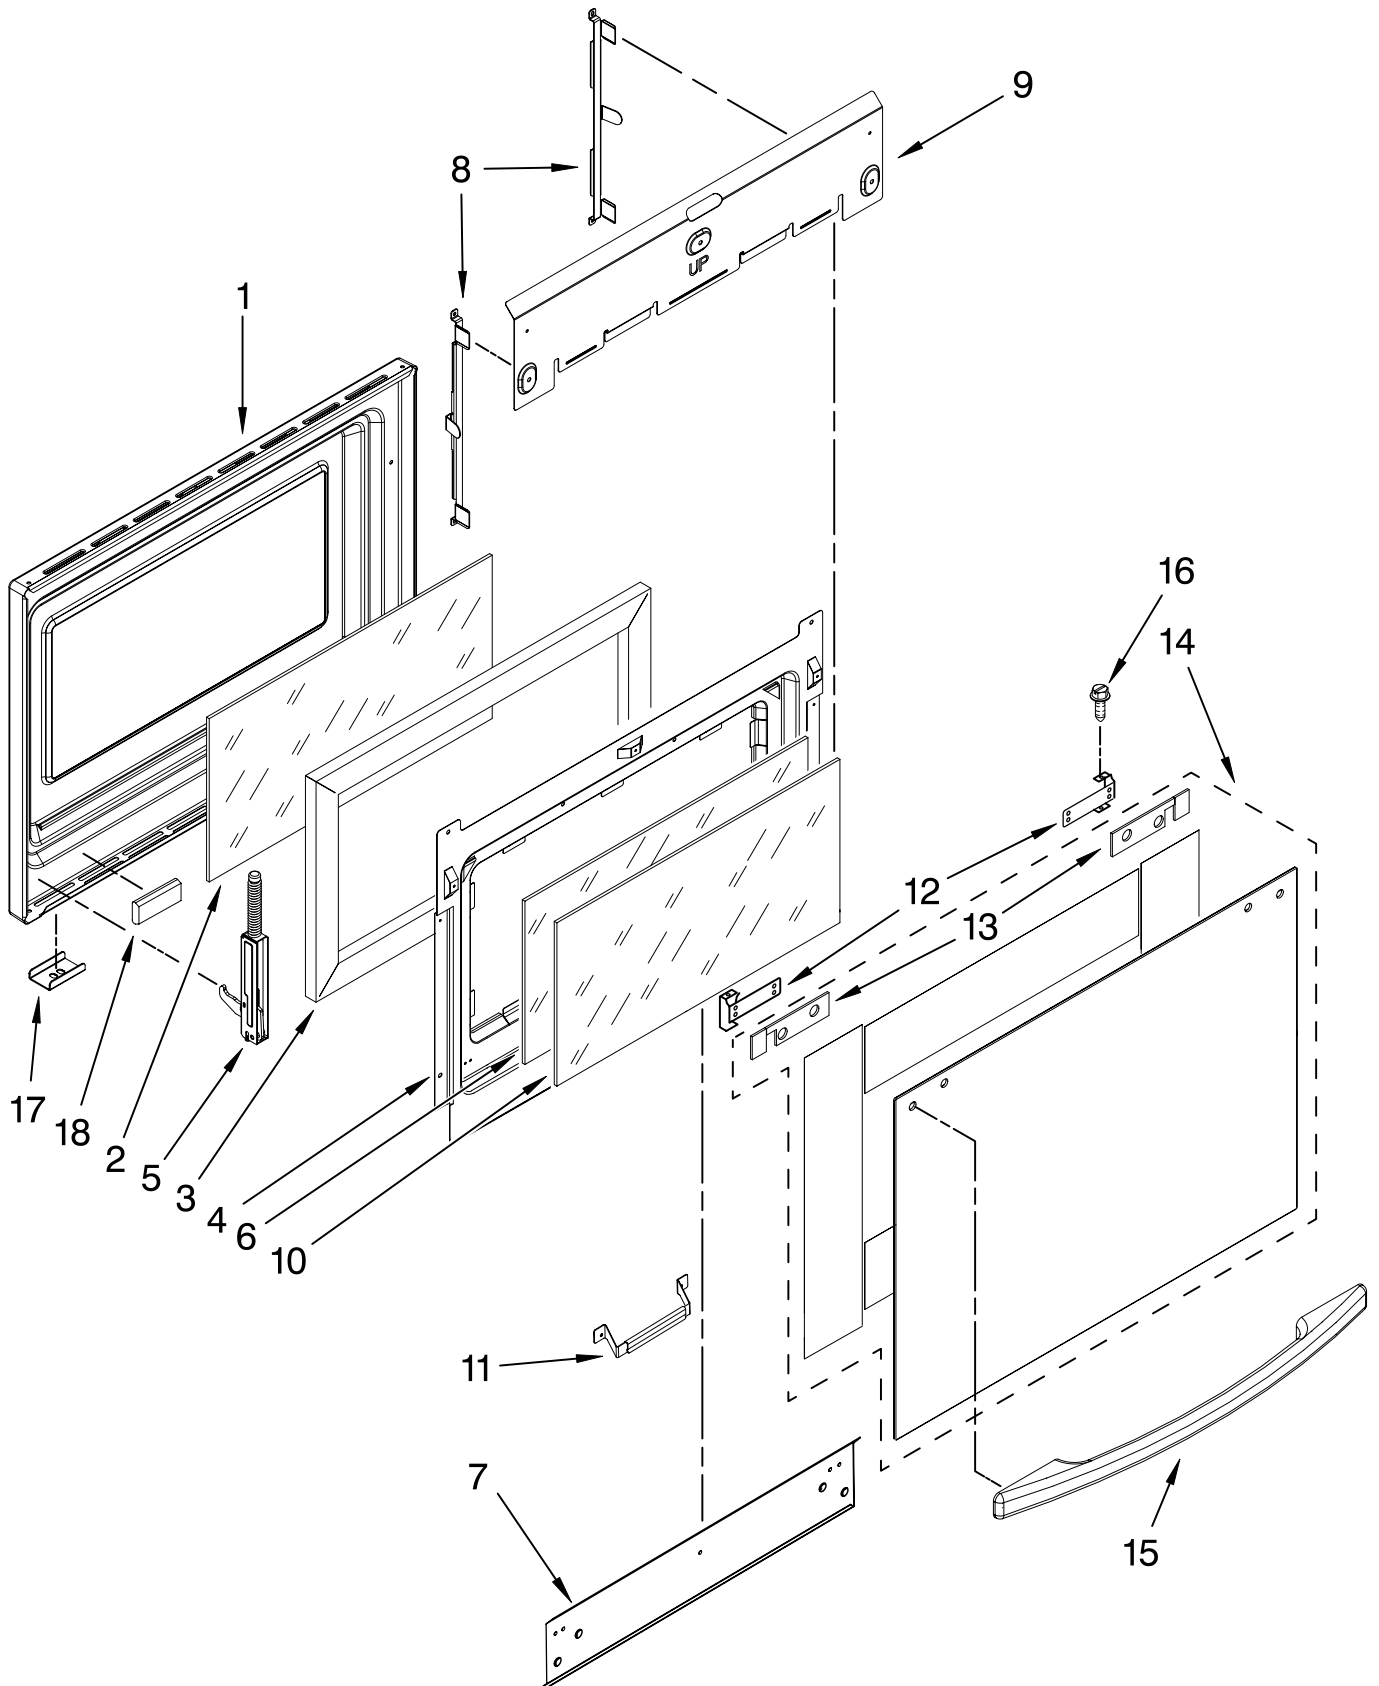

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


DOOR PARTS

For Models: GY398LXPB04, GY398LXPQ04, GY398LXPS04
 (Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9759413	Panel, Door
2	9757706	Glass, Inner
3	4451722	Insulation, Door
4	4457132	Retainer, Glass
5		Hinge, Oven Door Right
	9760571	Black/White
	9760573	Stainless Left
	9760572	Black/White
	9760574	Stainless
6	9759225	Glass, Inner
7	4457114	Shield, Heat Bottom
8	9759229	Bracket, Glass Side
9	4457103	Shield, Heat Top
10	9759225	Glass, Inner Door
11	9759230	Bracket, Central
12		Bracket, Handle
	4450813	Blk/White Stainless Model Only
	9763497	Right
	9763496	Left
13		Pad, Handle Blk/White
	9759638	Right
	9759637	Left Stainless
	9759348	Right
	9759347	Left
14		Assembly, Door Kit
	9759641	Black
	9759639	White
	9759349	Stainless
15		Handle, Door
	4448854	Black
	4448855	White
16	4451040	Screw
17		Retainer, Glass Clip
	4450863	Blk/White
	W10151521	Stainless
18	9759635	Spacer, Door Glass

DRAWER PARTS

For Models: GY398LXPB04, GY398LXPQ04, GY398LXPS04
(Black) (White) (Stainless)

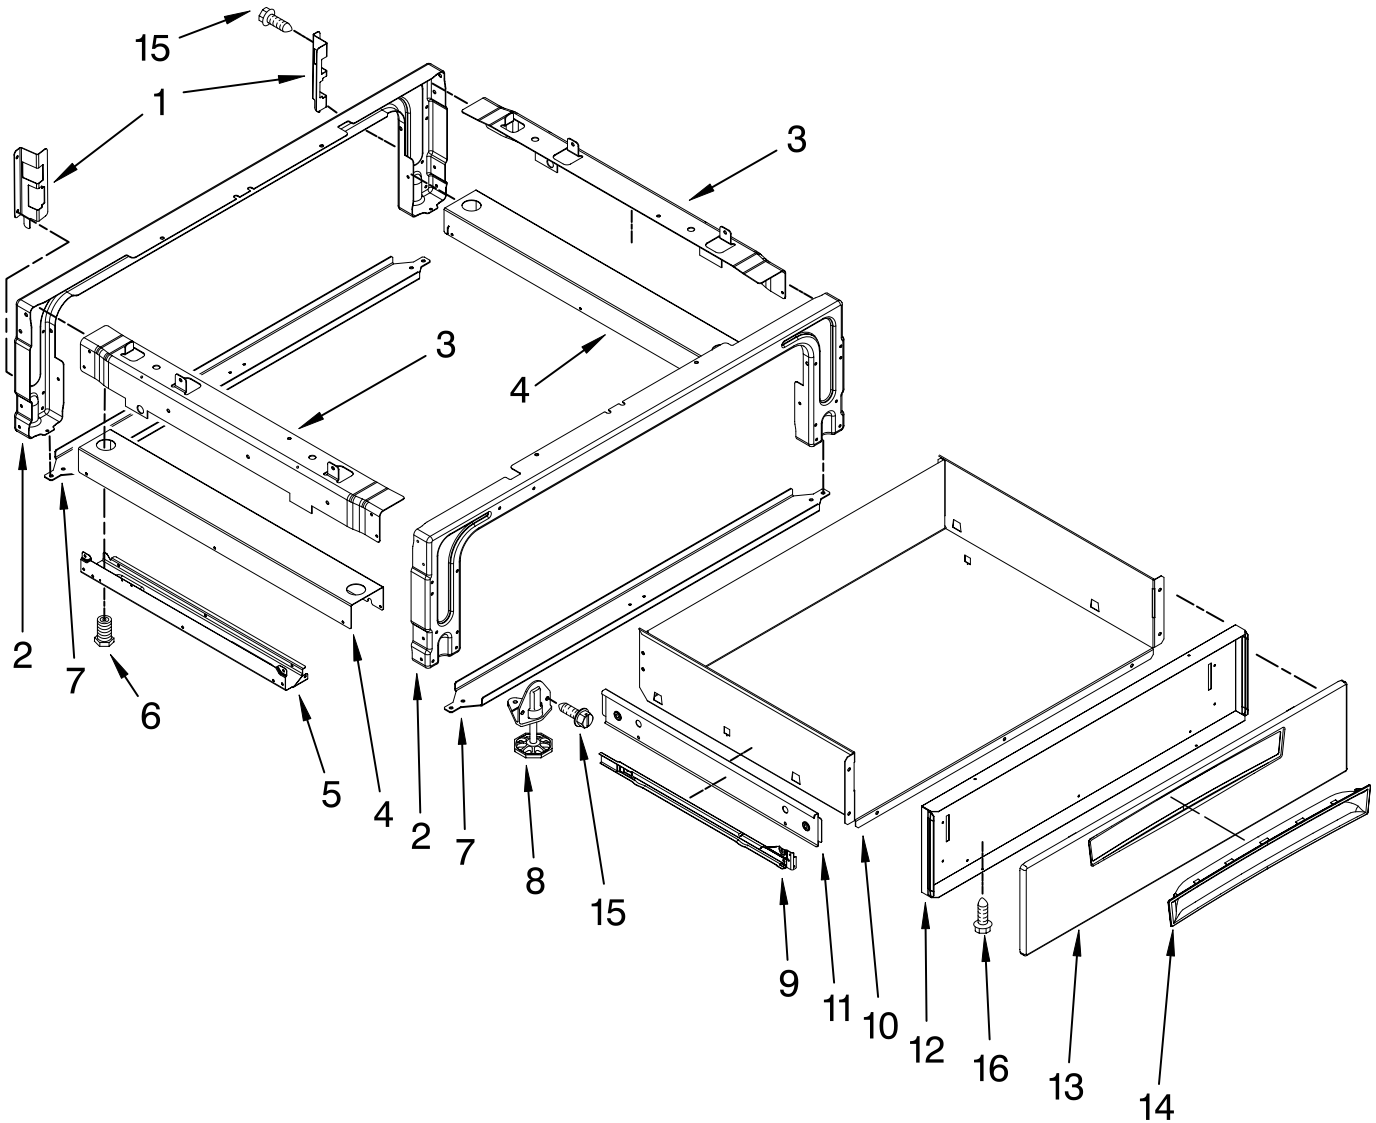

Illus. No.	Part No.	DESCRIPTION
1		Support, Drawer Rail
	9757687	Right
	9757686	Left
2	9763501BL	Support, Front & Rear
3		Brace, Drawer
	4453720	Right
	4453721	Left
4	9759965	Bracket, Base
5		Side, Base
	9759953	Right
	9759954	Left


Illus. No.	Part No.	DESCRIPTION
6	W10058460	Foot
7	9759943	Brace, Front
8	3196037	Foot Assembly
9		Rail, Storage
	9756836	Right
	9756838	Left
10	9757806	Drawer
11		Guide, Roller
		Includes Roller
	9756841	Right
	9756842	Left

Illus. No.	Part No.	DESCRIPTION
12	9760592	Panel, Drawer
13		Front, Drawer
	4453921BL	Black
	4453921WH	White
	W10140531	Stainless
14		Handle, Drawer
	9756674BL	Black
	9756674WH	White
15	3196537	Screw
16	3400805	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: GY398LXPB04, GY398LXPQ04, GY398LXPS04
 (Black) (White) (Stainless)

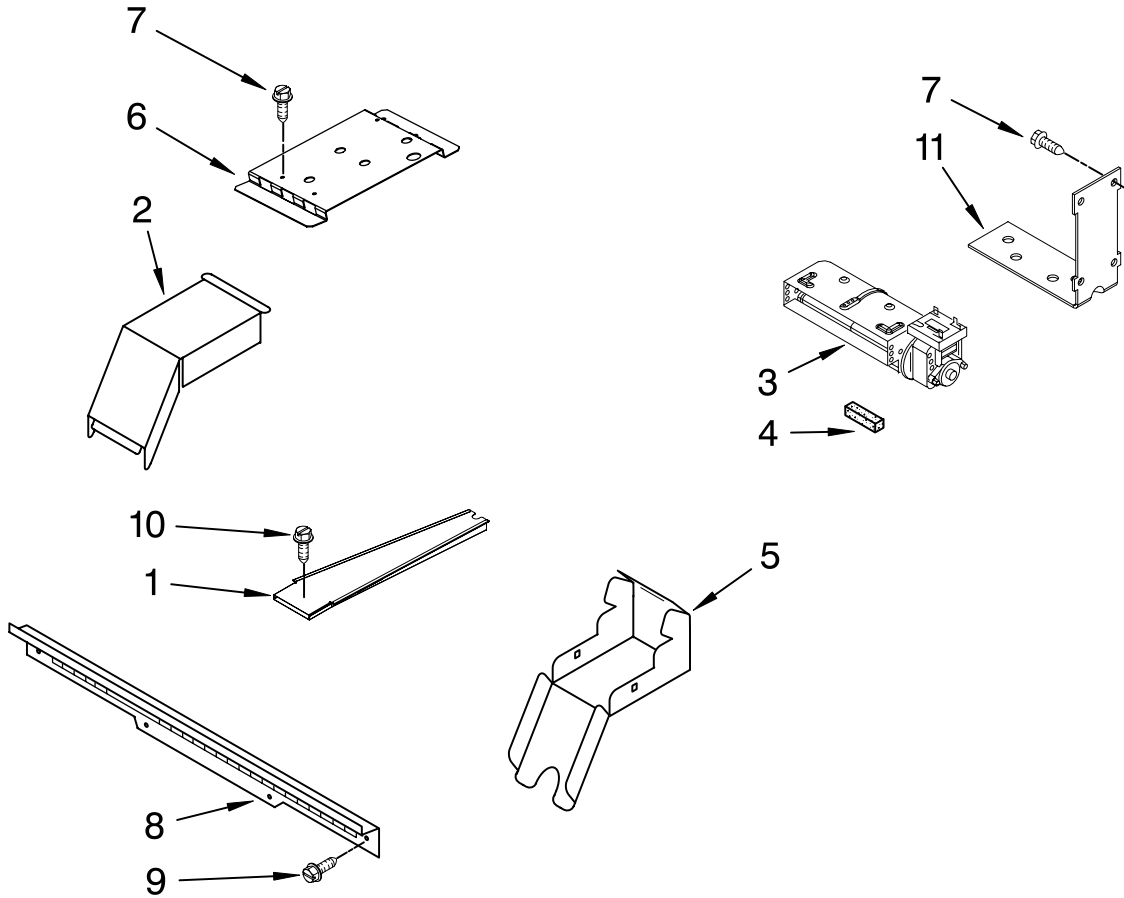

Illus. No.	Part No.	DESCRIPTION
	1	4451759 Vent, Exhaust
	2	4455178 Elbow, Vent Top
	3	9759320 Blower
	4	4451758 Block, Foam
	5	4455177 Elbow, Vent Bottom
	6	9759938 Bracket, Terminal Box
	7	4449809 Screw (2)
	8	9757118BL Vent, Control Panel
	9	4450038 Screw
	10	4449040 Screw
	11	4455352 Bracket, Blower

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: GY398LXPB04, GY398LXPQ04, GY398LXPS04
(Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>			<u>SPLICING WIRES--25FT. LENGTH</u>			<u>WIRING HARNESS PARTS</u>		
	72017	White		242828	Wire (12 Ga. 150 c Black)		9759538	Harness, Main
	261869	Cord Brown		242820	Wire (14 Ga. 150 c Black)		9759702	Harness, Wire (Cooktop Power)
	72032	Black		242821	Wire (14 Ga. 150 c Blue)		9759701	Harness, Wire (Cooktop Left)
<u>PAINT, SPRAY</u>				242822	Wire (14 Ga. 150 c Brown)		9759703	Harness, Wire (Cooktop Right)
	350930	White		242830	Wire (14 Ga. 200 c Brown)		9759715	Conduit
	261900	Citrine White		242823	Wire (14 Ga. 150 c Green)		313660	Clip, Ground Wire
	830864	Black		242824	Wire (14 Ga. 150 c Orange)		4448664	Clamp
<u>ADHESIVE</u>				242829	Wire (12 Ga. 150 c Red)		4449809	Screw
	591014	Adhesive Loctite (1/3 oz.)		242825	Wire (14 Ga. 150 c Red)		112432	Nut
	482338	Sealer, Silastic (3 oz.)		242831	Wire (14 Ga. 200 c Red)		4450800	Screw, Ground
				242826	Wire (14 Ga. 150 c White)		3400015	Screw, Ground
				242827	Wire (14 Ga. 150 c Yellow)		<u>Miscellaneous</u>	
				242832	Wire (14 Ga. 200 c Yellow)		9782676	Anti-Tip Assembly Filler, Counter Top
							9757784BL	Black
							9757784WH	White
							W10140537	Stainless

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST