


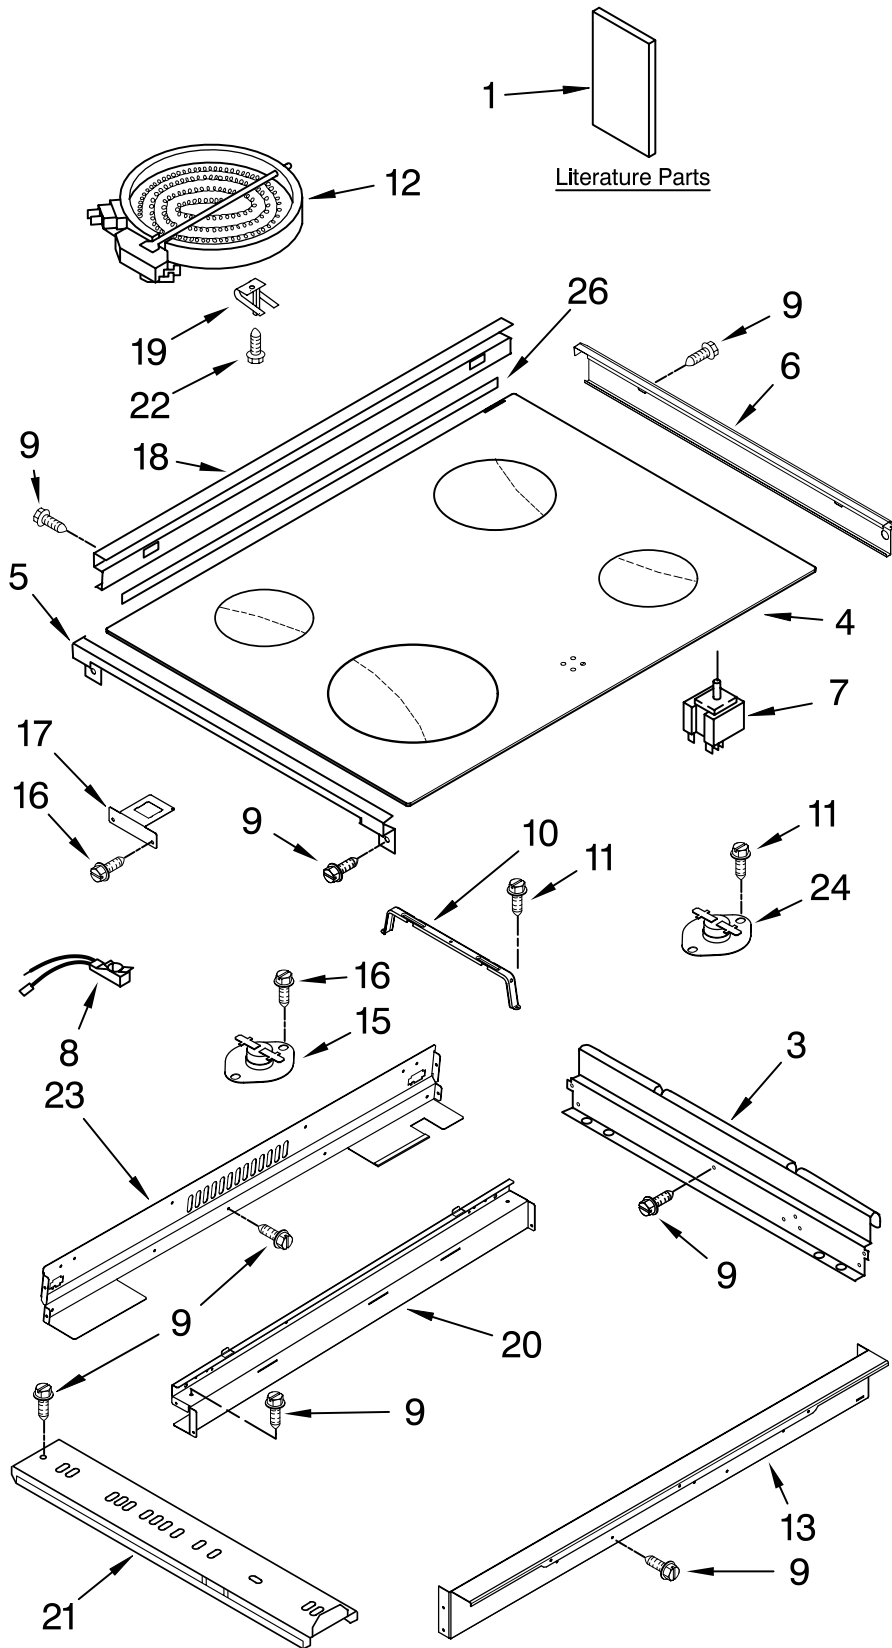

COOKTOP PARTS

For Models: GY398LXPB01, GY398LXPQ01, GY398LXPT01, GY398LXPS01
 (Black) (White) (Biscuit) (S.Steel)

30" Slide-In
 ELECTRIC OVEN
 SELF CLEAN




Illus. No.	Part No.	DESCRIPTION
1	9762035	Literature Parts Installation Instructions
	9762257	Use & Care Guide
	9761389	Tech Sheet
	9757680	Anti-Tip Instruct.
	3191638	Safe Cooking Tips
	9759133	Safe Cooking Tips
3	4454023	Bracket, Mounting Cooktop
4	9756788BT	Biscuit
	9756788WH	White
	9762069BL	Black
5	4453764	Clip, Ceran (2)
6		Trim-CkTop, SI
	9759531WH	White LH
	9759531BT	Biscuit LH
	9759531BL	Black LH
	9759531SS	S.Steel LH
	9759530WH	White RH
	9759530BT	Biscuit RH
	9759530BL	Black RH
	9759530SS	S.Steel RH
7		Switch, Infinite LR, RF
	9750638	LR, RF
	9750639	RR
	9750641	LF
8	8523739	Light, Indicator
9	3196537	Screw
10	9756821	Support, Wiring
11	4449809	Screw
12		Element, Surface
	8523698	1200W LR,RF
	8523696	1800W RR
	8523692	2500W LF
13	9757800	Bracket, Front Support
15	9759944	Thermostat (60c)
16	3196160	Screw (2)
17	9758799	Bracket, Ind. Lamp
18		Trim, Extension
	9760520WH	White
	9760520BT	Biscuit
	9760520BL	Black
	9760520SS	S.Steel
19	9759094	Spring, Locator
20	9759963	Bracket, Rear Sprt
21	8285962	Rail, Element (2)
22	246119	Screw
23	9759628	Cover, Cktp Rear
24	9759243	Thermostat (120c)
26	9756450	Gasket

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: GY398LXPB01, GY398LXPQ01, GY398LXPT01, GY398LXPS01
 (Black) (White) (Biscuit) (S.Steel)

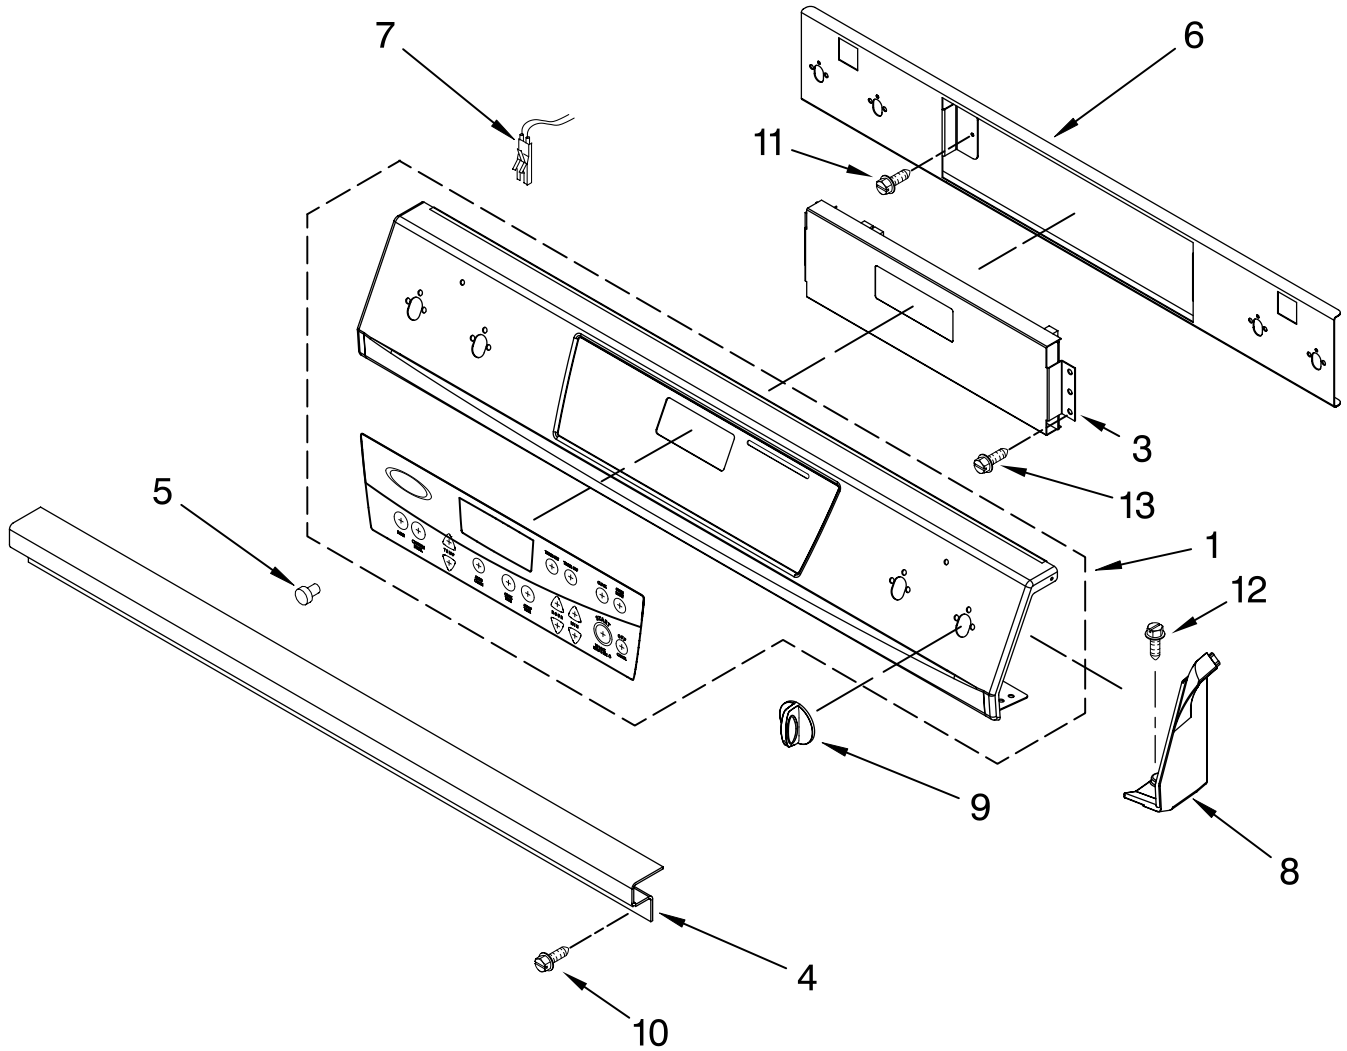

Illus. No.	Part No.	DESCRIPTION
1		Control Panel
	8191149	White
	8191150	Biscuit
	8191151	Black
	8191152	S.Steel
3	9757475	Control, Migration
4	9757119	Bracket, Console
5	3196068	Lens, Ind. (2)


Illus. No.	Part No.	DESCRIPTION
6	9757410	Bracket, Control
7	8523265	Housing, Ind. Lt.
8		Endcap
	9756614BT	Biscuit LH
	9756614WH	White LH
	9756614BL	Black LH
	9756611BT	Biscuit RH
	9756611WH	White RH
	9756611BL	Black RH

Illus. No.	Part No.	DESCRIPTION
9		Knob
	9756659BL	Black
	9756659WH	White
	9756659BT	Biscuit
10	3196537	Screw
11	311865	Screw
12	3196172	Screw
13	9780271	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: GY398LXPB01, GY398LXPQ01, GY398LXPT01, GY398LXPS01
(Black) (White) (Biscuit) (S.Steel)

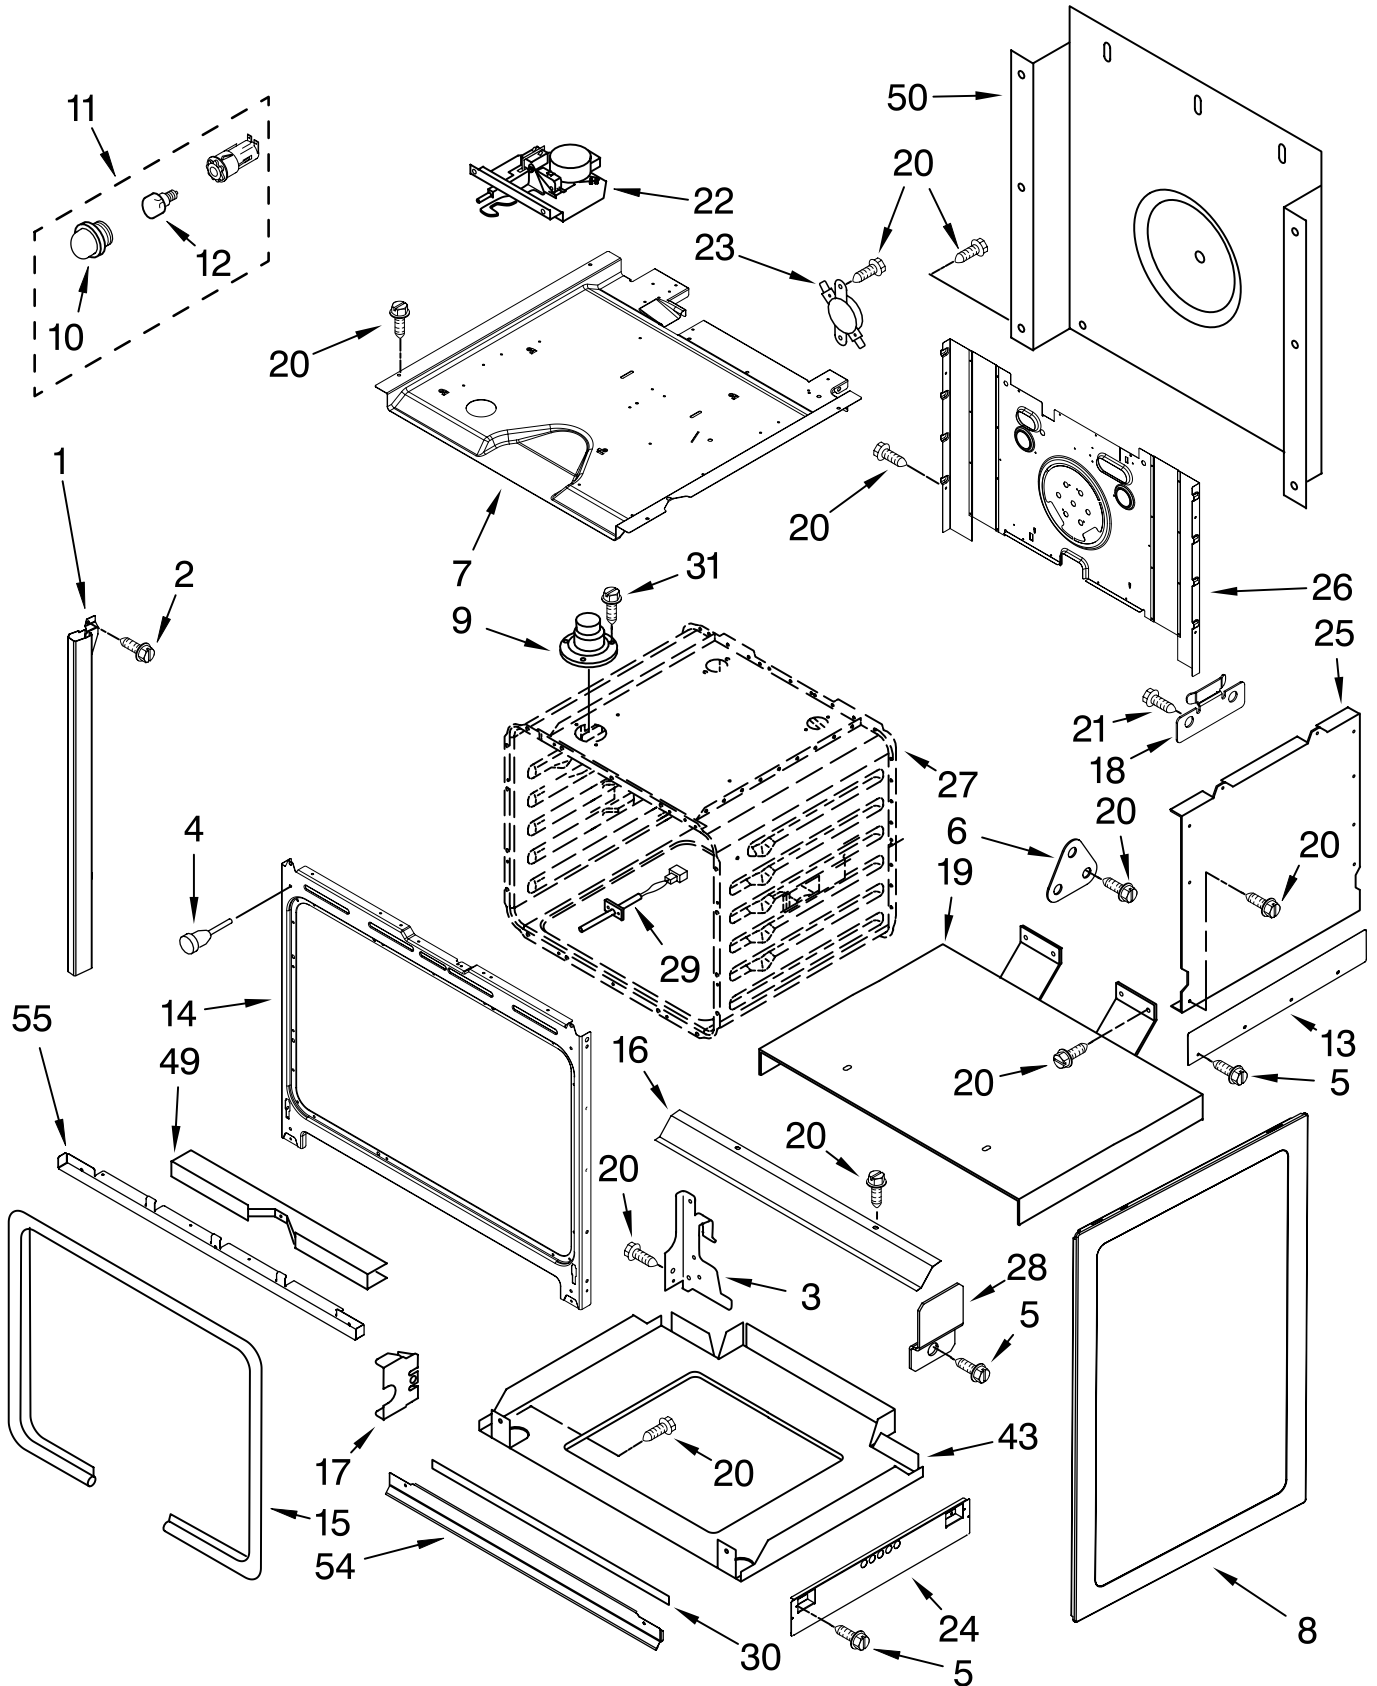

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: GY398LXPB01, GY398LXPQ01, GY398LXPT01, GY398LXPS01

(Black)

(White)

(Biscuit)


(S.Steel)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Trim, Side (Right Hand)	12	4452166	Bulb, Light	31	3196176	Screw
	9757735WH	White	13	9757732	Shield, Heat	43	9759713	Base, Chassis
	9757735BT	Biscuit	14	9759060	Frame, Front	49	4448933	Retainer, Gasket
	9757735BL	Black	15	4455382	Gasket, Door	50	4451747	Cover, Back
	9757735SS	S.Steel (Left Hand)	16	4453951	Deflector, Vent Bottom	54		Vent, Bottom Upper
	9757734WH	White	17	4452152	Bracket, Mounting		9756481WH	White
	9757734BT	Biscuit	18	9757685	Guide, Side Panel		9756481BT	Biscuit
	9757734BL	Black	19	4451478	Support, Insulation		9756481BL	Black
	9757734SS	S.Steel	20	4449809	Screw		9756481SS	S.Steel
2	3400832	Screw	21	3196160	Screw	55		Trim, Btm Vent
3		Hinge Receiver	22	9760888	Latch, Motorized		9756485WH	White
	4455605	Left Hand	23	341196	Thermostat SPST (205)		9756485BT	Biscuit
	4455606	Right Hand	24	9757811	Brace, Side Panel		9756485BL	Black
4	4448520	Bumper, Door	25	4455641	Side, Chassis (R.H. & L.H.)		9756485SS	S.Steel
5	3196537	Screw	26	4452234	Back, Chassis	FOLLOWING PARTS NOT ILLUSTRATED		
6	9757461	Bracket, Side Panel	27		Liner, Oven (Not serviceable)	INSULATION		
7	8303099	Top Chassis	28	9759890	Clip, Side Panel		9756817	Insulation, Wrap
8		Oven, Side Panel	29	4455636	Sensor		9756470	Insulation, Back
	9760723PB	Black	30	9757717	Insulation			
	9760723PW	White						
	9760723PC	Biscuit						
9	4452158	Tube, Vent						
10	4452165	Lens, Light						
11	4452368	Oven Light Assy						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models: GY398LXPB01, GY398LXPQ01, GY398LXPT01, GY398LXPS01
(Black) (White) (Biscuit) (S.Steel)

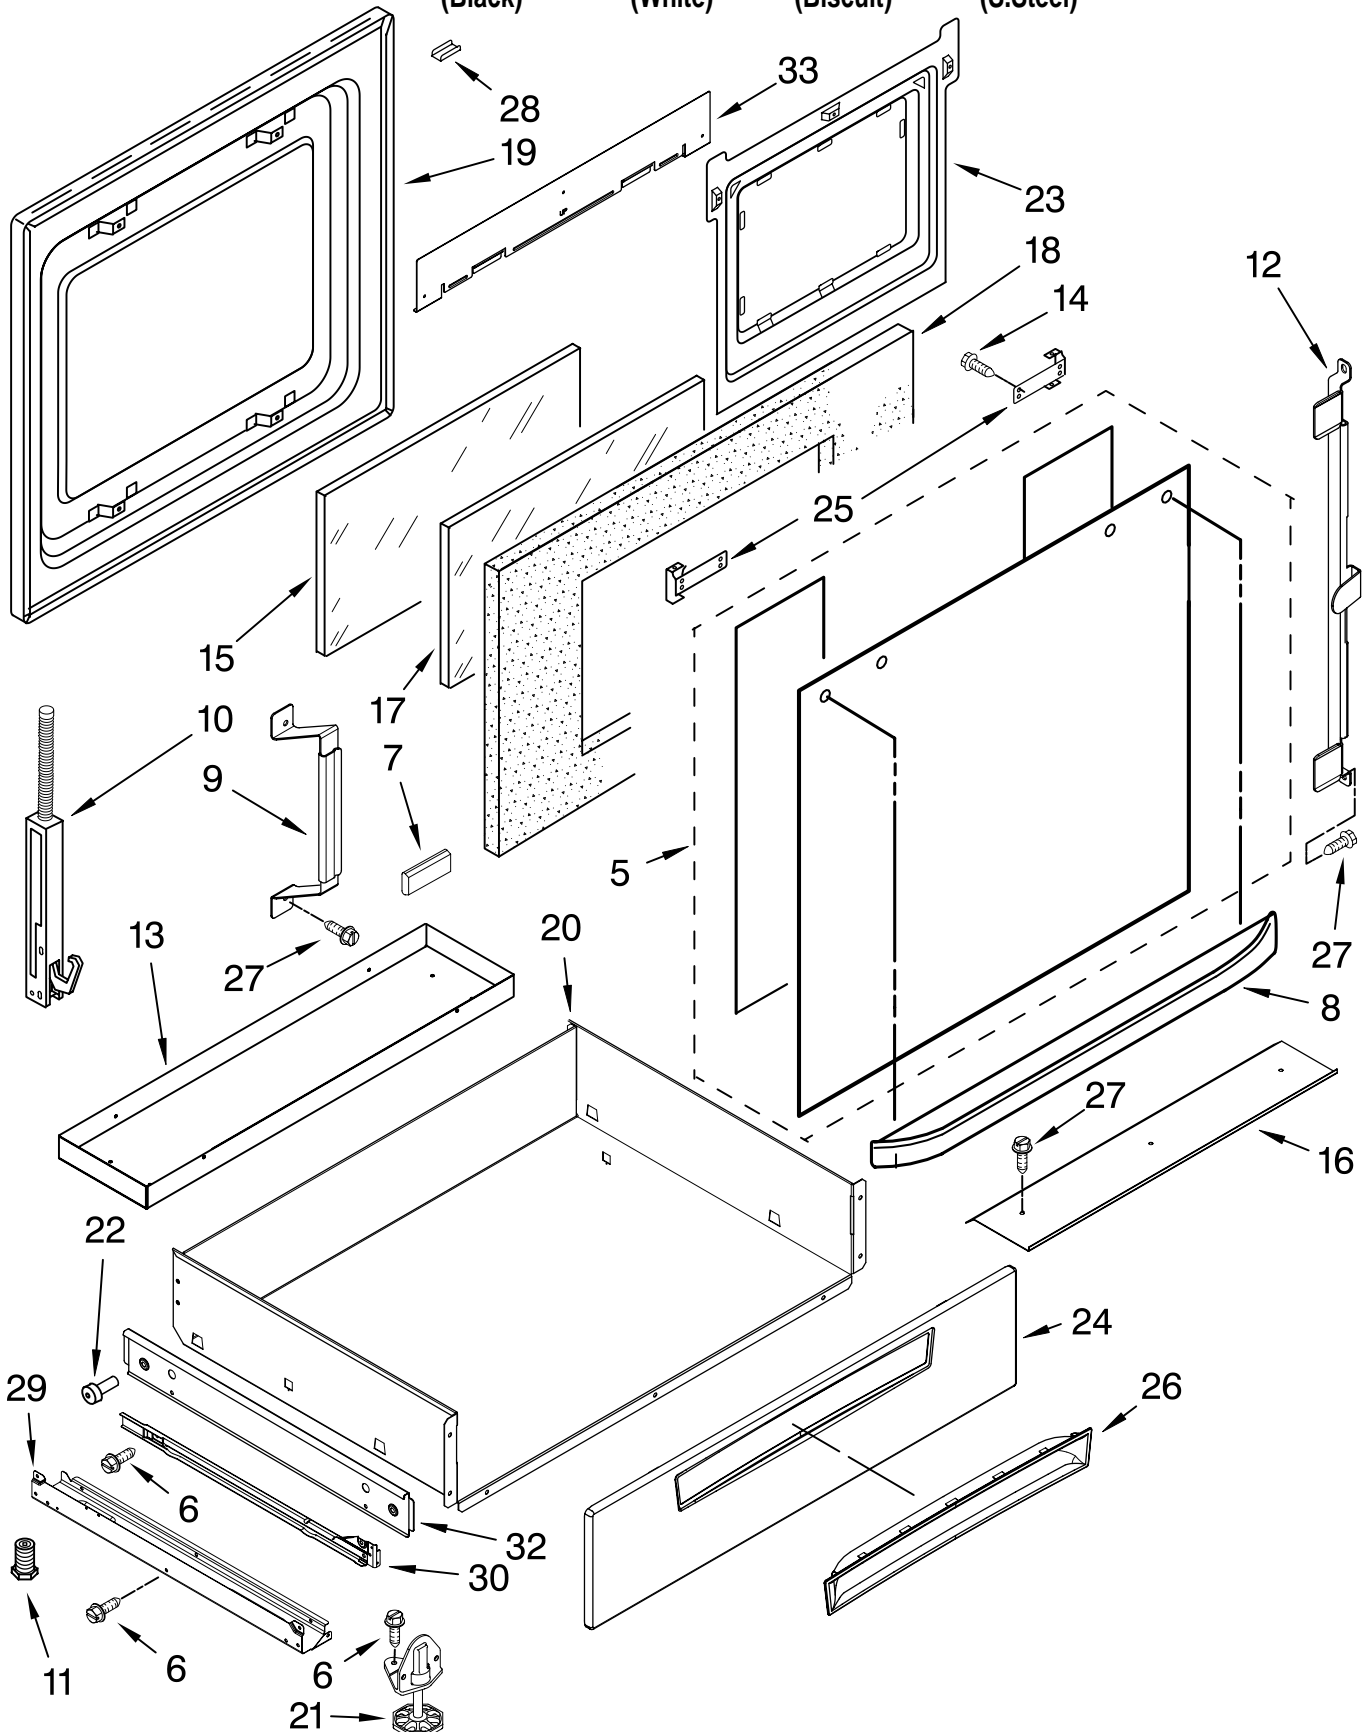

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS


For Models: GY398LXPB01, GY398LXPQ01, GY398LXPT01, GY398LXPS01
 (Black) (White) (Biscuit) (S.Steel)

Illus. No.	Part No.	DESCRIPTION
5	9759641	Glass, Door Front Black
	9759639	White
	9759640	Biscuit
	9759642	S.Steel
6	3196537	Screw
7	9759635	Spacer, Glass
8		Handle, Door
	4448854	Black
	4448855	White
	4448856	Biscuit
9	8302094	Bracket, Central
10		Hinge, Door
	9760571	White RH
	9760572	White LH
11	9761935	Foot, Rear
12	8302092	Bracket, Side
13	9760592	Panel, Drawer
14	4451040	Screw
15	9757706	Glass, Inner
16	4457114	Shield, Heat Btm
17	4449263	Glass, Inner (2)
18	4451722	Insulation, Door
19	9759413	Liner, Door
20	9757806	Drawer & Roller
21	3196037	Foot, Front
22	422604	Roller, Drawer
23	4457132	Retainer, Glass
24		Front, Drawer
	4453921WH	White
	4453921BL	Black
	4453921BT	Biscuit
	4453921SS	S.Steel
25	4450813	Bracket, Handle
26		Handle, Drawer
	9756674WH	White
	9756674BT	Biscuit
	9756674BL	Black
27	4449809	Screw
28	4450863	Retainer, Clip
29		Side, Base
	9759954	L.Side
	9759953	R.Side
30		Track, Drawer
	9756839	L.Side
	9756837	R.Side
32	9756673	Guide, Roller
33	9757707	Shield, Heat Top

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: GY398LXPB01, GY398LXPQ01, GY398LXPT01, GY398LXPS01
 (Black) (White) (Biscuit) (S.Steel)

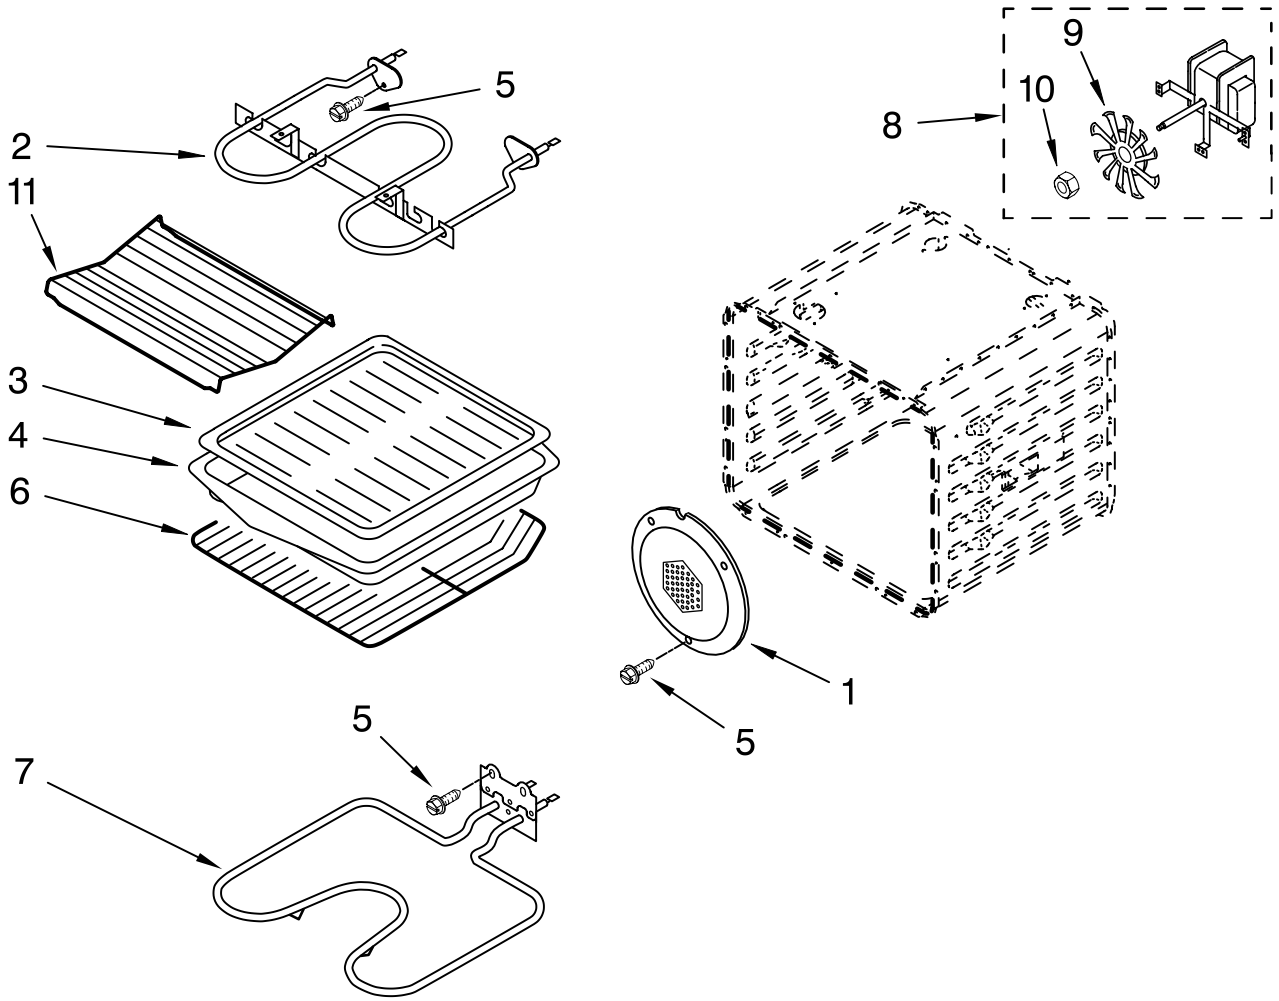


Illus. No.	Part No.	DESCRIPTION
1	4448988	Cover, Fan
2	4456103	Element, Broil
3	4457277	Grill, Broiler
4	4457276	Pan, Broiler
5	4449154	Screw
6	4448717	Rack, Oven
7	4452153	Element, Bake
8	4451583	Motor, Convection
9	4452226	Blade, Fan
10	4452227	Nut
11	3181534	Rack, Roasting

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: GY398LXPB01, GY398LXPQ01, GY398LXPT01, GY398LXPS01
 (Black) (White) (Biscuit) (S.Steel)

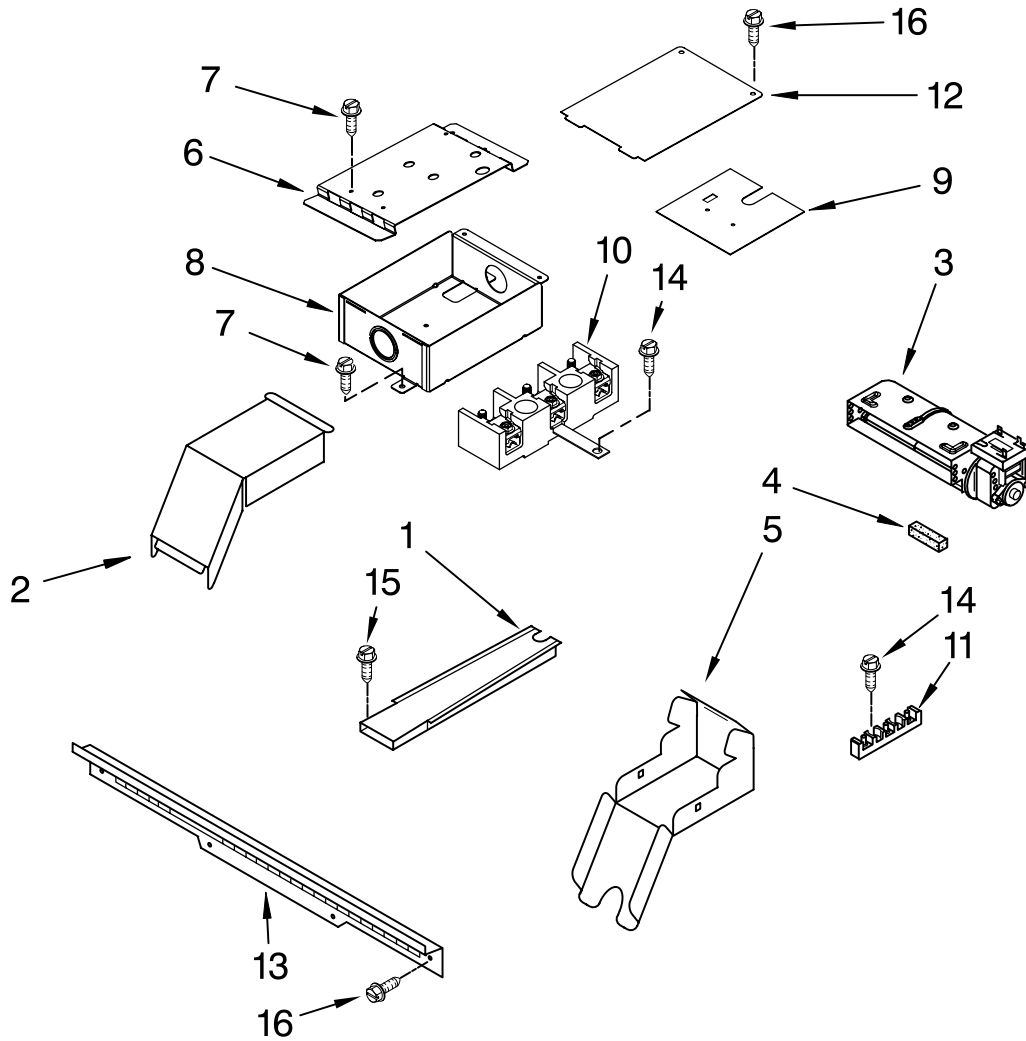

Illus. No.	Part No.	DESCRIPTION
1	4451759	Vent, Exhaust
2	4455178	Elbow, Vent Top
3	9759320	Blower
4	4451758	Block, Foam
5	4455177	Elbow, Vent Bottom

Illus. No.	Part No.	DESCRIPTION
6	9759938	Bracket, Term.Box
7	4449809	Screw (2)
8	9757404	Box, Terminal
9	9759721	Insulator, Term Box
10	9761958	Block, Terminal
11	4449868	Block, Terminal

Illus. No.	Part No.	DESCRIPTION
12	9757405	Cover, Term Box
13	9757118BL	Vent, (Control Panel)
14	3400080	Screw
15	4449040	Screw
16	3196160	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: GY398LXPB01, GY398LXPQ01, GY398LXPT01, GY398LXPS01
 (Black) (White) (Biscuit) (S.Steel)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>			<u>SPLICING WIRES--25FT.</u>			<u>WIRING HARNESS PARTS</u>		
	72017	White			<u>LENGTH</u>		9759538	Harness, Wire (Main)
	261869	Cord Brown		242828	Wire (12 Ga. 150 c Black)		9759702	Harness, Wire (Cooktop Power)
	72032	Black		242820	Wire (14 Ga. 150 c Black)		9759701	Harness, Wire (Cooktop Left)
<u>PAINT, SPRAY</u>				242821	Wire (14 Ga. 150 c Blue)		9759703	Harness, Wire (Cooktop Right)
	350930	White		242822	Wire (14 Ga. 150 c Brown)		9759715	Conduit
	261900	Citrine White		242830	Wire (14 Ga. 200 c Brown)		3196173	Screw (Conduit)
	830864	Black		242823	Wire (14 Ga. 150 c Green)		313660	Clip, Ground Wire
<u>ADHESIVE</u>				242824	Wire (14 Ga. 150 c Orange)		4448664	Clamp
	591014	Adhesive Loctite (1/3 oz.)		242829	Wire (12 Ga. 150 c Red)		4449809	Screw
	482338	Sealer, Silastic (3 oz.)		242825	Wire (14 Ga. 150 c Red)		112432	Nut
				242831	Wire (14 Ga. 200 c Red)		4450800	Screw, Ground
				242826	Wire (14 Ga. 150 c White)		4452222	Spacer, Harness
				242827	Wire (14 Ga. 150 c Yellow)		3400015	Screw, Ground
				242832	Wire (14 Ga. 200 c Yellow)		<u>Miscellaneous</u>	
							814381	Hinge Pin Kit
							4448950	Screw, Install (4)
							9782676	Anit-Tip Assy Filler,Counter Top
							9757784WH	White
							9757784BL	Black
							9757784BT	Biscuit
							9757784SS	S.Steel

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST