




# COOKTOP PARTS

For Models: RCS3004RS03  
(Stainless)

30" ELECTRIC  
BUILT-IN  
COOKTOP

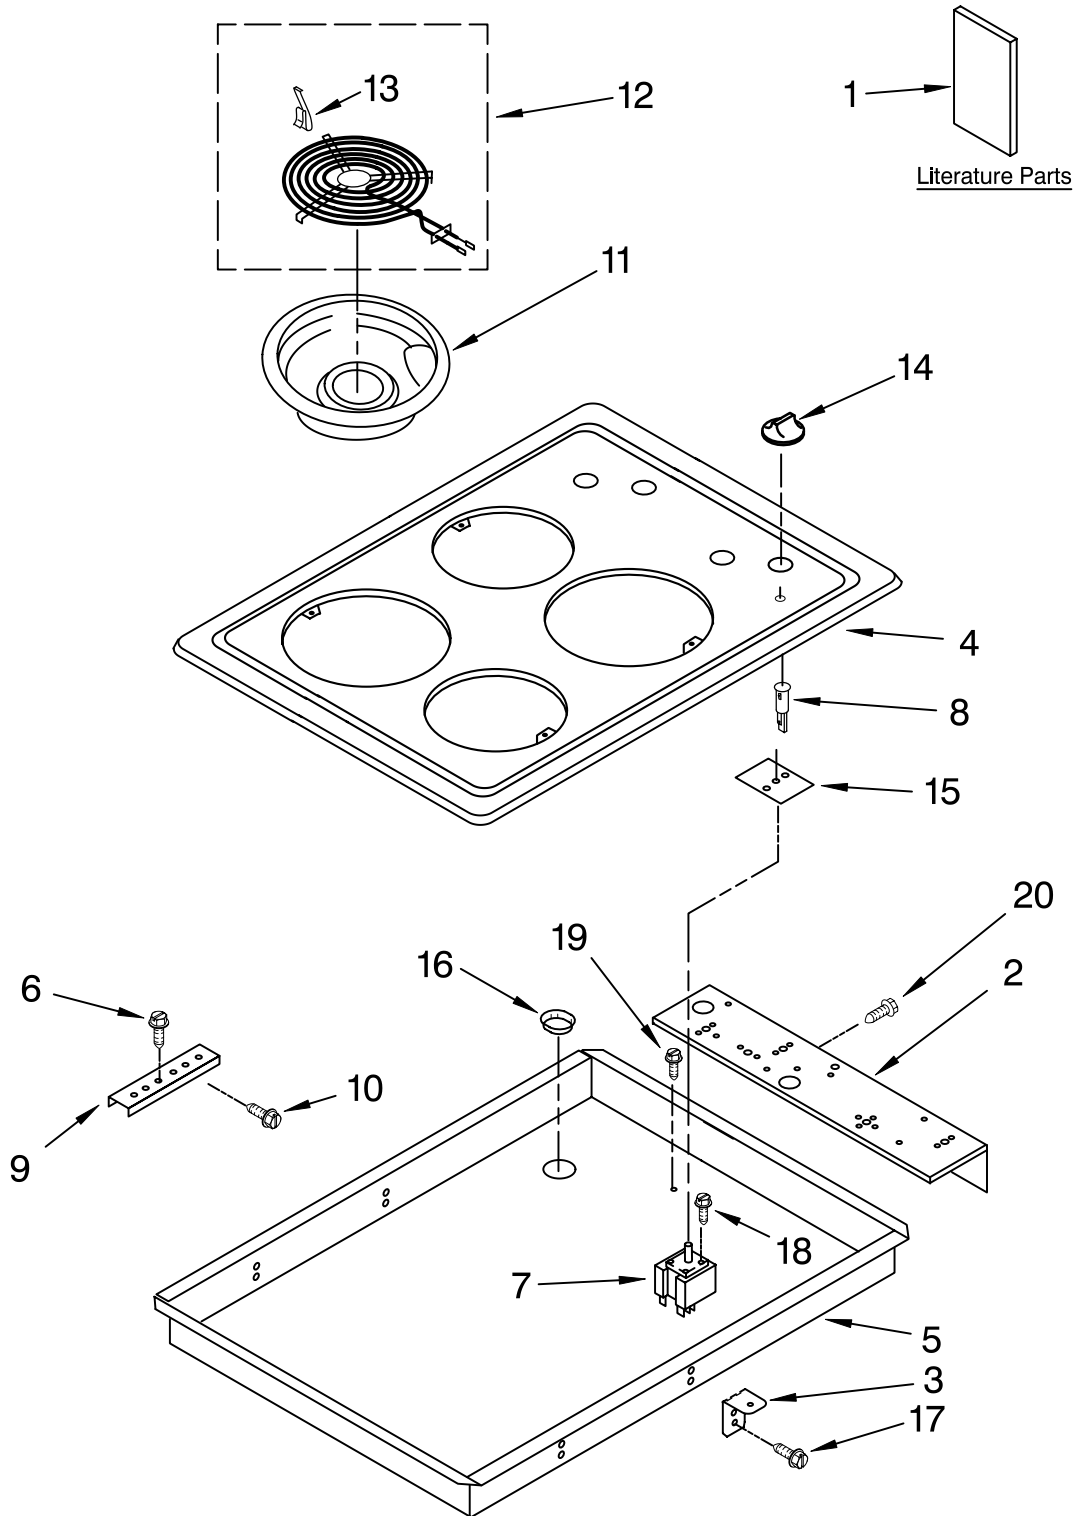

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# COOKTOP PARTS

For Models: RCS3004RS03  
(Stainless)

<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
1	8286310	Literature Parts Installation Instructions
	W10162164	Use & Care Guide Safer Cooking Tips
	9762761	English
	W10065852	French
2	8286401	Bracket, Switch Mounting
3	3192454	Bracket, Mounting
4	W10140171	Cooktop
5	8286373	Burner Box
6	3400093	Screw
7		Switch, Infinite
	3191472	Use W/8" Element (Silver Shaft)
	3191471	Use W/6" Element (Blue Shaft)
8	4456181	Light, Indicator
9	4455917	Bracket, Mounting
10	3400093	Screw
11		Pan, Surface
	W10196406	6" Pan (2)
	W10196405	8" Pan (2)
12		Unit, Surface
	8053265	6" (2)
	8053267	8" (2)
13	3195917	Clip, Element
14	8286043BL	Knob, Control (4)
15	3183956	Seal, Switch
16	3191506	Bushing, Conduit
17	3196537	Screw
18	3400855	Screw
19	3400015	Screw
20	3177991	Screw

## **WIRING HARNESS PARTS**

8286368	Harness, Main
4455805	Grommet
8286375	Conduit Assembly
3196160	Screw