




COOKTOP PARTS

For Models: RCS3014RB01, RCS3014RQ01, RCS3014RS01, RCS3014RT01
(Black) (Designer White) (Stainless Steel) (Biscuit)

ELECTRIC
BUILT-IN
COOKTOP

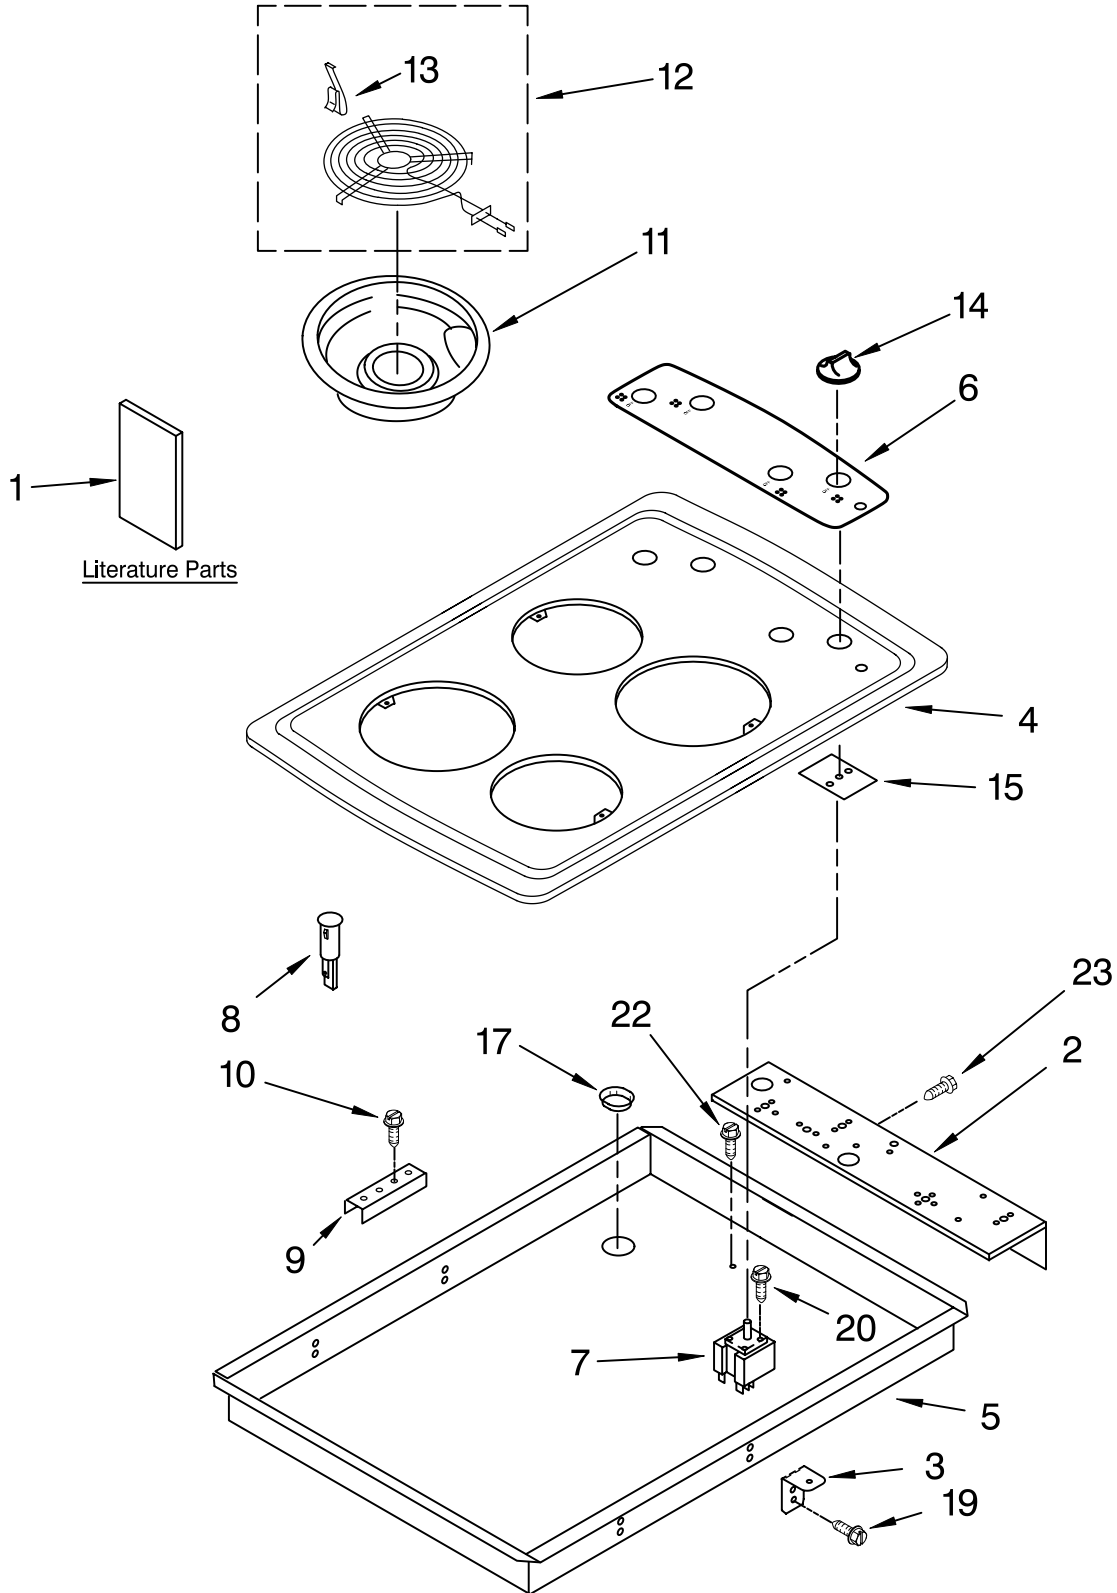

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Models: RCS3014RB01,RCS3014RQ01,RCS3014RS01,RCS3014RT01
(Black) (Designer White) (Stainless Steel) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		LITERATURE PARTS
	8286310	Installation Instructions
	8286613	Use & Care Guide
	3191638	Safer Cooking Tips
	9759133	Safer Cooking Tips
2	8286401	Bracket, Switch Mounting
3	3192454	Bracket, Mounting
4		Cooktop
	8286392WH	Designer White
	8286390LM	Stainless Steel
	8286392BL	Black
	8286392BT	Biscuit
5	8286373	Burner Box
6		Panel, Control
	8286499	Black
	8286500	White
	8286501	Biscuit
7		Switch, Infinite
	3191472	Use W/8" Element (Silver Shaft)
	3191471	Use W/6" Element (Blue Shaft)
8	4456181	Light, Indicator
9	4455917	Bracket, Mounting
10	3400093	Screw
11		Pan, Surface
	3195208	6" Pan (2)
	3195209	8" Pan (2)
12		Unit, Surface
	8053266	6" (2) 240V
	3191454	8" (2) 240V
13	3195917	Clip, Element
14		Knob, Control (4)
	8286043BL	Black
	8286043WH	White
	8286043BT	Biscuit
15	3183956	Seal, Switch
17	3191506	Bushing, Conduit
19	3196537	Screw, 8-18 x 3/8
20	3400855	Screw, 8-32 x 1/4
22	3400015	Screw, 10-32 x 3/8
23	3177991	Screw, 8-18 x 1/4

WIRING HARNESS PARTS

WIRING HARNESS PARTS	
8286368	Harness, Wire (Main)
4454384	Wire, Ground
8286375	Conduit Assembly