




# COOKTOP PARTS

For Models: RF212PXSQ2  
(Designer White)

30" ELECTRIC FREESTANDING  
STANDARD CLEAN RANGE

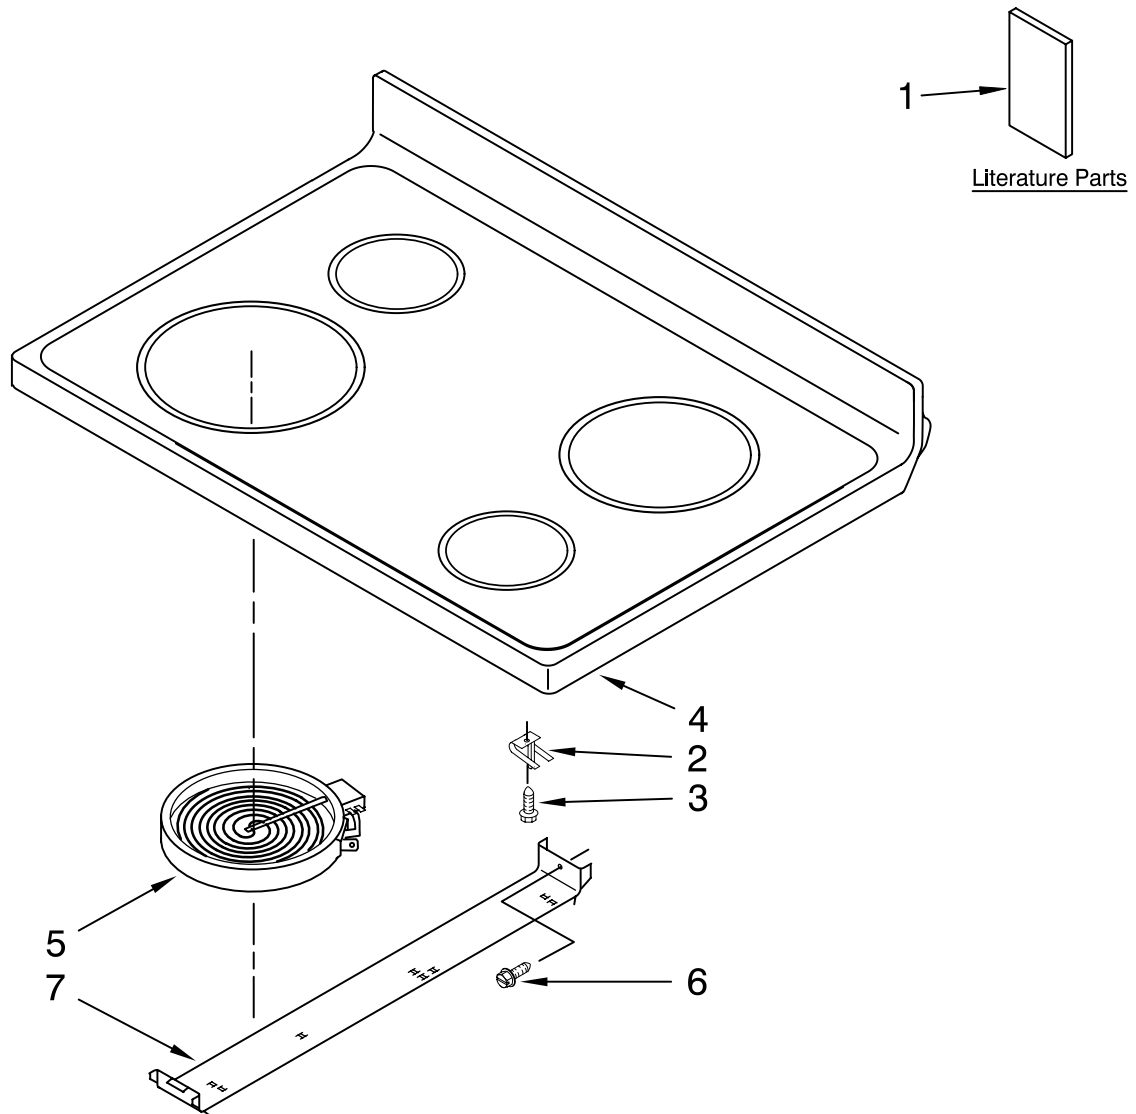

Illus. No.	Part No.	DESCRIPTION
1	9762996	Literature Instructions Installations Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	9763001	Owners Manual
	W10133888	Tech Sheet
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2	W10035930	Spring, Locator
3	3196170	Screw
4	9763321	Cooktop White/White

Illus. No.	Part No.	DESCRIPTION
5		Element, Surface
	8523695	2000 W - LF
	8523697	1500 W - LR
	8523695	2000 W - RR
	8523697	1500 W - RF
6	3196169	Screw
7	3196454	Bracket, Element

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: RF212PXSQ2  
(Designer White)

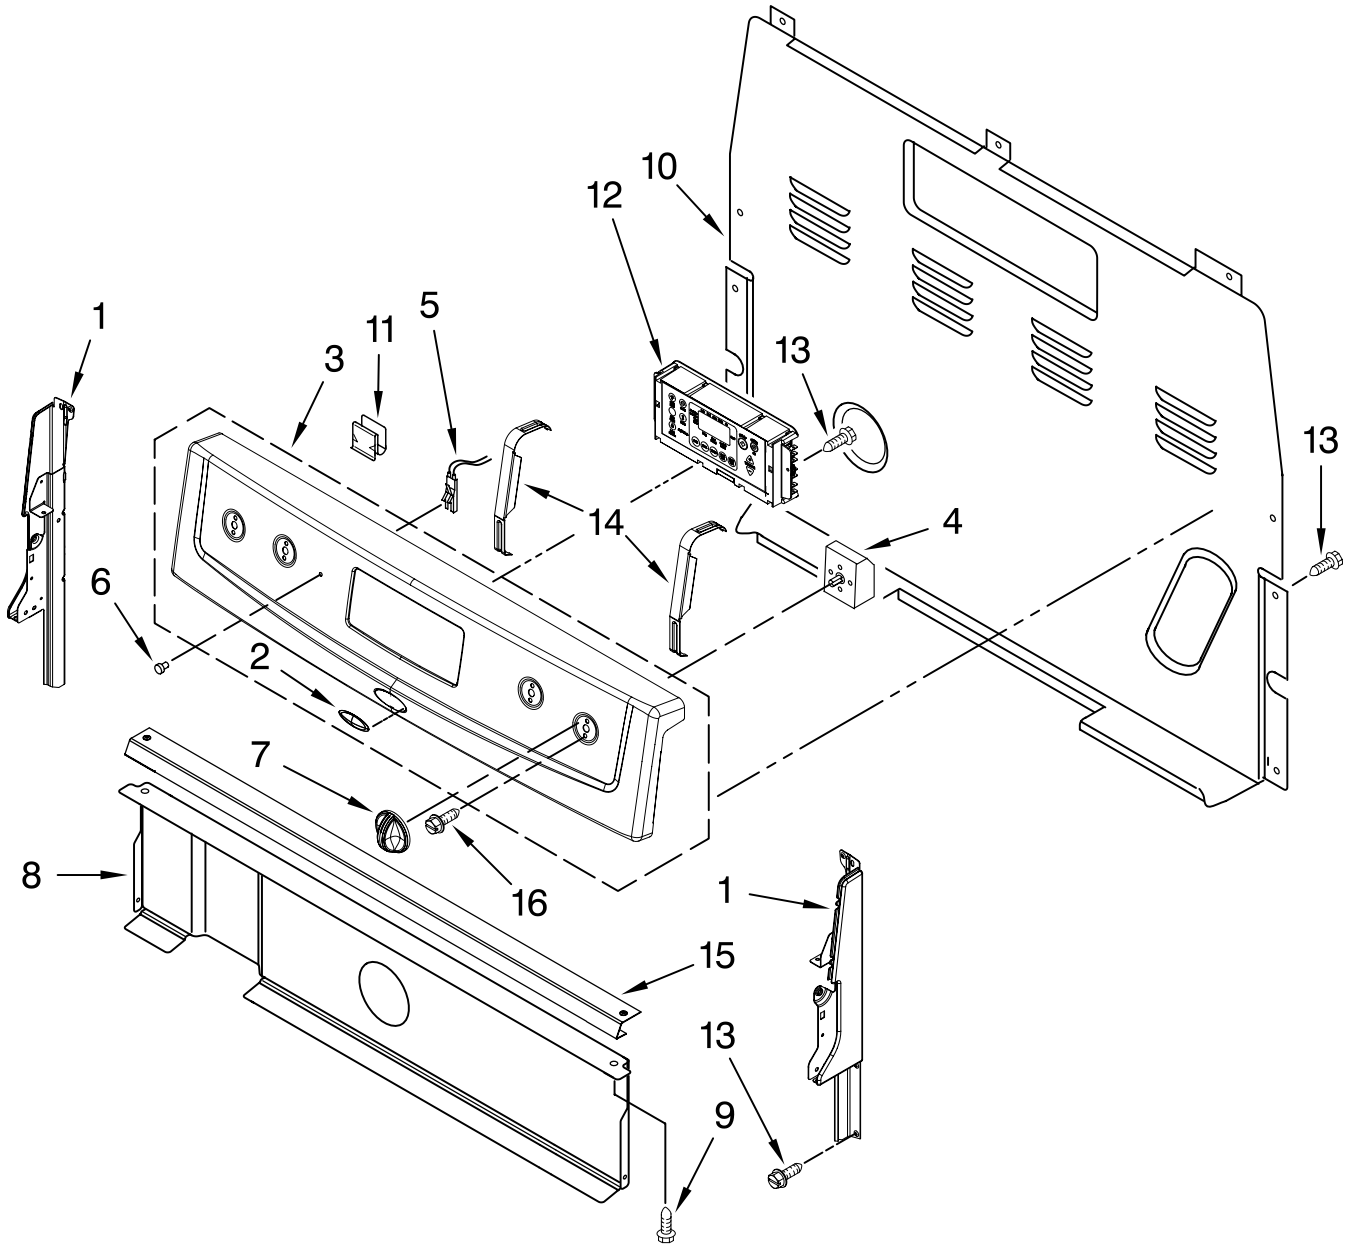

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009040	White Left Hand
	W10009050	White Right Hand
2	9757609	Nameplate
3		Panel, Console
	9762018	White
4		Switch, Infinite
	3148953	Left Front
	3148952	Left Rear
	3148953	Right Rear
	3148952	Right Front

Illus. No.	Part No.	DESCRIPTION
5		Light, Indicator
	8523265	Surface Unit (2)
6	3196068	Lens, Light (3)
7		Knob, Infinite (4)
	9761962	White
8	W10134247	Shield, Heat
9	3196166	Screw


Illus. No.	Part No.	DESCRIPTION
10	8272473	Cover, Upper
11	8273564	Clip
12		Control, Range
	W10108280	White
13	3196178	Screw
14	9762078	Brkt-Mntg, EOC
15	9762095	Brkt-Mntg, Console
16	3400882	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF212PXSQ2

(Designer White)

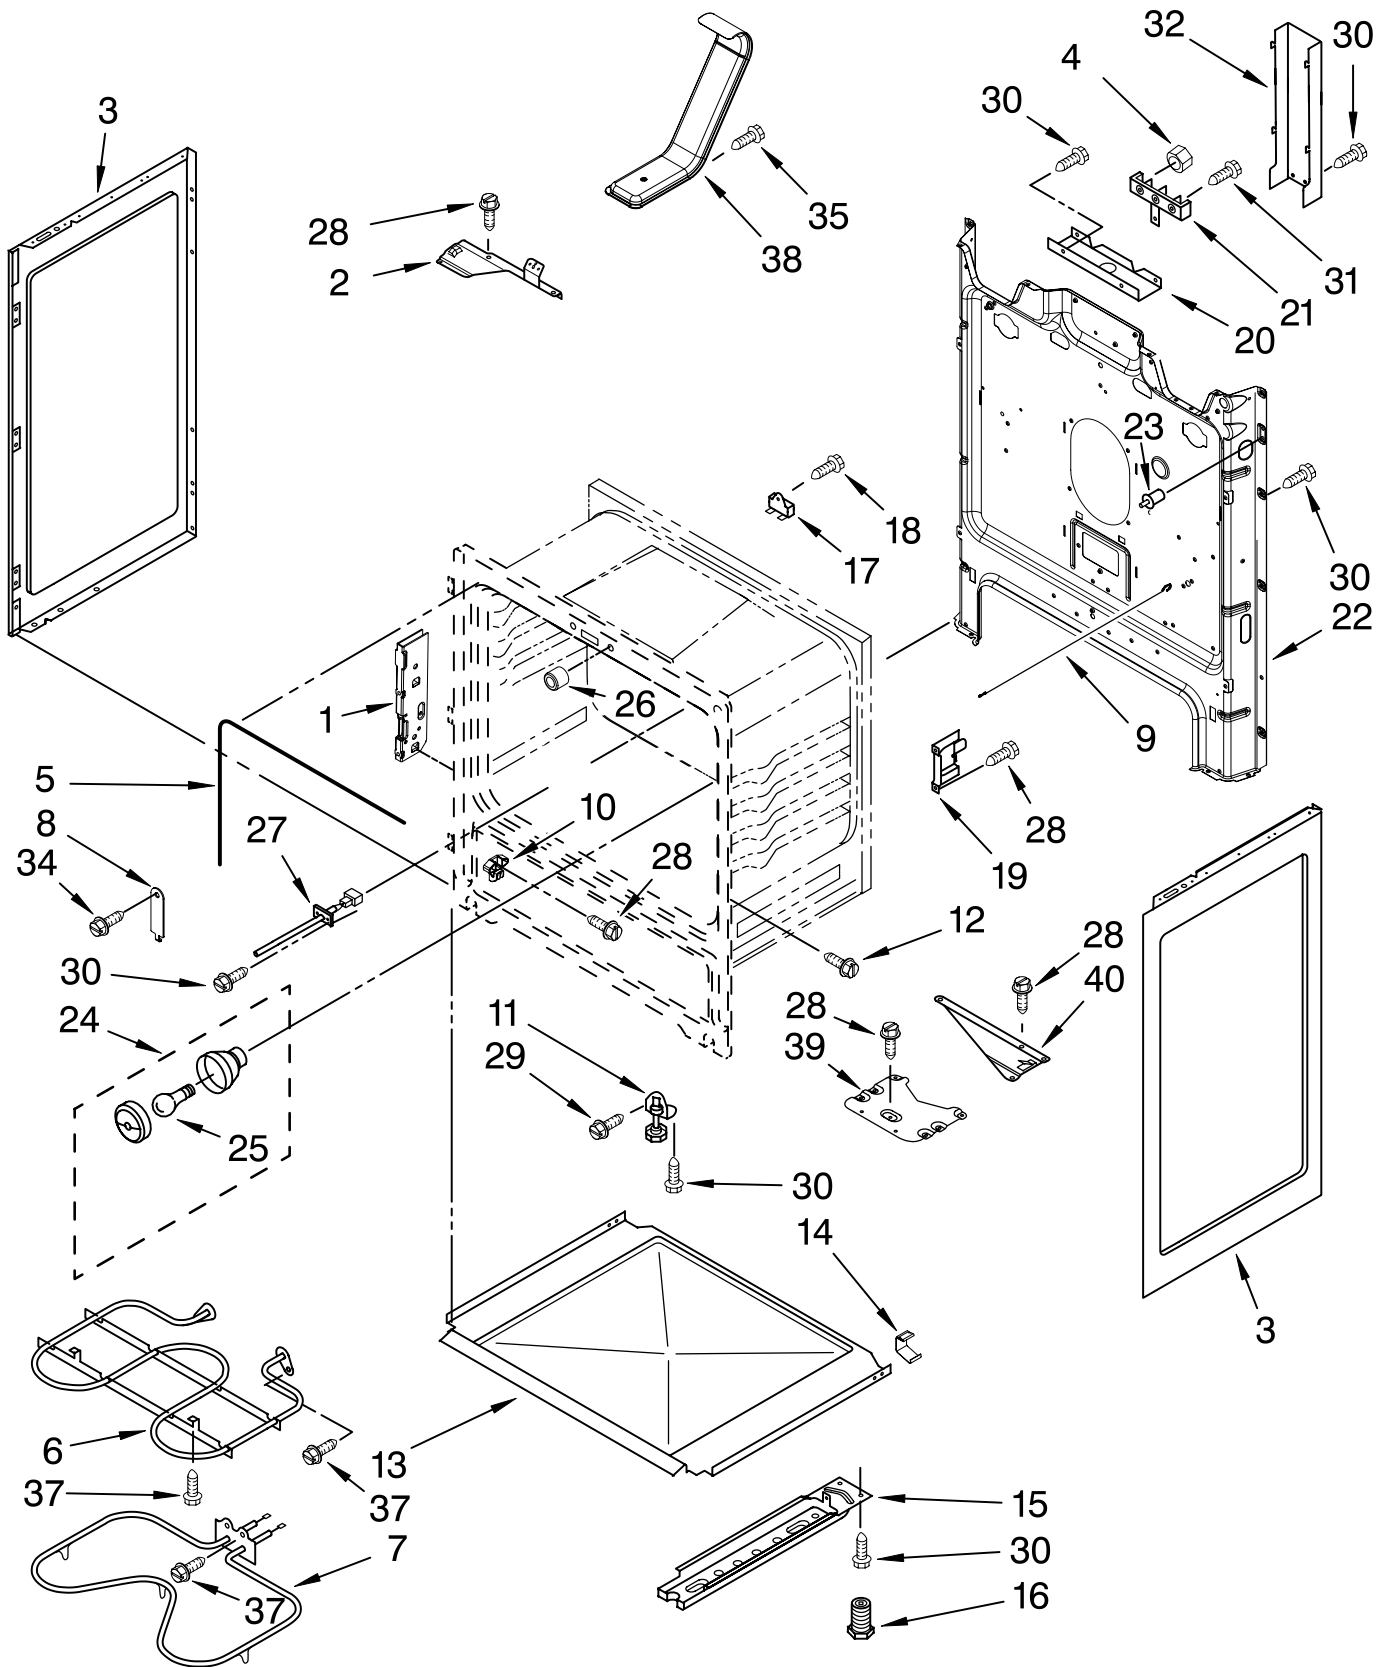

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF212PXSQ2

(Designer White)

<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
1	9760407	Brkt – Mounting
2	8273905	Support, Corner LR
3		Panel, Side (2)
	8053830	White-Textured
4	112432	Nut
5	W10129032	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	9761517	Clip,Door Mntg(2)
9	9757239	Rod – Dr Switch
10	W10114344	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12	W10067840	Screw
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	W10058460	Foot, Rear (2)
17	3196548	Thermal, Fuse
18	3196172	Screw
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	9757262	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	9758701	Spacer – Door
27	8273902	Sensor, Oven
28	3196169	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
32	9758283	Cover, Box
34	W10031780	Screw
35	3196566	Screw
37	3196174	Screw
38	9761299	Flue
39	3195736	Support, Front (2)
40	3195987	Support, Corner RR


## INSULATION

8273263 Insulation, Wrap  
8272611 Insulation, Back  
8272613 Insulation, Vent

# DRAWER & BROILER PARTS

For Models: RF212PXSQ2

(Designer White)

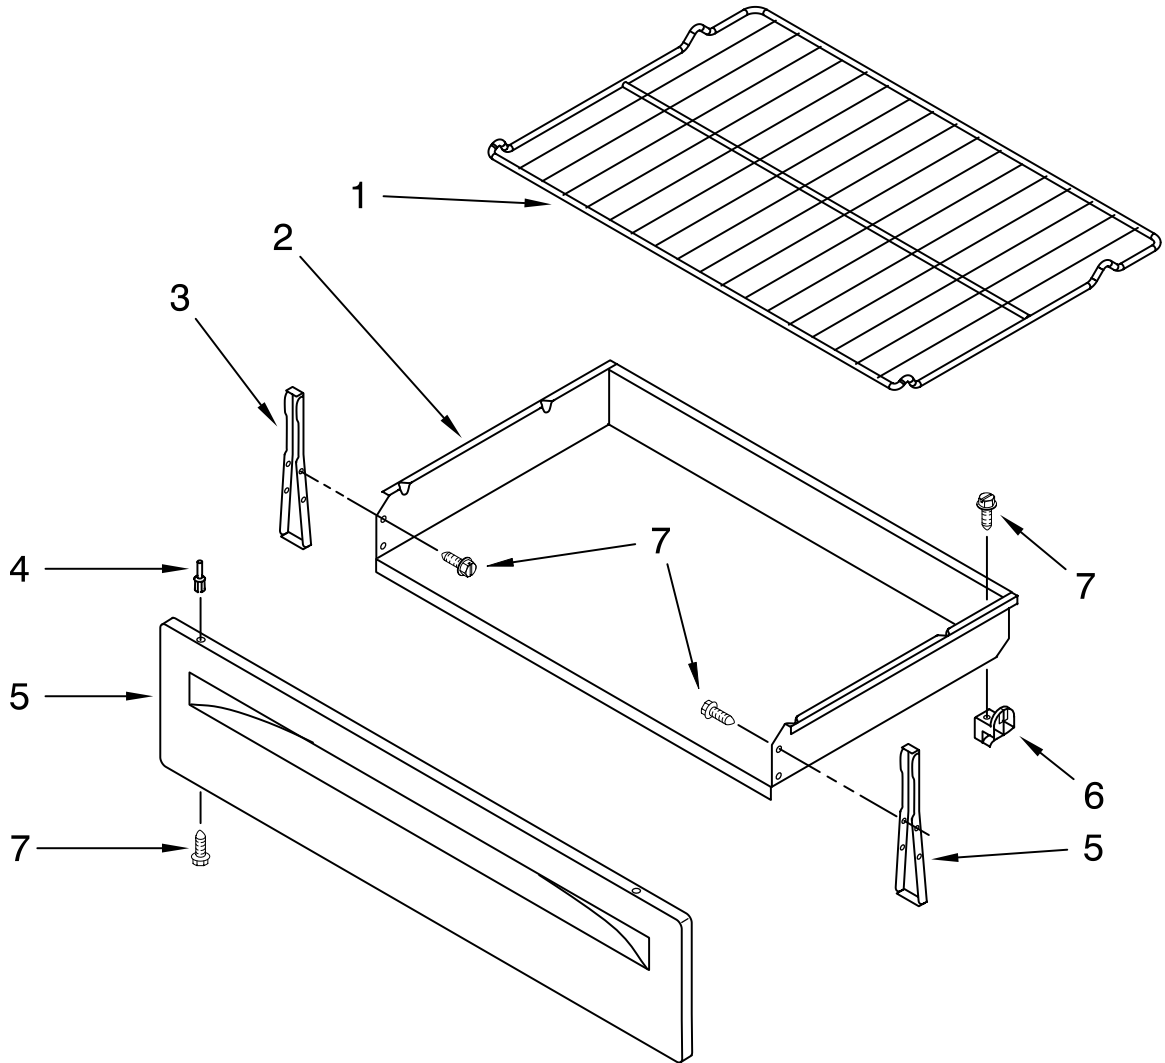


Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	9761031	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
5	3196814	White Panel, Drawer Frnt
	8053339	White
6	8053334	Glide, Drawer (2)
7	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS

For Models: RF212PXSQ2  
(Designer White)

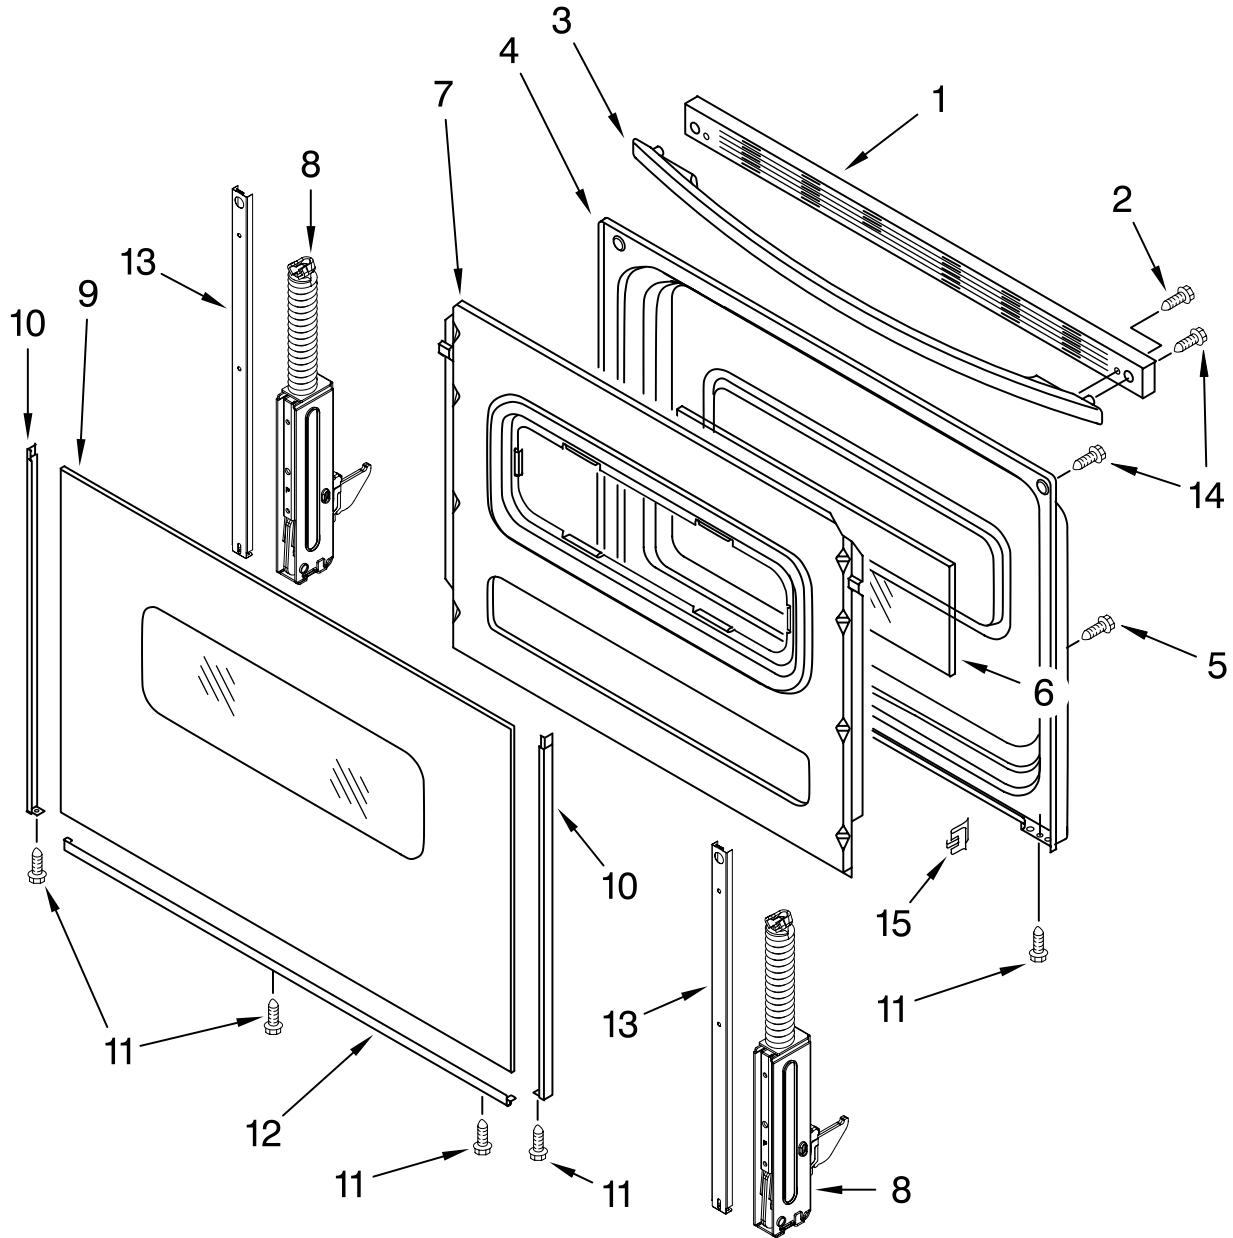

Illus. No.	Part No.	DESCRIPTION
1	9761975	Trim, Top White
2	3196164	Screw
3	9761982	Handle, Door White
4	9761340	Liner, Door
5	W10031790	Screw

Illus. No.	Part No.	DESCRIPTION
6	9758163	Window, Inner
7	9761500	Retainer, Insul.
8	9761494	Hinge, Door (2)
9	9762476	Glass, Outer White
10	8523172	Trim, Side White Left Hand
	8523166	White Right Hand

Illus. No.	Part No.	DESCRIPTION
11	3196160	Screw
12	8523175	Trim, Lower White
13	W10113759	Strap, Door
14	W10031780	Screw
15	3196025	Clip, Glass

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS (NOT INCLUDED)

For Models: RF212PXSQ2  
(Designer White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

**SPLICING WIRES--25FT.**

**LENGTH**

- 242828 Wire, Black  
12 Ga. 150° c
- 242821 Wire, Blue  
14 Ga. 150°c
- 242822 Wire, Brown  
14 Ga. 150°c
- 242830 Wire, Brown  
14 Ga. 200°c
- 242823 Wire, Green  
14 Ga. 150°c
- 242824 Wire, Orange  
14 Ga. 150°c
- 242825 Wire, Red  
14 Ga. 150°c
- 242831 Wire, Red  
14 Ga. 200°c
- 242827 Wire, Yellow  
14 Ga. 150°c

**REFINISHING MATERIAL**

- 799832 Kit, Porcelain  
Repair (White)
- 242756 Touch-Up  
Self-Clean(1/2 Pt)
- 261582 Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**INSULATION**

- 261514 Insulation,  
Fiberglass (1-1/2"  
x 24" x 120")
- 240132 Insulation,  
Fiberglass (2-1/2"  
x 22" x 120")

**PAINT, TOUCH-UP (1/2oz.)**

- 72017 White
- 72107 Almond
- 511873 White Porcelain  
(2 Oz.)

**PAINT, PRESSURIZED SPRAY  
(12 oz.)**

- 350930 White
- 350956 Almond
- 285006 Superior Black
- 206922 Primer (White)

**PAINT, BULK (1 qt.)**

- 799344 White (Uncut)
- 978883 Almond (Uncut)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**ACCESSORY PARTS**

- 241430 Foil, Aluminum  
Oven (18" x 25')
- 3191048 Cleaner, Glass
- 4396923 Pan, Broiler

**ANTI-TIP KIT**

- W10017440 Anti-Tip Kit

**WIRING HARNESS PARTS**

- W10111769 Harness, Wire  
(Cooktop Left)
- W10111770 Harness, Wire  
(Cooktop Right)
- W10083650 Harness, Wire  
(Sensor/Dr Switch)
- 8523279 Wire, Ground
- 3196154 Screw
- W10111776 Harness, Wire  
(Main)
- 313660 Clip, Wire Ground
- 3196173 Screw
- 3196174 Screw  
(Grnd Wire / Back)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST