




# COOKTOP PARTS

For Models: RF214LXTQ0, RF214LXTB0, RF214LXTS0  
(Designer White) (Black) (Stainless)

30" ELECTRIC FREESTANDING  
STANDARD CLEAN RANGE

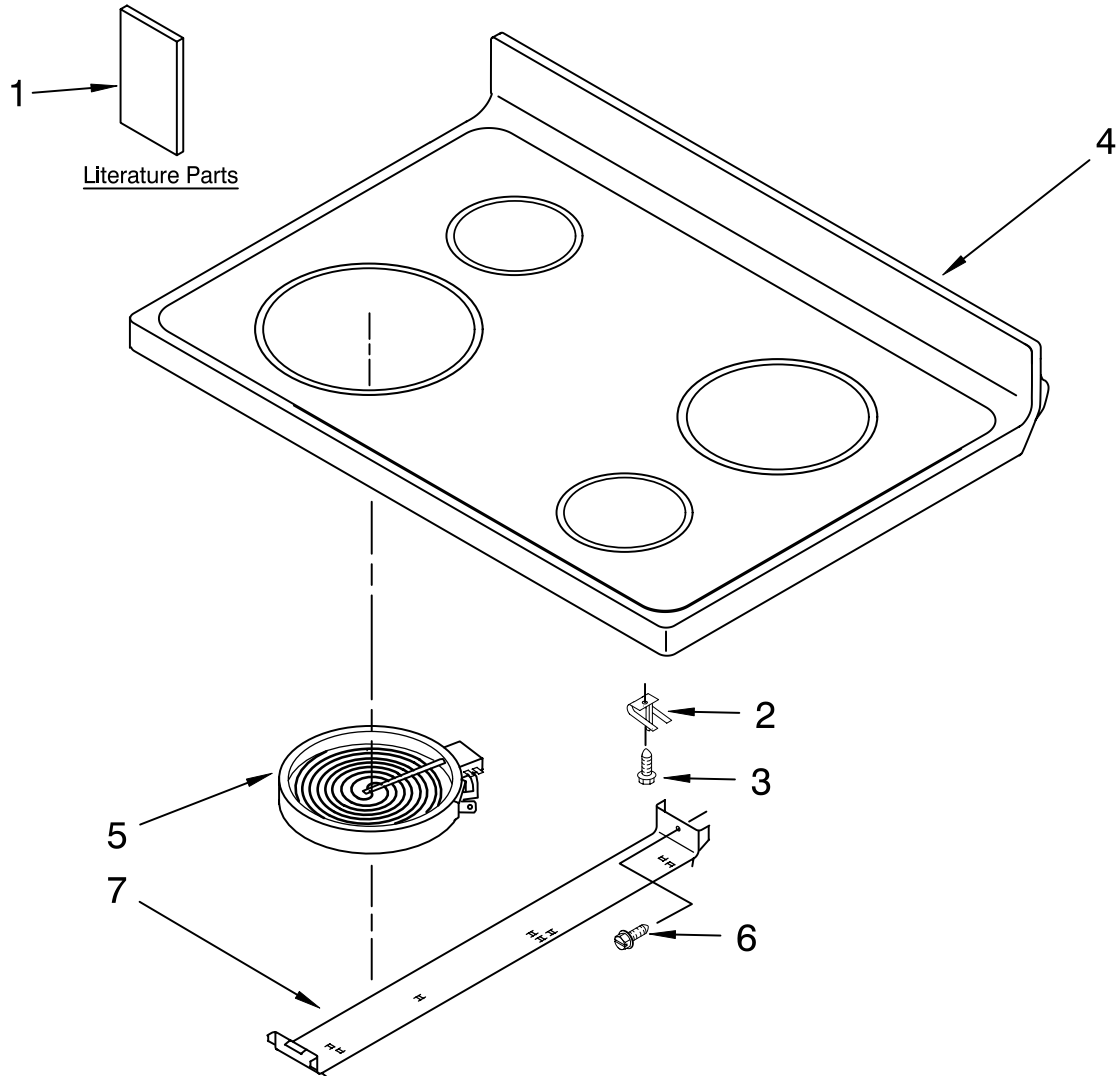

Illus. No.	Part No.	DESCRIPTION
1	9762996	Literature Instructions Installations Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	9763001	Owners Manual
	W10115596	Tech Sheet
	9762761	Safer Cooking Tips

Illus. No.	Part No.	DESCRIPTION
2	W10035930	Spring, Locator
3	3196170	Screw
4	9763321	White/White
	9763323	Black


Illus. No.	Part No.	DESCRIPTION
5		Element, Surface
	8523695	2000 W - LF
	8523697	1500 W - LR
	8523695	2000 W - RR
	8523697	1500 W - RF
6	3196169	Screw
7	3196454	Bracket, Element

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: RF214LXTQ0, RF214LXTB0, RF214LXTS0

(Designer White) (Black) (Stainless)

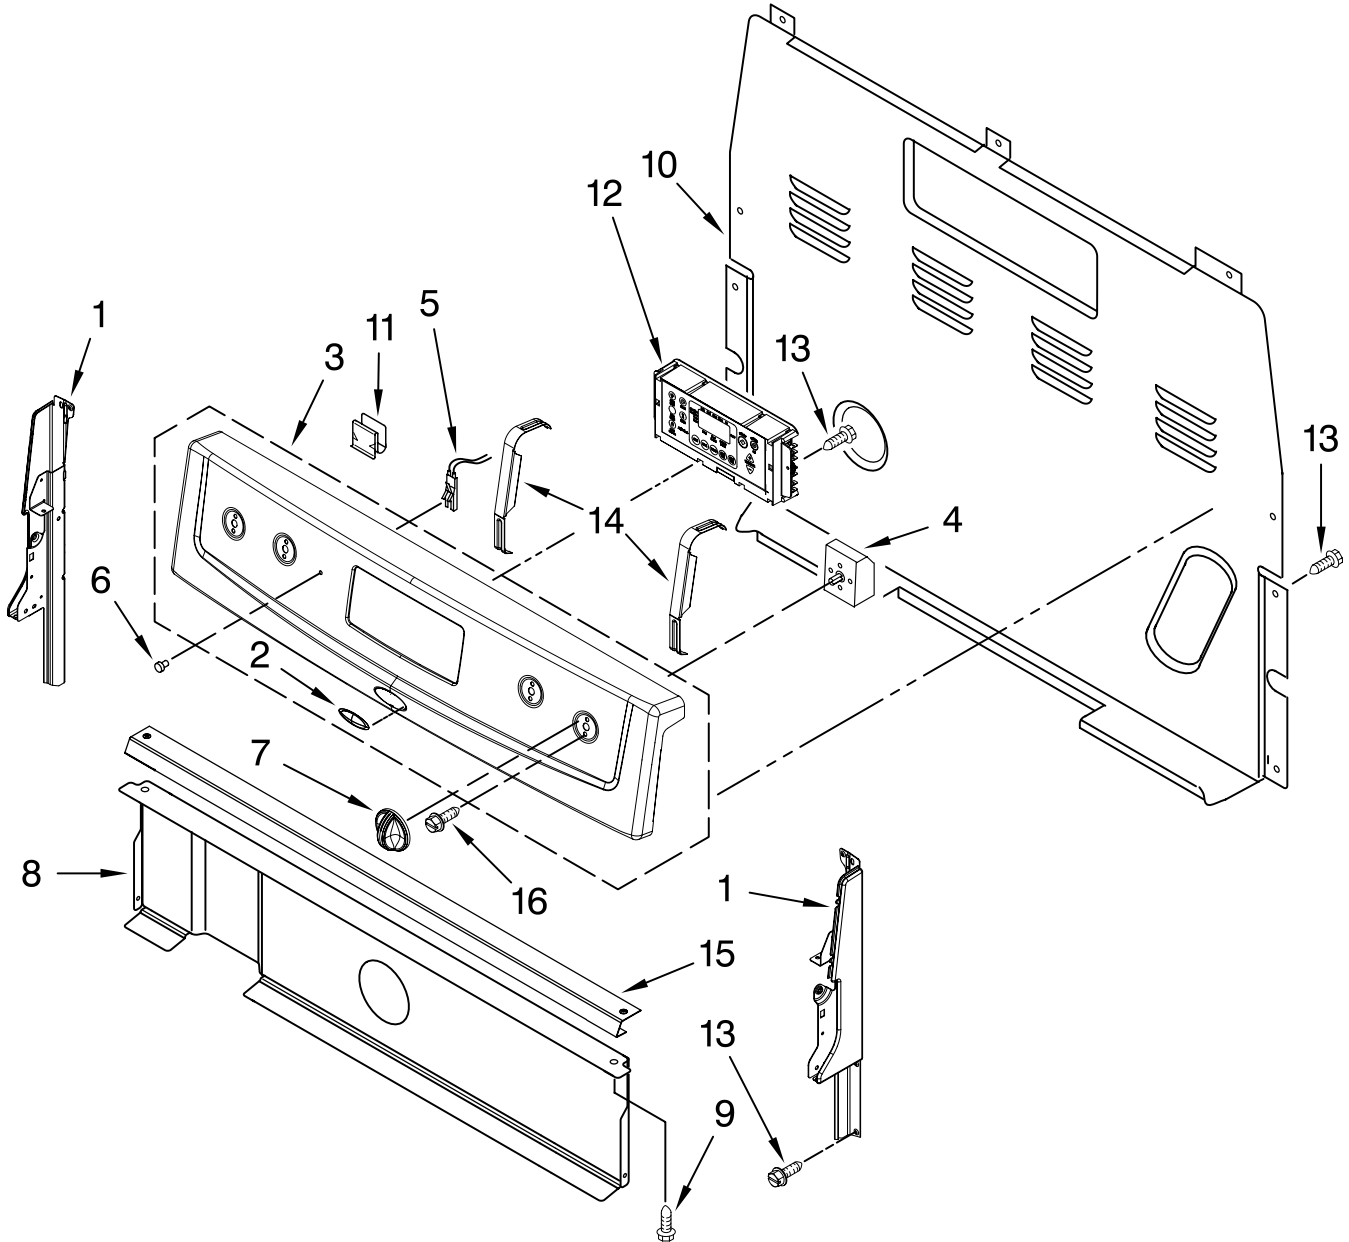

Illus. No.	Part No.	DESCRIPTION
1	W10009040	Endcap White LH
	W10009050	Endcap White RH
	W10009080	Endcap Black LH
	W10009090	Endcap Black RH
2	9757609	Nameplate
3	9762018	Panel, Backguard White
	W10120937	Panel, Backguard Black
	W10127721	Panel, Backguard Stainless


Illus. No.	Part No.	DESCRIPTION
4	3148953	Switch, Infinite Left Front
	3148952	Switch, Infinite Left Rear
	3148953	Switch, Infinite Right Rear
	3148952	Switch, Infinite Right Front
5	8523265	Light, Indicator Surface Unit (2)
6	3196068	Lens, Light (3)
7	9761962	Knob, Infinite (4) White
	9761964	Knob, Infinite (4) Black
8	8523280	Shield, Heat

Illus. No.	Part No.	DESCRIPTION
9	3196166	Screw
10	8272473	Cover, Upper
11	8273564	Clip
12	W10108280	Control, Range White
	W10108290	Control, Range Black
13	3196178	Screw
14	9762078	Brkt-Mntg, EOC
15	9762095	Brkt-Mntg, Console
16	3400882	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF214LXTQ0, RF214LXTB0, RF214LXTS0  
(Designer White) (Black) (Stainless)

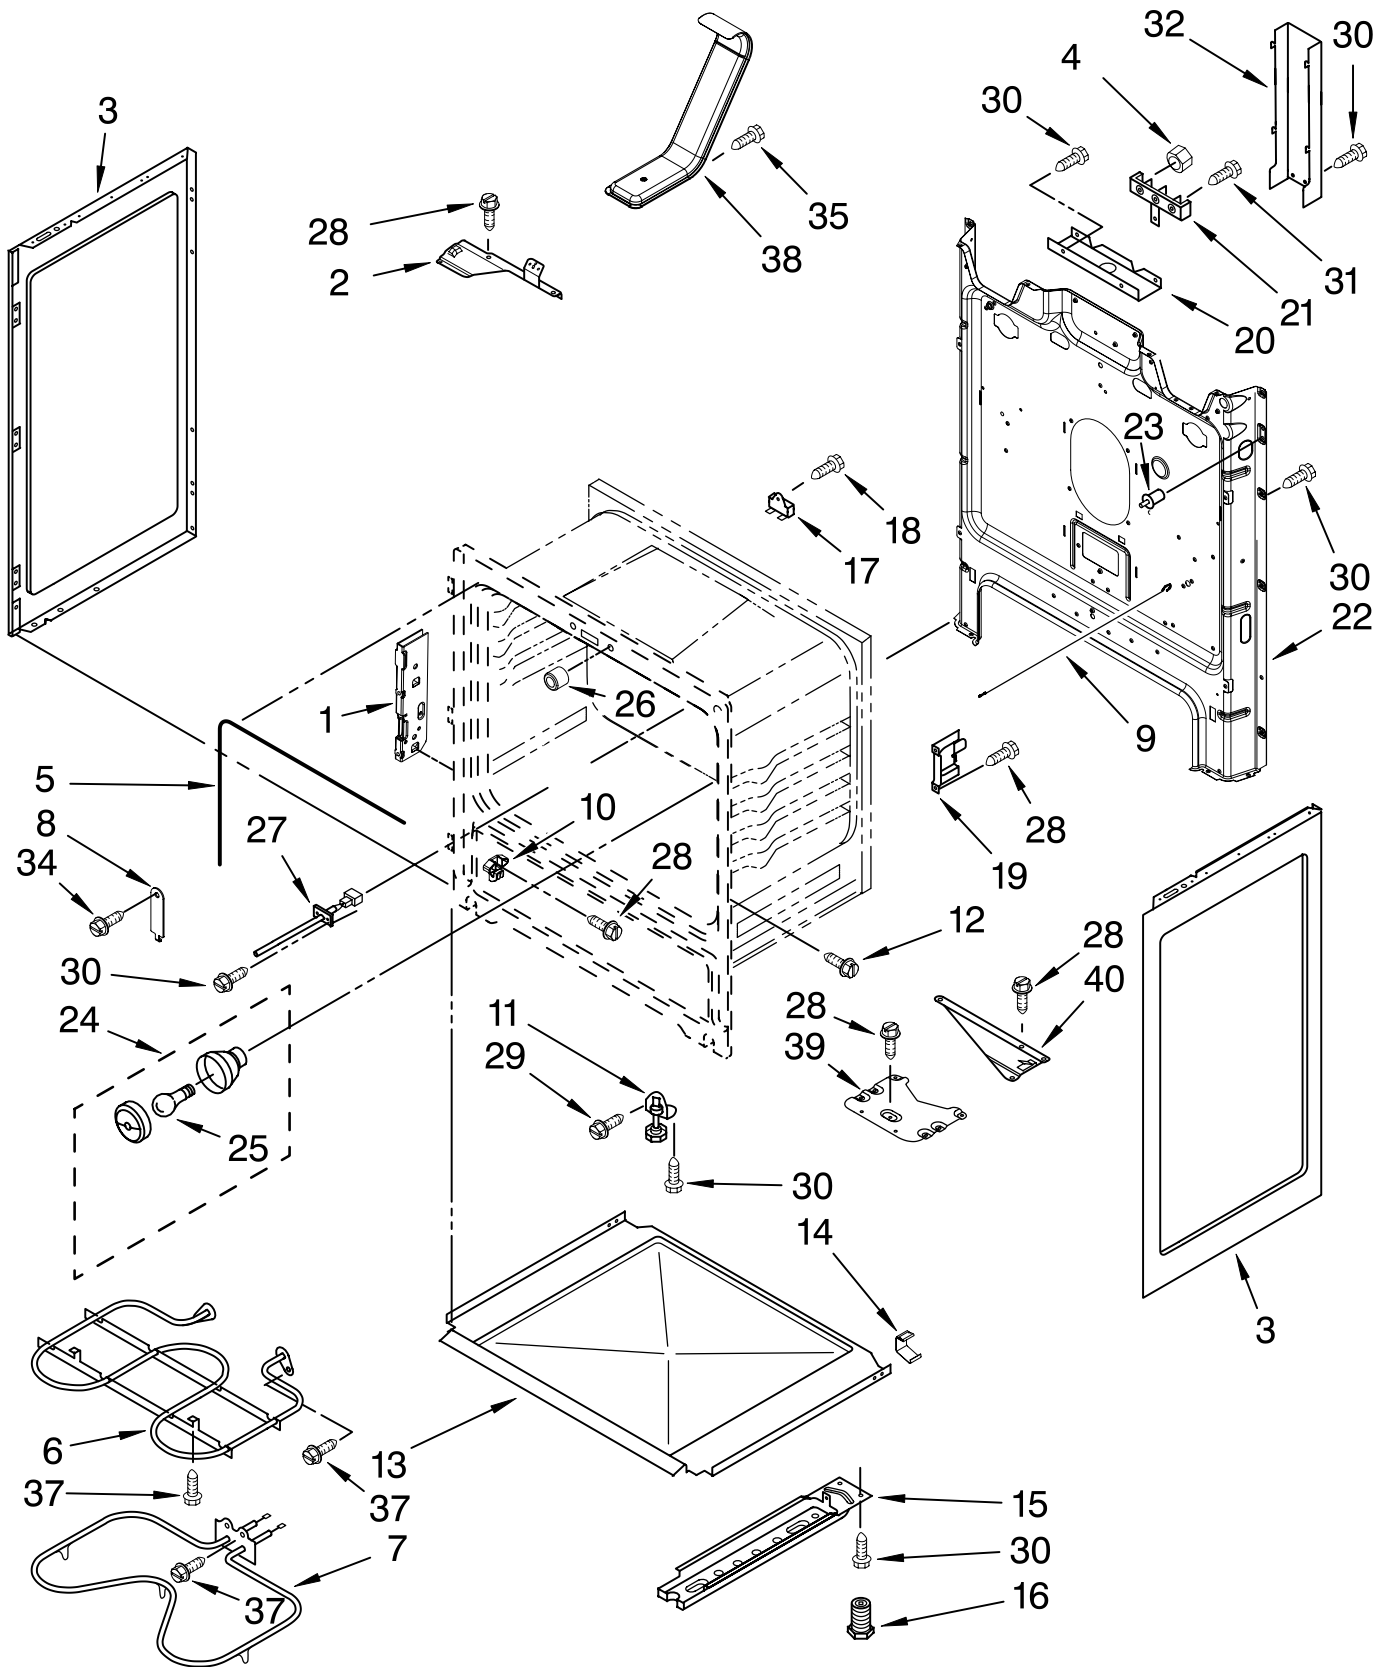

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF214LXTQ0, RF214LXTB0, RF214LXTS0  
(Designer White) (Black) (Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9760407	Brkt – Mounting
2	8273905	Support, Corner LR
3		Panel, Side (2)
	8053830	White-Textured
	8053832	Black
4	112432	Nut
5	W10129032	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	9761517	Clip,Door Mntg(2)
9	9757239	Rod – Dr Switch
10	W10114344	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12	W10067840	Screw
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	W10058460	Foot, Rear (2)
17	3196548	Thermal, Fuse
18	3196172	Screw
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	9757262	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	9758701	Spacer – Door
27	8273902	Sensor, Oven
28	3196169	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
32	9758283	Cover, Box
34	W10031780	Screw
35	3196566	Screw
37	3196174	Screw
38	9761299	Flue
39	3195736	Support, Front (2)
40	3195987	Support, Corner RR


## INSULATION

8273263	Insulation, Wrap
8272611	Insulation, Back
8272613	Insulation, Vent

# DRAWER & BROILER PARTS

For Models: RF214LXTQ0, RF214LXTB0, RF214LXTS0

(Designer White) (Black) (Stainless)

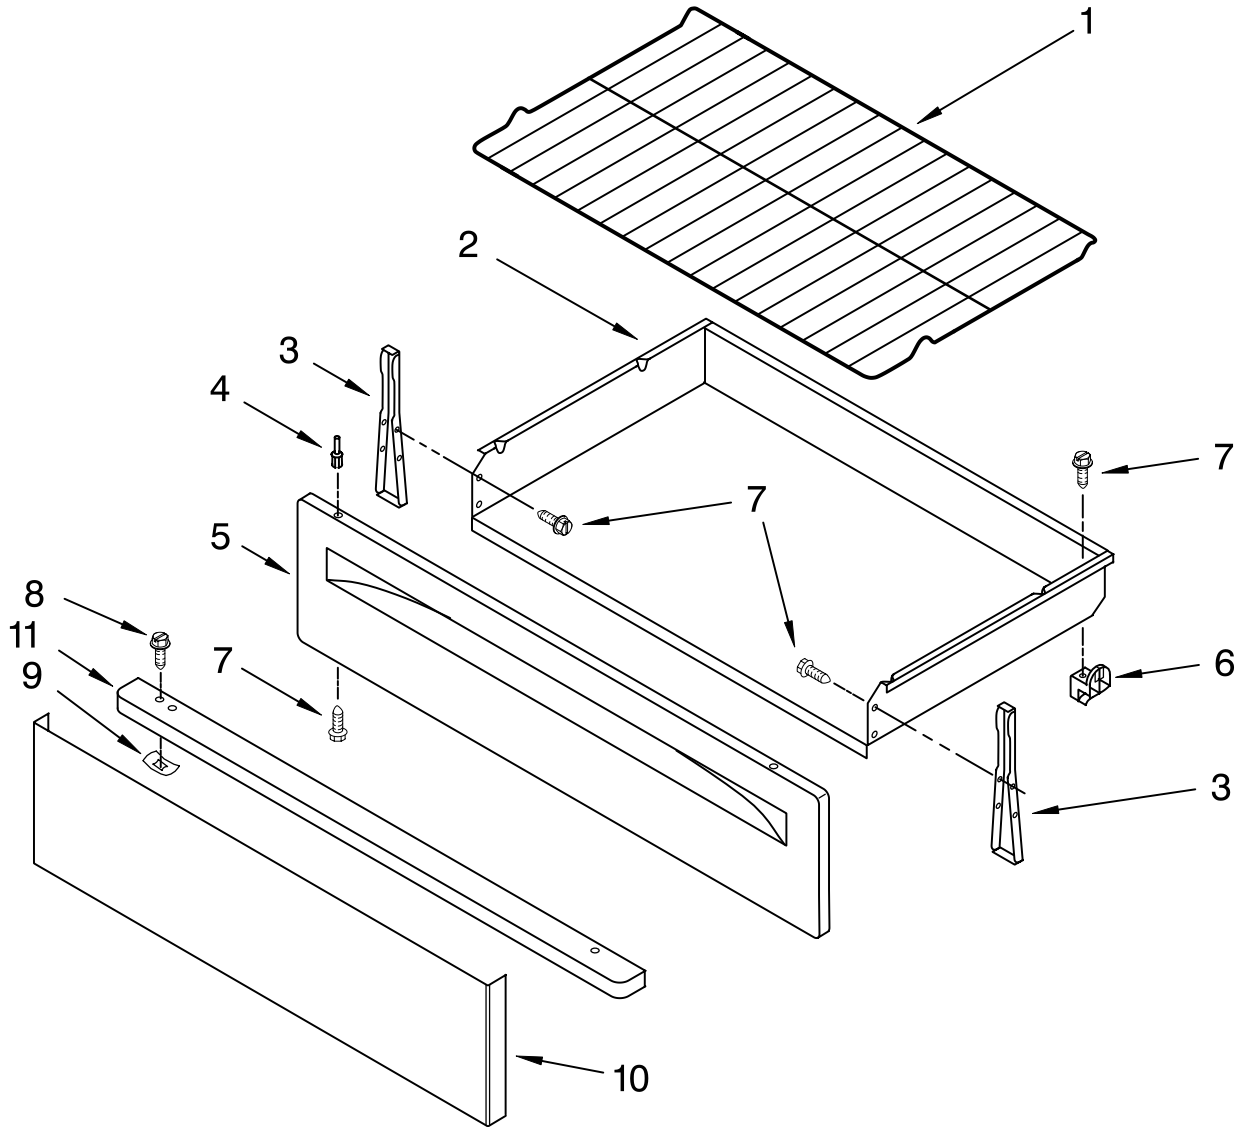


Illus. No.	Part No.	DESCRIPTION
1	W10138079	Rack, Oven (2)
2	9761031	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
5	3196814	White
	3196813	Black
		Panel, Drawer Frnt
	8053339	White
	8053341	Black
6	8053334	Glide, Drawer (2)
7	3196168	Screw
8	W10031790	Screw(Stls.Model)
9	9781235	Clip(Stls. Model)
10	9755798	Panel(Stls.Model)
11	9757219	Handle(Stls.Model)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS

For Models: RF214LXTQ0, RF214LXTB0, RF214LXTS0  
(Designer White) (Black) (Stainless)

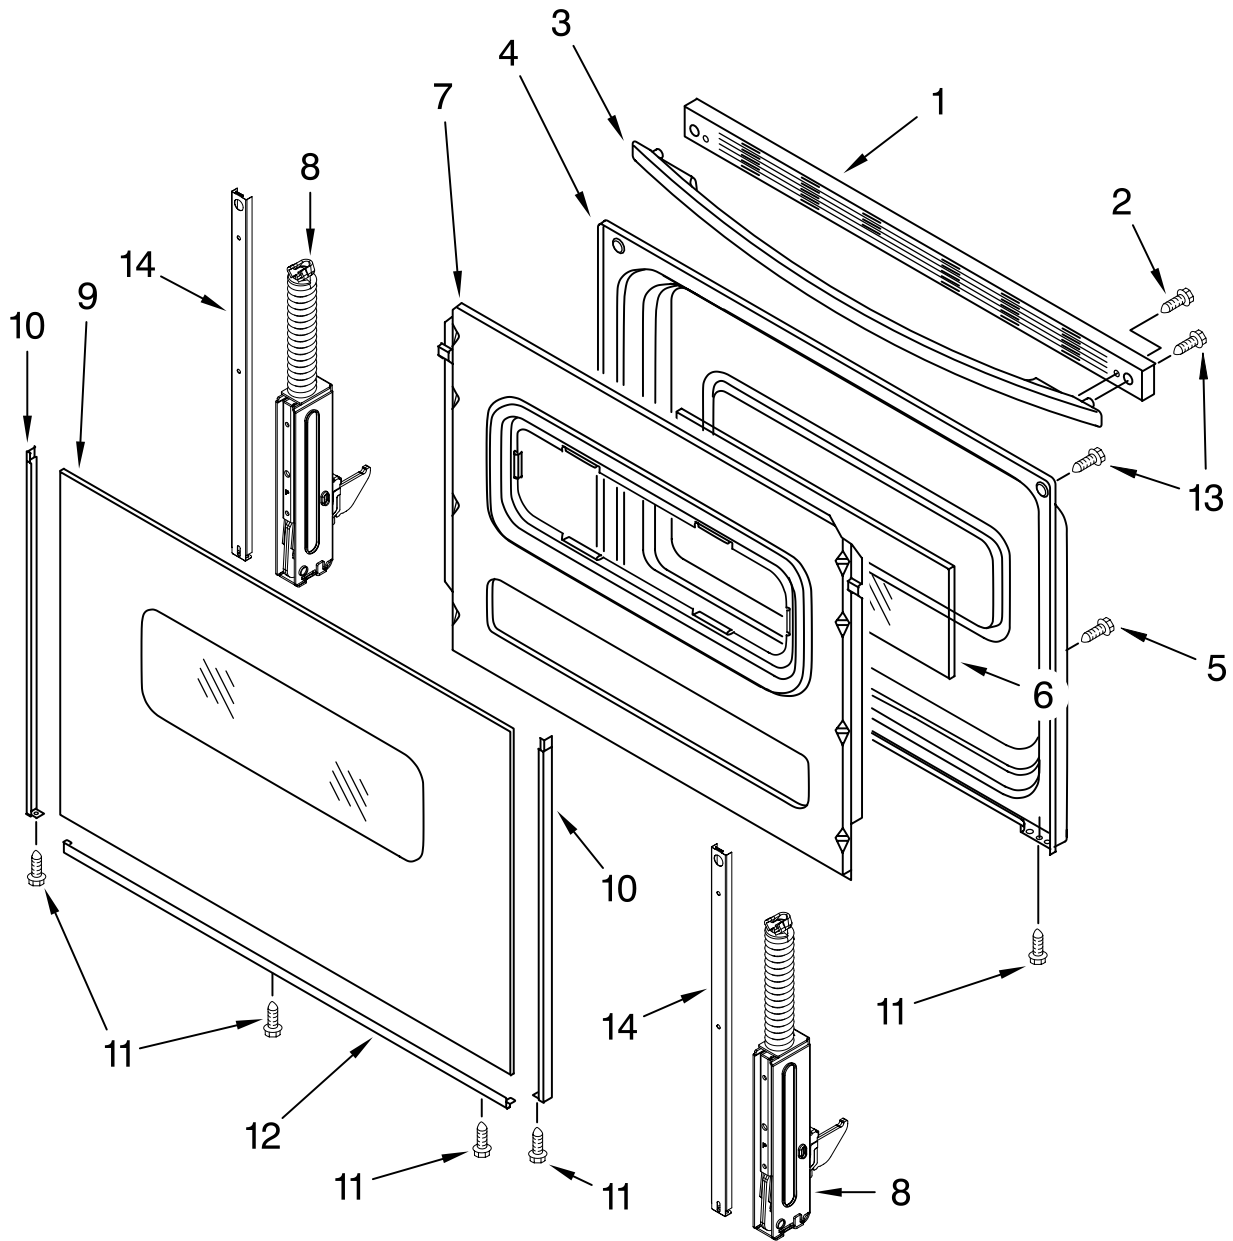

Illus. No.	Part No.	DESCRIPTION
1	9761975	Trim, Top White
	9762391	Black
	9762394	Stainless Model
2	3196164	Screw
3		Handle, Door
	9761982	White
	9761983	Black
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Window, Inner

Illus. No.	Part No.	DESCRIPTION
7	9761501	Retainer, Insul.
8		Hinge, Door (2)
	9761494	White, Black
	9761493	Stainless Model
9		Glass, Outer
	W10075980	White
	W10075990	Black
	9756435	Stainless
10		Trim, Side
	8523172	White Left Hand
	8523166	White Right Hand
	8523171	Black LH
	8523165	Black RH

Illus. No.	Part No.	DESCRIPTION
11	3196160	Screw
12		Trim, Lower
	8523175	White
	8523177	Black
	8523180	Stainless Model
13	W10031780	Screw
14	W10113759	Strap, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS (NOT INCLUDED)

For Models: RF214LXTQ0, RF214LXTB0, RF214LXTS0

(Designer White) (Black) (Stainless)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

### SPLICING WIRES--25FT.

#### LENGTH

242828	Wire, Black	12 Ga. 150° c
242821	Wire, Blue	14 Ga. 150° c
242822	Wire, Brown	14 Ga. 150° c
242830	Wire, Brown	14 Ga. 200° c
242823	Wire, Green	14 Ga. 150° c
242824	Wire, Orange	14 Ga. 150° c
242825	Wire, Red	14 Ga. 150° c
242831	Wire, Red	14 Ga. 200° c
242827	Wire, Yellow	14 Ga. 150° c

### REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

### INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

### PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)

### PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)

### PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

### ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass
4396923	Pan, Broiler

### ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

### WIRING HARNESS PARTS

9762959	Harness, Wire (Cooktop Left)
9762958	Harness, Wire (Cooktop Right)
W10083650	Harness, Wire (Sensor/Dr Switch)
8523279	Wire, Ground
3196154	Screw
W10083550	Harness, Wire (Main)
313660	Clip, Wire Ground
3196173	Screw
8524132	Shield, Wiring
3196174	Screw (Grnd Wire / Back)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST