


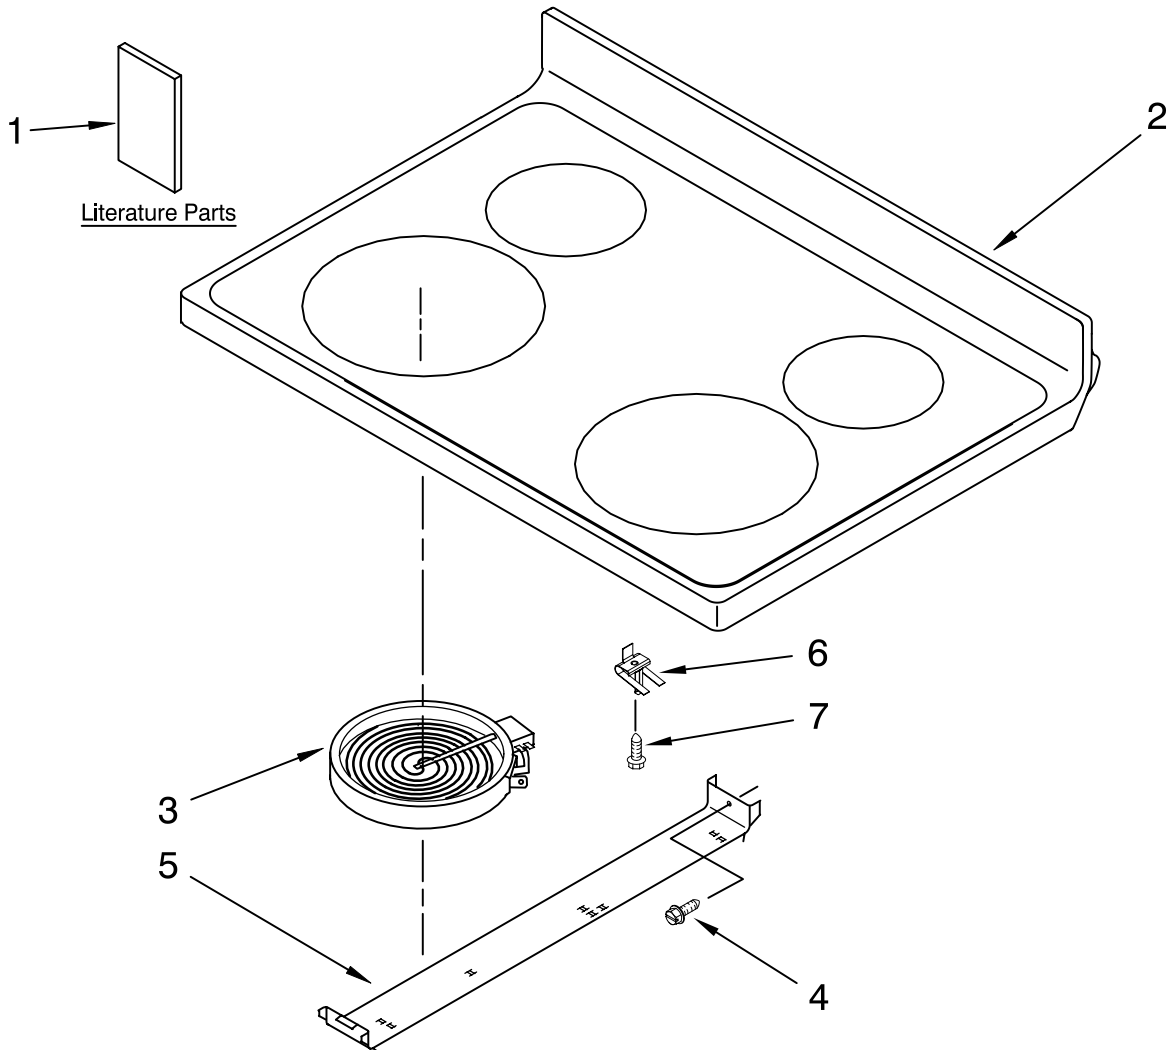

COOKTOP PARTS

For Models: RF272LXTD3
(Universal Silver)

30" ELECTRIC FREESTANDING
SELF CLEAN RANGE



Illus. No.	Part No.	DESCRIPTION
1	W10141166	Literature Instructions Installations Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	W10162204	Owners Manual
	W10133890	Tech Sheet
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2	W10134935	Cooktop
3	8273992	Element, Surface 2500 W - LF/RF
	8273994	1200 W - LR/RR

Illus. No.	Part No.	DESCRIPTION
4	3196169	Screw
5	8272791	Bracket, Element
6	W10035930	Spring, Locator
7	3196170	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF272LXTD3
(Universal Silver)

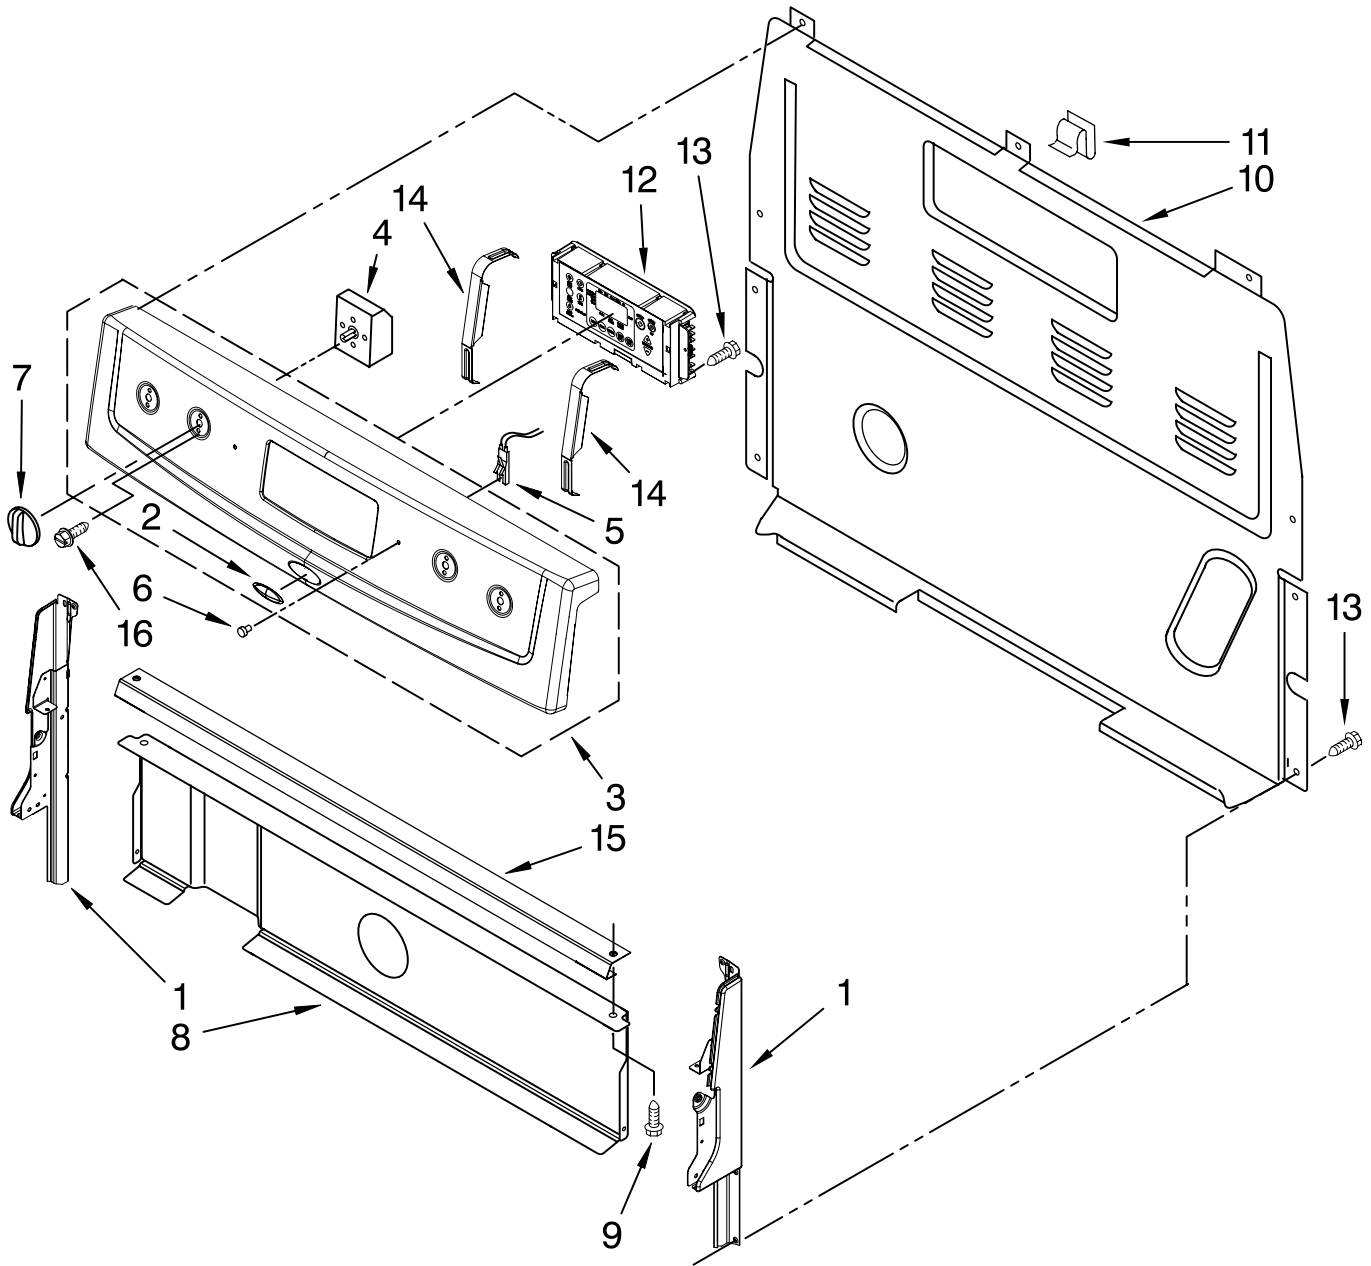

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009080	Black Left Hand
	W10009090	Black Right Hand
2	9757609	Nameplate
3	W10127721	Panel, Control
4		Switch, Infinite
	3148954	LF/RF (Orange)
	3148951	LR/RR (Silver)


Illus. No.	Part No.	DESCRIPTION
5		Light, Indicator
	8523265	Surface Unit (2)
6	3196068	Lens, Light (3)
7		Knob, Infinite (4)
	9761964	Black
8	W10134247	Shield, Heat
9		Screw
	3196168	Black

Illus. No.	Part No.	DESCRIPTION
10	8272473	Cover, Upper
11	8273564	Clip
12	W10108230	Control, Range
13	3196178	Screw
14	9762078	Brkt-Mntg., EOC
15	9762095	Brkt-Mntg., Console
16	3400882	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF272LXTD3
(Universal Silver)

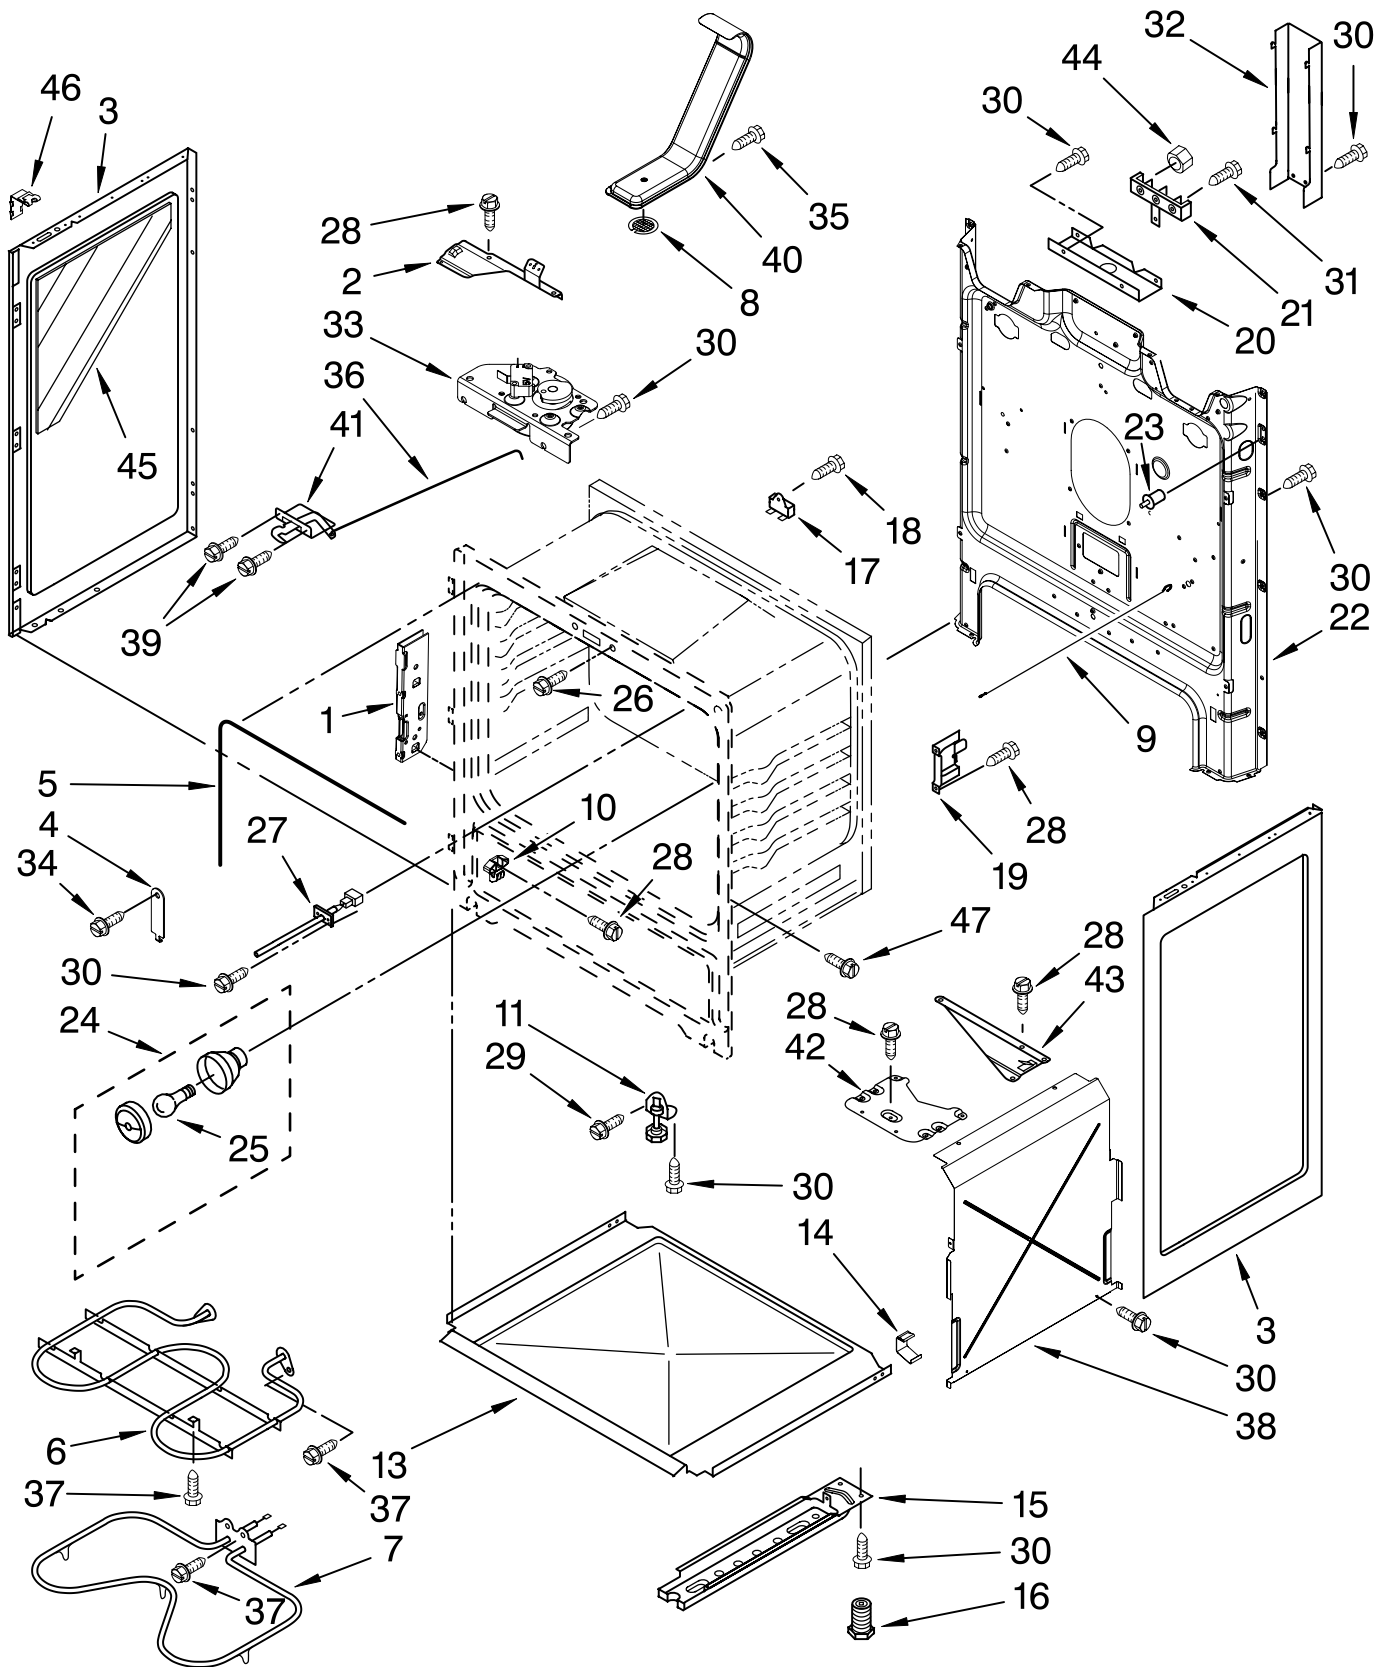

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS


For Models: RF272LXTD3
(Universal Silver)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9760407	Brkt – Mounting	19	3186116	Support, Oven (2)	35	3196566	Screw
2	8273905	Support, Corner LR	20	3186034	Bracket, Service	36	W10078380	Rod, Latch
3		Panel, Side (2)	21	9761958	Block, Terminal	37	3196174	Screw
	8053832	Black	22	8274034	Back, Main	38	9758238	Retainer, Insul(2)
4	9761517	Clip, Door Mntg(2)	23	9757262	Switch, Door	39	3196560	Screw (2)
5	8522416	Seal, Oven Door	24	3196701	Light Socket Assy	40	9761299	Flue
6	9757340	Element, Broil	25	311255	Bulb, Oven Light	41	9761013	Latch, Door
7	9758541	Element, Bake	26	9758701	Spacer – Door	42	3195736	Support, Front (2)
8	9761301	Screen–Catalyst	27	8273902	Sensor, Oven	43	3195987	Support, Corner RR
9	9757239	Rod – Dr Switch	28	3196169	Screw	44	112432	Nut
10	W10114344	Glide, Drawer Frnt	29	3196179	Screw	45	9761490	Insulation, Foil
11	3196037	Foot, Front (2)	30	3196178	Screw	46	9761512	Clip, Mounting
13	8054068	Tray, Insulation	31	3400016	Screw	47	W10067840	Screw (6)
14	3196576	Clip, Panel (6)	32	9758283	Cover, Box	INSULATION		
15	9760314	Rail, Base (2)	33	W10107820	Latch Asy, Rear	8272616		Insulation, Wrap
16	W10058460	Foot, Rear (2)	34	W10031780	Screw	8272612		Insulation, Back
17	3196548	Thermal, Fuse				8272613		Insulation, Vent
18	3196172	Screw						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: RF272LXTD3
(Universal Silver)

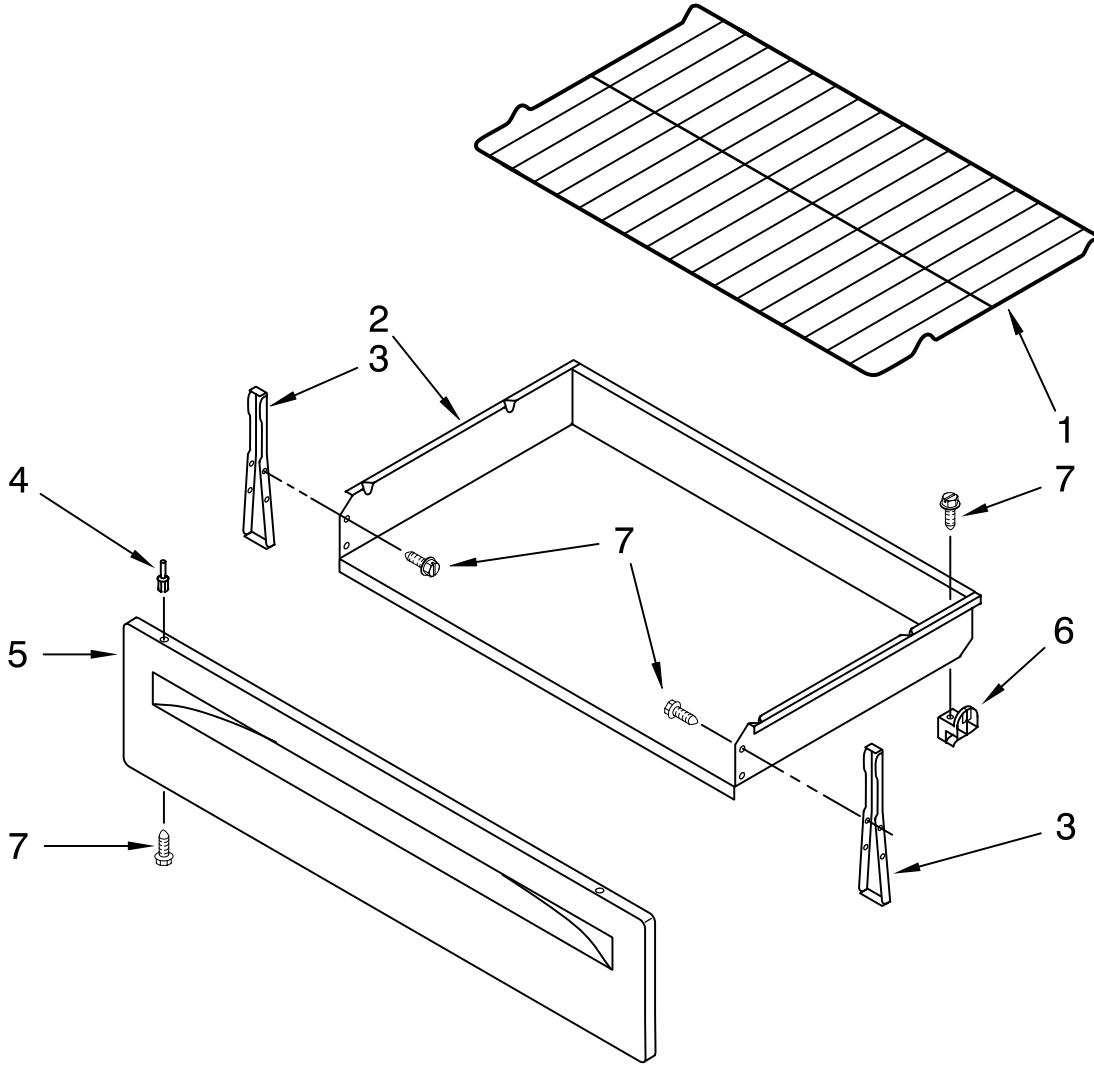


Illus. No.	Part No.	DESCRIPTION
1	W10138079	Rack, Oven (2)
2	9761031	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196813	Black
5	9761694	Panel, Drawer Frnt
6	8053334	Glide, Drawer (2)
7	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF272LXTD3
(Universal Silver)

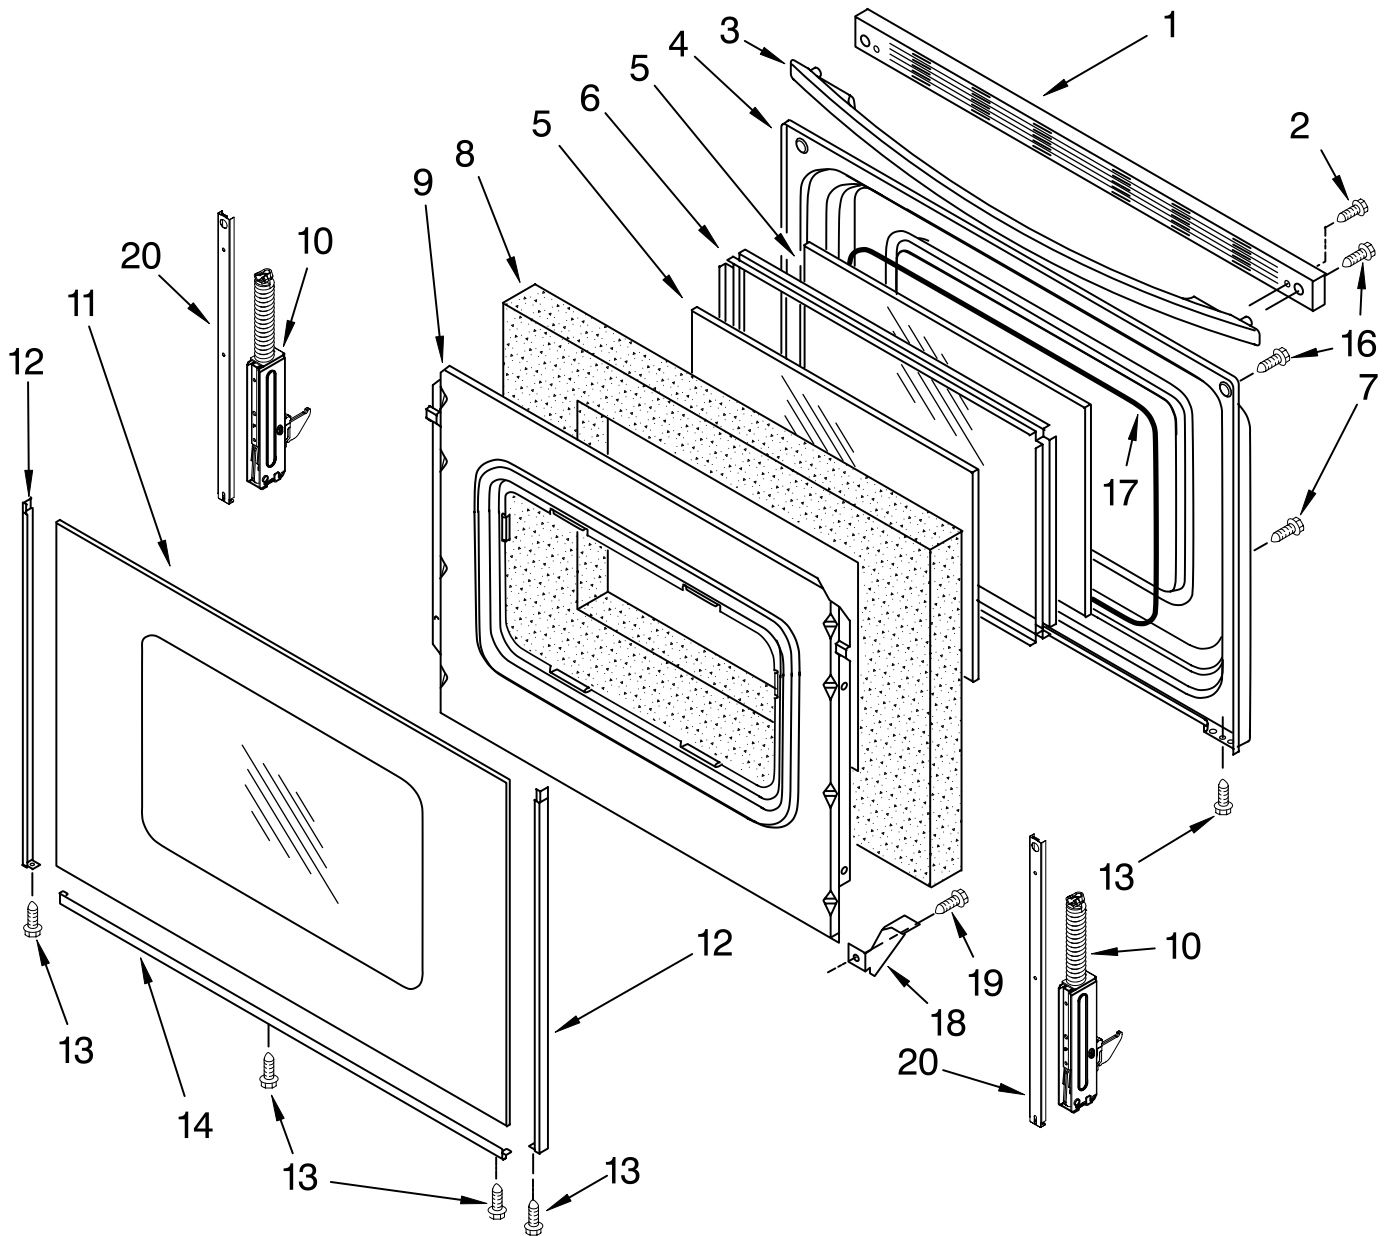

Illus. No.	Part No.	DESCRIPTION
1	W10171023	Trim, Top
2	3196164	Screw
3		Handle, Door
4	9761983	Black Liner, Door
5	9758162	Glass, Inner (2)
6	3186289	Frame, Glass
7	W10031790	Screw

Illus. No.	Part No.	DESCRIPTION
8	8272618	Insulation, Door
9	9761357	Retainer, Insul.
10	9761496	Hinge, Door
11	9761699	Glass, Outer Door
12		Trim, Door Side
	8523171	Black L.H.
	8523165	Black R.H.

Illus. No.	Part No.	DESCRIPTION
13	3196160	Screw
14	8523180	Trim, Lower Door
16	W10031780	Screw
17	8522414	Seal, Window
18	3196794	Bracket, Window(2)
19	3196165	Screw
20	W10113759	Strap, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: RF272LXTD3
(Universal Silver)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

242828	Wire, Black	12 Ga. 150° c
242821	Wire, Blue	14 Ga. 150° c
242822	Wire, Brown	14 Ga. 150° c
242830	Wire, Brown	14 Ga. 200° c
242823	Wire, Green	14 Ga. 150° c
242824	Wire, Orange	14 Ga. 150° c
242825	Wire, Red	14 Ga. 150° c
242831	Wire, Red	14 Ga. 200° c
242827	Wire, Yellow	14 Ga. 150° c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass
4396923	Pan, Broiler

ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

WIRING HARNESS PARTS

W10111790	Harness, Wire (Cooktop Left)
W10111766	Harness, Wire (Cooktop Right)
W10084660	Harness, Wire (Sensor/Dr Switch)
8523279	Wire, Ground
W10144763	Tie, Wire (Ceran Cktp)
3196154	Screw
W10111771	Harness, Wire (Main)
313660	Clip, Wire Ground
3196173	Screw
3196174	Screw (Grnd Wire / Back)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST