


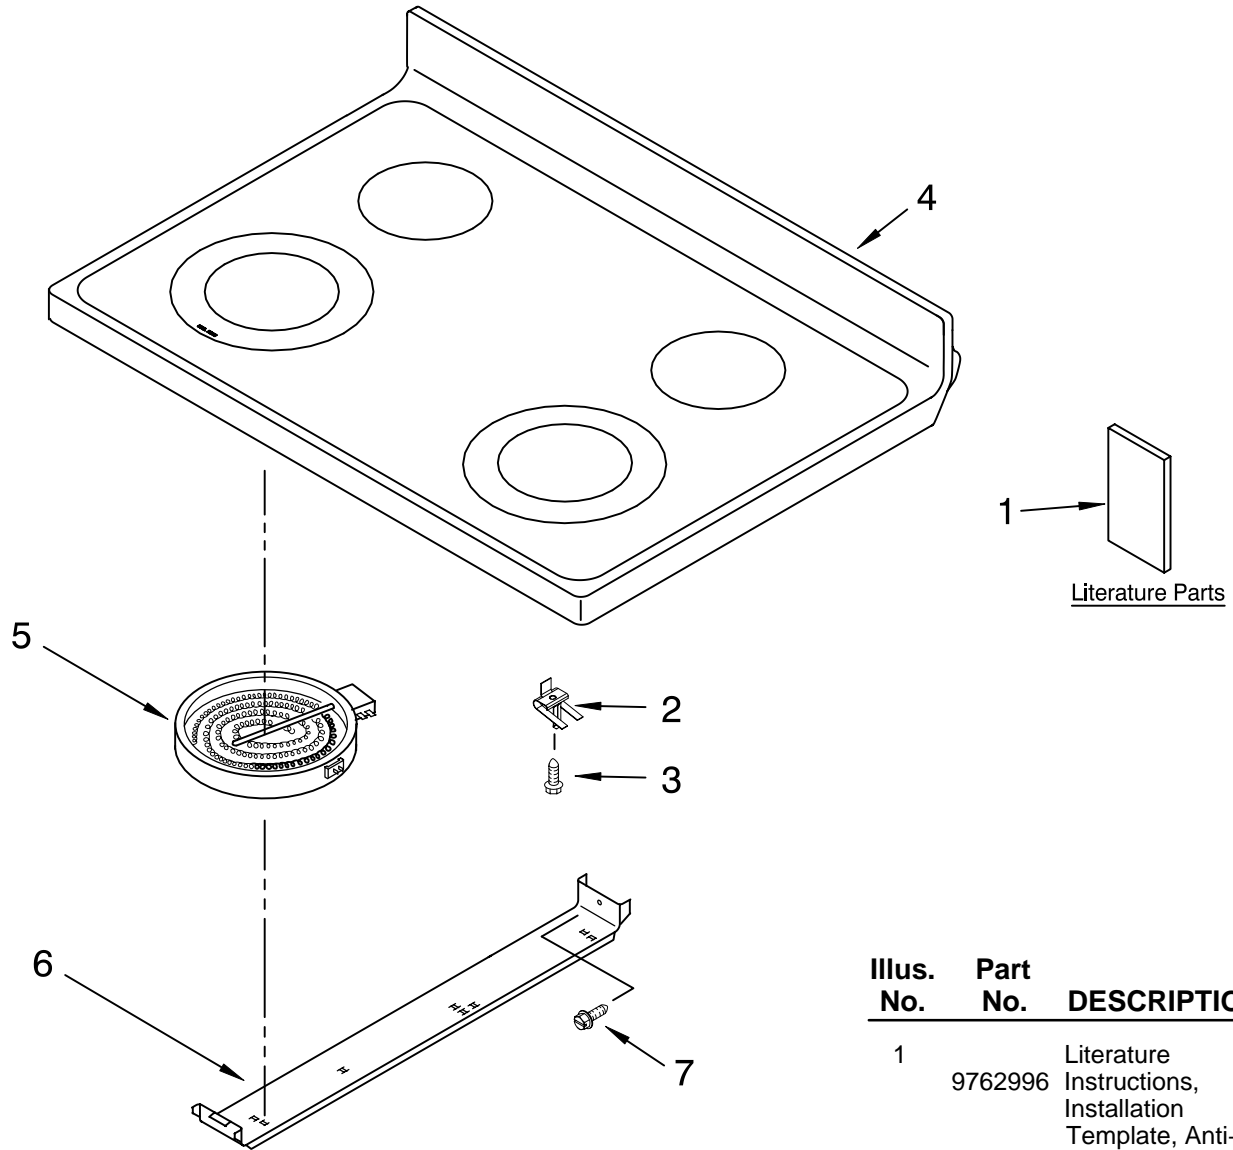

COOKTOP PARTS

For Models: RF367LXSQ1, RF367LXSB1, RF367LXSS1, RF367LXSY1
 (Designer White) (Black) (Stainless Steel)(Universal Silver)

30" ELECTRIC CERAN
 FREESTANDING RANGE
 SELF CLEAN OVEN




Illus. No.	Part No.	DESCRIPTION
1	9762996	Literature Instructions, Installation Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	9763001	Owners Manual
	9762979	Tech Sheet
	9762761	Safer Cooking Tips
2	W10035930	Spring, Locator
3	3196170	Screw
4		Cooktop
	9763330	White
	9763332	Black
5		Element, Surface
	8523047	2400/1000W – LF,RF
	8273994	1200 W – LR,RR
6	8272791	Bracket, Element
7	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF367LXSQ1, RF367LXSB1, RF367LXSS1, RF367LXSY1
(Designer White) (Black) (Stainless Steel)(Universal Silver)

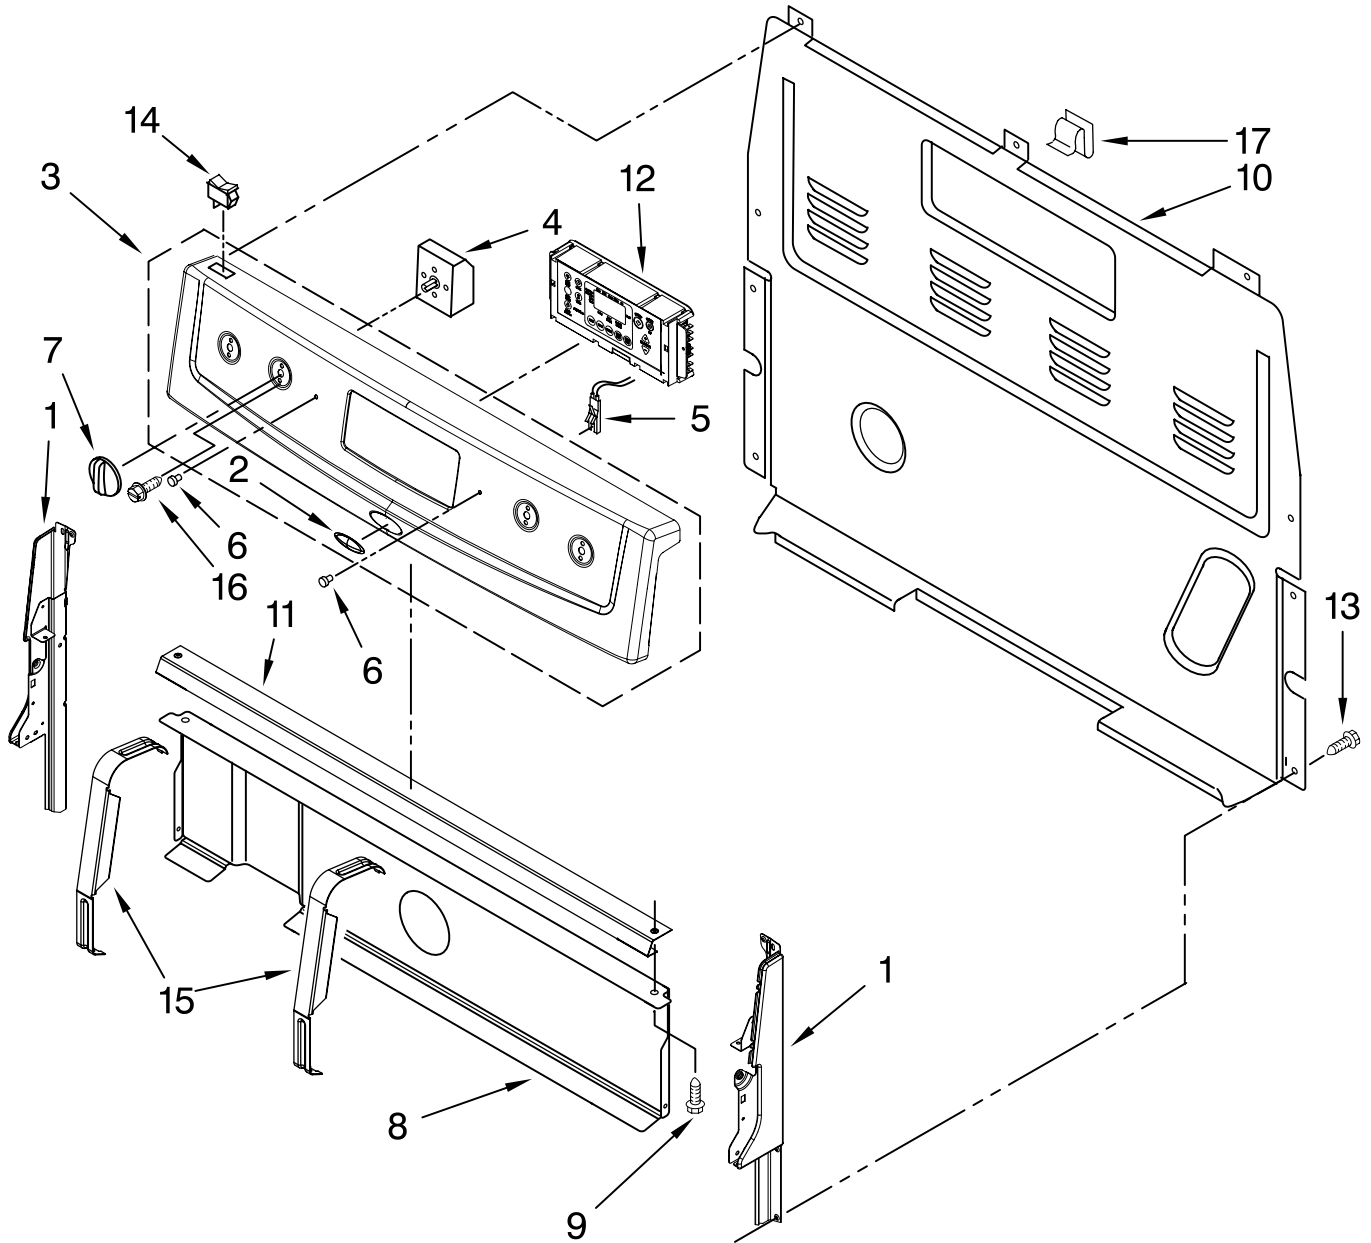


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Endcap	4		Switch, Infinite	11	9762095	Brkt-Mntg, Console
	W10009080	Black Left		9758060	LF,RF	12		Control, Range
	W10009090	Black Right		3148951	LR,RR		W10114381	Black
	W10009040	White Left	5	8523265	Light, Ind. (2)		W10114380	White
	W10009050	White Right	6	3196068	Lens, Light (2)	13	3196178	Screw
2	9757609	Nameplate	7		Knob, Infinite (4)	14		Switch, Rocker
3		Panel, Control		9761964	Black		3149360	White
	9762021	Black		9761962	White		3148564	Black
	9762019	White	8	8523280	Shield, Heat	15	9762078	Brkt-Mntg, EOC
	9762022	Stainless	9	3196166	Screw	16	3400882	Screw
			10	8272473	Cover, Upper	17	8273564	Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS


For Models: RF367LXSQ1, RF367LXSB1, RF367LXSS1, RF367LXSY1
(Designer White) (Black) (Stainless Steel)(Universal Silver)

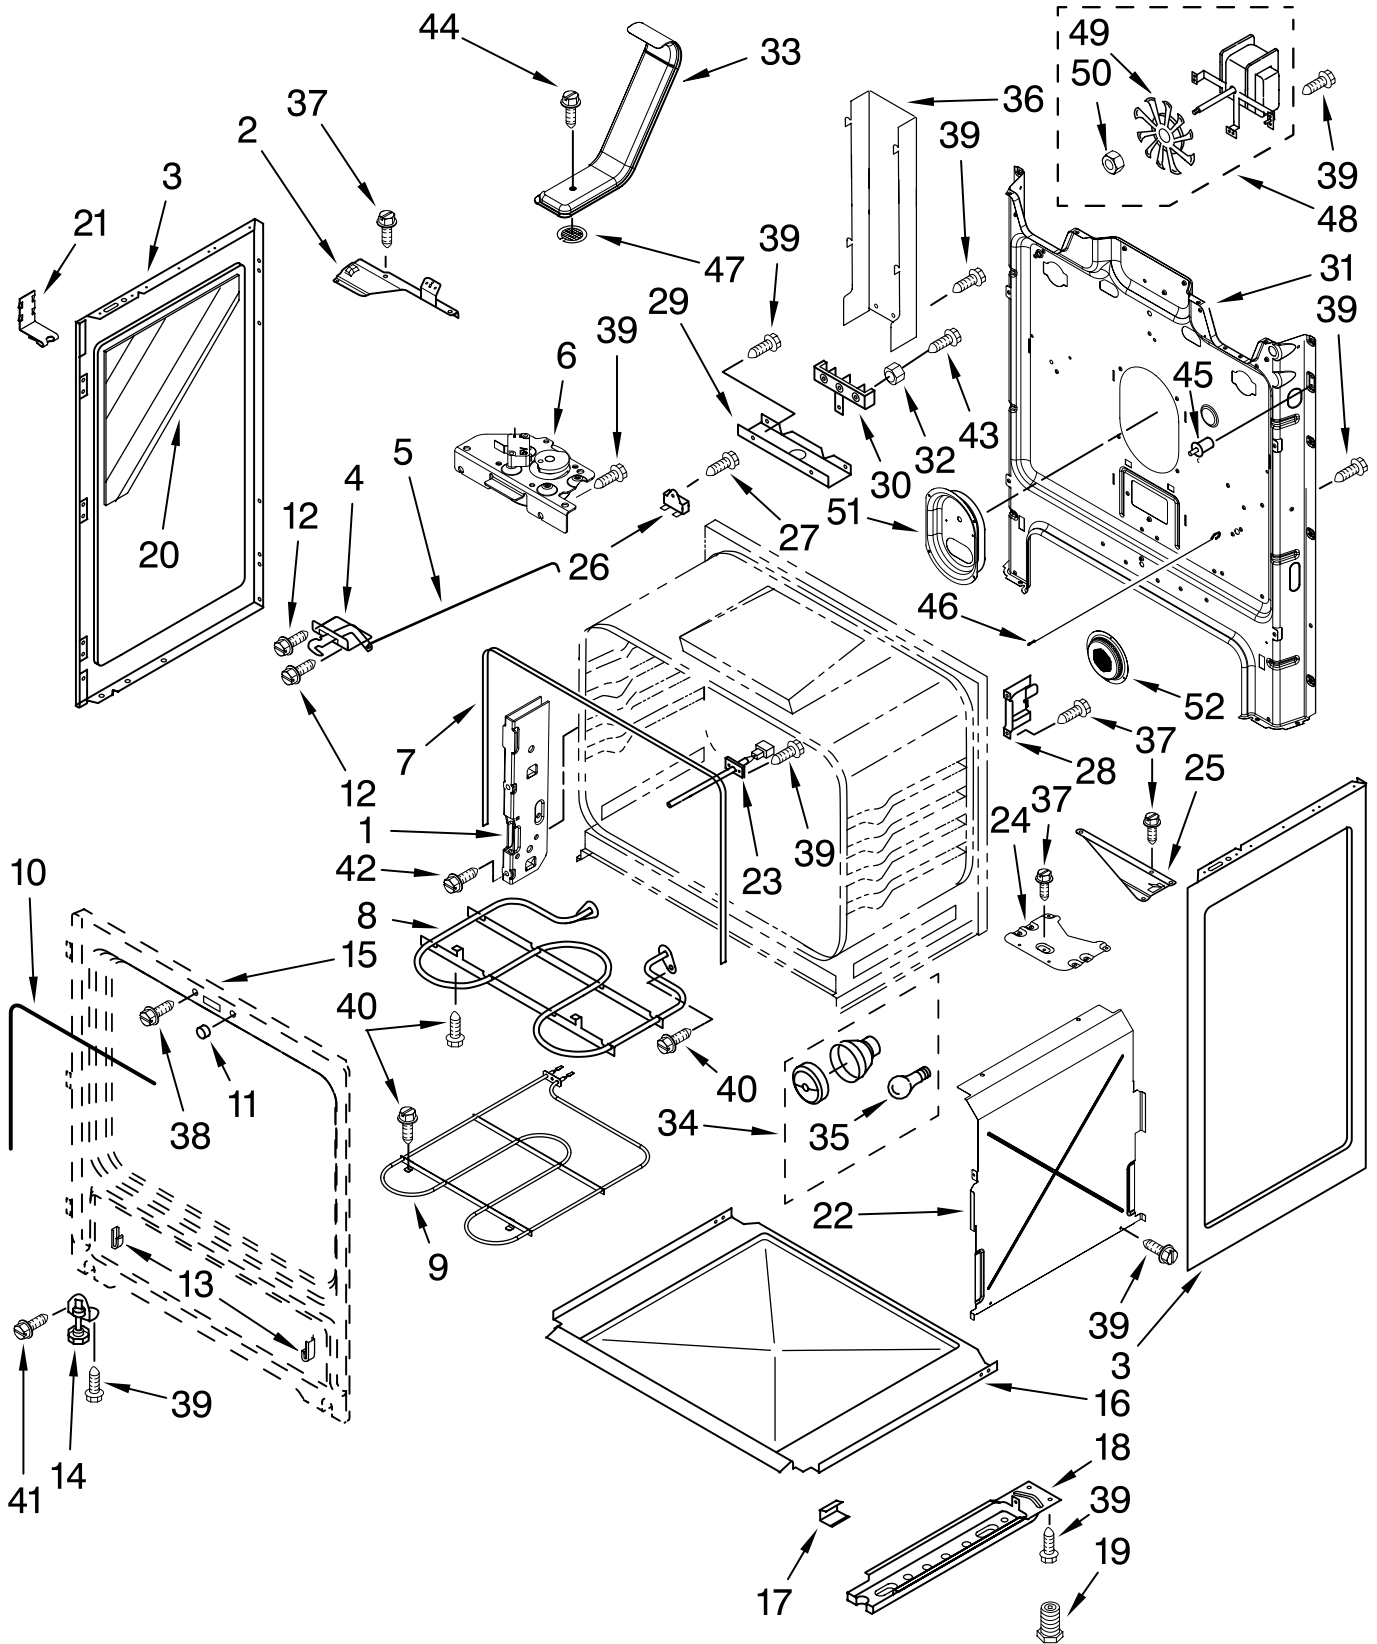

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: RF367LXSQ1, RF367LXSB1, RF367LXSS1, RF367LXSY1
 (Designer White) (Black) (Stainless Steel)(Universal Silver)

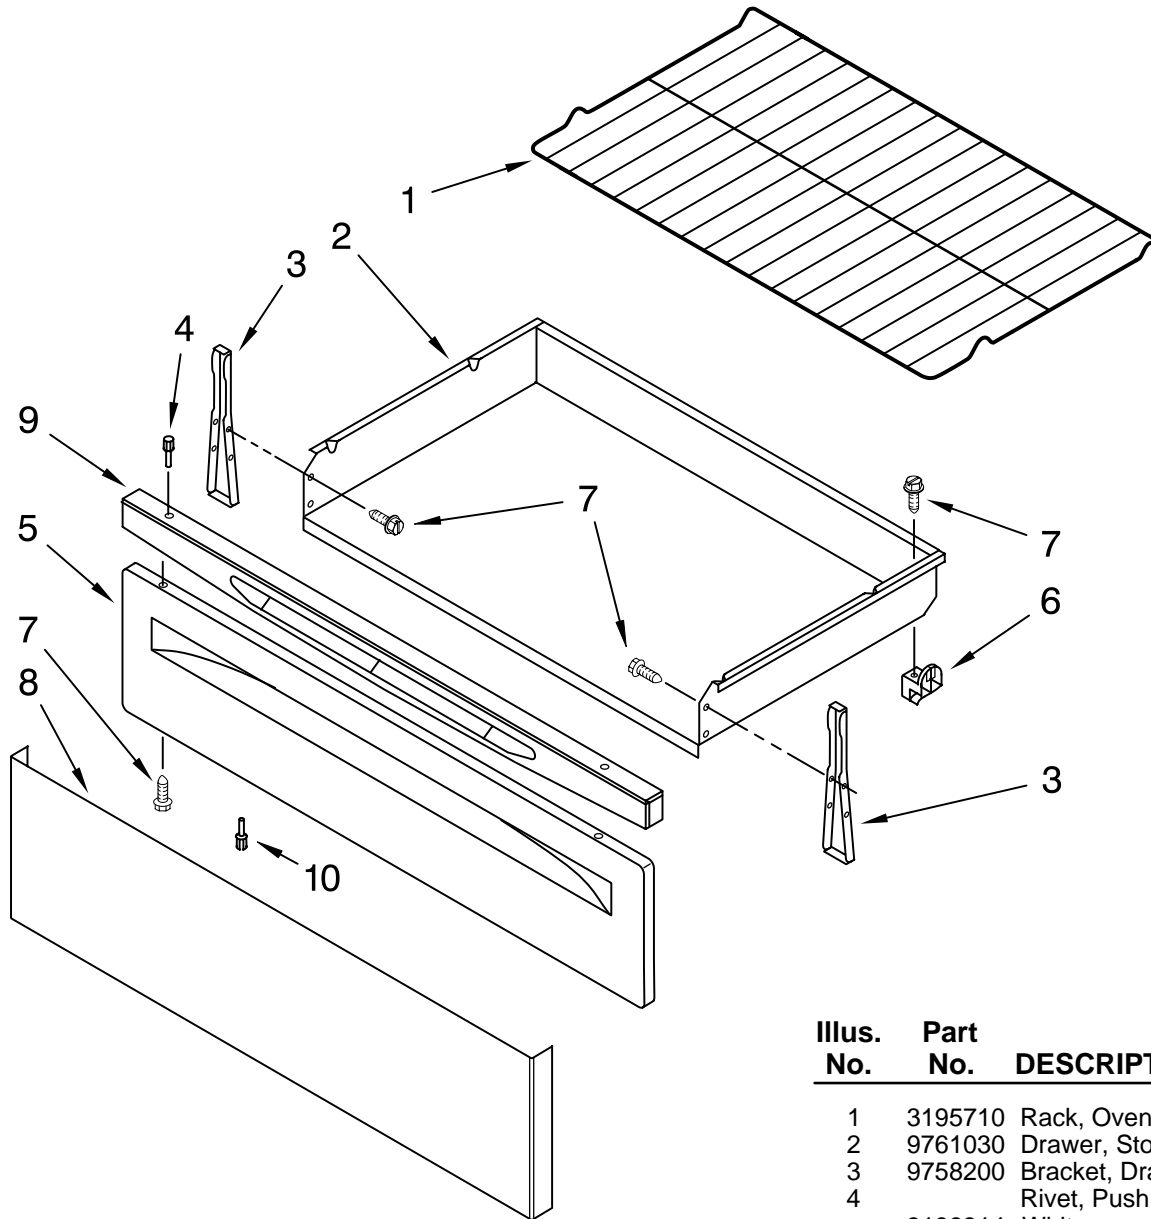


Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	9761030	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196814	White
	3196813	Black
5		Drawer Front
	8053339	White
	8053341	Black
6	8053334	Glide, Drawer (2)
7	3196168	Screw
8	9755798	Panel, Stls Model
9		Handle
	9757219	Stainless Steel
	9762251	Universal Silver
10	9781235	Clip, Stls Model

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF367LXSQ1, RF367LXSB1, RF367LXSS1, RF367LXSY1
(Designer White) (Black) (Stainless Steel)(Universal Silver)

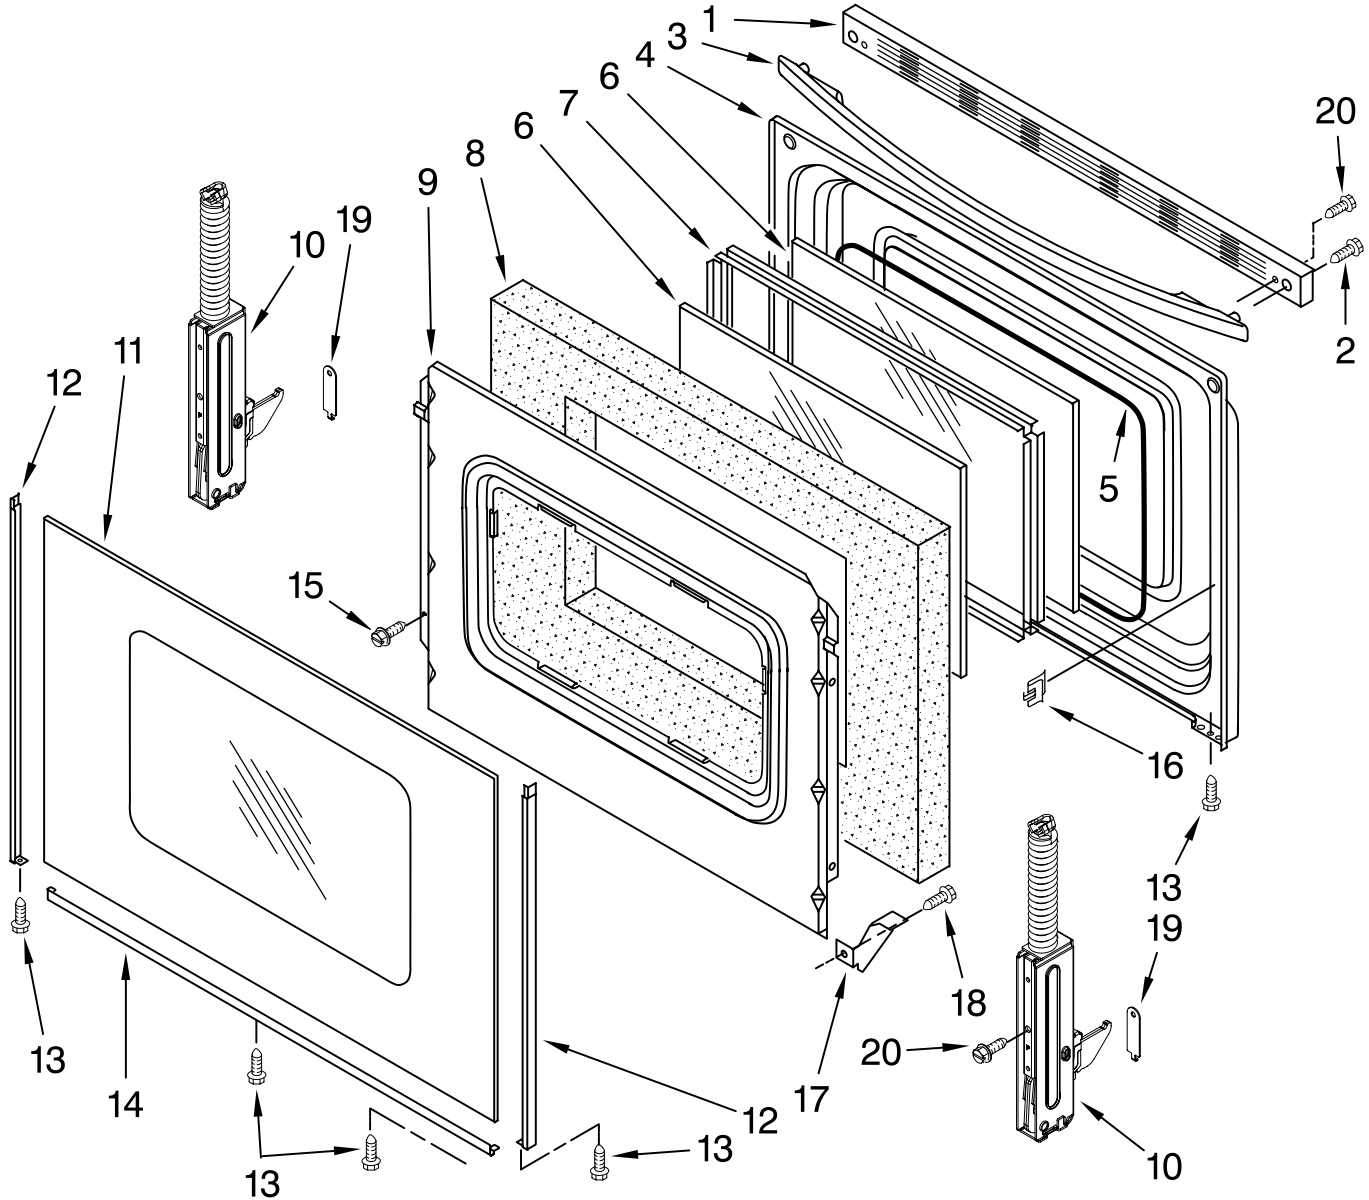

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

1	9762391	Trim, Top
	9761975	Black
	9762394	White
	9762394	Black Stainless
	W10067560	Universal Silver
2	3196164	Screw
3	9761983	Handle, Door
	9761982	Black
	9761982	White
	9761985	SS for Unvrsl Slvr
4	9761344	Liner, Door
5	8522414	Seal, Window
6	9758162	Glass, Inner (2)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

7	3186289	Frame, Glass
8	8272618	Insulation, Door
9	9761357	Retainer, Insln
10	9761493	Hinge, Door (2)
11	W10075990	Black
	W10075980	White
	9756435	Black Stainless
12	8523171	Trim, Side
	8523165	Black Left
	8523165	Black Right
	8523172	White Left
	8523166	White Right
	W10113926	Unvrsl Slvr LH
	W10113925	Unvrsl Slvr RH

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

13	3196160	Screw
14	8523177	Trim, Bottom
	8523175	Black
	8523175	White
	8523180	Black Stainless
	W10067550	Universal Silver
15	W10031790	Screw
16	3196025	Clip, Door Glass
17	3196794	Bracket, Window(2)
18	3196165	Screw
19	9761517	Clip, Dr Mntg (2)
20	W10031780	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: RF367LXSQ1, RF367LXSB1, RF367LXSS1, RF367LXSY1
(Designer White) (Black) (Stainless Steel)(Universal Silver)

Illus. No.	Part No.	DESCRIPTION
Parts Not Illustrated and Optional Parts (Not Included)		

**SPLICING WIRES--25FT.
LENGTH**

242828	Wire, Black	12 Ga. 150° c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242827	Wire, Yellow	14 Ga. 150°c

Illus. No.	Part No.	DESCRIPTION
<u>REFINISHING MATERIAL</u>		
	799832	Kit, Porcelain Repair (White)
	242756	Touch-Up Self-Clean(1/2 Pt)
	261582	Grease

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

Illus. No.	Part No.	DESCRIPTION
<u>PAINT, BULK (1 qt.)</u>		
	799344	White (Uncut)
	4392900	Biscuit(Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass

ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

WIRING HARNESS PARTS

w10115055	Harness, Wire (Cooktop Left)
w10115056	Harness, Wire (Cooktop Right)
9762955	Harness, Wire (Sensor/Dr Switch)
9762429	Harness, Wire (Main)
8523279	Wire, Ground
8524132	Shield, Wiring
313660	Clip, Ground Wire
3196173	Screw
3196154	Screw, Ground

HEADINGS

COOKTOP PARTS

CONTROL PANEL PARTS

CHASSIS PARTS

DRAWER & BROILER PARTS

DOOR PARTS

OPTIONAL PARTS

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST