




COOKTOP PARTS

For Models: RS696PXGB6, RS696PXGQ6
(Black) (Designer White)

30" ELECTRIC
DROP-IN RANGE
SELF CLEANING
OVEN

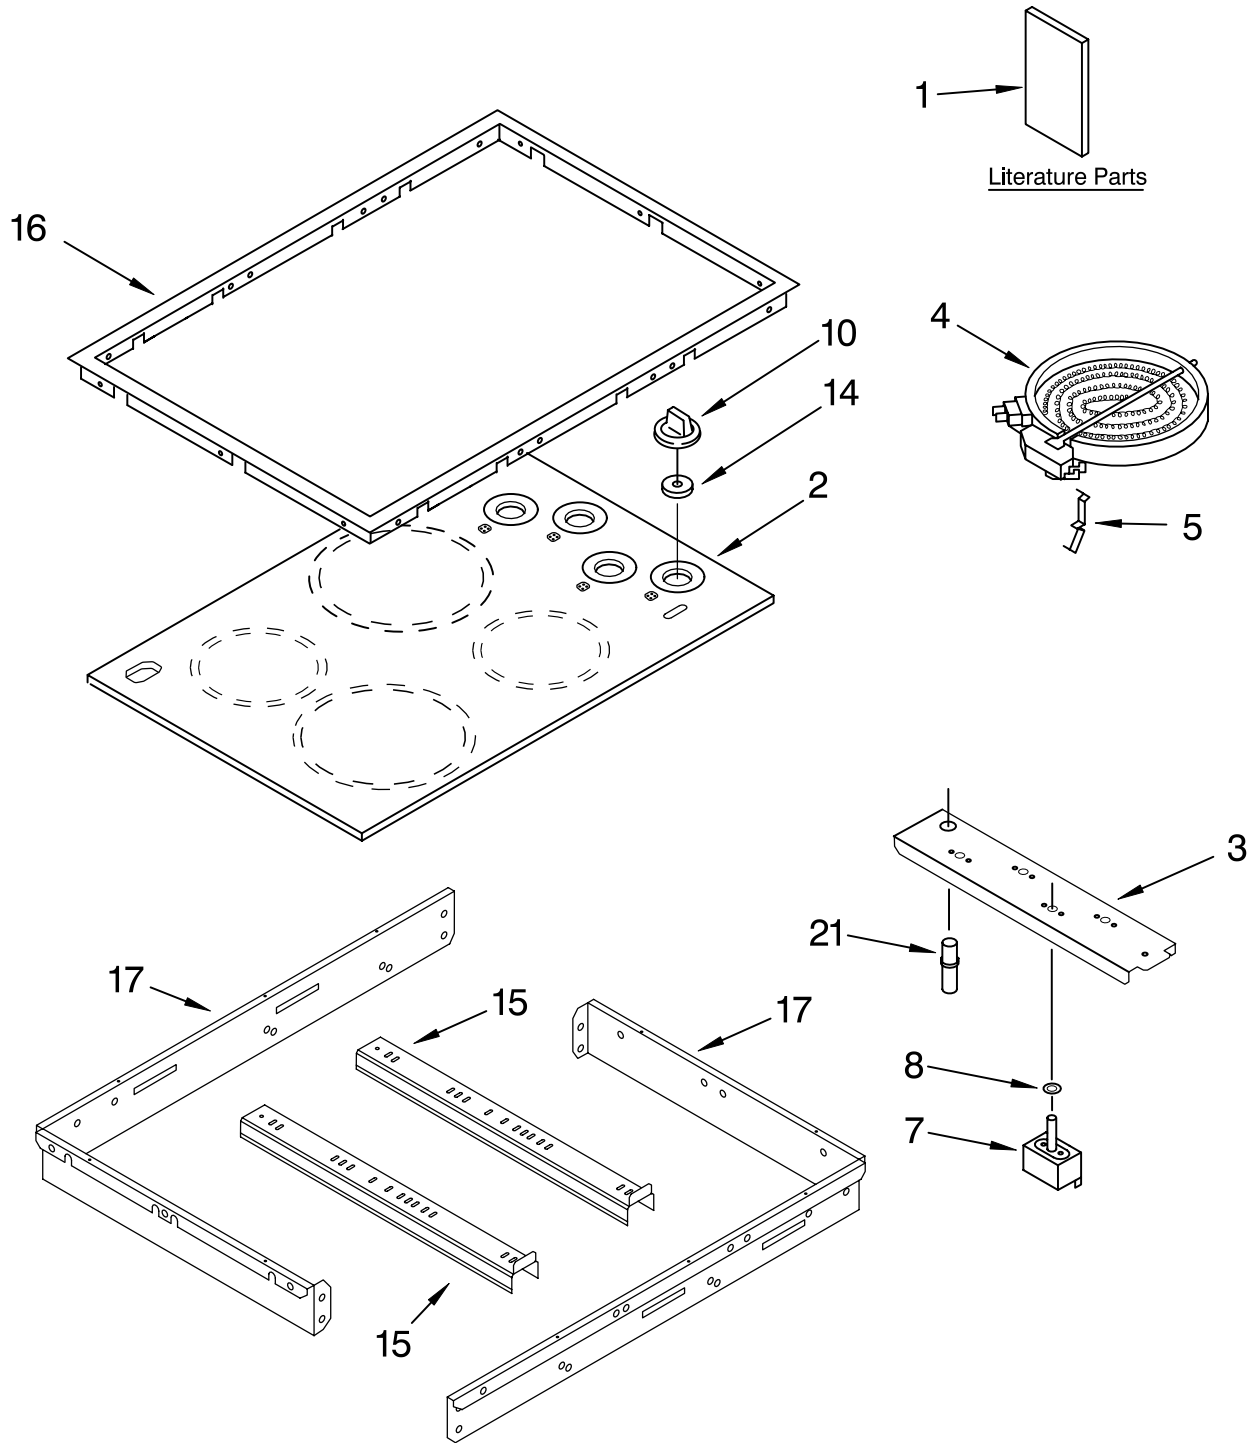

Literature Parts

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Models: RS696PXGB6, RS696PXGQ6
(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Literature Parts
	LIT3191800	Installation Instructions
	LIT3191537	Use & Care Guide
	LIT3192844	Tech Sheet
	LIT3191638	Safe Cooking Tips
2		Cooktop, Glass
	3191843	Black
	3191189	White
3	3191310	Bracket, Switch Mounting
4		Element, Surface
	8272567	1200W RF-LR
	8272566	1800W RR
	8272565	2500W LF
5	3191791	Spring, Locator
	246119	Screw (8)
7		Switch, Infinite
	3191049	1200W RR-LR (Silver Shaft)
	3191050	1800W RR (Yellow Shaft)
	4454541	2500W LF (Red Shaft)
	311865	Screw
8	3183956	Seal, Switch Cover
10		Knob, Control (4)
	3196231	Black
	3196232	White
14	3182435	Seal, Switch (4)
15	3191515	Bracket, Support Element
16		Trim Ring, Cooktop
	3193228	Black
	3193227	White
	4168863	Screw
17	3192452	Frame, Cooktop
21	3191952	Lamp, Indicator
	3191953	Bumper, Rubber
	9750835	Bumper, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: RS696PXGB6, RS696PXGQ6
(Black) (Designer White)

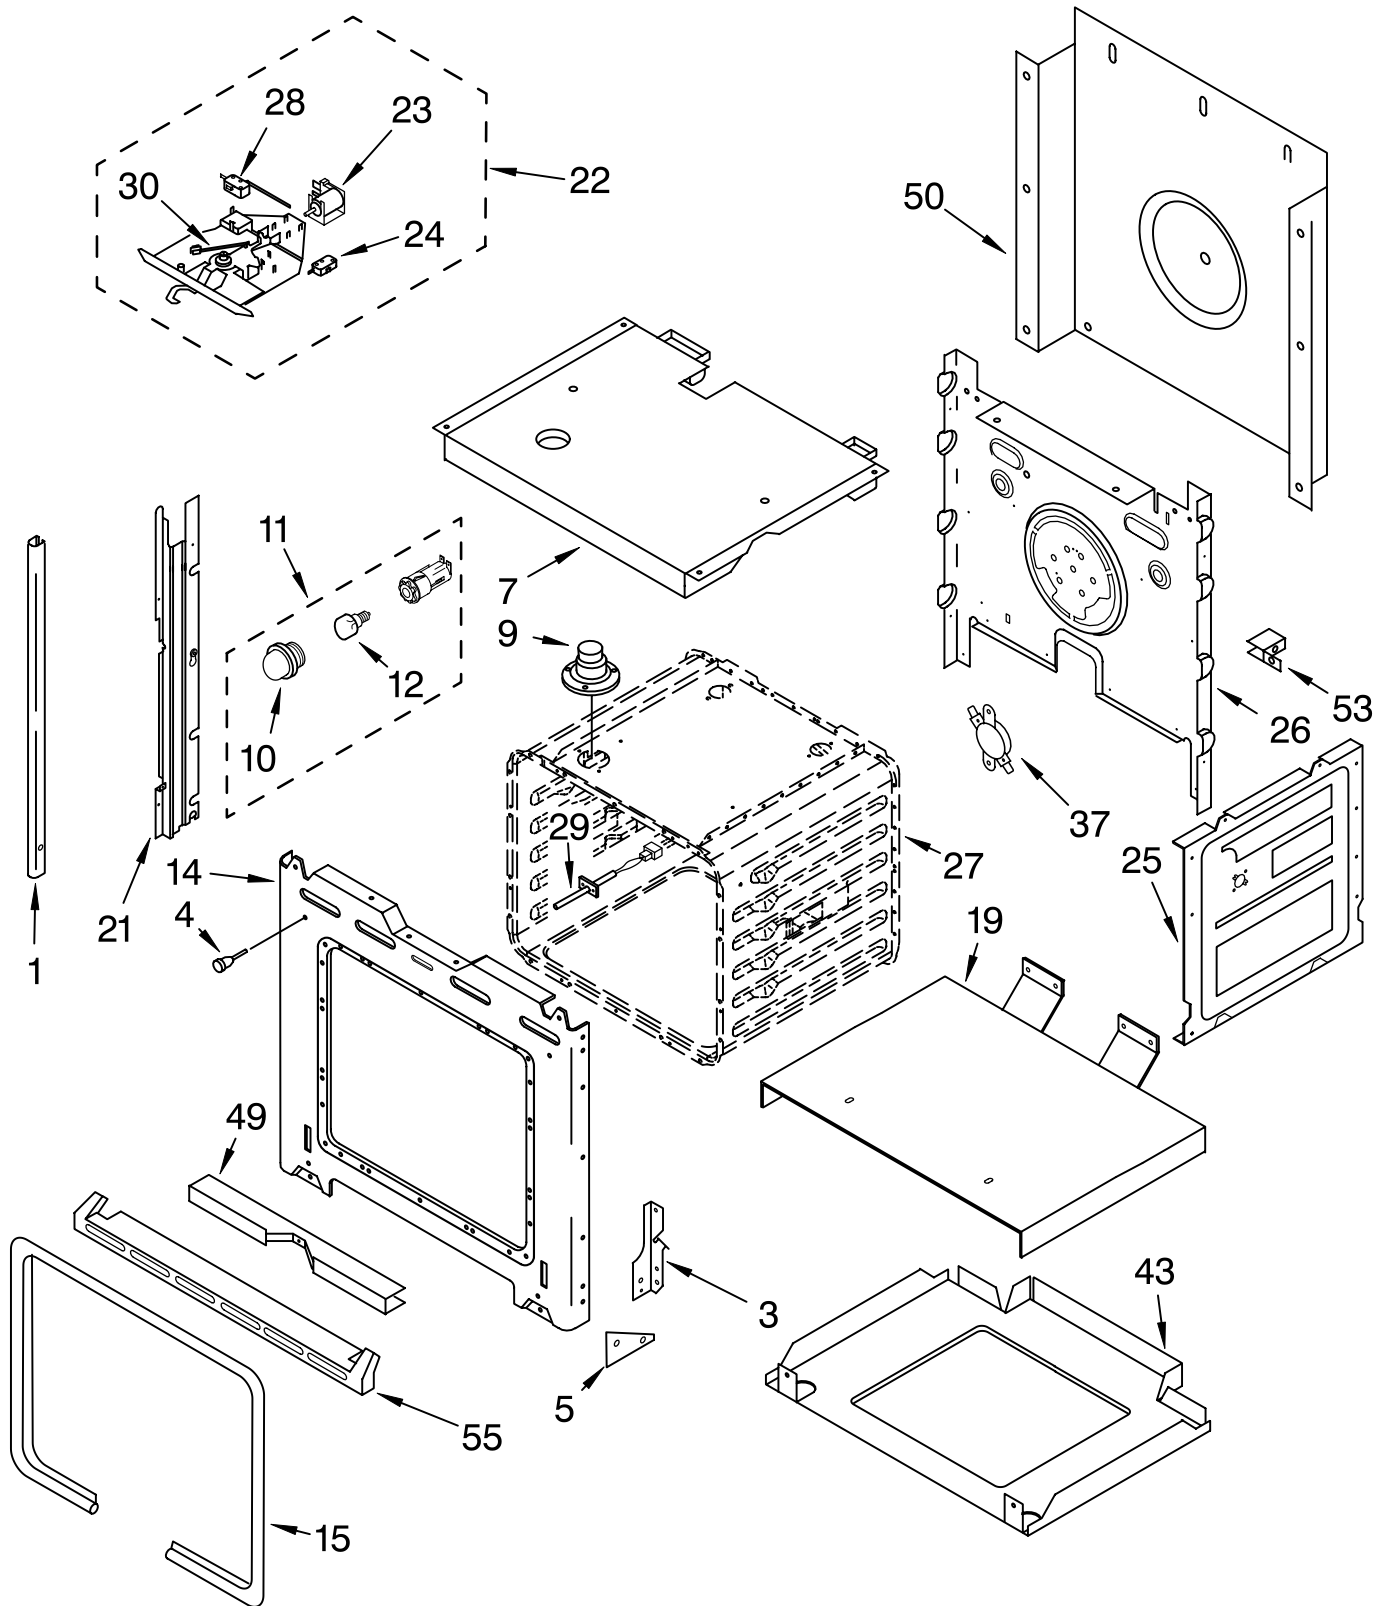

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: RS696PXGB6, RS696PXGQ6


(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			9	4452158	Tube, Vent	27		Liner, Oven (Not serviceable)
				4449154	Screw	28	4451426	Micro Switch
			10	4452165	Lens, Light	29	4455636	Sensor
			11	4452368	Oven Light Assy		4449154	Screw
			12	4452166	Bulb, Light	30	4451537	Spring, Latch
			14	4451740	Frame, Front	37	4451442	Thermostat (TOD) (Temp.) SPST
1		Trim, Side (Right Hand)		4449040	Screw	43	4455530	Base, Chassis
	4450844	Black Model		4450118	Nut	49	4448933	Retainer, Gasket
	4449747	Screw	15	4455382	Gasket, Door		4449154	Screw
	4450845	White Model	19	4451478	Support, Insulation	50	4451747	Cover, Back
	4449041	Screw (Left Hand)		4449809	Screw		4449809	Screw
	4450847	Black Model	21		Rail, Side	53	4449845	Support, Bracket
	4449747	Screw		4450579	Right Side		4449809	Screw
	4450848	White Model		4450580	Left Side	55	4448477	Trim, Bottom
	4449041	Screw		4448444	Grommet		4448478	Black Model
3		Hinge Receiver		4449154	Screw			White Model
	4455722	Left Hand	22	4451896	Latch Assy	FOLLOWING PARTS NOT ILLUSTRATED		
	4455723	Right Hand	23	4452224	Solenoid	INSULATION		
4	4448520	Bumper, Door	24	4452312	Micro Switch N.C.	4449316		Insulation, Wrap
5	4455509	Bracket, Support		4449809	Screw	4450365		Insulation, Back
7	4455286	Top Chassis	25	4454691	Side, Chassis (R.H. & L.H.)			
	4449809	Screw		4449809	Screw			
			26	4452234	Back, Chassis			
				4449809	Screw			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RS696PXGB6, RS696PXGQ6
(Black) (Designer White)

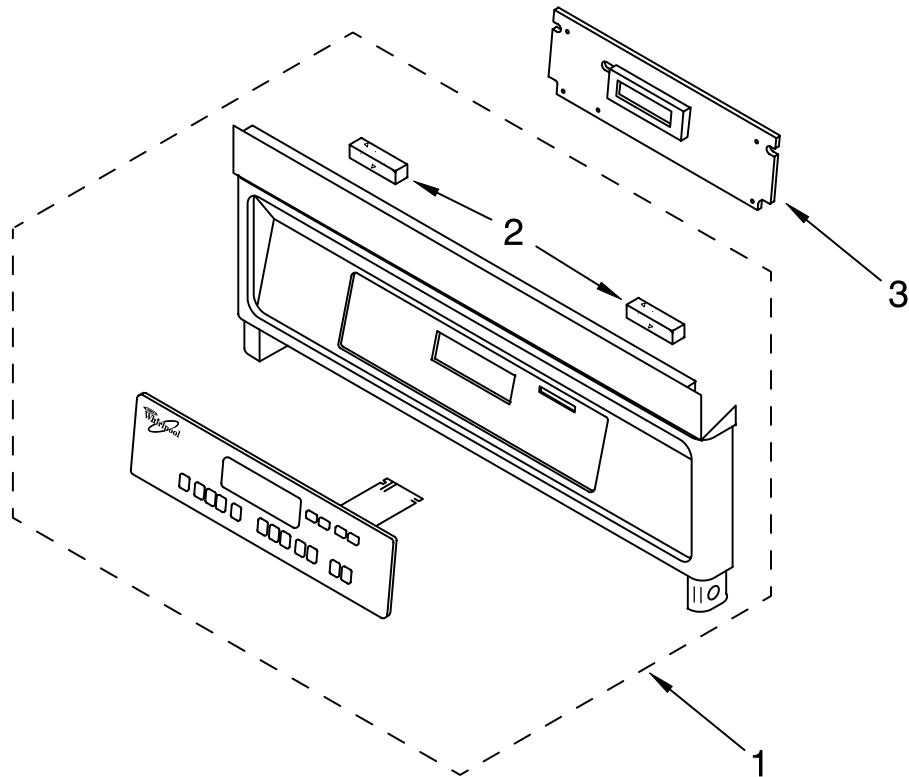

Illus. No.	Part No.	DESCRIPTION
-------------------	-----------------	--------------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Control Panel Assy. W/Membrane Switch
	4452844	Black Model
	4452845	White Model
	4449745	Screw
	4159465	Screw
2	4451034	Gasket, Control Panel
3	4453193	Microcomputer
	4449745	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models: RS696PXGB6, RS696PXGQ6
(Black) (Designer White)

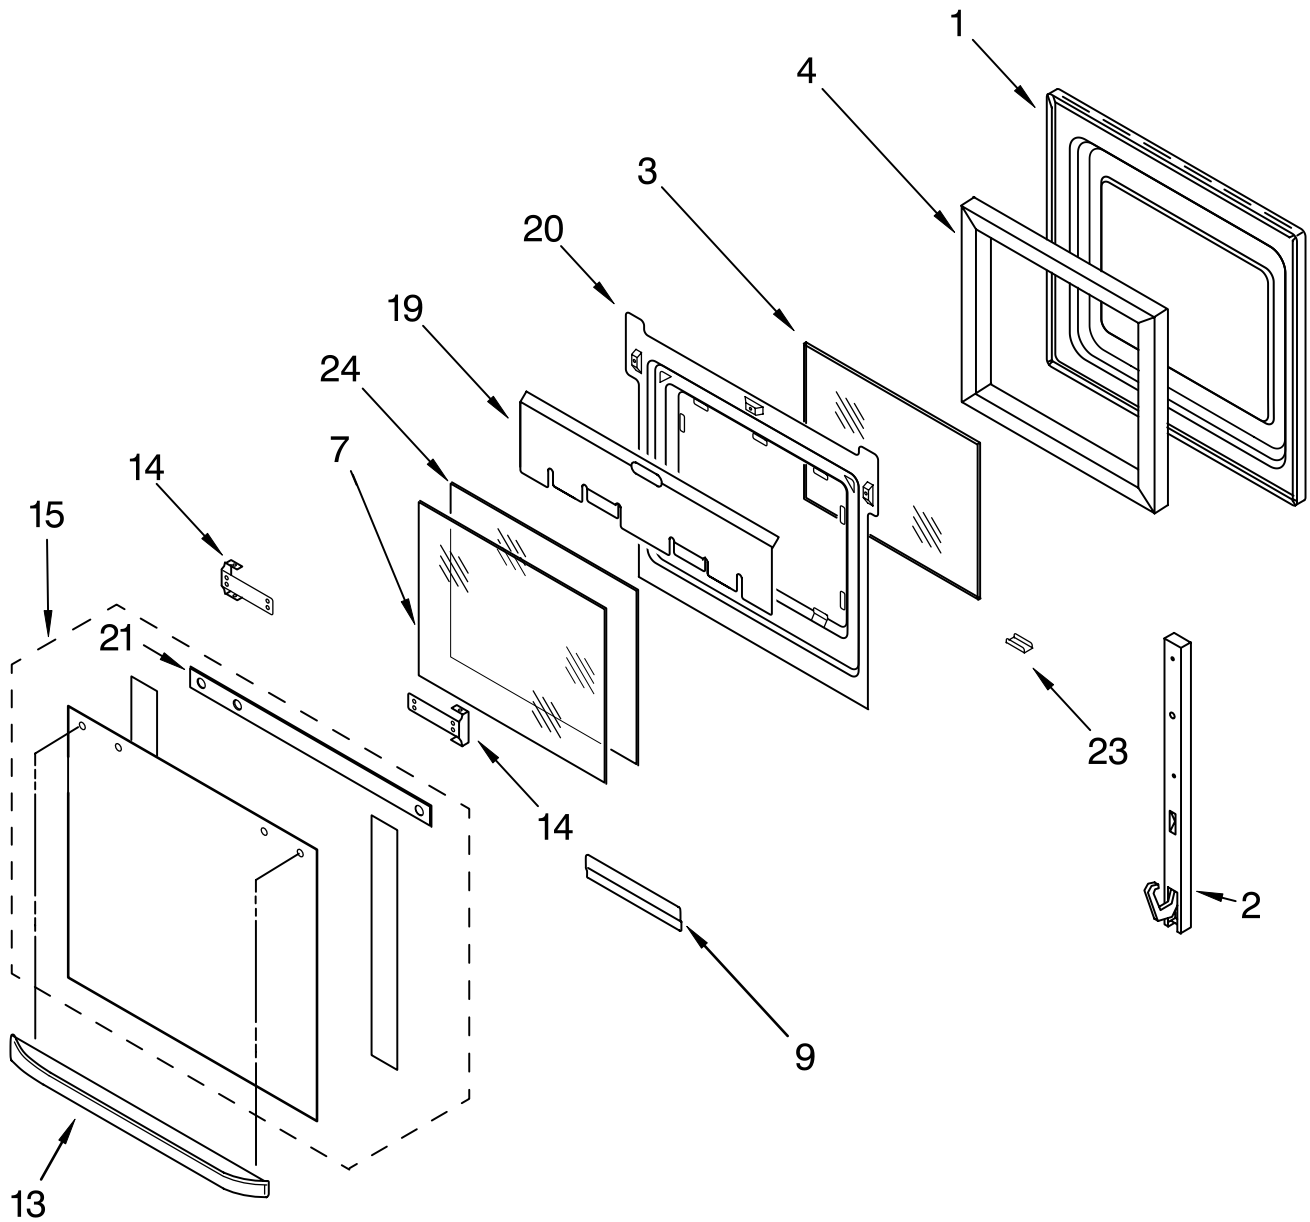

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

- | | | |
|---|---------|--------------|
| 1 | 4451719 | Door Liner |
| 2 | 4455525 | Hinge, Door |
| | 4449743 | Screw |
| 3 | 4449259 | Glass, Inner |

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

- | | | |
|----|---------|------------------|
| 4 | 4451722 | Insulation, Door |
| 7 | 4449263 | Glass, Inner |
| 9 | 4451668 | Retainer, Glass |
| | 4449809 | Screw |
| 13 | 4448854 | Door Handle |
| | 4448855 | Black Model |
| | 4448855 | White Model |
| 14 | 4450813 | Bracket, Handle |
| | 4451040 | Screw |
| 15 | 4452065 | Assy, Door Glass |
| | 4452065 | Black Model |
| | 4452066 | White Model |


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

- | | | |
|----|---------|-----------------|
| 19 | 4450362 | Shield, Heat |
| | 4449809 | Screw |
| 20 | 4451671 | Retainer, Glass |
| | 4449809 | Screw |
| 21 | 4451674 | Seal, Door Top |
| 23 | 4450863 | Retainer, Clip |
| | 4450863 | Black Model |
| | 4450864 | White Model |
| | 4449743 | Screw |
| 24 | 4455257 | Glass, Inner |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: RS696PXGB6, RS696PXGQ6
(Black) (Designer White)

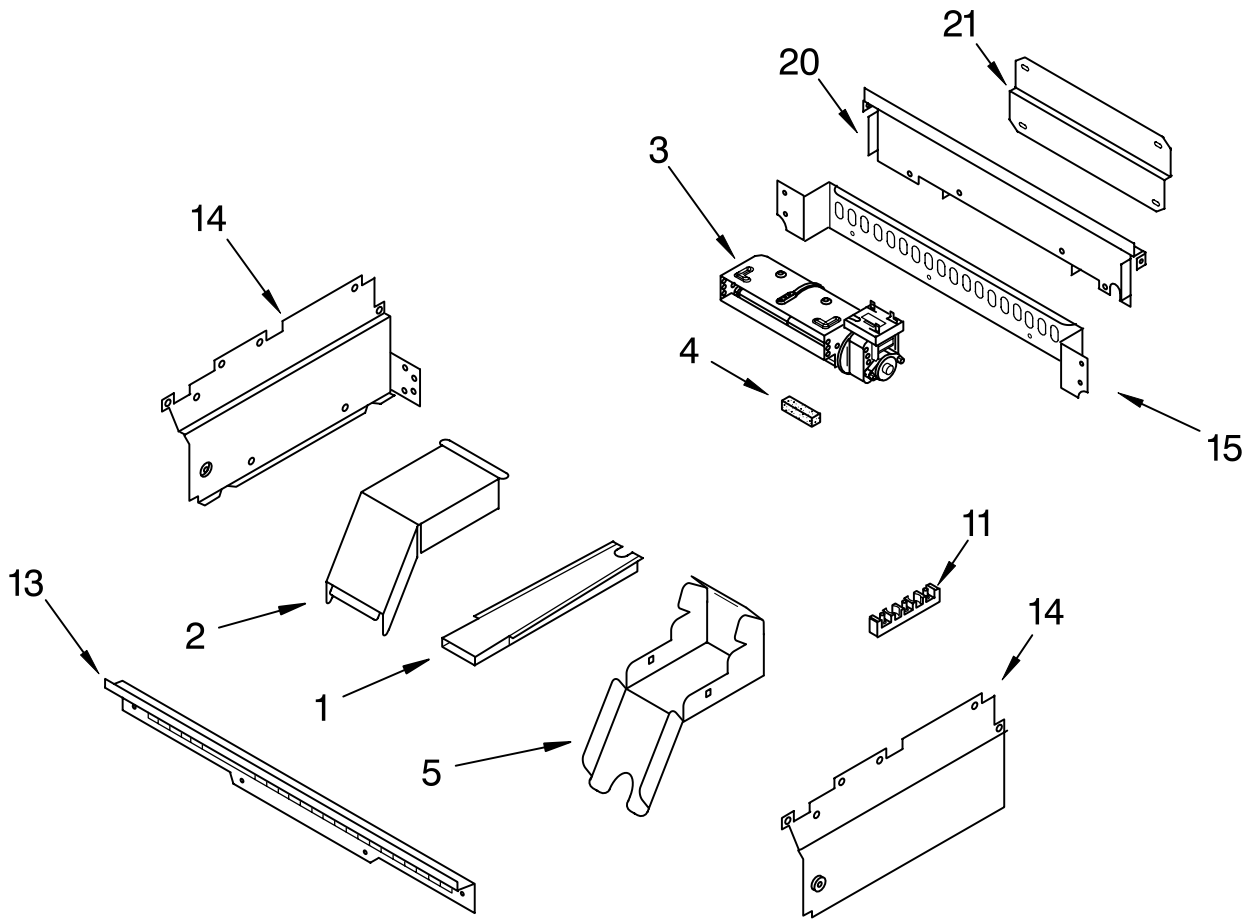

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451759	Vent, Exhaust
2	4449040	Screw
2	4455178	Elbow, Vent-Top

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

3	4455334	Blower
	4455352	Bracket, Blower
4	4451758	Block, Foam
5	4455177	Elbow, Vent-Bottom
11	4449868	Block, Terminal
	3400080	Screw
13	4448549	Vent, (Control Panel)
	4450038	Screw

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


14		Side, Control Compt.
	4451535	Right
	4451536	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
20	3191842	Cover, Rear
21	4451407	Plate, Support
	4452260	Spacer, Foam

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: RS696PXGB6, RS696PXGQ6

(Black) (Designer White)

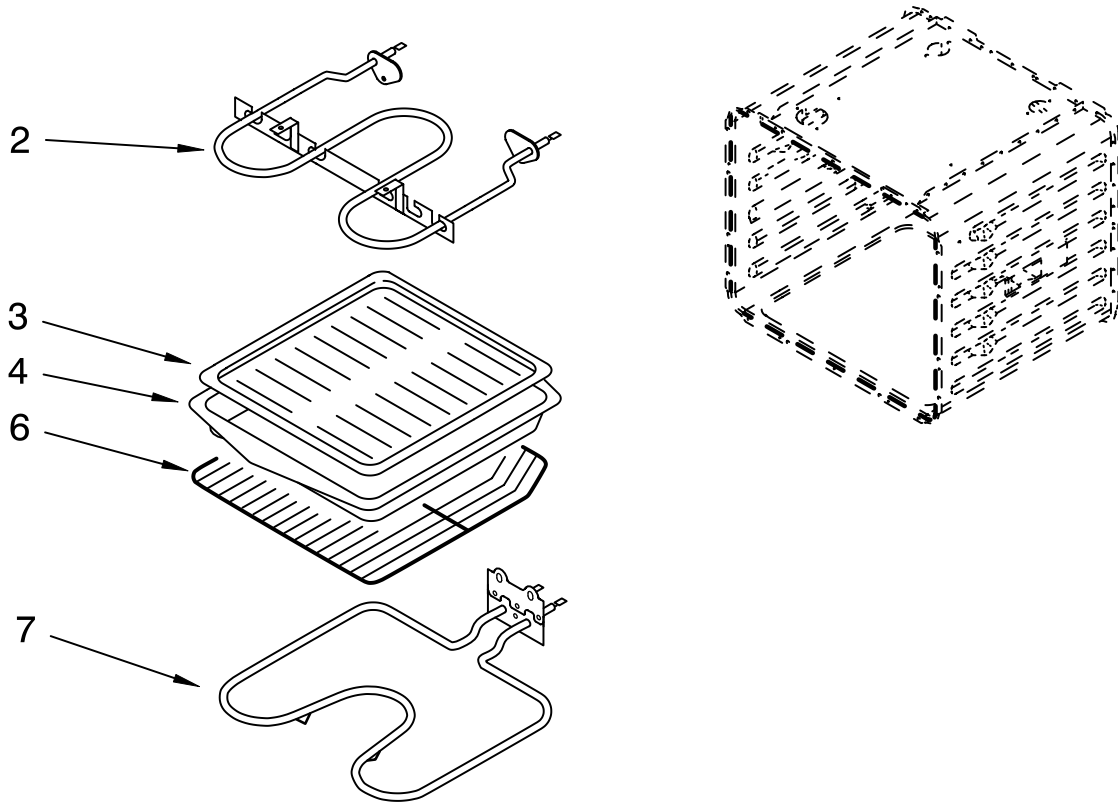

Illus. No.	Part No.	DESCRIPTION
2	4452154	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: RS696PXGB6, RS696PXGQ6
(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>		
	72017	White
	261869	Cord Brown
	72032	Black
<u>PAINT, SPRAY</u>		
	350930	White
	261900	Citrine White
	830864	Black
<u>ADHESIVE</u>		
	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
<u>SPLICING WIRES--25FT. LENGTH</u>		
	242828	Wire (12 Ga. 150 c Black)
	242820	Wire (14 Ga. 150 c Black)
	242821	Wire (14 Ga. 150 c Blue)
	242822	Wire (14 Ga. 150 c Brown)
	242830	Wire (14 Ga. 200 c Brown)
	242823	Wire (14 Ga. 150 c Green)
	242824	Wire (14 Ga. 150 c Orange)
	242829	Wire (12 Ga. 150 c Red)
	242825	Wire (14 Ga. 150 c Red)
	242831	Wire (14 Ga. 200 c Red)
	242826	Wire (14 Ga. 150 c White)
	242827	Wire (14 Ga. 150 c Yellow)
	242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
<u>WIRING HARNESS PARTS</u>		
	4455733	Harness, Wire (Main)
	3191956	Harness, Wire (Infinite Switch)
	4455280	Harness, Wire (Burners)
	4451163	Conduit
	4448664	Clamp
	4449809	Screw 112432 Nut
	4450800	Screw, Ground
	4451761	Support, Wiring
	4454842	Tie, Cable
	4452222	Spacer, Harness
<u>Miscellaneous</u>		
	814381	Pin Hinge Kit
	4448950	Screw, Install (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST