



---

# Service Manual

## Cooker

### ACM 388 WH

---

<b>Model Version</b>		<b>Page</b>
ACM 388 WH 8576 388 68000		
	Technical data	2
	Spare part list	3
	Exploded view	4 - 5
	Wiring diagram	6

**Technical data**

**Dimensions cooker**

Height	84	cm
Width	60	cm
Depth	60	cm

**Dimensions hob**

Width	50	cm
Depth	60	cm

**Dimensions oven**

Height	29	cm
Width	38	cm
Depth	48	cm
Volume	53	l

**Electrical connection**

Voltage	110	V
Frequency	60	Hz

**Electrical power**

Oven lamp	15	W
Total connected load	20	W

**Gas power**

**Cooktop power**

Front left burner	Rapid		
	Rapid	1300	W
Rear left burner	Semirapid		
	SR	670	W
Rear right burner	Rapid		
	R	1300	W
Front right burner	Semirapid		
	SR	6700	W

**Oven power**

Oven burner	2270	W
Grill burner	2600	W
Total absorbed gas power	8810	W

Type of gas used	Type of burner	Injector marking (mm)	Rated heat capacity (W)	Rated consumption	Gas pressure (mbar)
LPG	large (R)	0.58	3000	94.7 g/h	28
G30	medium (SR)	0.41	650	48.8 g/h	
Butane (80 %)	oven	0.75	1270	165 g/h	
	grill	0.80	2270	189 g/h	
LPG	large (R)	0.58	3000	94.7 g/h	28
G31	medium (SR)	0.41	650	48.8 g/h	
Propane (20 %)	oven	0.75	1270	165 g/h	
	grill	0.80	2270	189 g/h	

<b>SR</b>	<b>R</b>
<b>R</b>	<b>SR</b>

R Rapid  
 SR Semirapid


## Spare part list

**Model** ACM 388 WH  
**Service No.** 857638868000  
**Version** 857638868000

Pos. No.	12NC Code	Description
002 0	<b>4819 442 38688</b>	Lid
011 0	<b>4819 500 18142</b>	Foot
011 1	<b>4819 535 38113</b>	Distance sleeve foot
022 0	<b>4819 442 38689</b>	Side, range right
022 1	<b>4819 442 38691</b>	Side, range left
025 0	<b>4819 459 48864</b>	Frame
031 0	<b>4819 442 38692</b>	Hob
032 3	<b>4819 417 19344</b>	Hinge f. hob right
032 3	<b>4819 417 19345</b>	Hinge f.hob left
034 8	<b>4819 466 98873</b>	Spacer hob front
034 9	<b>4819 466 98874</b>	Spacer hob rear
040 0	<b>4819 417 19545</b>	Hinge
040 9	<b>4812 417 18842</b>	Hinge left
040 9	<b>4819 417 19257</b>	Hinge,lower right
041 8	<b>4819 417 58142</b>	Roller Hinge
043 1	<b>4819 417 19515</b>	Hinge right
043 1	<b>4819 417 19516</b>	Hinge left
047 0	<b>4819 417 19517</b>	Hinge
047 5	<b>4819 462 58287</b>	Cover
050 0	<b>4819 440 59511</b>	Front,panel
050 1	<b>4819 404 78522</b>	Panel, rear
050 2	<b>4819 417 19254</b>	Hinge right
050 2	<b>4819 417 19255</b>	Hinge left
110 0	<b>4819 498 78179</b>	Handle
121 0	<b>4812 440 10419</b>	Oven door counter door BLK
124 0	<b>4819 530 48523</b>	Tube for smoke
141 0	<b>4819 450 58097</b>	Oven glass front
142 0	<b>4819 450 69503</b>	Inner glass
191 0	<b>4819 468 18013</b>	Gasket oven
202 0	<b>4819 442 38616</b>	Bottom, oven
241 0	<b>4819 458 58718</b>	Grid for hob
245 0	<b>4819 458 19892</b>	Grid
247 0	<b>4819 418 38369</b>	Fat pan
255 0	<b>4819 442 38322</b>	Bottom, oven
256 0	<b>4819 442 38257</b>	Knob,protection
256 1	<b>4819 532 58252</b>	Spacer
320 0	<b>4819 453 58977</b>	Control panel
324 0	<b>4819 460 78107</b>	Trim, lower
331 0	<b>4819 412 58556</b>	Knob,switch
331 9	<b>4819 492 58065</b>	Spring knob
332 0	<b>4819 381 18236</b>	Switch cap light switch
334 1	<b>4819 411 29385</b>	Knob thermostat
341 0	<b>4819 413 79131</b>	Indication disc gas
341 1	<b>4819 413 79132</b>	Scale thermostat
341 8	<b>4819 413 79151</b>	Scale timer
452 0	<b>4819 360 69431</b>	Grill burner gas
455 0	<b>4819 360 69344</b>	Burner oven
470 1	<b>4819 360 78198</b>	Support nozzle
470 6	<b>4819 360 69338</b>	Support oven burner
472 1	<b>4819 360 68783</b>	Spreader,burner SR
472 2	<b>4819 360 69707</b>	Spreader,burner large
472 6	<b>4819 360 69339</b>	Spreader,burner Oven
473 1	<b>4819 360 78274</b>	Support burner medium
473 2	<b>4819 360 69444</b>	Support burner R
474 0	<b>4812 310 38578</b>	Nozzle injector

Pos. No.	12NC Code	Description
474 0	<b>4819 360 69357</b>	Nozzle grill G 30 0.80
491 0	<b>4819 290 68173</b>	Connect.block TB1
503 0	<b>4819 282 18629</b>	Time switch
558 0	<b>4819 271 29041</b>	Thermostat
571 0	<b>4819 360 58513</b>	Tap Burner R
571 1	<b>4819 360 58512</b>	Tap Burner SR.
591 0	<b>4819 466 98757</b>	Spacer
591 1	<b>4819 492 68318</b>	Spring Spark plug
592 0	<b>4819 210 78069</b>	Thermo couple oven burner
594 0	<b>4812 276 18366</b>	Switch ignition
651 0	<b>4812 134 88029</b>	Lamp oven
652 0	<b>4819 255 18162</b>	Holder,lamp
655 0	<b>4819 273 28356</b>	Microswitch ignition
655 0	<b>4819 273 28357</b>	Microswitch light/turnspit
656 0	<b>4819 450 69999</b>	Cover,lamp
703 0	<b>4819 310 88599</b>	Burner tube rear
703 1	<b>4819 310 88601</b>	Burner tube front
703 8	<b>4819 526 48224</b>	Gas connection G30/G31
703 9	<b>4819 530 48458</b>	Coupling,pipe
794 0	<b>4819 532 58189</b>	Gasket
904 0	<b>4819 466 99088</b>	Cover,rubber Lid
904 5	<b>4819 532 68838</b>	Spacer
993 0	<b>4819 532 38073</b>	Ring for smoke

**Exploded view**

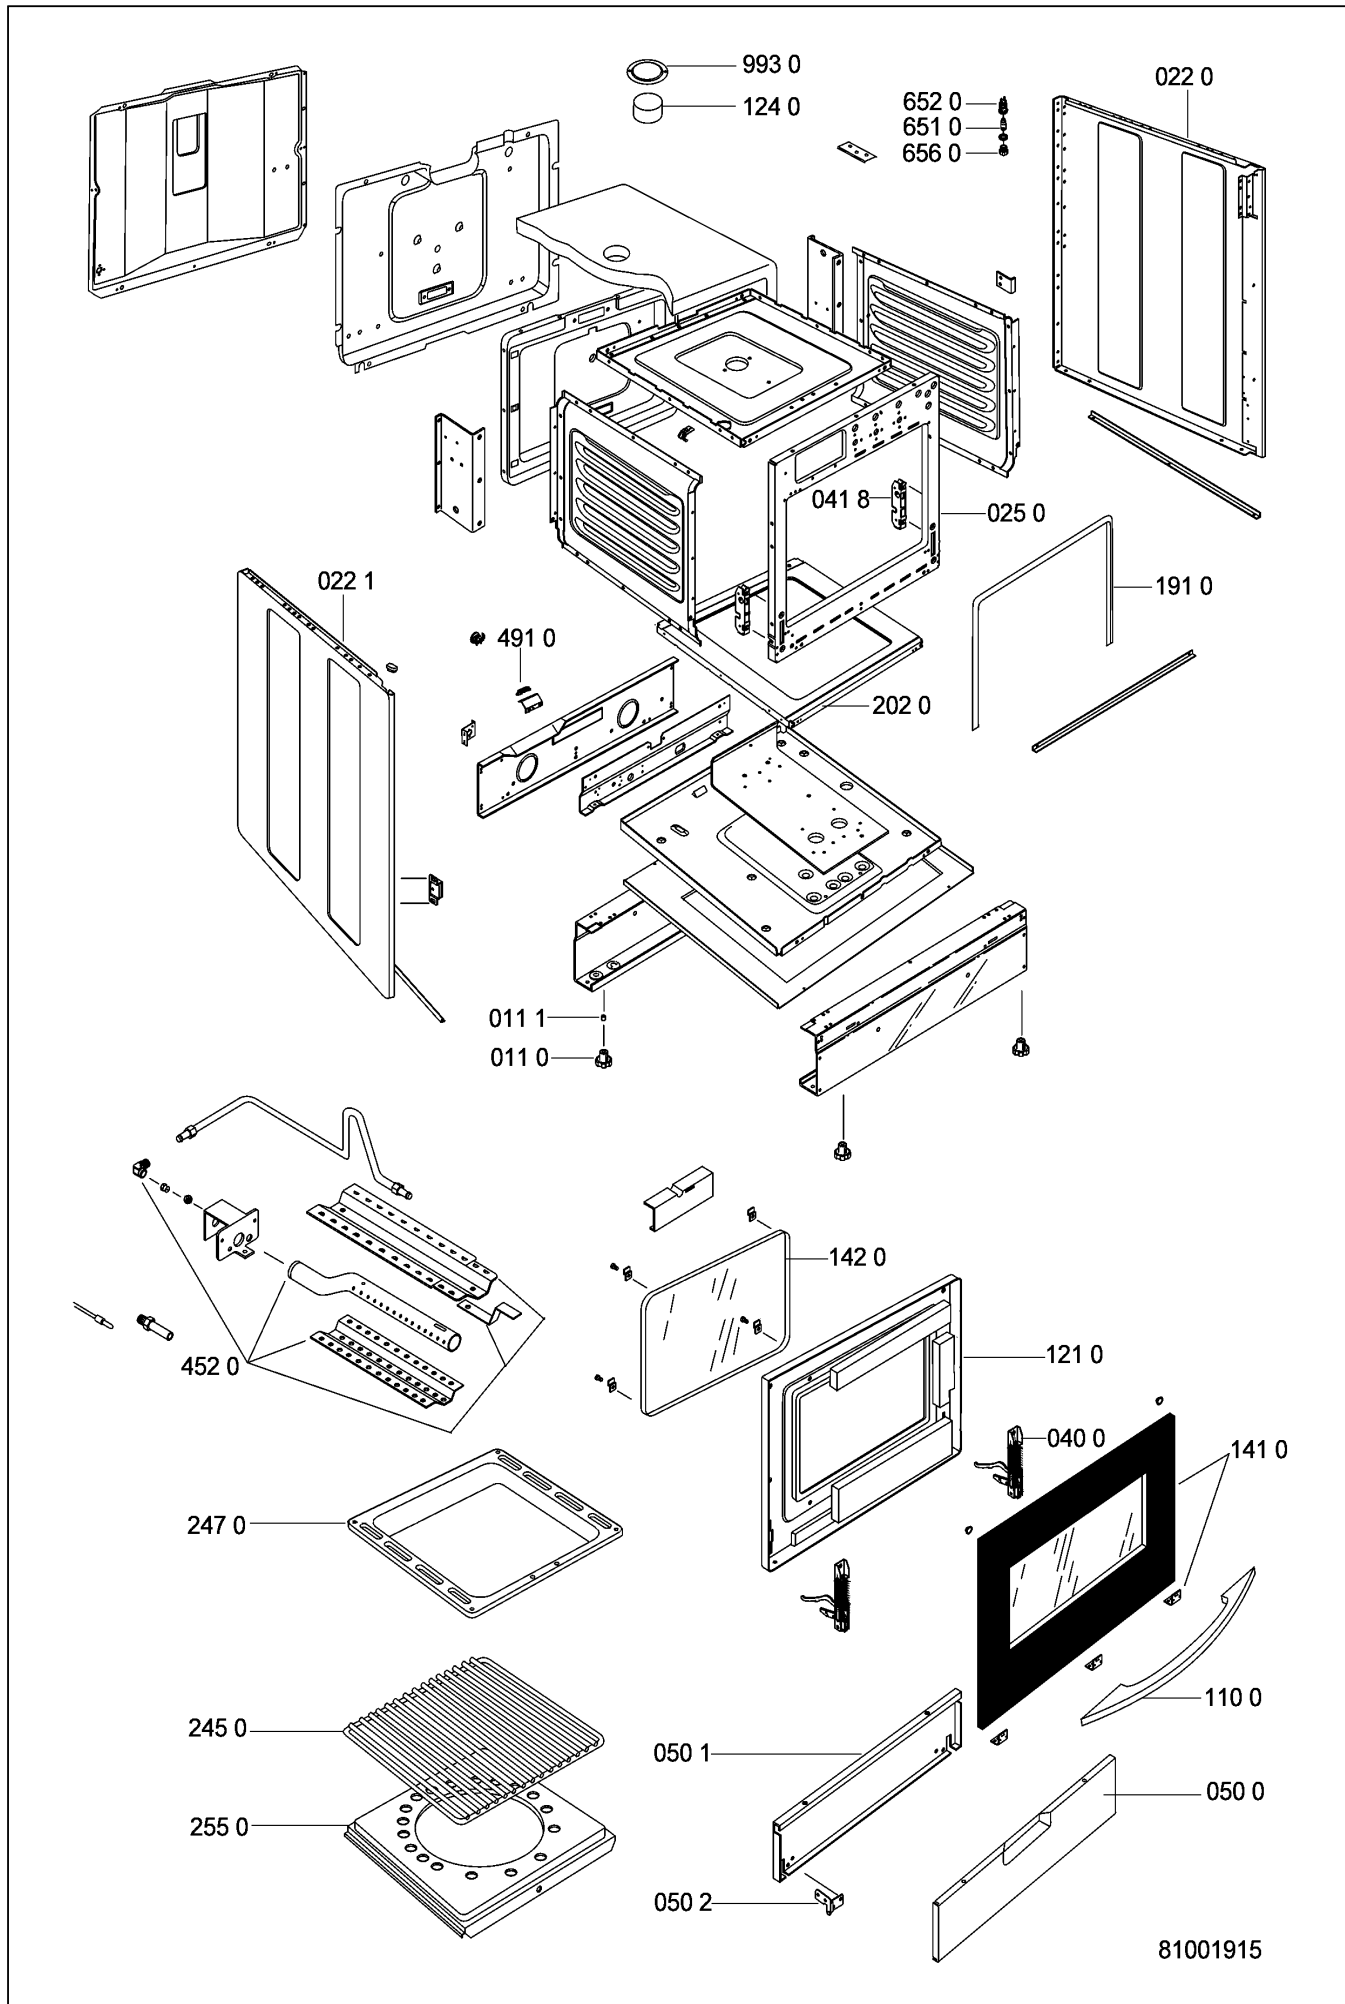



### Wiring diagram

