



30-Inch Manual-Clean Electric Coil Drop-Ins



Selection	
White	22-45262
Oven Features	
Cleaning System	Manual-Clean
Oven Capacity (cu. ft.)	4.2
Electronic Oven Controls	Easy Set™ 105
Advanced Baking System	Dual Radiant™
Variable Broiling System	Hi/Lo
Total Adjustable Oven Racks	2
Oven Light	●
Removable Glass Door	●
Window	●
Oven Interior WxHxD (Inches)	24 1/8 x 16 1/2 x 18 1/32
Cooktop Features	
Cooktop Elements	Coil
8-in. (Watts)	2 @ 2,600
6-in. (Watts)	2 @ 1,500
Dishwasher-Safe Knobs	●
Cooktop Surface	Porcelain
Removable Drip Pans	Porcelain
Lift-up Cooktop	●
Cooktop On Indicator Lights	2

General Features	
Power Rating (kW) @ 240V/208V	11.2/8.4
Bake/Broil @ 240V (Watts)	3,000/2,750
Bake/Broil @ 208V (Watts)	2,253/2,065
Breaker/Copper Wire Size (240V) *	40/8
Shipping Weight (Approx. Lbs.)	132

Accessories	
Optional Backguard†	White 22-628-903046-9011
Optional Side Trim Kit†	White 22-628-903045-9101
Optional Bottom Trim Kit†	White 22-628-903068-9011
Optional Rear Top Filler Kit	White 22-628-901193-9011

Warranty	
1-Year Limited Warranty – Entire Appliance	Parts & Labor

If used for other than private family purposes, warranty applies for only 90 days.

*Always consult local and national electrical codes

†Call Sears Parts 1-866-732-7728

22-45262 – White

- ▶ 4.2 cu. ft. manual-clean porcelain oven
- ▶ Two oven racks
- ▶ Two 8" @ 2,600W and two 6" @ 1,500W coil elements with porcelain drip pans
- ▶ Easy Set™ 105 electronic oven controls
- ▶ Lift-up porcelain cooktop

Model	Overall	Console	Controls	Door/Drawer	Handle	Surface	Drip Pans
22-45262	White	White	White	White	White	White	Lt. Grey

Measure First!
When replacing slide-in or drop-in ranges, be sure to confirm cut-out dimensions. Cut-out dimensions vary by model.

Shave Raised Edge To Clear 31-1/2" Wide Cooktop Rim. 1-1/2" Max.

Locate Cabinet Doors 1" Min. from Cut-Out Opening

NOTE: For 29" cutout wide opening, you must call the Sears Service Center for optional side panels and clear wide cooktop rim.

Do not pinch the power supply cord between the range and the wall.
Do not seal the range to the side cabinets.

*Note: 24" min. clearance between the cooktop and the bottom of the cabinet when the bottom of the wood or metal cabinet is protected by not less than 1/4" flame retardant millboard covered with not less than No. 28 MSG sheet metal, 0.015" stainless steel, 0.024" aluminum, or 0.020" copper. 30" min. clearance when the cabinet is unprotected.

**Note: Minimum cutout depth is increased to 24" with optional backguard.

†Note: To avoid cooktop glass breakage for cutout width of more than 30 1/16", make sure appliance is centered in the counter opening while pushing into it.

††For cutouts below 22 7/8", appliance will slightly show out of the cabinet.

+Allow at least 20" clearance for door depth when it is open.

COUNTERTOP PREPARATION

The cooktop sides of the range fit over the cutout edge of your countertop. **Countertop must be level.**

If you have a **square finish (flat) countertop**, no countertop preparation is required. Cooktop sides lay directly on edge of countertop.

Formed front-edged countertops must have molded edge shaved flat 3/4" from each front corner of opening.

Tile countertops may need trim cut back 3/4" from each front corner and/or rounded edge flattened.

If the existing cutout width is greater than 30 1/16", reduce the 3/4" dimension.



Because of our continuous program of product improvement, Sears reserves the right to change materials and specifications without notice. Consult installation instructions packed with the product for final dimensional data. For complete warranty information, contact your local Sears Contract Sales Account Manager.



All ranges are equipped with an Anti-Tip device. The installation of this device is an important, required step in the installation of the range.