


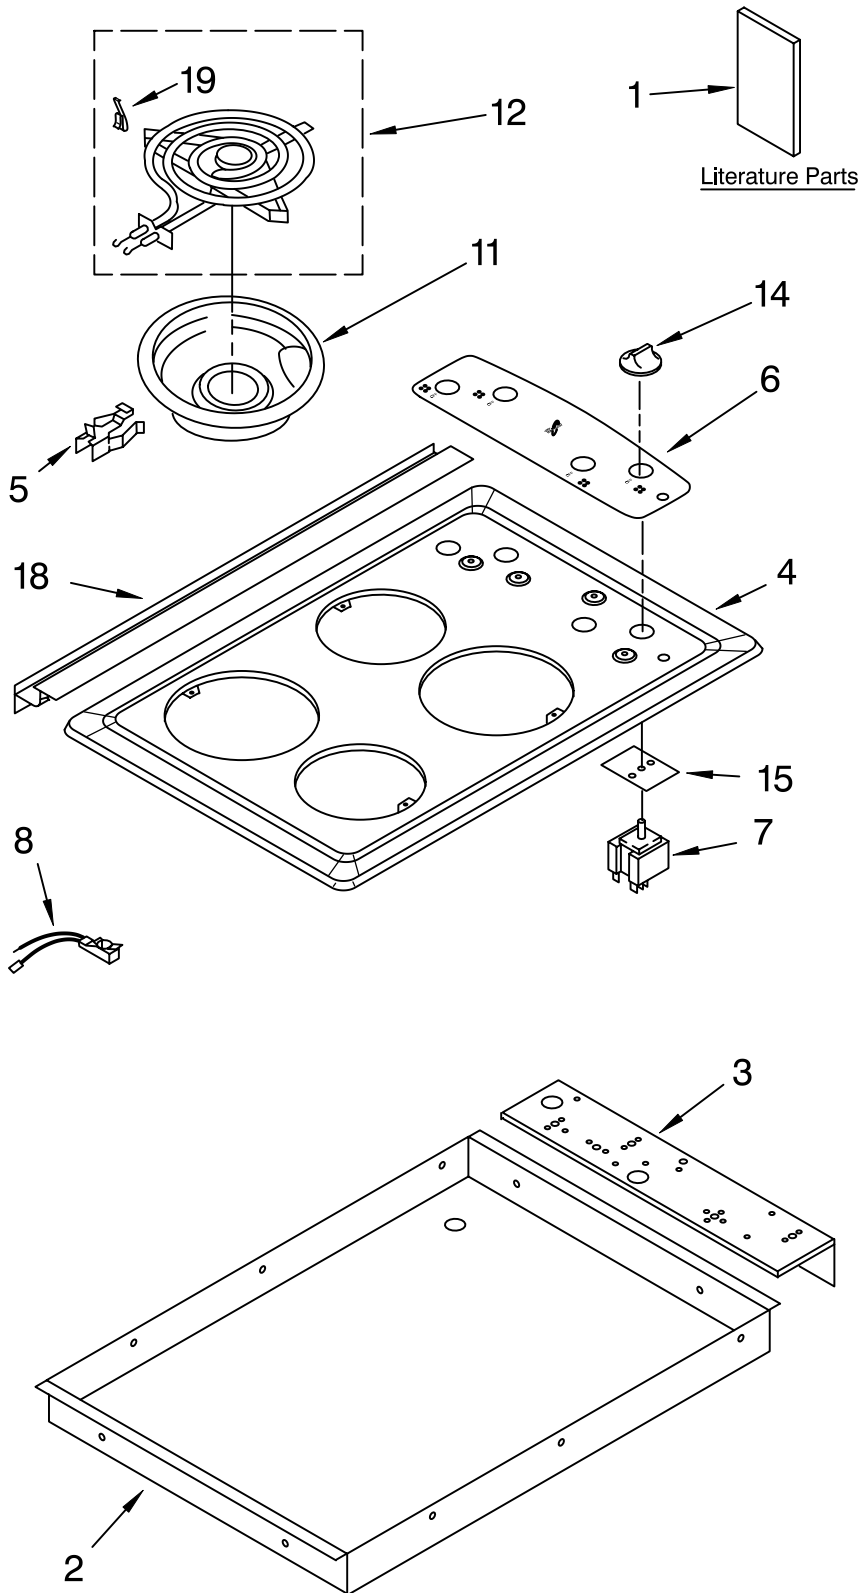

# COOKTOP PARTS

For Models: RS675PXGB8, RS675PXGQ8, RS675PXGT8  
(Black) (White) (Biscuit)

30" DROP-IN  
ELECTRIC OVEN  
SELF CLEAN



Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	LIT8300659	Literature Parts Installation Instructions
	LIT8300666	Use & Care Guide
	LIT3192845	Tech Sheet
	LIT3191638	Safe Cooking Tips
2	3192459	Burner Box
3	3192330	Bracket, Mounting
	3177991	Screw
4		Cooktop
	8284709	Biscuit
	3191168	White
	3191167	Black
5	3192575	Clip, Mtg. (4)
	3400843	Screw
6		Panel, Control
	8284707	Biscuit
	3191229	White
	3191228	Black
7		Switch, Infinite
	3191471	Use W/6" Surface (Blue Shaft)
	3191473	Use W/8" Surface (Red Shaft)
	3400855	Screw, 8-32 x 1/4
8	3191491	Light, Indicator
11		Pan, Surface
	3195208	6" Pan
	3195209	8" Pan
12		Element, Surface
	8053266	6" Burner
	8053268	8" Burner
14		Knob, Control
	3196232	White
	8272506	Biscuit
	3196231	Black
15	3183956	Seal, Switch Shaft (4)
18		Trim, Extension
	3192103	White
	8300518	Biscuit
	3192102	Black
19	3195917	Clip, Element

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models:RS675PXGB8, RS675PXGQ8, RS675PXGT8  
 (Black) (White) (Biscuit)

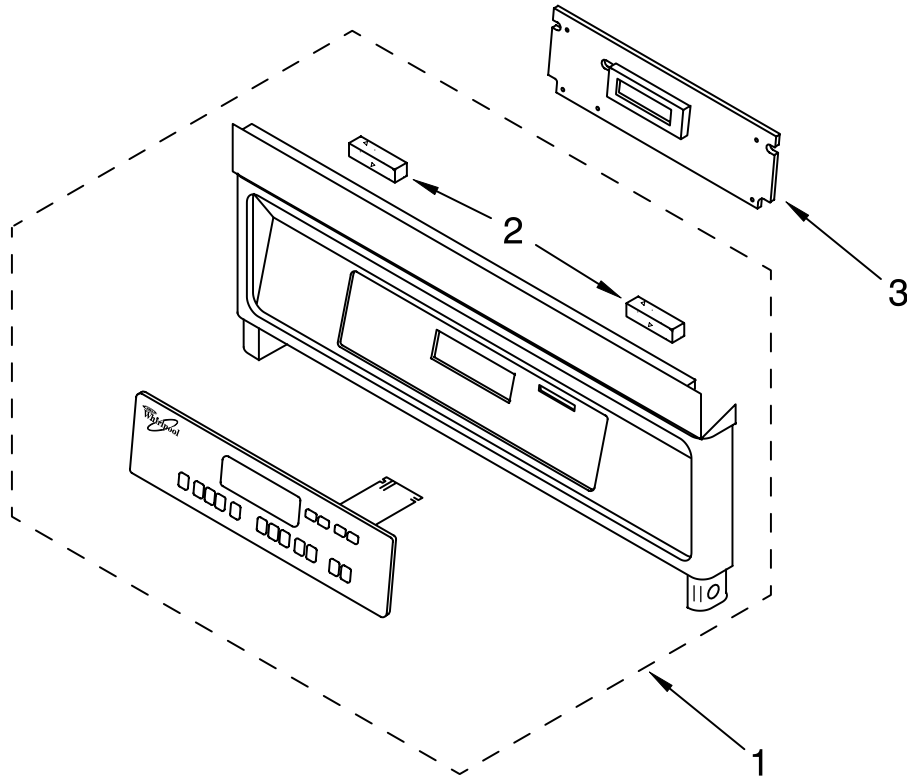


Illus. No.	Part No.	DESCRIPTION
1		Control Panel Assy.
	4452845	White
	8300515	Biscuit
	4452844	Black
		W/Membrane Switch
	3400832	Screw
2	4455260	Spacer, Foam
3	4452892	Microcomputer
	4449745	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Models: RS675PXGB8, RS675PXGQ8, RS675PXGT8  
(Black) (White) (Biscuit)

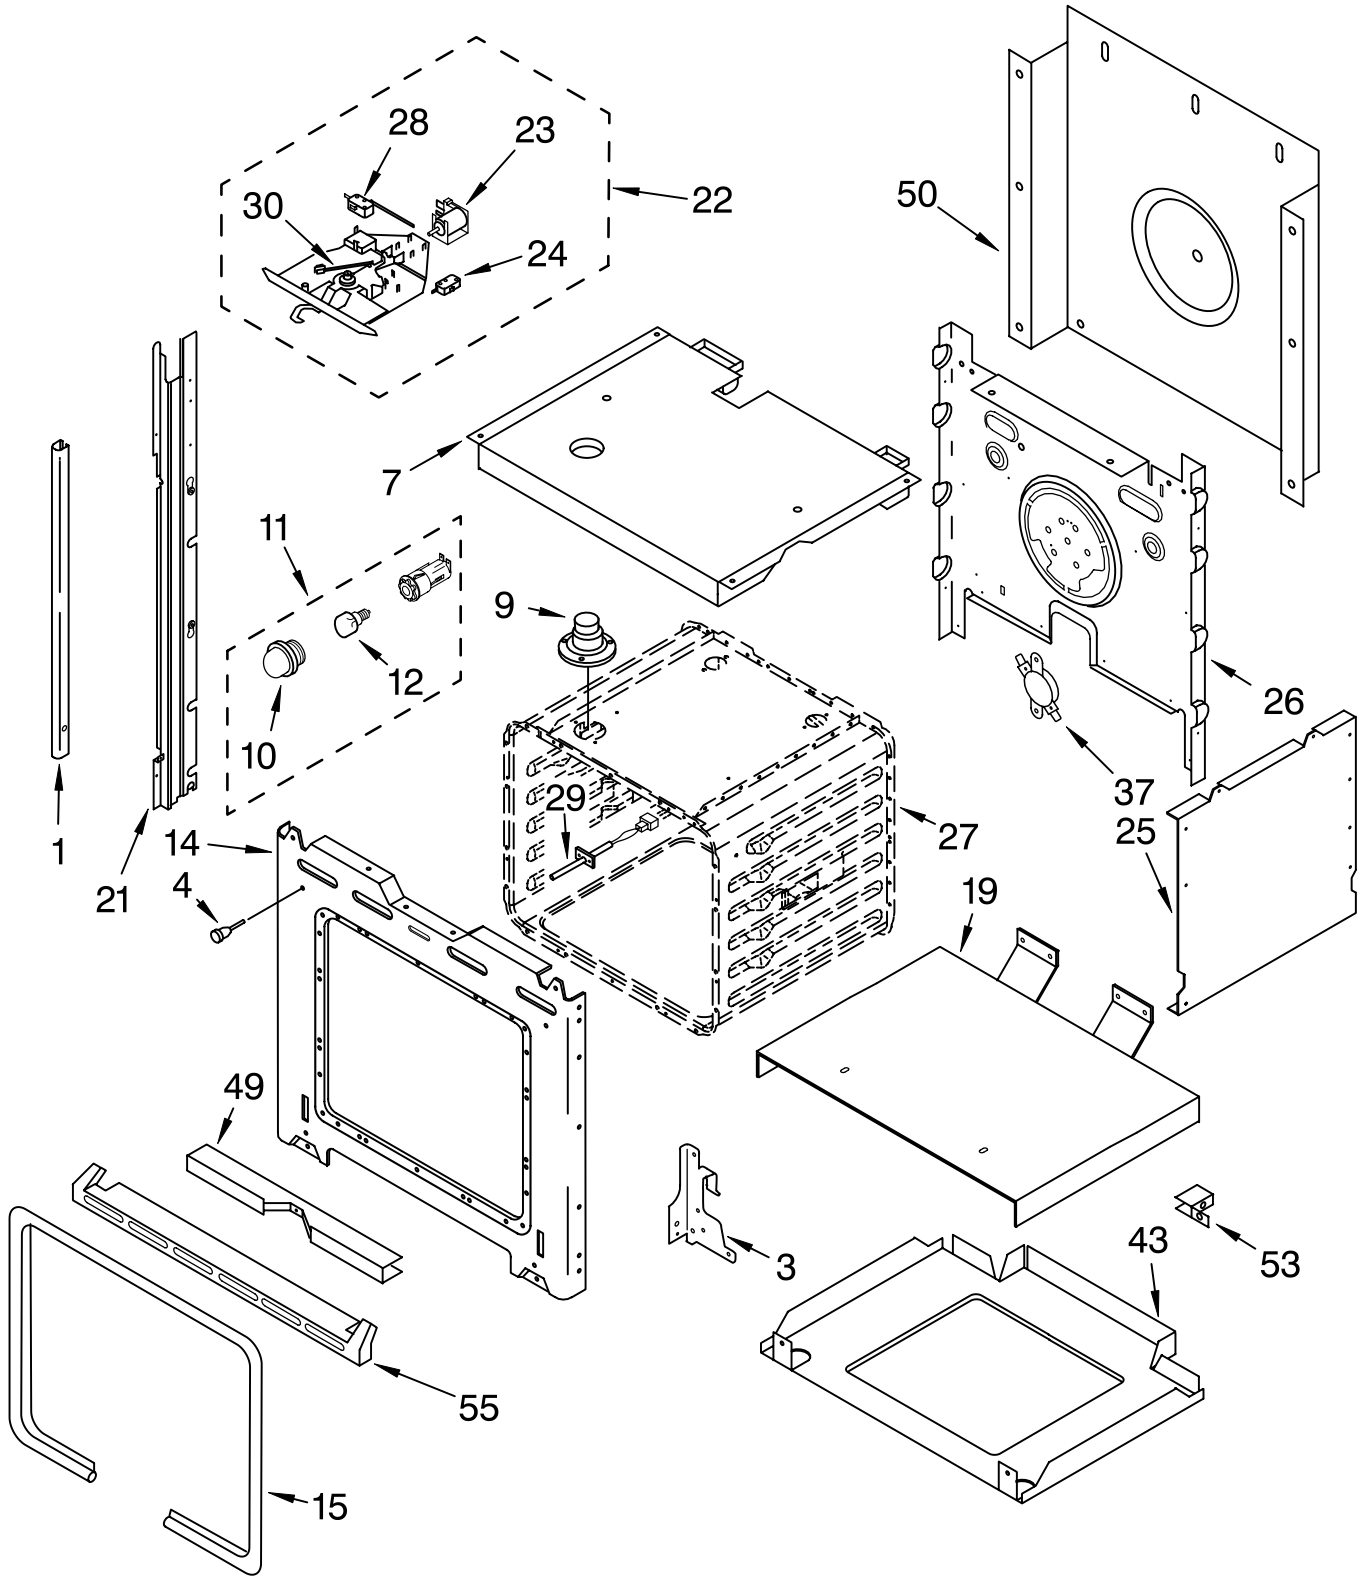

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS


For Models: RS675PXGB8, RS675PXGQ8, RS675PXGT8  
(Black) (White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			12	4452166	Bulb, Light	30	4451537	Spring, Latch
			14	4455612	Frame, Front	37	4451442	Thermostat (TOD) (Temp.) SPST
				4449040	Screw	43	4455530	Base, Chassis
				4450118	Nut	49	4448933	Retainer, Gasket
1		Trim, Side (Right Hand)	15	4455382	Gasket, Door		4449154	Screw
	4450845	White	19	4451478	Support, Insulation	50	4451747	Cover, Back
	4452120	Biscuit		4449809	Screw		4449809	Screw
	4450844	Black (Left Hand)	21		Rail, Side	53	4449845	Support, Bracket
	4450848	White		4450579	Right Side		4449809	Screw
	4452121	Biscuit		4450580	Left Side		4449809	Screw
	4450847	Black		4448444	Grommet	55		Trim, Bottom
	8281236	Screw		4449154	Screw		4448478	White
3		Hinge Receiver	22	4451896	Latch Assembly		4452415	Biscuit
	4455605	Left Hand	23	4452224	Solenoid		4448477	Black
	4455606	Right Hand	24	4452312	Micro Switch N.C.	<b>FOLLOWING PARTS NOT ILLUSTRATED</b>		
4	4448520	Bumper, Door		4449154	Screw	<b>INSULATION</b>		
7	4455865	Top Chassis	25	4455641	Side, Chassis (R.H. & L.H.)		4449316	Insulation, Wrap
	4449809	Screw		4449809	Screw		4450365	Insulation, Back
9	4452158	Tube, Vent	26	4452234	Back, Chassis			
	3196176	Screw		4449809	Screw			
10	4452165	Lens, Light	27		Liner, Oven (Not serviceable)			
11	4452368	Oven Light Assy	28	4451426	Micro Switch			
			29	4455636	Sensor			
				4449154	Screw			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN DOOR PARTS

For Models: RS675PXGB8, RS675PXGQ8, RS675PXGT8  
 (Black) (White) (Biscuit)

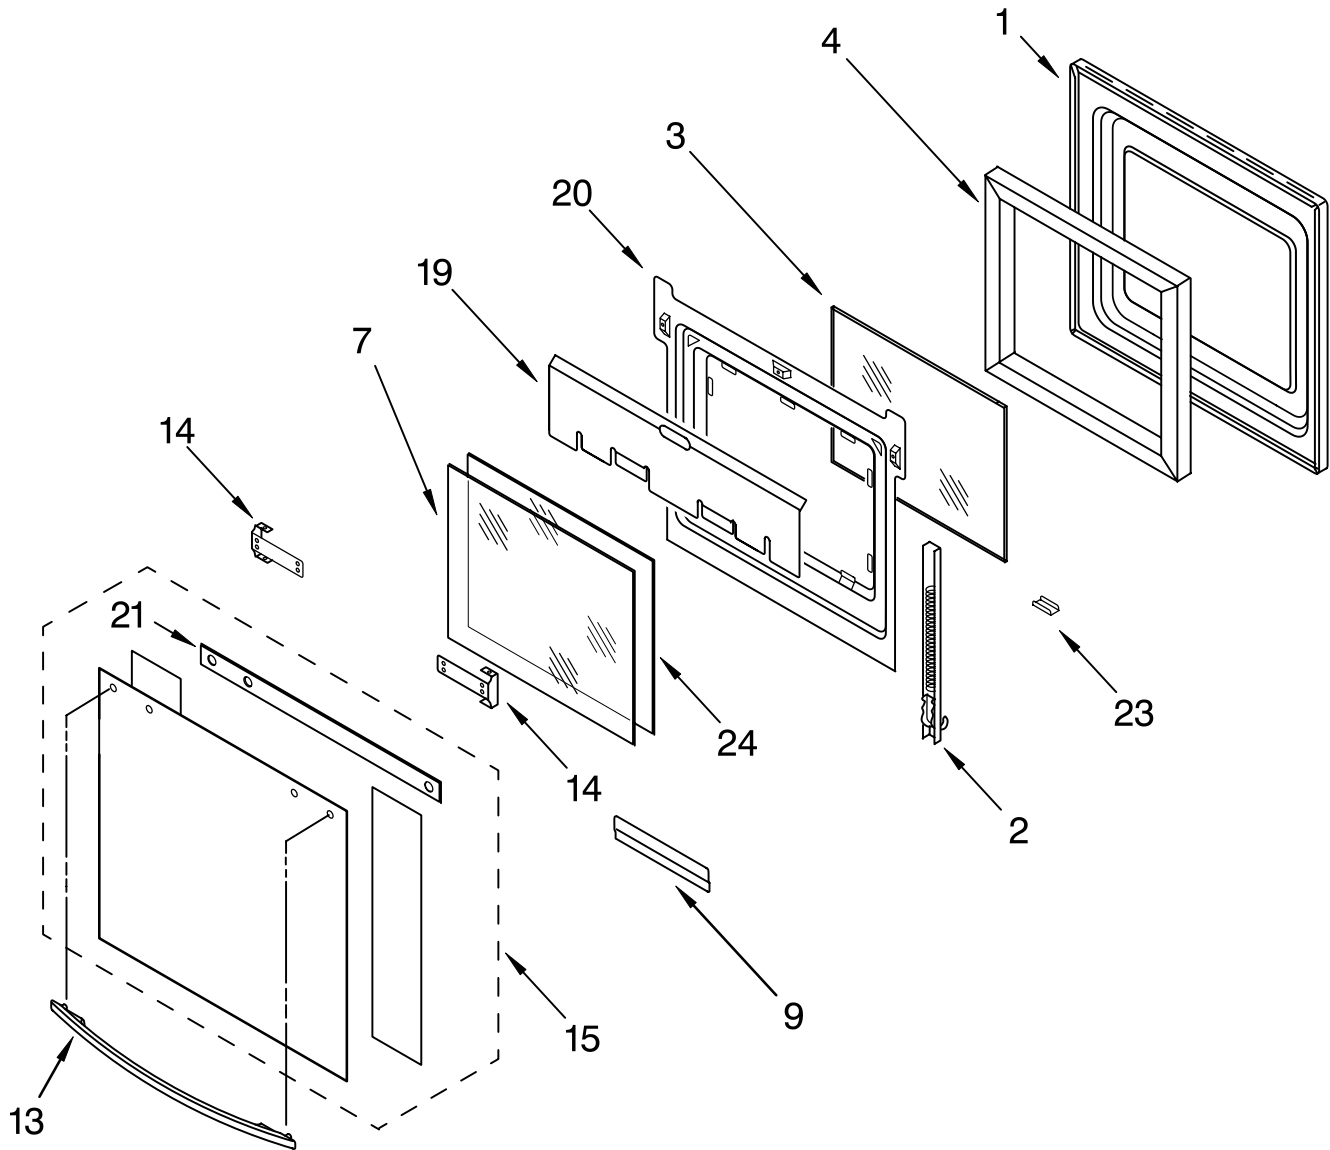


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			7	4449263	Glass, Inner (2)	19	4450362	Shield, Heat
1	4455618	Door Liner	9	4451668	Retainer, Glass	20	8300778	Retainer, Glass
2	8300571	R.Side		4449809	Screw	21	8300820	Seal, Door Top
	8300572	L.Side	13		Door Handle	23		Retainer, Clip
	4449743	Screw		4448855	White		4450864	White
3	4449259	Glass, Inner		4452860	Biscuit		4452119	Biscuit
4	4451722	Insulation, Door	14	4450813	Bracket, Handle		4450863	Black
				4451040	Screw	24	4455257	Glass, Inner
			15		Door Assembly, Glass			
				4452066	White			
				4452859	Biscuit			
				4452065	Black			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# INTERNAL OVEN PARTS

For Models:RS675PXGB8, RS675PXGQ8, RS675PXGT8  
 (Black) (White) (Biscuit)

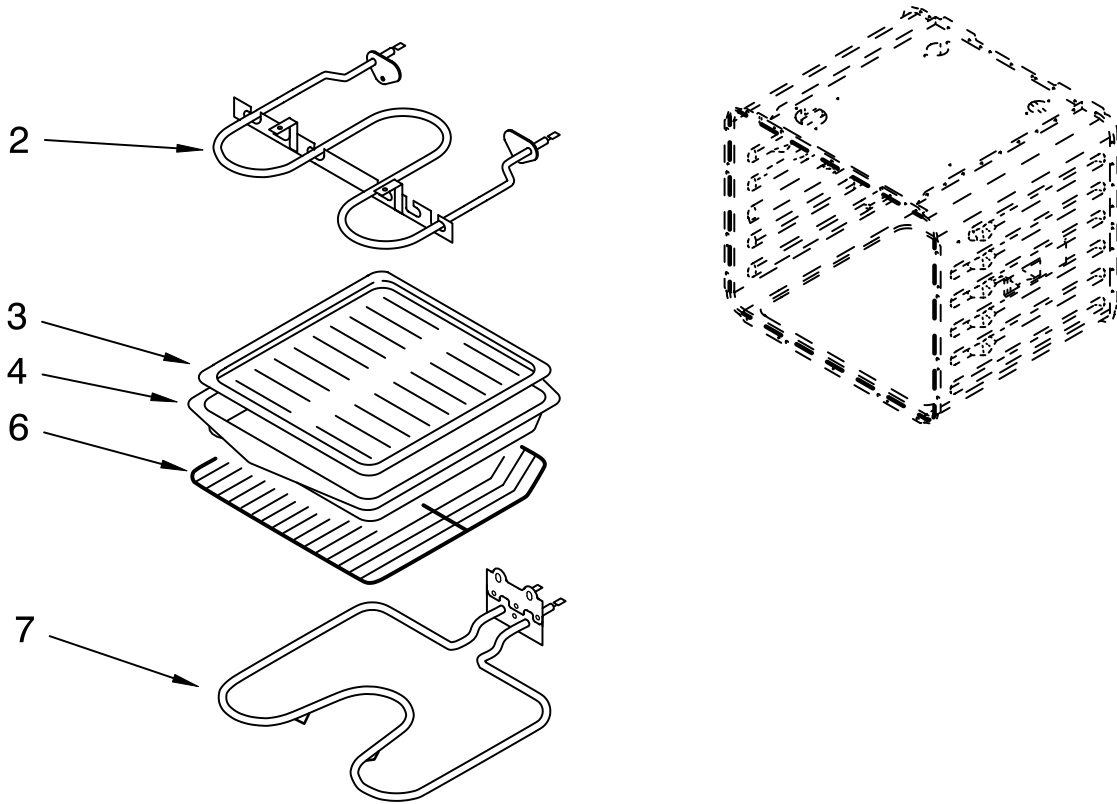


Illus. No.	Part No.	DESCRIPTION
2	4452154	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP VENTING PARTS

For Models: RS675PXGB8, RS675PXGQ8, RS675PXGT8  
(Black) (White) (Biscuit)

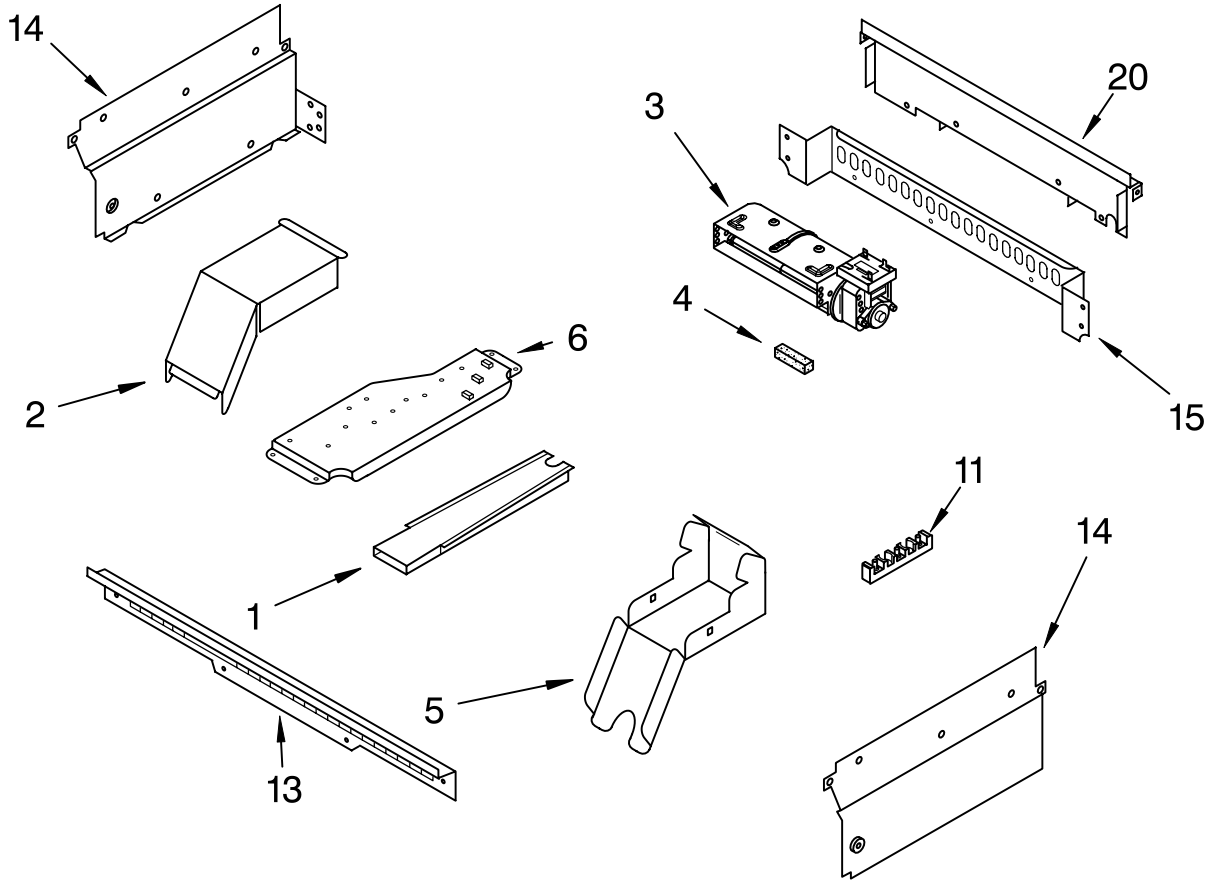

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

- |   |         |                     |
|---|---------|---------------------|
| 1 | 4451759 | Vent, Exhaust       |
|   | 4449040 | Screw, 8-18 x 3/8   |
| 2 | 4455178 | Elbow, Vent Top     |
| 3 | 4455334 | Blower              |
|   | 4455352 | Bracket, Blower (2) |

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

- |    |         |                       |
|----|---------|-----------------------|
| 4  | 4451758 | Block, Foam           |
| 5  | 4455177 | Elbow, Vent Bottom    |
| 6  | 4451761 | Plate, Service        |
| 11 | 4449868 | Block, Terminal       |
|    | 3400080 | Screw                 |
| 13 | 4448549 | Vent, (Control Panel) |
|    | 4450038 | Screw                 |

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

- |    |         |                      |
|----|---------|----------------------|
| 14 |         | Side, Control Compt. |
|    | 3191832 | Right                |
|    | 3191833 | Left                 |
|    | 4449809 | Screw                |
| 15 | 4452244 | Back, Control        |
|    | 4449809 | Screw                |
| 20 | 3191842 | Cover, Rear          |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS

For Models:RS675PXGB8, RS675PXGQ8, RS675PXGT8  
(Black) (White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**PAINT, TOUCH-UP (1/2oz.)**

72017 White  
261869 Cord Brown  
72032 Black

**PAINT, SPRAY**

350930 White  
261900 Citrine White  
830864 Black

**ADHESIVE**

591014 Adhesive  
Loctite (1/3 oz.)  
482338 Sealer, Silastic  
(3 oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**SPLICING WIRES--25FT.**

**LENGTH**

242828 Wire (12 Ga.  
150 c Black)  
242820 Wire (14 Ga.  
150 c Black)  
242821 Wire (14 Ga.  
150 c Blue)  
242822 Wire (14 Ga.  
150 c Brown)  
242830 Wire (14 Ga.  
200 c Brown)  
242823 Wire (14 Ga.  
150 c Green)  
242824 Wire (14 Ga.  
150 c Orange)  
242829 Wire (12 Ga.  
150 c Red)  
242825 Wire (14 Ga.  
150 c Red)  
242831 Wire (14 Ga.  
200 c Red)  
242826 Wire (14 Ga.  
150 c White)  
242827 Wire (14 Ga.  
150 c Yellow)  
242832 Wire (14 Ga.  
200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

**WIRING HARNESS PARTS**

3191220 Harness, Wire  
(Main)  
4455733 Harness, Wire  
(EDC)  
4451163 Conduit  
4448664 Clamp  
4449809 Screw  
112432 Nut  
4450800 Screw, Ground  
3192236 Harness, Wire  
(Infinite Switch)  
4455592 Harness, Wire  
(Light)  
4452222 Spacer, Harness  
4454384 Ground, Wire  
3400015 Screw, Ground

**Miscellaneous**

814381 Hinge Pin Kit  
4448950 Screw, Install (4)