ALCATEL

Versatis E100 / Versatis E100 Duo / Trio Versatis E150 / Versatis E150 Duo / Trio



USER'S GUIDE



ATLINKS Europe, 22 quai Gallieni 92150 Suresnes – France Alcatel Logo and Alcatel name are trademarks of Alcatel and used under license by Atlinks

Unpacking your phone

In the box you will find:

- the cordless handset (two handsets with a Twin system, and three with a Triple system)
- the base unit
- · two rechargeable battery cells for each handset
- a battery compartment cover for each handset
- a telephone line cable for the base unit
- a mains power lead and adapter for the base unit
- · charger pods, each with an attached mains power lead and adapter, for multihandset system

Before you start to use your telephone make sure that all batteries are fully charged for 15 hours.

Important note: This telephone is not designed for Emergency calls when the mains power fails

For Emergency calls you should have a basic phone that operates without mains power, connected to your line so that you can make calls during a power failure.

Phone Function Keys

 \bigcirc

ALCATEL

≔/∞i?¤û∢∦⊡ı

VERSRT<u>I</u>

< ▲▼ ≜

∕≝∖∰∣∋`

₹₹₩₽

4 5. 6



Press to select the function displayed on the handset screen directly above it.

2 Back/clear kev Press to delete a digit/a character in editing mode Press to return to idle mode. Press and hold to change the handset idle display between handset name and date/time.

3 Navigation key

Press UP to access the call log* and press DOWN to access the phonebook when in idle mode Press UP/DOWN to increase or decrease earpiece volume during a call. ress to increase or decrease the ringer volume.

Press UP/DOWN to increase or decrea handsfree volume (Versatis E150 only) Scroll up/down a list

4 Talk key Press to accept or make a call

Press to activate handsfree mode (Versatis E150 5 Hang-up/Exit key

Press and hold to switch the handset power

Press to end a cal Press to return to idle mode in other menus.

6 Recall (Flash) key Access to operator services?

7 Menu key

Press to access the main menu.

8 Redial key Press to access the Redial list

9 Star key Press and hold to lock/unlock keypad.

Press and hold to toggle between the external and internal calls when both are set up.

10 Hash key

Press and hold to insert a pause during a call. Press and hold to turn the ringer on/off.

11 Mute key

 
Press to mute / unmute the handset microphone. 12 Call transfer/Intercom key

Press to initiate an internal call

Press to hold the line and page another handset during a call. Press and hold to initiate a conference cal

*Subject to subscritption and availability of the service from the fixed line operator.

Base station



HANDSET LOCATOR button Press to page handsets. Press and hold to start registration procedure.

What's on the display?



Display Icons

- B Displays when in menu mode to confirm our selection. C Indicates that more options are available
- Use the UP / DOWN keys to scroll up/down D Displays when in menu mode.
- Select BACK to return to the previous menu level. Select BACK to delete the last digit/ character entered


What the icons mean?

- Indicates battery is fully charged.
- Indicates that an external call is connected or held. Icon blinks when receiving an incoming call.
- Indicates you have a new Voice Mail message*.
- Indicates you have new missed calls*, or the call log is being viewed.
- Displays when the phonebook is accessed.
- Δ Displays when the alarm clock is activated.
- Displays when handsfree is activated (Versatis E150 only).
- Displays when ringer volume is turned off.
- Indicates that the handset is registered and within range of the base station. Icon blinks when the handset is out of range or is searching for a base.
- **DK** Displays when in menu mode to confirm your selection
- ▲▼ Indicates that more options are available. Use the UP / DOWN keys to scroll up/dowr
- Displays when in menu mode. Select BACK to return to the previous menu level.

Read First Before Use

Choosing a site for the base unit and charger pod If you have a Broadband line

If you connect your telephone to a line with a broadband connection, you will need to insert a microfilter between the telephone and the telephone line, otherwise you may get interference between the telephone and the broadband, which could cause problems.

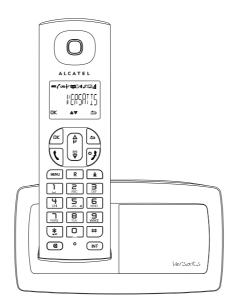

Battery safety - CAUTION

ONLY use the rechargeable batteries supplied with the handset. DO NOT use non-rechargeable batteries - they may explode and cause damage to your telephone.

Only use rechargeable batteries with exactly the same specifications as ose supplied with the product.

Ising non-rechargeable or non-conforming batteries can damage the roduct and could pose a health hazard (see Chapter 9 "Technical (pecifications)

Failure to comply with this recommendation will invalidate the manufacturer arranty

Batteries can split or leak if incorrectly inserted, opened or exposed to heat ever dispose of batteries in a fire: they could explode.

Installation and Set-up

Precautions


The signal quality will depend on the location and environment of the base and handset. Position your Versatis E100 / Versatis E150 away from sources of excessive heat (radiators, direct sunlight, etc.) and protect it from vibrations and dust. Never allow your telephone to come into contact with water or other liquids, or with aerosols. To reduce the risk of interference and optimize reception, take particular care not to install the base in the immediate vicinity of windows, large metal objects, reinforced concrete, televisions, music centres, VCR or DVD players, halogen lamps or heating devices, fluorescent lighting, burglar alarms, microwave ovens, computers, etc.

This telephone requires an electrical power supply in order to function. To clean your Versatis E100 / Versatis E150, use an antistatic cloth lightly

- moistened with water.
- NB: Your Versatis E100 / Versatus E150 is a DECT™* standard appliance designed to receive and transmit telephone calls. It is designed for connection to the public telecommunications network

Fit the rechargeable batteries in each handset

- 1) Install the AAA batteries (Brand name: CORUN, Capacity: Ni-MH 1.2V/ 400mAh, or Brand name: SANIK, Capacity: Ni-MH 1.2V/400mAh) into handset in accordance with the polarity marked in the battery compartment.
- 2) Close the battery compartment cover, sliding it into place and pressing firmly to make sure it is secure.

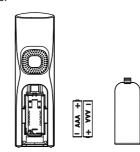

Connecting AC (electrical) power

- 1. Plug the base adaptor cord into the power jack on rear panel of the base and the other end into a 100-240 Vac 50-60Hz electrical outlet.
- 2. Connect telephone line cord into the phone jack on rear panel of the base and the other end into a main socket.
- In case of twin or triple system, plug the charger power adaptor cord into the power jack on rear panel of charger and the other end into a 100-240 Vac 50-60Hz electrical outlet

Before you use the cordless handset for the first time, it's important to charge the batteries fully.

Leave the handset on the charging cradle for 15 hours.

CAUTION: Use only the power supply that came with this unit. Using other power supplies may damage the unit.

Base and charger power adaptor

S003IV060050 100-240V 16V 500mA ou IA5060 100-240V 16V 500mA S003IV060015 100-240V 16V 150mA ou IA5060 100-240V 16V 500mA

Your Telephone Operations

Switching on/off

Press and hold the HANG-UP/EXIT key for more than 2 seconds to switch on/off the handset in idle mode.

Notes: When the handset is OFF, it cannot be used for making calls including emergency calls. There will be no ringing during an incoming call. To answer a call, you will need to switch it back on. It may take some time for the handset to re-establish a radio link with the base unit

To lock/unlock the keypad

Press and hold the STAR key for 1 second to lock/unlock the keypad in idle mode

Note: Incoming calls can still be answered even if the keypad was locked.

Set time and date

Note: If you subscribe to the Caller Display service, the time and date will be set automatically when you receive a call, but you may still need to set the correct year.

1. Press MENU key to enter menu selection

2. Press NAVIGATION key to select CLOCK&ALARM and then press OK key

3. Press OK key to select DATE/TIME. The last stored date is displayed. Enter the current date (YY-MM-DD), press OK, then enter the time (HH-MM).

Change your handset's name

1. Press MENU key to enter menu selection

2. Press NAVIGATION key to select PERSONAL SET and then press OK kev to select

3. Press NAVIGATION key to select HANDSET NAME and then press OK key to select. The current handset name is displayed.

4. Press BACK/CLEAR key to delete the characters one by one.

Enter the new name (maximum 10 characters) and press OK key to confirm. A confirmation beep is played.

Change the display language

1 Press MENU key to enter menu selection

2. Press NAVIGATION key to select PERSONAL SET and then press OK kev to select

3. Press NAVIGATION key to select LANGUAGE and then press OK key to select

4. Press NAVIGATION key to your desired language and press OK key to confirm. A confirmation beep is played.

Note : Once the display language is set, the option menus on the handset will switch to display in the selected language immediately.

Make and answer calls

Make a callPredialling

Dial the number (maximum 24 digits) and then press TALK key. **Direct dialling**

 
- Press TALK key to take the line and then dial the number
- (maximum 24 digits).

Call from redial list

Press REDIAL key in idle mode.

Press NAVIGATION key to select an entry in the redial list and then press TALK key.

Call from the call log



Press NAVIGATION key to select an entry in the call list and then press TALK key

Note: You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log.

Call from the phonebook

 $\stackrel{\mbox{\tiny Ω}}{\bigtriangledown}$ Press $\stackrel{\mbox{\tiny Ω}}{\bigtriangledown}$ in idle mode.

Press NAVIGATION key to select an entry in the phonebook and then press TALK key.

Answer and end a call

1. When the phone rings, press TALK key. You can also use handsfree mode thanks to a long press on TALK key (only on Versatis E150) 2. To end a conversation, press HANG-UP/EXIT key.

IMPORTANT NOTE: You can simply place the handset back on its base station or charger pod to end the call.

Use handsfree (only for Versatis E150)

Press and hold the TALK key at any moment to talk in handsfree mode. To deactivate the handsfree mode, press again the TALK key.

Adjust the earpiece volume

During a call, press NAVIGATION key to select from VOLUME 1 to VOLUME 3.

Mute/unmute microphone

When the microphone is muted, the handset displays MUTE ON, and your cannot hear vou

During a call, press the MUTE key to turn on/off the microphone. Paging

The paging feature enables you to locate a missing handset if the handset in range and contains charged batteries.

- Press HANDSET LOCATOR key located at the back of the base station. All the registered handsets start to ring.
- Once retrieved, press any key on the handset or the HANDSET
- LOCATOR key again to end the paging.

Call waiting

If you have subscribed to Call Waiting service, the earpiece will emit a bee tone to inform you that there is a second incoming call. The number or nam of the second caller will also be displayed on your phone if you have subscribed to Caller Line Identification service (CLI). Please contact your network provider for more information on this service.

Using your phonebook

Your phone can store up to 50 phonebook memories. How to enter characters?

When you select a field in which you can enter text, you can enter the letter that are printed on the keys by pressing the relevant key once or several tin For example, press **2** once to insert the letter 'A', press **2** twice to insert the letter 'A', press **2** the letter B, and so on... Spaces and other symbols can be entered using or 🖸

Store a contact in the phonebook

- 1. Press MENU key to enter menu selection.
- 2. Press NAVIGATION key to select PHONEBOOK and then press OK key to select
- 3. Press OK key again to enter NEW ENTRY.
- 4. Enter the name of the contact (maximum 12 characters).
- To edit, press BACK/CLEAR key to delete the last character entered. Press OK key to confirm the name entry.
- 5. Enter the number of the contact (maximum 24 digits) and then press OK key to confirm. A confirmation beep is played.

Access phonebook

1. Press $\stackrel{\square}{r}$ in idle mode to browse the phonebook entries. Alternatively, y can press MENU key, to display PHONEBOOK and then press OK. 2. Press NAVIGATION key to select LIST and then press OK key to confirm

The phonebook entries will be listed in alphabetical order, and you can pres NAVIGATION key to scroll through the stored entries.

Press OK key to view the details of the selected entry.

Note : Instead of pressing NAVIGATION key to browse the phonebook ent you can press the numeric key corresponding to the first letter of the entry wish to locate.

Modify a phonebook entry

1. Press MENU key to enter menu selection.

2. Press NAVIGATION key to select PHONEBOOK and then press OK key

3. Press NAVIGATION key to select EDIT ENTRY and then press OK key to select

4. Press NAVIGATION key to select an entry to edit and then press OK ke The current name is displayed.

Edit the name and then press OK key to confirm.

5. Edit the number and then press OK key to confirm. A confirmation beep played.

ur caller	Delete a phonebook entry1. Press MENU key to enter menu selection.2. Press NAVIGATION key to select PHONEBOOK and then press OK key to select.
et is	 Press NAVIGATION key to select DELETE and then press OK key to select. Press NAVIGATION key to select an entry to delete and then press OK key. Press OK key again to confirm. A confirmation beep is played.
	Delete all entries from the phonebook list
ер	 Press MENU key to enter menu selection. Press NAVIGATION key to select PHONEBOOK and then press OK key to select. Press NAVIGATION key to select DELETE ALL and then press OK key to select. Press OK key again to confirm. A confirmation beep is played.
ime	
	Direct access memory There are 2 direct access memories (Keys 1 & 2) in addition to the phonebook memory. A long press on the keys in idle mode will automatically dial the stored phone number.
	Add/edit direct access memory
ters times.	 Press MENU key to enter menu selection. Press NAVIGATION key to select PHONEBOOK and then press OK key to select.
nsert	 Press NAVIGATION key to select DIRECT MEM. and then press OK key to select.
	 4. Press NAVIGATION key to select KEY 1 or KEY 2 and then press OK key. The stored name is displayed, or NO NUMBER if it is empty. If there is no number stored for the selected key or if you want to change the
ey K	 name or number currently stored, press MENU key to enter direct memory menu to add/edit the name or number. 5. Press NAVIGATION key to select EDIT NUMBER and then press OK key to select. The display shows the currently stored name, or ENTER NAME if there is no number stored. Edit or enter the name you want and then press OK key. The display shows the currently stored number, or ENTER NUMBER if there is no number stored. Edit or enter the number, or ENTER NUMBER if there is no number stored. Edit or enter the number, or ENTER NUMBER if there is no number stored. Edit or enter the number, you want and then press OK key to confirm. A confirmation beep is played.
	Delete direct access memory
	 Press MENU key to enter menu selection. Press NAVIGATION key to select PHONEBOOK and then press OK key to select
you	to select. 3. Press NAVIGATION key to select DIRECT MEM . and then press OK key
irm. ress ntries,	 to select. 4. Press NAVIGATION key to select KEY 1 or KEY 2 and then press OK key. The stored name is displayed (or NO NUMBER if it is already empty). 5. Press MENU key to enter direct memory menu. 6. Press NAVIGATION key to select DELETE and then press OK key to select. Press OK key again to confirm. A confirmation beep is played.
y you	Using the redial list The redial list stores the last 5 numbers dialed.
	Access redial list
ey y	 Press REDIAL key in idle mode and press NAVIGATION key to browse the redial list. The last number dialed will appear first in the redial list. Press OK key to view the details of the selected entry.
у	
ey.	Save a redial number into the phonebook1. Press REDIAL key in idle mode to go to the redial list.2. Press NAVIGATION key to select an entry.
p is	3. Press MENU key to display SAVE NUMBER , then press OK key to display ENTER NAME . Enter the name of the contact (maximum 12 characters) and then press OK key to save the entry, and return the display to the redial list.

Using the call log

To receive Caller ID you may need to contact your telephone service provider, and they will inform you also of any charges for it.Caller ID lets you see the phone numbers of your callers on the handset display, before answering and in your Call Log afterwards. The Call Log stores the last 10 external calls, whether or not you answered the call, so you can call them back later. Only the most recent call is saved if there are repeat calls from the same number. When the Call Log is full, the next new call will replace the oldest

If you've got a new call in the Call Log, ? will appear on the handset display. If the received number is the same as one in your phonebook, the name from the phonebook will display as well as the number

If a call is from someone who withheld their number, the display will show WITHHOLD ID.

If the call is from someone whose number is unavailable, or if you have not subscribed to Caller ID but have set the date and time, the display will show CALLING when it is received and UNAVAILABLE in the Call Log.

Access call log

Press 🛊 in idle mode and press NAVIGATION key to browse the call list. The calls are displayed in chronological order with the most recent call at the top of the list.

1. Press OK key to display more details of the call, including the date and time. Save call list entry into the phonebook

2. Press 🛱 in idle mode to go to the call list.

3. Press NAVIGATION key to select an entry and then press MENU key.

4. Press NAVIGATION key to select SAVE NUMBER and then press OK key to select (Enter the name of the contact (maximum 12 characters) and then press OK key to confirm.

Delete a Call Log entry

1. Press 🛔 in idle mode to go to the call list.

2. Press NAVIGATION key to select an entry and then press MENU key. 3. Press NAVIGATION key to select **DELETE** and then press OK key to select. (Press OK key again to confirm. A confirmation beep is played.)

Delete all entries in the Call Log

1. Press 静 in idle mode to go to the call list.

2. Press MENU key

3. Press NAVIGATION key to select **DELETE ALL** and then press OK key to select.

(Press OK key again to confirm. A confirmation beep is played.

Using the intercom

registered to the same base station. It allows you to make free internal calls, transfer external calls from one handset to another, and set up a 3-way conference with two handsets and an external call.

If you try to make a call while another handset is already on an external call. you'll hear a busy tone for a few seconds before the display returns to idle.

Intercom another handset

- Press INT key in idle mode.
- Intercom is established immediately if there are only 2 registered handsets

If there are more than 2 registered handsets, the handset numbers which are available for intercom, and a * will be displayed. Press the specific handset number you wish to call, or press to ring all handsets, to start intercom.

Transfer an external call to another handset

During the call, press INT key to put the external call on hold (the caller can no longer hear you).

Intercom is established immediately if there are only 2 registered handsets. If there are more than 2 registered handsets, the handset numbers which are available for intercom, and a * will be displayed. Press the specific handset number you wish to call, or press * to ring all handsets, to start intercom

both internal callers can talk. Intercom is established.

Press HANG-UP/EXIT key on the first handset to transfer the external call to the called handset. The external call is transferred.

Note : If there is no answer from the called handset, press INT key to resume the external call.

Answer an external call during intercom

During intercom, a new call tone is emitted when there is an incoming external

Press TALK key to answer the external call and end the intercom. (1)

Connection with the external call is established

Note : To put the internal call on hold and answer the incoming external call, press INT key.

Switch between an internal and external call

* During the call, press ***** key to switch between an internal or external

Establish a three-party conference call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no additional network subscription is required.

During an external call, press INT key to put the external call on hold (the caller can no longer hear you).

If there are more than 2 registered handsets, the handset numbers which are available for intercom will be displayed. Press the specific handset number you wish to call to start intercom.

Press TALK key on the called handset to answer the internal call, where both internal callers can talk. Intercom is established.

Press and hold INT key for 2 seconds on the first handset to start the three-party conference.

CONFERENCE will be displayed on the screen once the conference call is established

Handset Tone

Set the ring volume

There are 5 ringer volume options (OFF, LEVEL 1, LEVEL 2, LEVEL 3 and LEVEL 4). The default level is LEVEL 2.

- 1. Press MENU key to enter menu selection.
- 2. Press NAVIGATION key to select **PERSONAL SET** and then press OK key to select.
- 3. Press NAVIGATION key to select HANDSET TONE and then press OK key to select and show **RING VOLUME**. Press the OK key again to select.
- Intercom, call transfer and conference are only possible with at least 2 handset 4. Press NAVIGATION key to your desired volume level and then press OK key to confirm. A confirmation beep is played.

Set the ring melody

There are 10 ring melodies available on your handset.

1. Press MENU key to enter menu selection.

- 2. Press NAVIGATION key to select **PERSONAL SET** and then press OK key to select.
- 3. Press NAVIGATION key to select HANDSET TONE and then press OK key to select
- 4. Press NAVIGATION key to select RING TONES and then press OK to select
- 5. Press NAVIGATION key to your desired melody and then press OK key to confirm. A confirmation beep is played.

Activate/deactivate key tone

A single tone is emitted when a key is pressed. You can enable or disable the key tone. By default, the key tone is ON.

- 1. Press MENU key to enter menu selection.
- 2. Press NAVIGATION key to select **PERSONAL SET** and then press OK key
- 3. Press NAVIGATION key to select HANDSET TONE and then press OK key to select.

- Press TALK key on the called handset to answer the internal call, where 4. Press NAVIGATION key to select KEY BEEP and then press OK to sel
 - 5. Press NAVIGATION key to select ON or OFF and then press OK key to
 - confirm. A confirmation beep is played.

Activate/deactivate auto hang-up

- 2. Press NAVIGATION key to select PERSONAL SET and then press OK key to select
- 3. Press NAVIGATION key to select AUTO HANG-UP and then press OK kev to select
- 4. Press NAVIGATION key to select ON or OFF and then press OK key to confirm. A confirmation beep is played.

Set date/time format

Set time format

- 1. Press MENU key to enter menu selection
- 2. Press NAVIGATION key to select CLOCK&ALARM and then press OK key to select.
- 3. Press NAVIGATION key to select SET FORMAT and then press OK ke to select
- 4. Press OK key to enter TIME FORMAT. The current setting is displayed 5. Press NAVIGATION key to select 12 HOURS or 24 HOURS and then press OK key to confirm. A confirmation beep is played.

Set date format

- 1. Press MENU key to enter menu selection.
- 2. Press NAVIGATION key to select CLOCK&ALARM and then press OK
- 3. Press NAVIGATION key to select SET FORMAT and then press OK ke
- 4. Press NAVIGATION key to select DATE FORMAT and then press OK to select. The current setting is displayed
- 5. Press NAVIGATION key to select DD/MM or MM/DD and then press OF key to confirm. A confirmation beep is played.

Set alarm

- 1. Press MENU key to enter menu selection.
- 2. Press NAVIGATION key to select CLOCK&ALARM and then press OK to select
- 3. Press NAVIGATION key to select ALARM and then press OK key to se
- 4. Press NAVIGATION key to select OFF, ON ONCE or ON DAILY and th press OK key to confirm

Set alarm tone

Change Master PIN

Advanced use of your telephone

- 2. Press NAVIGATION key to select CLOCK&ALARM and then press OK to select.
- 3. Press NAVIGATION key to select ALARM TONE and then press OK ke to select.

and then press OK key to confirm. A confirmation beep is played.

4. Press NAVIGATION key to select KEY BEEP and then press OK to select.	Master PIN number is 0000. The maximum length of the Master PIN is 8 digits.	3. Press NAVIGAT
5. Press NAVIGATION key to select ON or OFF and then press OK key to	Note: If you forget your PIN code, you can reset it to its default 0000 using a	to select.
confirm. A confirmation beep is played.	handset Reset (see section Reset Unit).	4. Press NAVIGAT
Activate/deactivate auto hang-up	1. Press MENU key to enter menu selection.	press OK key to
This function enables you to end a call automatically by simply placing the	Press NAVIGATION key to select ADVANCED SET and then press OK key to select	Reset unit
handset on the base station. By default, the Auto Hang up feature is ON.	to select. 3. Press NAVIGATION key to select CHANGE PIN and then press OK key to	You can reset your
1. Press MENU key to enter menu selection.	select.	Note: Upon reset,
2. Press NAVIGATION key to select PERSONAL SET and then press OK	Enter the current Master PIN when prompted and then press OK key to confirm.	be deleted and the
key to select.	As you enter the PIN it will be shown as asterisks (*) on the screen.	phonebook will rer 1. Press MENU ke
Press NAVIGATION key to select AUTO HANG-UP and then press OK key to select.	(Enter the new PIN and then press OK key to confirm. A confirmation beep is	2. Press NAVIGAT
4. Press NAVIGATION key to select ON or OFF and then press OK key to	played.)	key to select.
confirm. A confirmation beep is played.	Register your handset	3. Press NAVIGAT
Set date/time format	IMPORTANT: When you purchase a telephone, all handsets are already	4. Press OK key a
You can set your preferred date/time format for your phone. The default	registered to the base, so you do not need to register them. Handset	reset to its defau
format is DD/MM and 24 HOURS.	registration is only necessary when you buy extra handsets or if a handset has become faulty.	Technical details
Set time format	The procedure described below is for Versatis E100 or Versatis E150. They may be different if you want to register another handset model, in which case	Free field range
 Press MENU key to enter menu selection. Press NAVIGATION key to select CLOCK&ALARM and then press OK 	you should refer to its user guide.	Indoor range
key to select.		Handset battery life
3. Press NAVIGATION key to select SET FORMAT and then press OK key	Additional handsets must be registered to the base unit before you can use them. Up to 4 handsets can be registered to one base station.	(average values)
to select.	The Master PIN is required before you can register or unregister handsets.	Number of handset
4. Press OK key to enter TIME FORMAT . The current setting is displayed.	By default, the Master PIN is 0000.	Intercom mode
5. Press NAVIGATION key to select 12 HOURS or 24 HOURS and then	On the base station, press and hold the HANDSET LOCATOR key for	Three -way confere
press OK key to confirm. A confirmation beep is played.	approximately 5 seconds.	(1 outside correspo 2 internal correspon
Set date format	1. On the handset, press MENU key to enter menu selection.	
1. Press MENU key to enter menu selection.	2. Press NAVIGATION key to select ADVANCED SET and then press OK	Electrical connection Base mains adapte
2. Press NAVIGATION key to select CLOCK&ALARM and then press OK key	key to select. 3. Press NAVIGATION key to select REGISTRATION and then press OK	Charger
to select. 3. Press NAVIGATION key to select SET FORMAT and then press OK key to	key to select.	
select.	Note : If no action is taken on the handset within 10 seconds, the	
4. Press NAVIGATION key to select DATE FORMAT and then press OK key	registration procedure will be aborted. If this happens, repeat the first step.	
to select. The current setting is displayed.	WAITING is displayed on the screen. A confirmation beep is played to	Telephone connecti
5. Press NAVIGATION key to select $\ensuremath{\text{DD}}\xspace/\ensuremath{\text{MM}}\xspace$ and then press OK	indicate successful registration, and the handset will return to idle mode,	
key to confirm. A confirmation beep is played.	with its handset number displayed.	
Set alarm	Note : If no base is found within a certain period, NO BASE will be	Batteries
The handset has an alarm clock feature, and when the alarm is set, the Ω is	displayed with an error tone to indicate failed registration and the handset returns to idle mode, and you will need to repeat the registration sequence.	
shown on the handset display.		
When the alarm time is reached, the display flashesALARM and the alarm	Unregister your handset	
melody is played for 1 minute or until any handset key is pressed.	 Press MENU key to enter menu selection. Press NAVIGATION key to select ADVANCED SET and then press OK 	Operating temperat
If the alarm is set for ON DAILY and the alarm will sound again on the next day. If the alarm was set for ON ONCE, the will be turned off.	key to select.	
1. Press MENU key to enter menu selection.	3. Press NAVIGATION key to select UNREGISTER and then press OK key	* Value may vary
2. Press NAVIGATION key to select CLOCK&ALARM and then press OK key	to select.	** Depending on in
to select.	4. Enter the Master PIN when prompted and then press OK key to confirm.	Troubleshoot
3. Press NAVIGATION key to select $\ensuremath{\textbf{ALARM}}$ and then press OK key to select.	(the default master PIN is 0000)	Troubleshoot If you have difficul
4. Press NAVIGATION key to select OFF, ON ONCE or ON DAILY and then	5. Press NAVIGATION key to select the handset number to unregister and	As a general rule,
press OK key to confirm.	then press OK key to confirm. A confirmation beep is played to indicate successful unregistration.	handsets in your i
If you select ON ONCE or ON DAILY , enter the time (HH-MM) for the alarm and press the UP/DOWN key to select AM or PM if the time is in 12 HOURS	Note : If no action is taken on the handset within 15 seconds, the	the power supply
format.	unregistration procedure will be aborted and the handset returns to idle	
5. Press OK key to confirm. A confirmation beep is played.	mode.	ALWAYS check f
Set alarm tone	You must use another handset to unregister handsets from the base.	
1. Press MENU key to enter menu selection.	Change recall time	
2. Press NAVIGATION key to select CLOCK&ALARM and then press OK key	You may need the R button to send a Recall signal (also called Flash or	
to select.	Timed Break Recall) if you are connected to a PBX. You should normally	L
3. Press NAVIGATION key to select $\ensuremath{\textbf{ALARM TONE}}$ and then press OK key	leave the Recall Time at its default setting of Short (100ms), as this is the	
to select.	standard recall required in the telephone network, but it can be changed to	
Press NAVIGATION key to select MELODY 1, MELODY 2 or MELODY 3	Medium (270ms) or Long (600ms) if your telephone is connected to a PBX	

- Medium (270ms) or Long (600ms) if your telephone is connected to a PBX that requires a different recall time. 1. Press MENU key to enter menu selection
 - 2. Press NAVIGATION key to select ADVANCED SET and then press OK key to select

The Master PIN is used for registration/unregistration of handsets. The default

- TION key to select RECALL TIME and then press OK key
- TION key to select SHORT, MEDIUM or LONG and then o confirm. A confirmation beep is played.

r phone to its default settings with this feature. , all your personal settings, call log and redial list entries w e phone will return to its default settings. However, your emain unchanged after reset. key to enter menu selection.

- TION key to select ADVANCED SET and then press OK
- TION key to select RESET and then press OK key to sele again to confirm. A confirmation beep is played and the uni ault settings.

Free field range	Up to 300 meters*
Indoor range	Up to 50 meters*
Handset battery life (average values)	7 hours talktime** 100 hours standby**
Number of handsets	Up to 4
Intercom mode	Yes
Three -way confere (1 outside correspondent + 2 internal correspondents)	Yes
Electrical connection / Base mains adapter / Charger	Base: S003IV0600050 or IA5060 Charger: S003IV0600015 or IA5060 Input: 100-240 V / 50-60 Hz Output: 6V DC / 500 mA(BASE) 6V DC / 150mA (charger) ; (500mA for IA5060) Only use the adapters supplied with the telephone. Single-phase AC, excluding IT installations defined by the EN 60950 standard. Caution: the network voltage is classified as a hazard by the criteria of this standard.
Telephone connection	Appliance designed for connection to a TNV3 class (telecommunications network voltage) analogue telephone line as defined by the EN 60950 standard.
Batteries	Corun / Sanik – AAA – 1.2 V – 400 mAh Only use the batteries supplied with the telephone. Using any other type of battery presents a risk of explosion. Used batteries must be disposed of in compliance with current environmental protection regulations.
Operating temperature	From 5 to 40° C

according to environment.

initial battery charge.

ulty with your phone, please try the suggestions listed belo e, if a problem occurs, remove the batteries from all the installation for about 1 minute, then disconnect and recon v to the base and reinstall the handset batteries.

ALWAYS check first that:	You have followed all the steps listed in the user manual to install and set up your telephone. All connectors are firmly inserted in their sockets. Mains power to the base unit is switched on at the socket. The handset's batteries are correctly and securely
	installed and are not run down.

	If the handset's display is blank, it may have been switched off. Press and hold the HANG-UP/EXIT key to switch it back on.
Everyday use "I cannot make or answer calls"	Rey to switch it back on. Check that the base unit's mains power adapter is plugged in and power is switched on. The base unit needs mains power for normal operation of the phone - not just for charging the batteries. Make sure you are using the telephone line cable supplied with your telephone. Other telephone line cables might not work. Move the handset closer to the base unit. Check the battery level symbol on the display. If it is low, replace the handset on the base unit or charger pod to recharge the batteries. Switch off power at the mains socket, wait for a short time and then switch back on. This may solve the problem.
"I cannot make a call"	If the handset display shows KEYS LOCKED, press and hold the * button to unlock it before you make a call. Only one handset (or the base unit) can be connected to the outside line at a time. If another handset is already using the line, you need to wait until it has finished its call.
"When I press on the keys, nothing happens"	Make sure the batteries are fitted in your handset If the Battery Level symbol on the display shows 'low', put your handset back on the cradle to charge.
"When I key in a number, it appears on the display, but I cannot make an outside call"	Try a different position for the base unit – somewhere higher if possible, or further from other electrical equipment. Try moving the handset closer to the base unit.
"The phone does not ring"	Check that the base unit's mains power adapter is plugged in and power is switched on. Check that ring volume is not on OFF
"I hear 'beeps' from my handset while I'm on a call"	You may be going out of range of the base unit. Move closer or your call may be cut off. Check the Battery Level symbol on the display. If it's low, recharge the batteries.
"When I try to make a call, I hear busy tone"	If you're using a multi-handset system, check whether another handset is already on a call.
"The volume in the earpiece is low when I'm on a call"	Make sure you're holding the earpiece correctly over your ear. Adjust the volume using the UP/DOWN key.
Batteries "The handset's battery cells are running low within an hour or two"	Before you first use the handset, you should have left it on the base unit or charger pod for 15 hours to charge the batteries fully. You may need to replace the batteries. Check the connection between the base unit and the mains power socket. unit.
"I try to recharge the batteries but I still get a warning that they are low"	You need to replace the batteries. Dispose of used batteries safely – never burn them, or put them where they could get punctured. Do not use non-rechargeable batteries in your handset – they may explode, causing damage.
If the fault persists	Disconnect all other instruments connected to the same line and try to make a call. Disconnect the base unit from the telephone line and plug a different phone into the master telephone socket. Try making a call. If this works, the line is OK. If the call does not work, and you are using a two-way socket adapter, remove it and plug a telephone directly into the socket. If the call now works, the adapter may be faulty. If you cannot make a call, the fault may be on the
	"I cannot make or answer calls" "I cannot make a call" "When I press on the keys, nothing happens" "When I key in a number, it appears on the display, but I cannot make an outside call" "The phone does not ring" "I hear 'beeps' from my handset while I'm on a call" "When I try to make a call, I hear busy tone" "The volume in the earpiece is low when I'm on a call" Batteries "The handset's battery cells are running low within an hour or two" "I try to recharge the batteries but I still get a warning that they are low"

The store where you bought your telephone can also provide you with information and after-sales support.

exchange line. Contact the service provider.

SAFFTY In the event of an electrical hazard, the mains adapter acts as 230V power isolating device. It should therefore, as a precaution, be installed close to the appliance and be easily accessible. To disconnect the device from the primary power source, the mains adapter must be removed from the 230V AC/50 Hz socket If the mains adapter fails, it must be replaced by an identical model If not connected to the mains power or if there is a mains power failure, telephones that use cordles andsets will not work. ou will then be unable to make or receive calls in the event of an emergenc This is why we recommend that you also keep a conventional telephone - one that doesn't require a power I supply as a backup.
I Do not use your telephone to notify a gas leak when standing in the vicinity of the leak. It is recommended that you avoid using this device during electrical storms Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, nose and mouth. In the event of contact, rinse the affected part for about wenty minutes with running water and seek urgent medical attention. Clean the product with absorbent paper or a dry cloth and contact your reseller for replacement batteries ATLINKS hereby declares that the following models conform to the essential requirements and other applicable provisions of European directive 1999/5/EC. Versatis E100 / Versatis E100 Duo / Trio Versatis E150 / Versatis E150 Duo / Trio

CONFORMITY

This unit conforms to the following rules and regulations: 1995/5/EC Radio frequency and telecommunication equipment and the mutual acceptance of conformity. The CE mark proves the above



ENVIRONMENT

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused. Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.

- If you are a professional user, please follow your supplier's instructions

- If the appliance is rented to you or left in your care, please contact your service provider. Keen to preserve the environment, ATLINKS has equipped this appliance with a switching power supply, offering better energy efficiency. The advantages include not only very low electricity consumption, but also a more compact format than the conventional power supply units used by the previous range

The used batteries from your telephone (if it has batteries) must be disposed of in compliance with current environmental protection regulations. Comply with your local regulations.

Return your batteries to your reseller or dispose of them at an approved recycling centre Help us protect the environment in which we live!



R&TTE DECLARATION OF CONFORMITY (DOC)

Declare under our sole responsibility that the products Alcatel Versatis E100, Versatis E100 Duo, Versatis E100 Trio, Versatis E100 Quattro, Versatis E150, Versatis E150 Duo, Versatis E150 Trio and Versatis E150 Quattro comply:

- With the essential requirements and other relevant require rements of the R&TTE Directive (1999/5/EC) based on the ther normative documents: EN 60950-1 (2006) + A11 (2009) EN 301406 V2.1.1 (2009) EN 301489-01 V1.8.1:2008 / EN 301489-06 V1.3.1:2008

- n Commission regulation (EC) N° 278/2009 of April 6, 2009 implementing Directive 2005/32/EC of the European Parliament and Council with regard to ecodesign requirements for no-load condition electric power consumption and average active efficience (external power supplies
- nmission regulation (EC) no. 1275/2008 of December 17, 2008 implementing Directive 2005/32/EC of the E e Council with regard to ecodesign requirements for standby and off mode electric power consumption of e household and office equipment.

'his conformity is understood as being effective if the product for which it is given is installed and used according to the ir



ATLINKS, 22 quai Gallieni 92150 Suresnes – France S.A.S. (Simplified Joined Stock Company) with capital of 500 000 Euros -Registration number: 508 823 747 R.C.S. Nanterre.

© ATLINKS 2011 - Reproduction prohibited The manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations.

ALCATEL, VERSATIS and ATLINKS are registered trademarks The Alcatel logo and Alcatel name are trademarks of Alcatel and used under license by ATLINKS.

> Model E100 / E100 Duo / Trio E150 / E150 Duo / Trio CG1 A/W No. : 10000330 Rev.0 (EN) Made in China