




Quick Start Guide
**5.8 GHz Cordless
Telephone/Answering
System 5643B/E5644B**

with Caller ID & Call Waiting



Installation & setup

After battery installation, place the handsets in their base unit or charger and allow to charge for 16 hours before use. You can keep the battery charged by returning the handsets to their base unit or charger after each use. When the battery is fully depleted, a recharge takes about 12 hours. Average talk time on a fully charged battery is about eight hours depending on environmental conditions, standby time is approximately four days.

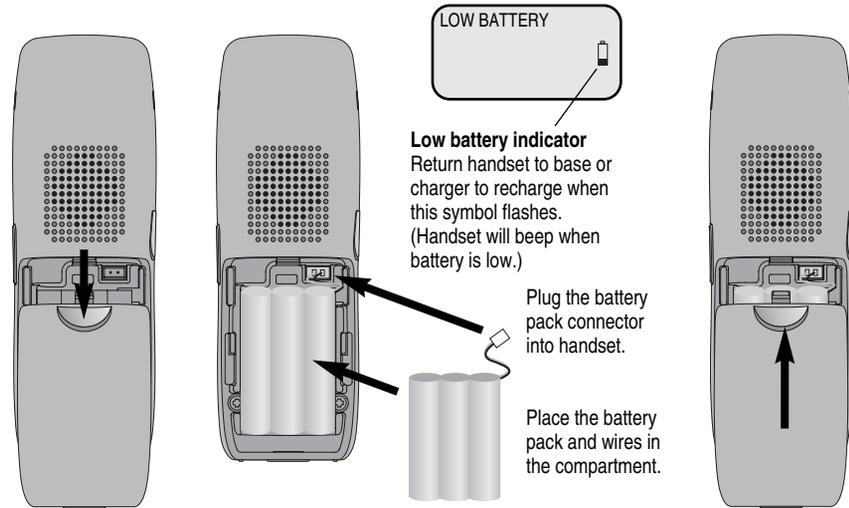

Press tab to open battery compartment.



Caution: Use only supplied rechargeable battery or AT&T replacement battery model 27910 (SKU 00102. Part number 89-0099-00-00).

Replace compartment cover.

Place handset in base or charger to charge for 16 hours before first use.

Plug power adapter into an electrical outlet not controlled by a wall switch.



NOTES:

1. Use only the power cord supplied with this product. If you need a replacement, call 1 (800) 222-3111. In Canada, call 1 (866) 288-4268.
2. Be sure to use an electrical outlet not controlled by a wall switch.

Quick reference guide

Handset

▲ CID

Press to scroll up while in menus. Press to display Caller ID information. While entering names or numbers, press to move the cursor to the left.

PHONE/FLASH

Press to make or answer a call. During a call, press to receive an incoming call, if Call Waiting is activated.

MUTE/DELETE

While on a call, press to mute microphone. While reviewing the call log, press to delete an individual entry or press and hold to clear the Caller ID log. While pre-dialing, press to delete digits from a string.

SPEAKER

Press to activate handset speakerphone. Press again to resume normal handset use.

SELECT/MENU

Press to display menu, or to select highlighted item from menu.

▼

DIR

Press to scroll down while in menus. Press to display directory entries. While entering names, press to advance cursor.

OFF/CLEAR

During a call, press to hang up. While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.

REDIAL/PAUSE

Press to view redial memory. While entering numbers, press and hold to insert a dialing pause.

INTERCOM

Press to initiate an intercom conversation or transfer a call.



Feature menu

> shows highlighted item



Menu

Feature Menu

- Directory
- Call Log
- Ringer Volume
- Ringer Tone
- Key Tone
- Language
- CLR Voice Mail
- Dial Type

Press **▲** or **▼** to scroll through menu items.

Press **SELECT** to select or modify a highlighted item.

Press **OFF/CLEAR** to cancel an operation, back up to the previous menu, or exit the menu display.

Quick reference guide


Telephone Base

HANDSET LOCATOR

Press to make handset(s) beep.

VOLUME

Press to adjust message playback volume.

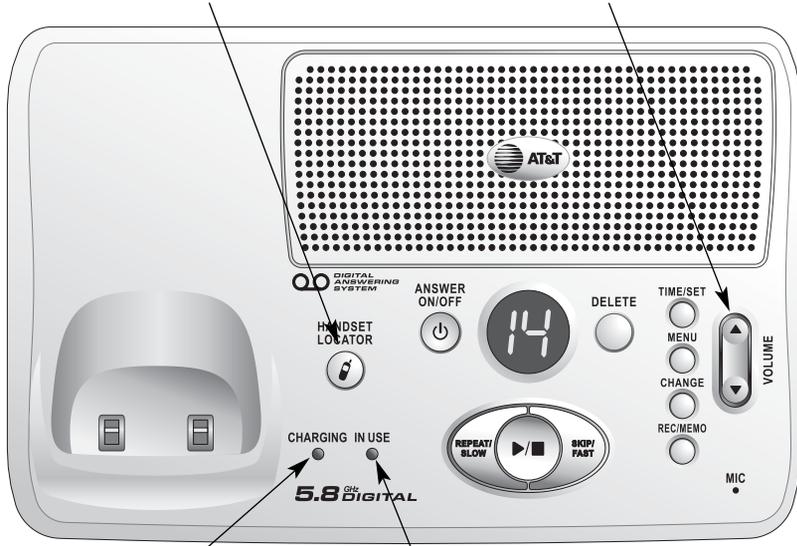


CHARGING

On when handset is positioned so its battery can charge.


IN USE

On when handset is in use. Flashes when another phone is in use on the same line, or answering system is answering an incoming call.

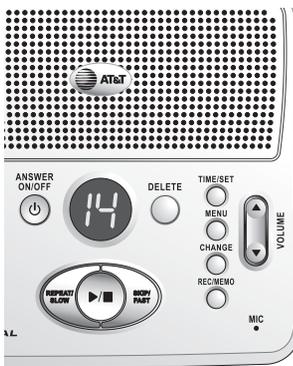

Answering System Controls

Press to repeat message.
Hold to slow playback.
Press twice to hear previous message.

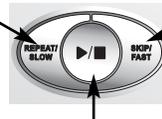

Press to skip to next message. Hold to speed up playback.

Press to play or stop playing messages.

- ANSWER ON/OFF** ..Press to turn answering system on or off.
- DELETE**Press to delete a message during play back. Hold to delete all old messages when set is idle.
- TIME/SET**Press to review or set the answering system clock.
- MENU**Press to review or change answering system options.
- CHANGE**Press to change a menu option.
- REC/MEMO**Press to record a memo or, after pressing **MENU**, to record an outgoing announcement.

