



User's Manual for Cordless Telephone 9105


*Fold open this manual for information about this telephone's installation and operation. Please read **Part 1 — Important Product Information**, included in this package.*




Part 2

© 1998 Philips Consumer Communications, L.P. All rights reserved.
Printed in Mexico. 848233458 Issue 1A/T&T

INSTALLATION

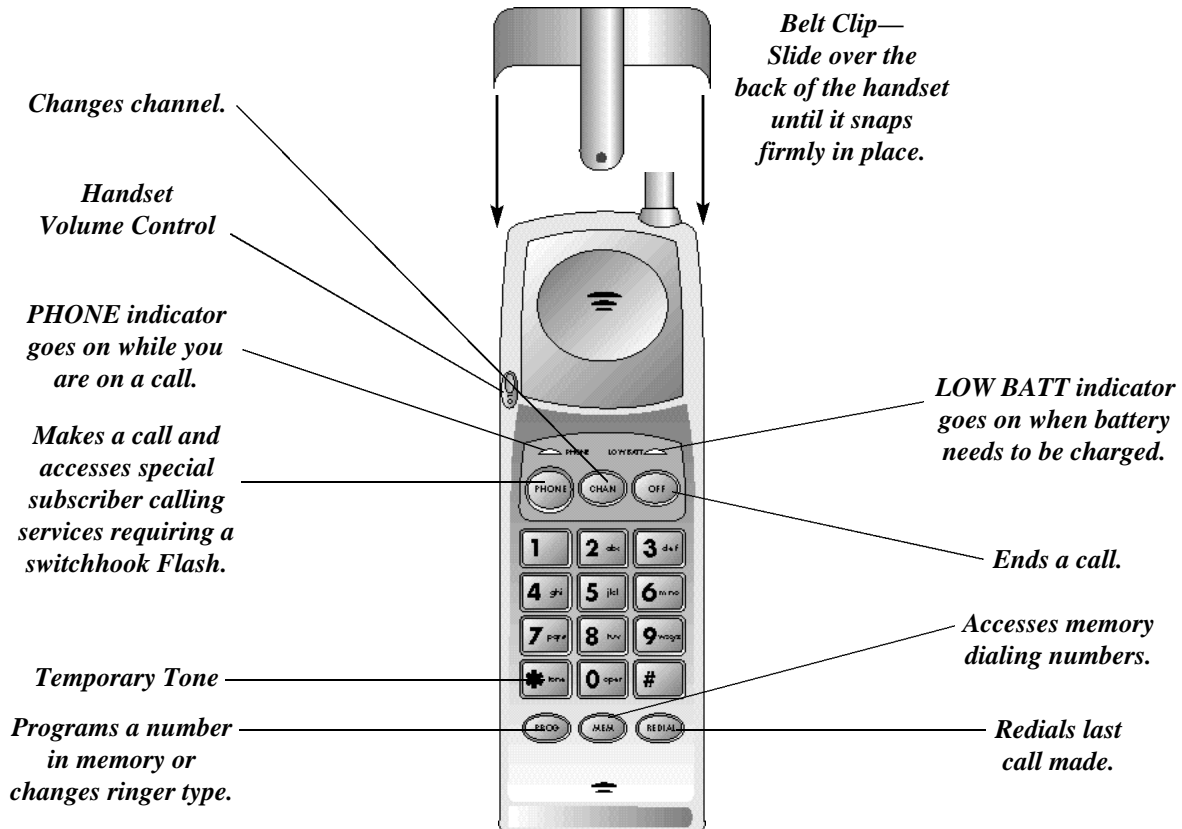

INSTALLATION

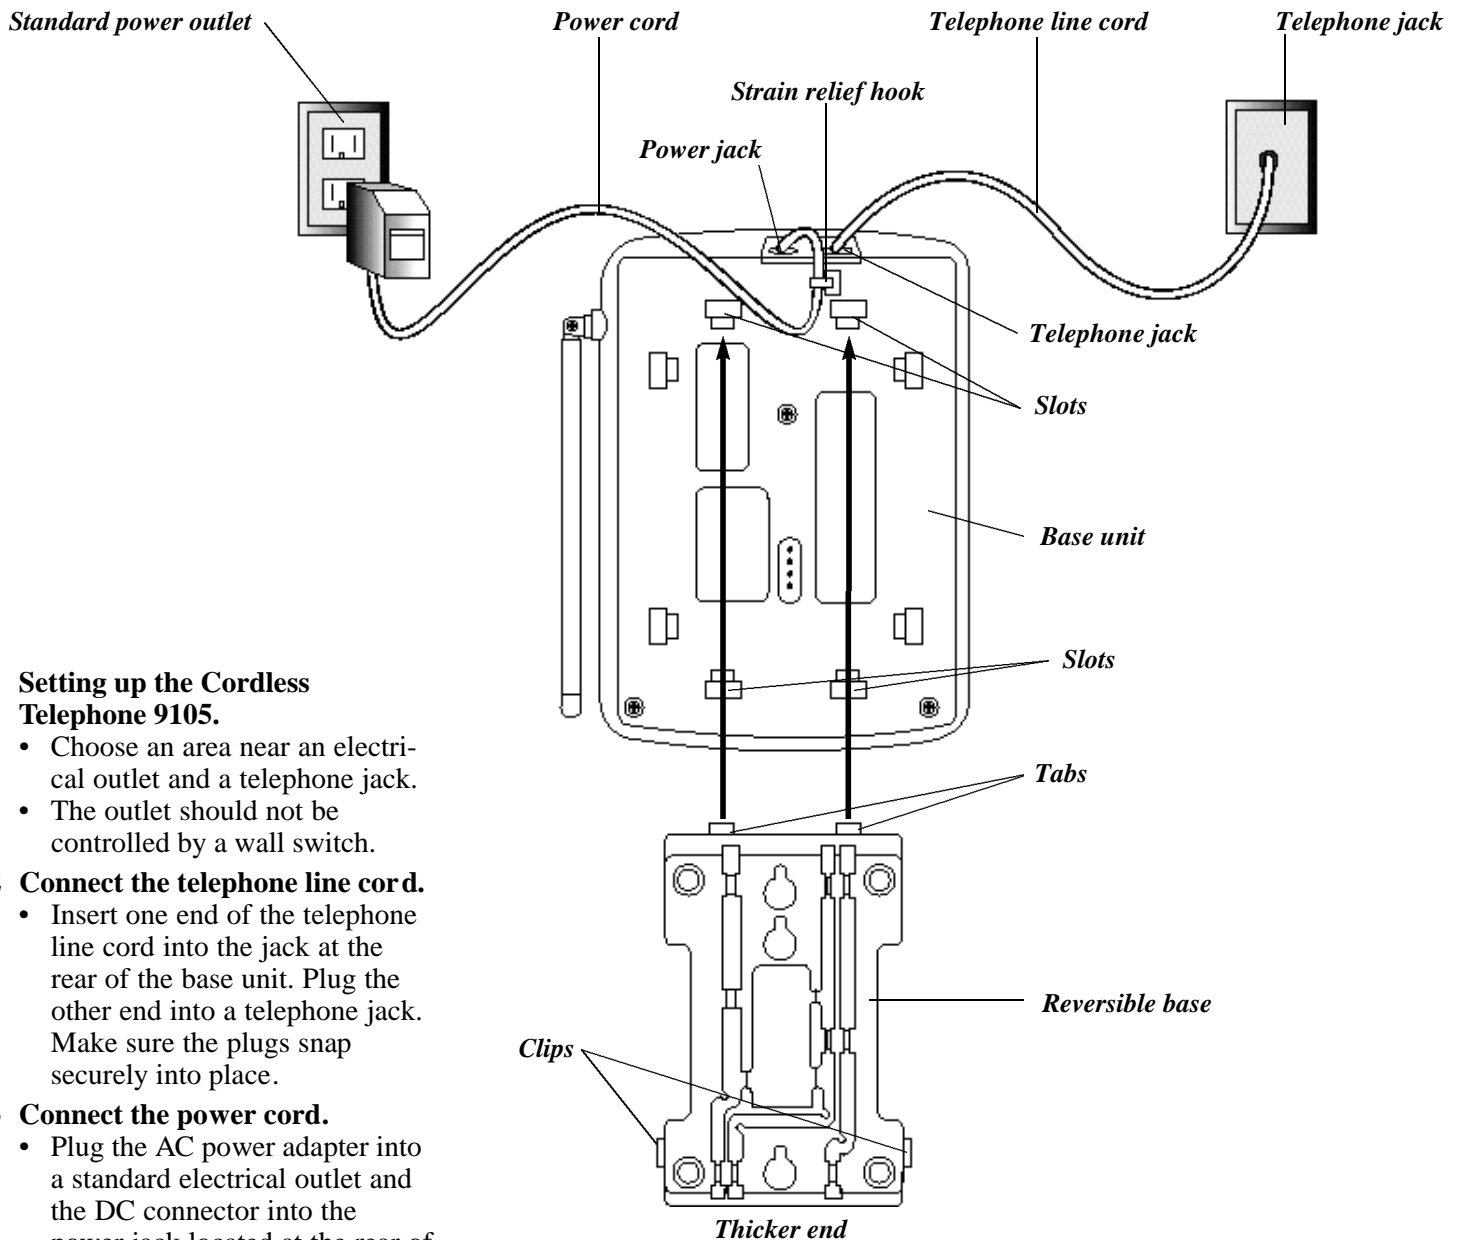

1 Setting up the Cordless Telephone 9105.

- Choose an area near an electrical outlet and a telephone jack.
- The outlet should not be controlled by a wall switch.

2 Connect the telephone line cord.

- Insert one end of the telephone line cord into the jack at the rear of the base unit. Plug the other end into a telephone jack. Make sure the plugs snap securely into place.

3 Connect the power cord.

- Plug the AC power adapter into a standard electrical outlet and the DC connector into the power jack located at the rear of the base unit.
- Wrap the power cord around the strain relief hook on the bottom of the base unit (see illustration). The strain relief hook helps protect the power cord from accidentally being removed.

CAUTION: Use only the AC power adapter supplied with this telephone. This is a Class 2 AC adapter, specifically designed for use with the 9105.

NOTE: Connect power to the base unit before placing the handset in the cradle.

4 Set the dial mode switch.

If you have touch tone service on your phone line, set the switch located on the bottom of the base to TONE. If you have rotary service, set the switch to PULSE.

5 Install the handset battery.

- Remove the handset battery cover by pressing the indentation on the handset battery cover and sliding the cover downward.

- Place the handset battery pack in the compartment. Make sure the metal contacts on the underside of the battery are aligned with the charging contacts in the handset battery compartment.
- Replace the handset battery cover by sliding it on its track up and over the handset battery compartment until it snaps firmly in place.

INSTALLATION

continued

6 Charge the handset batteries before use.

Place the handset face down in the base unit cradle. Make sure that the IN USE/CHARGE light on the base is on. The handset battery must be charged for 16 hours before using your phone for the first time. The batteries recharge automatically whenever the handset is placed in the base unit cradle.

7 Check for dial tone.

After the batteries are charged, pick up the handset and press **[PHONE]**. The PHONE indicator should light up, and you should hear a dial tone. If not, see “In Case of Difficulty.”

CAUTION:

- 1 Never install telephone wiring during a lightning storm.
- 2 Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- 3 Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- 4 Use caution when installing or modifying telephone lines.

Wall Mounting

1 Choose a spot where the telephone wall jack is near an electrical outlet.

This phone requires a modular telephone jack and a standard electrical outlet (120V AC).

2 Remove the reversible base.

The reversible base is designed for both table and wall mount installations. The telephone comes with the reversible base installed in the table mount position. To wall mount this telephone you will need to remove the reversible base and position it so that the thicker end is towards the front of the telephone (see illustration on previous page). You can remove the reversible base by depressing the clips on each side of the base while gently lifting upwards.

3 Reattach the reversible base.

- Insert the tabs of the reversible base into the slots on the bottom of the telephone base.
- Gently press the thicker end of the reversible base until it snaps firmly in place.

4 Connect the telephone line cord.

- Using the short telephone line cord supplied, insert one end of the telephone line cord into the telephone jack on the rear of the telephone base.
- Feed the remaining line cord to the rectangular opening by pressing the line cord into the grooves of the reversible base leaving at least 3 inches free. Plug the line cord into the standard wall jack.

5 Connect the power cord.

Plug the power cord into the power jack on the back of the base. Plug the AC adapter into an electrical outlet.

6 Mount the telephone to the wall jack.

Position the telephone base so the mounting studs on the wall jack fit into the reversible base. Slide the telephone down on the mounting studs until the phone locks in place.

TELEPHONE OPERATION

IMPORTANT: Whenever the handset batteries are removed, the handset must be placed in the base unit cradle for reinitialization. The IN USE/CHARGE indicator on the base unit will flash during the initialization.

Making a Call

- 1 Press **PHONE** on the handset and wait for the PHONE indicator to go on.
- 2 When you hear a dial tone, dial the number.

Answering a Call

If the handset is in the base:

NOTE: The IN USE/CHARGE indicator will increase intensity with each incoming ring.

- 1 Lift the handset.
- 2 The PHONE indicator goes on and the call will be connected.

If the handset is away from the base:

NOTE: The IN USE/CHARGE indicator will flash with each incoming ring.

Press any key on the handset (except volume control or **OFF**). This is very useful in a dark environment; you do not have to fumble around looking for the **PHONE** key to answer the call.

Ending a Call

If you are near the base:

Place the handset in the base.

If you are away from the base:

Press **OFF**.

Volume Control

To increase the sound level of a call, move the handset volume control (located in the left side of the handset) to HI. To decrease the sound level, move the handset volume control to LO.

Redial

To redial the last number dialed from the handset:

- 1 Press **PHONE**.
- 2 Wait for the PHONE indicator to go on and check for dial tone.
- 3 Press **REDIAL**.

The last number you called is stored in the redial memory until you dial another number.

Temporary Tone

If you have dial pulse (rotary) service, this feature allows you to enter codes or tones needed to operate answering machines, or use electronic banking services, calling cards, and other special services. This feature will operate most special services; however, some services may actually require a touch tone line. To be sure, ask the company that provides the special service.

NOTE: If you have touch tone service, you do not need to use the Temporary Tone feature.

To use temporary tone dialing:

- 1 Dial the call normally.
- 2 Press ***TONE**.
- 3 Enter numbers or symbols required.
- 4 End the call normally (Temporary Tone is automatically shut off).

Programming the Ringer Type

The handset ringer is capable of four different types of ringing tones. The following sections detail how to change the different tones and to turn off the ringer on the handset.

To program, the handset must be **OFF**.

To select a different ringer type do the following:

- 1 Press **PROG**.
- 2 Press **#**.
- 3 Press a key (**1**-**4**) to select a ringer type.
- 4 Press **OFF**.

Turning Off the Ringer

To turn off the ringer on the handset, do the following:

- 1 Press **PROG**.
- 2 Press **#**.
- 3 Press **5** to turn off the ringer.
- 4 Press **OFF**.

To turn ringer on again, see "Programming the Ringer Type."

Checking the Ringer

To check the ringer which is currently programmed, do the following:

- 1 Press **PROG**.
- 2 Press **#**.
- 3 Press **0**. You will hear the ringer currently selected.
- 4 Press **OFF**.

Page/Handset Locator

This feature is useful if you misplace the handset.

To locate the handset using the Handset Locator feature:

- 1 Press **PAGE/HANDSET LOCATOR**.
- 2 A repeating paging tone is sounded at the handset.

To cancel the Handset Locator feature:

Press **OFF** on the handset or press **PAGE/HANDSET LOCATOR** on the base.

Changing Channels

If you notice interference during a call, press **CHAN** to switch to a clear channel.

Special Telephone Services

If you subscribe to special local telephone company services like Call Waiting or Call Forwarding, you can access them by pressing **PHONE** whenever you would press the switchhook on a regular phone. This is like the Flash feature on some other phones.

MEMORY

Memory Features

This telephone can store 10 telephone numbers, each up to 16 digits long. Numbers will remain stored in memory unless you erase or change them by entering other numbers.

Programming a Number into Memory

Make sure the handset is **OFF**.

- 1 Press **PROG**. The PHONE indicator will blink to indicate that you are in the programming mode.
- 2 Enter a number button (0-9).
- 3 Enter the phone number (up to 16 digits).
- 4 Press **MEM** to store the phone number to the key you selected. The phone now exits **PROG** mode and emits a tone.

NOTE: You may choose to store emergency numbers in memory locations. The manufacturer assumes no responsibility for customer reliance upon this memory feature.

Dialing a Number Stored in Memory:

- 1 Press **PHONE** to get a dial tone.
- 2 Press **MEM**.
- 3 Press the number button (0-9) you assigned to that phone number. For example, to dial the phone number you assigned to button "6", press **PHONE**, **MEM**, **6**.

IN USE/CHARGE Indicator

When the handset is in the base cradle, the IN USE/CHARGE indicator increases intensity with each ring of the incoming call. When the handset is not in the base, the IN USE/CHARGE indicator flashes steadily. After the call is answered, the IN USE/CHARGE indicator will remain lit until the end of the call.

Memory Card

There is a memory card with an erasable surface located on the base to record names or telephone numbers of the numbers stored in memory locations.

Programming a Pause Into a Memory Dial Phone Number

When programming a number into memory, store the access number and a pause into the number sequence. The pause will allow the switchboard enough time to give you an outside line dial tone.


To insert a pause in a stored number, press and hold down the key that comes before the pause, until you hear a second beep. This inserts a 2-second pause after that digit. To insert a longer pause, hold the key down until you hear a third or fourth beep. Each time you hear another beep, it makes the pause 2 seconds longer.

For example, to store 9, PAUSE, 555-1234: Press **9 and hold it until you hear a second beep. Then press **5 5 5 1 2 3 4**.**

NOTE: Each pause you program is counted as a digit. You can program up to 16 digits in each memory location.

Changing or Replacing a Stored Number

You can change or replace a stored number by storing a new number in its place.

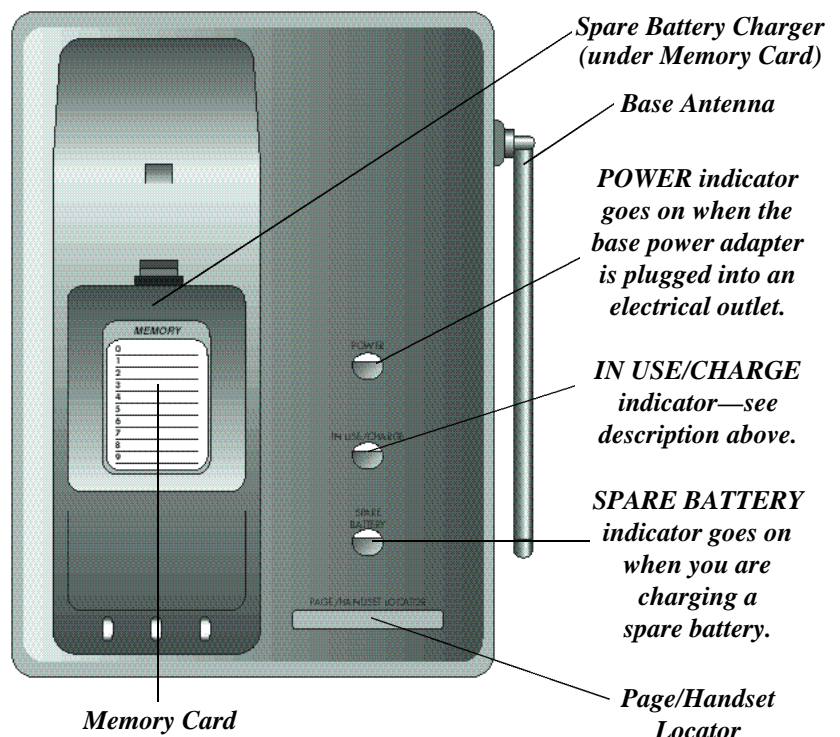

BATTERIES

About the Handset Batteries

You will know the batteries need charging when:

- The phone beeps two times when you press **PHONE** to answer or make a call.
- The LOW BATT indicator on the handset flashes.
- The phone does not respond when you press **PHONE** and the PHONE indicator does not go on.


Charging the Handset Batteries

Place the handset in the base so the IN USE/CHARGE indicator goes on. The batteries will be fully charged in 16 hours. Once the batteries are fully charged, you need only put the handset in the base when the LOW BATT indicator flashes.

If it is more convenient for you to do so, you can leave the handset in the base all the time. It is impossible to overcharge the batteries.

If the batteries don't charge properly:

If you get a low-battery signal even after 16 hours of charging, the battery should be replaced.

 **CAUTION:** To reduce the risk of fire or injury to persons or damage to the telephone, read and follow these instructions carefully.

- Use only Replacement Battery 3470.
- Do not dispose of the battery in a fire. The cell might explode. Check with local codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm.

- Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
- Observe proper polarity orientation between the battery and battery charger.

Replacing the Battery Pack

- 1 Remove the battery compartment cover on the handset by pressing on the indentation and sliding the cover downward.
- 2 Lift out the old battery pack.
- 3 Place the battery pack in the compartment. Make sure the metal contacts on the underside of the battery are aligned with the charging contacts in the battery compartment.
- 4 Replace the cover by sliding it on its track up over the battery compartment until it snaps firmly in place.
- 5 The new batteries must be charged before using your telephone. Place the handset in the base unit and allow it to charge for 16 hours. The telephone may operate before that but, for best performance, let the batteries charge fully.


See illustration on next page.

Spare Battery Charger

The Cordless Telephone 9105 is equipped with a spare battery charger built-in to the base unit. The spare battery charger allows you to always have a charged battery available, should your handset battery discharge during normal use.

To install the Spare Battery Pack (PURCHASED SEPARATELY):

- 1 Open the base unit battery compartment.
- 2 Place the spare battery pack in the battery compartment. Make sure the metal contacts on the underside of the battery are aligned with charging contacts in battery compartment.
- 3 Replace the battery compartment cover.
- 4 When the battery is installed properly, the SPARE BATTERY indicator on the base unit will be illuminated.
- 5 The spare battery will be fully charged after 16 hours. Please note that the SPARE BATTERY indicator will always be illuminated when a spare battery is installed.

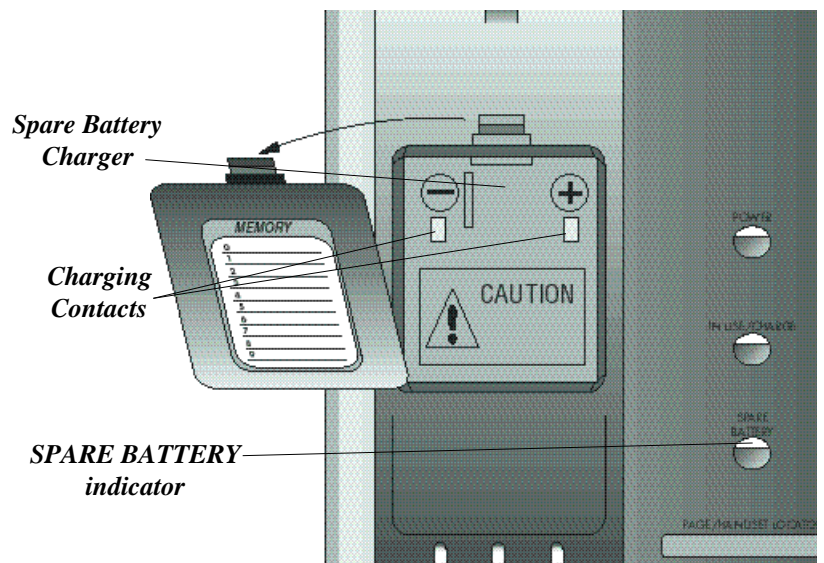


IN CASE OF DIFFICULTY

If you have difficulty operating this phone, try the suggestions below. If you still have trouble, call 1 800 722-9125.

If the phone does not work at all, check these items first:

- Make sure the power cord is plugged into an outlet not controlled by a wall switch.
- Make sure the telephone line cord is plugged firmly into the base and the telephone jack.
- Make sure the base antenna is upright.
- If the phone does not beep when you press **[PHONE]**, the batteries might need recharging.
- If the LOW BATT indicator is on, the batteries need recharging.
- Make sure the battery pack is installed correctly.
- If you have dial pulse service on your telephone line, the Dial Mode Switch must be set to PULSE.

If the above suggestions don't solve the problem, try resetting the security code (see "If you signal when you handset" below).

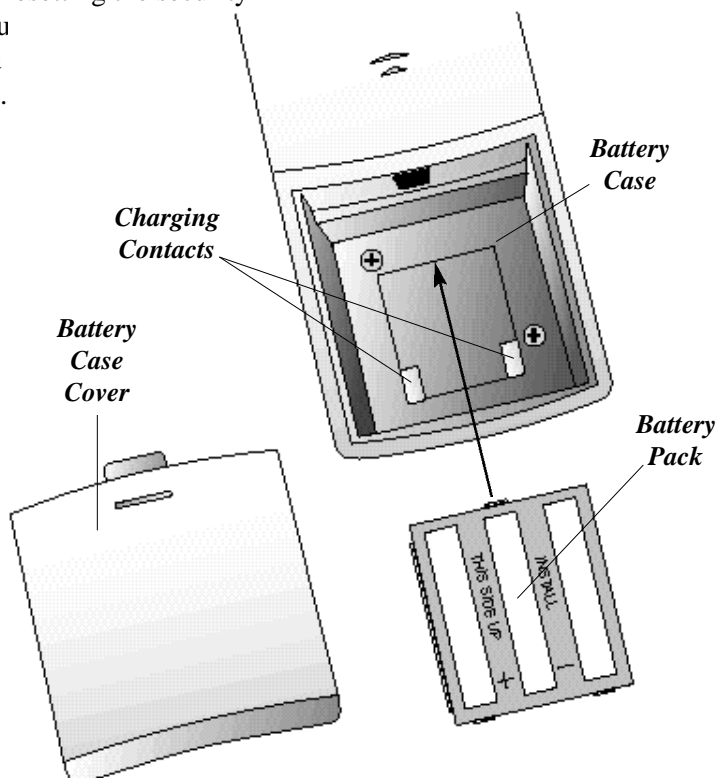

If you get a four-beep signal when you try to use the handset:

The four-beep signal means that the handset and base are not communicating properly. This problem may be caused by something as simple as being out of range while attempting to dial. If that's the case, you'll be able to solve the problem by moving closer to the base and trying the call again.

If this doesn't help, the problem may be that the handset and base are set to different security codes. To reset the security code, try the suggestions below:

- Place the handset in the base, and check to make sure that the IN USE/CHARGE indicator is on. Wait 15 seconds, then pick up the handset, make sure the base antenna is upright and press **[PHONE]**. The PHONE indicator should go on, and the phone should operate properly. If it doesn't, try the next step.

- Place the handset in the base, and check to make sure that the IN USE/CHARGE indicator is on. Unplug the AC adapter from the outlet, wait 15 seconds, and then plug it in again. The IN USE/CHARGE indicator should go on again. Wait another 15 seconds and then pick up the handset, make sure the base antenna is upright and press **[PHONE]**. The PHONE indicator should go on, and the phone should operate properly. If it doesn't, try the next step.
- Pick up the handset, open the battery compartment and remove the battery pack. Wait 15 seconds, and then reinstall the battery pack, place the handset in the base and check to make sure that the IN USE/CHARGE indicator is on. Wait another 15 seconds, and then pick up the handset, make sure the base antenna is upright and press **[PHONE]**. The PHONE indicator should go on, and the phone should operate properly.

If you hear noise or interference when using the phone:

The multi-channel **AutoSelect** feature of the phone should normally minimize any interference. In some situations, however, you might notice some noise or interference when using the phone. Follow the suggestions below.

- Make sure the base antenna is upright.
- You may be out of range. Move closer to the base.
- Household appliances plugged into the same circuit as the base can sometimes cause interference. Try moving the appliance or the base to another outlet.

IN CASE OF DIFFICULTY

continued

- The layout of your home or office may be limiting the operating range. Try moving the base to another location—preferably on an upper floor.

If you lose a call after changing channels:

You were probably almost out of range. Move closer to the base before changing channels. Before placing the call again, set the handset in the base for at least 15 seconds.

If the phone does not ring when you receive a call:

- Make sure the ringer is turned on. If you are away from the base, make sure the base antenna is upright.
- Make sure the telephone line cord is connected firmly to the base and the telephone jack. Make sure the power cord is plugged in.
- You may be too far from the base. Move closer to the base.
- You may have too many extension phones on your telephone line to allow all of them to ring. Try unplugging some of the other phones.

If you hear other calls while using the phone:

- Disconnect the base from the telephone jack, and plug in a regular telephone. If you still hear other calls, the problem is probably in your wiring or local service. Call your local phone company.

If you hear noise in the handset, and the buttons don't work:

- Make sure the power cord is plugged in, and make sure the base antenna is upright.
- Make sure you are in range.

- The base and handset may not be set to the same security code. Place the handset in the base for at least 15 seconds to reset the security code. See “If you get a four-beep signal.”

If you are unable to operate special telephone services or other equipment requiring touch tone signals:

- If you have dial pulse (rotary) service, press ***TONE** on the handset (or on the base) before entering information (see “Temporary Tone”).
- The tones generated by this phone may not be long enough to activate some services or equipment. You might need to use a different touch tone phone.

If you have difficulty entering numbers into Memory:

- Review “Programming a Number into Memory” to make sure you are pressing the correct sequence of buttons.

Make sure you have followed all the instructions in this booklet. If you continue to have problems, call 1 800 722-9125.

If the beeps produced when dialing vary in tone, or ringing varies in tone:

- Make sure your fingers are not covering the grooves (above battery door compartment) on the rear of the handset while dialing or while the phone is ringing.
- Check to make sure that the grooves on the rear of the handset are free of dirt and grime and are unobstructed.
- Check to make sure you have programmed your preferred ringer type. See “Programming the Ringer Type.”