

USER GUIDE

Fusion 2925 Digital Cordless Telephone with Answer Machine



TECHNICAL DETAILS

Standard	Digital Enhanced Cordless Telecommunication (DECT)
Frequency range	1.88 to 1.9 GHz (bandwidth = 20 MHz)
Channel bandwidth	1.728 MHz
Operating range	Up to 300m outdoors; up to 50m indoors
Operating time	Standby: 100 hours Talking: 10 hours Battery charge time: 15 hours
Temperature range	Operating 0°C to 40°C Storage: -20°C to 60°C
Electrical power	HANDSET – 500mAh 2.4V NiMH rechargeable battery pack Base unit: Ten Pin: 500mA/0.000045 / 500mA/0.000045 input 100-240VAC 50/60Hz 150mA, output 5VDC 450mA Charger unit: Ten Pin: 500mA/0.000030 / 500mA/0.000030 input 100-240VAC 50/60Hz 150mA, output 5VDC 300mA
Port specification	The port (connected to the mains power supply) is a SELV port with respect to ENA1003. The port (connected to the telephone line) is a TVN port with respect to ENA1003.

CLEANING AND CARE


Do not clean any part of your Fusion 2925 system with benzene, thinners or other solvent chemicals as this may cause permanent damage which is not covered by the Guarantee.
When necessary, clean it with a damp cloth.
Keep your Fusion 2925 system away from hot, humid conditions or strong sunlight, and don't let it get wet.
Every effort has been made to ensure high standards of reliability for your Fusion 2925 system. However, if something does go wrong, please do not try to repair it yourself. But, consult your supplier or the Helpline.

THIS EQUIPMENT IS NOT DESIGNED FOR MAKING EMERGENCY TELEPHONE CALLS WHEN THE POWER FAILS. ALTERNATIVE ARRANGEMENTS SHOULD BE MADE FOR ACCESS TO DIAL EMERGENCY SERVICES.

Before operating this set,
please read these instructions carefully.

3 GET TO KNOW YOUR PHONE

3.1 Handset Overview

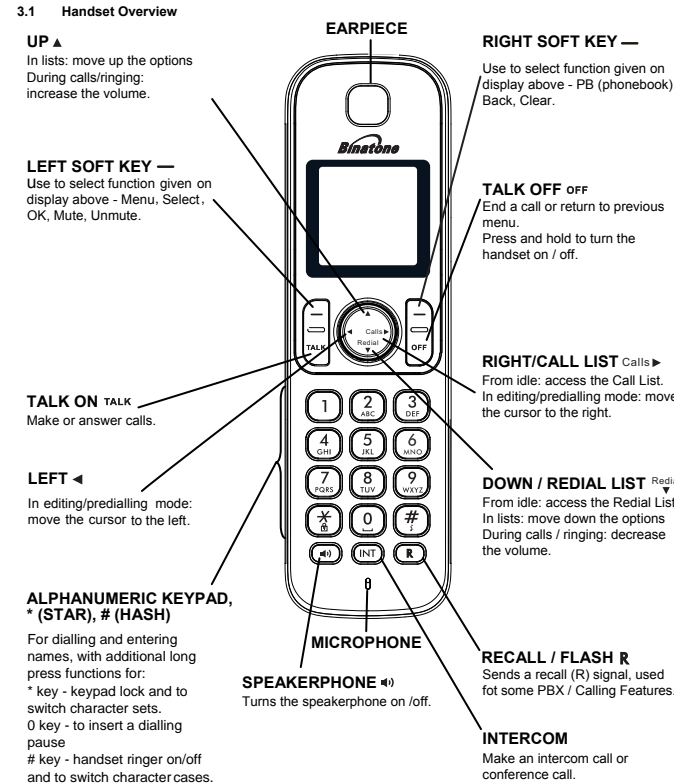

0	SP	0	-	+	=	_	()	"	'	[]	{ }	<	>	/ \	^	~	
1	1	.	:	;	!	?	¿	*	#	&	%	\$	€	£	@	¤	§
2	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
3	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
4	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
5	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9
6	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9
7	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
8	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
9	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9

0	SP	0	-	+	=	_	()	"	'	[]	{ }	<	>	/ \	^	~	
1	1	.	:	;	!	?	¿	*	#	&	%	\$	€	£	@	¤	§
2	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
3	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
4	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
5	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9
6	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9
7	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
8	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
9	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9

0	SP	0	-	+	=	_	()	"	'	[]	{ }	<	>	/ \	^	~	
1	1	.	:	;	!	?	¿	*	#	&	%	\$	€	£	@	¤	§
2	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
3	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
4	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
5	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9
6	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9
7	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
8	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
9	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9

0	SP	0	-	+	=	_	()	"	'	[]	{ }	<	>	/ \	^	~	
1	1	.	:	;	!	?	¿	*	#	&	%	\$	€	£	@	¤	§
2	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
3	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
4	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
5	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9
6	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9
7	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
8	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
9	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9

0	SP	0	-	+	=	_	()	"	'	[]	{ }	<	>	/ \	^	~	
1	1	.	:	;	!	?	¿	*	#	&	%	\$	€	£	@	¤	§
2	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
3	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
4	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
5	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9
6	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9
7	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
8	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
9	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9

0	SP	0	-	+	=	_	()	"	'	[]	{ }	<	>	/ \	^	~	
1	1	.	:	;	!	?	¿	*	#	&	%	\$	€	£	@	¤	§
2	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
3	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
4	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
5	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9
6	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9
7	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
8	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
9	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9

0	SP	0	-	+	=	_	()	"	'	[]	{ }	<	>	/ \	^	~	
1	1	.	:	;	!	?	¿	*	#	&	%	\$	€	£	@	¤	§
2	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
3	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
4	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
5	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9
6	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9
7	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
8	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
9	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9

0	SP	0	-	+	=	_	()	"	'	[]	{ }	<	>	/ \	^	~	
1	1	.	:	;	!	?	¿	*	#	&	%	\$	€	£	@	¤	§
2	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
3	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
4	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
5	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9
6	P	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9
7	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
8	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9
9	Q	R	S	T	U	V	W	X	Y	Z	0	9	9	9	9	9	9


4 USE YOUR PHONE

- Power on the Handset**
If your handset is powered off, press and hold <OFF> to turn on the handset. You can press and hold <OFF> again to power off the handset.
- Make an External Call**
3.2.2 Direct dialling
Enter the phone number and press <TALK> or <#> to connect to the line and dial the number. When entering the number, if you make a mistake, press <Clear> to delete digits.
3.2.3 Call from the phonebook
Press <Right Soft Key> to access the phonebook and press <UP/DOWN> to select the desired phonebook entry.
Press <TALK> or <#> to dial out the selected phonebook entry.
3.2.4 Call from the call list (only available with Caller Display)
Press <Call> to access the call list and press <UP/DOWN> to select the desired call list entry.
Press <TALK> or <#> to dial out to the selected call list entry.
3.2.5 Call from the redial list
Press <Redial> to access the redial list and press <UP/DOWN> to select the desired redial number.
Press <TALK> or <#> to dial out to the selected redial number.
3.2.6 Call timer
Your handset automatically times the duration of every call. The call timer is displayed when you make a call or answer a call and remains on the screen for 5 seconds after the end of the call. If it is shown in hours, minutes and seconds format (HH:MM:SS).
3.2.7 Answer a call
If the handset is not on the charging cradle, when the phone rings, press <TALK> or <#> to answer a call. When you end the call, the volume settings will still remain at the last selected level.
3.2.8 End a Call
During a call connection, press <OFF> to end the call.
OR
Put the handset on the base station or charger to end the call.
3.2.9 Adjust Earpiece and Handsfree Volume
The volume level can be adjusted over 5 levels for each of the earpiece and handsfree volumes.
During a call:
Press <UP> or <DOWN> to increase or decrease the volume level respectively. The current setting is shown. When you end the call, the volume settings will still remain at the last selected level.
3.2.10 Mute a Call
You can talk to someone nearby without letting the caller hear you during a call.
During a call:
Press <Mute/Left Soft Key> to mute the microphone. Your caller cannot hear you. Press <Unmute/Right Soft Key> again to unmute the microphone.
3.2.11 Turn Off the Handset Ringer
If the handset is not on the charging cradle, when the phone rings, press <TALK> or <#> to answer a call. When you end the call, the volume settings will still remain at the last selected level.
3.2.12 Redial
You can redial any of the last 20 numbers called. If you have stored a name in the phonebook to go with the number, the name will be displayed instead.

Table of Contents

1. IMPORTANT SAFETY INSTRUCTIONS	3
2. INSTALL YOUR PHONE	4
2.1 CONNECT THE BASE STATION	4
2.2 INSTALL AND CHARGE THE BATTERIES	4
3. GET TO KNOW YOUR PHONE	5
3.1 BASE STATION OVERVIEW	5
3.2 HANDSET OVERVIEW	5
3.3 DISPLAY ICONS AND SYMBOLS	6
3.4 BASE STATION WITH TELEPHONE ANSWERING MACHINE (TAM) CONTROL	7
3.5 MENU STRUCTURE	8
3.6 TEXT AND DIGIT ENTRY TABLES	9
4. USE YOUR PHONE	12
4.1 POWER ON THE HANDSET	12
4.2 MAKE AN EXTERNAL CALL	12
4.2.1 PREPARATORY DIALING	12
4.2.2 DIRECT DIALING	12
4.2.3 CALL FROM THE PHONEBOOK	12
4.2.4 CALL FROM THE CALL LIST	12
4.2.5 CALL FROM THE REDIAL LIST	12
4.2.6 CALL TIMER	12
4.3 ANSWER A CALL	12
4.4 END A CALL	12
4.5 ADJUST EARPIECE AND HANDSFREE VOLUME	12
4.6 MUTE A CALL	12
4.7 TURN OFF THE HANDSET RINGER	12
4.8 REDIAL	12
4.8.1 REDIAL A NUMBER FROM THE REDIAL LIST	12
4.8.2 SAVE A REDIAL NUMBER INTO THE PHONEBOOK	12
4.8.3 DELETE A REDIAL NUMBER	12
4.8.4 DELETE ALL REDIAL NUMBERS	12
4.9 KEYPAD LOCK	13
4.10 FIND HANDSET	13
4.11 MAKE AN INTERNAL CALL	13
4.11.1 INTERCOM ANOTHER HANDSET	13
4.11.2 TRANSFER AN EXTERNAL CALL TO ANOTHER HANDSET	13
4.11.3 SWITCH CALLS BETWEEN AN EXTERNAL CALL AND AN INTERNAL CALL	13
4.11.4 MAKE A 3-WAY CONFERENCE CALL	13
5. PHONEBOOK	14
5.1 ADD A NEW ENTRY	14
5.2 EDIT AN ENTRY	14
5.3 VIEW AN ENTRY	14
5.4 DELETE AN ENTRY	14
5.5 DELETE ALL PHONEBOOK ENTRIES	14
5.6 VIEW PHONEBOOK CAPACITY	15
6. CALL LIST	15
6.1 VIEW THE CALL LIST	15
6.2 STORE A CALL LIST NUMBER INTO THE PHONEBOOK	15
6.3 DIAL A CALL LIST NUMBER	15
6.4 DELETE AN ENTRY IN THE CALL LIST	15
6.5 DELETE ALL CALL LIST ENTRIES	15
7. REMOTE OPERATION	16

3.3 Base Station with Telephone Answering Machine (TAM) Control

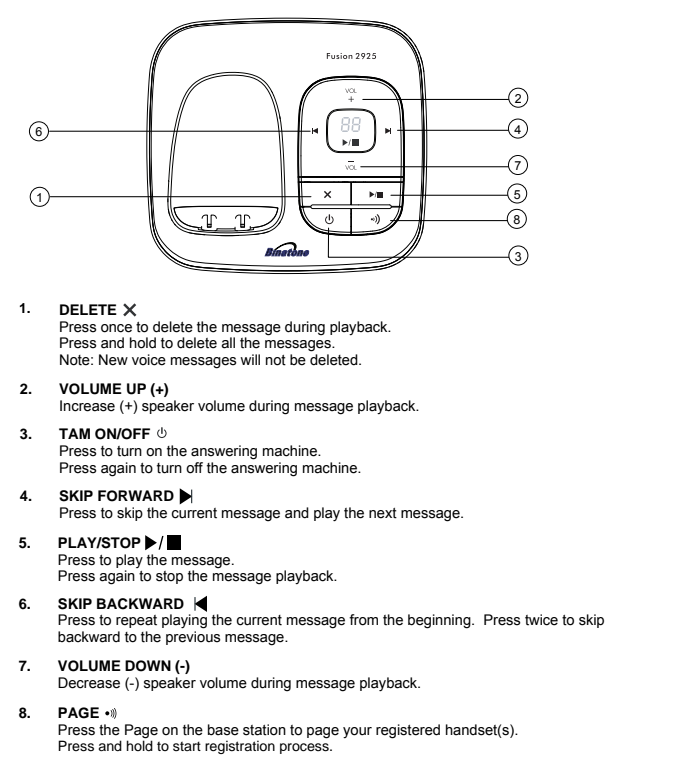

0	SP	0	-	+	=	_	()	"	'	[]	{ }	<	>	/ \	^	~	
1	1	.	:	;	!	?	¿	*	#	&	%	\$	€	£	@	¤	§
2	A	B	C	D	E	F	G	H									

If you subscribe to Call Display, the time and date settings will be automatically updated by the network when you receive a call, although the year is not sent, so you may need to set it. You can also change the format of how the time and date are displayed, and set an alarm on your handset.

7.1 Date & Time

7.1.1 Change date format

- Press <Menu> and <UP/DOWN> to select **Clock/Alarm**.
- Press <Select> and <UP/DOWN> to select **Date & Time**.
- Press <Select> and <UP/DOWN> to select **Date Format**.
- Press <Select> and <UP/DOWN> to select your desired date format from **DD-MM-YYYY** or **MM-DD-YYYY**.
- Press <Select> to confirm.

7.1.2 Change time format

- Follow steps 1 to 2 in Section 7.1.1.
- Press <Select> and <UP/DOWN> to select **Time Format**.
- Press <Select> and <UP/DOWN> to select your desired time format from **12 Hours** or **24 Hours**.
- Press <Select> to confirm.

7.1.3 Set the date

- Follow steps 1 to 2 in Section 7.1.1.
- Press <Select> and <UP/DOWN> to select **Set Date**.
- Press <Select> and then enter the date according to the date format you set in Section 7.1.1.
- Note: If an incorrect input is detected, an error tone will be emitted, the date will not be saved and you can try again to enter a valid date.
- Press <OK> to confirm.

7.1.4 Set the time

- Follow steps 1 to 2 in Section 7.1.1.
- Press <Select> and <UP/DOWN> to select **Set Time**.
- Press <Select> and then enter the time according to the time format you set in Section 7.1.2.
- Note: If an incorrect input is detected, an error tone will be emitted and the cursor will stop at the incorrect input.
- When the cursor is at the AM/PM field, press <UP/DOWN> to select **AM** or **PM**.
- Press <OK> to confirm.

You can set an alarm on the handset. When an alarm is set, the <🔔> displays on the LCD. When the alarm time is reached, the <🔔> and <Alarm On> flash on the handset display, and the alarm melody rings for a duration of 45 seconds. You can press any key to stop the alarm. If the snooze function is activated, the alarm will sound again at the end of the snooze period of two minutes. When the alarm time is reached, you can press <Off> or <OFF> to stop the alarm and turn off the snooze function.

- A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.
- The alarm volume level is the same as the settings of the handset ring volume. If the handset ringer is set to **Volume Off**, the alarm still sounds at **Volume 1** level.
- During an external call or internal call, if an alarm is set and when the alarm time is reached, the <🔔> and <Alarm On> will still flash. You can press <On> or <OFF> to turn off the alarm or any other key to activate the snooze. If set, and the display will revert to the call duration screen.
- During ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled again at the end of the snooze period provided that it is not ringing or in paging mode at the end of the snooze period.

7.2.1 Turn off the alarm

- Press <Menu> and <UP/DOWN> to select **Clock/Alarm**.
- Press <Select> and <UP/DOWN> to select **Alarm On**.
- Press <Select> and <UP/DOWN> to select **Alarm Off**.
- Press <Select> to confirm.

7.2 Set and turn on the alarm

- Press <Menu> and <UP/DOWN> to select **Clock/Alarm**.
- Press <Select> and <UP/DOWN> to select **Alarm On**.
- Press <Select> and <UP/DOWN> to select **Alarm On**.
- Press <Select> and then enter the alarm time.
- Press <OK> to confirm the alarm time.
- Press <UP/DOWN> to select **Snooze On** or **Snooze Off**.
- Press <Select> to confirm.

7.2.3 Set the alarm melody

- Press <Menu> and <UP/DOWN> to select **Clock/Alarm**.
- Press <Select> and <UP/DOWN> to select **Alarm Melody**.
- Press <Select> and <UP/DOWN> to select **Alarm Melody**.
- Press <Select> to select your desired alarm melody.
- Press <Select> to confirm.

8 SETTINGS

Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.

8.1 Handset Settings

8.1.1 Set the audio volume

- To adjust the volume of the sound in the earpiece or loudspeaker.
- Press <MENU> and <UP/DOWN> to select **HS Settings**.
- Press <Select> and <UP/DOWN> to select **Audio Setup**.
- Press <Select> and <UP/DOWN> or <LEFT/RIGHT> to select the volume level from level 1 to level 5.
- Press <OK> to confirm.

8.1.2 Set the internal ring melody

- To set the ring melody that will sound when an intercom call is received.
- Press <MENU> and <UP/DOWN> to select **HS Settings**.
- Press <Select> and <UP/DOWN> to select **Ring Setup**.
- Press <Select> and <UP/DOWN> to select **Ring Volume**.
- Press <Select> and <UP/DOWN> to select **Internal Ring**.
- Press <Select> and <UP/DOWN> to select your desired internal ring melody (10 ringer melodies and 5 standard tones are provided).
- Note: The respective ringer melody will be played while browsing the melody list.
- Press <Select> to confirm.

8.1.3 Set the external ring melody

- To set the ring melody that will sound when an external call is received.
- Press <MENU> and <UP/DOWN> to select **HS Settings**.
- Press <Select> and <UP/DOWN> to select **Ring Setup**.
- Press <Select> and <UP/DOWN> to select **External Ring**.
- Press <Select> and <UP/DOWN> to select your desired external ringer melody (10 ringer melodies and 5 standard tones are provided).
- Note: The respective ringer melody will be played while browsing the melody list.
- Press <Select> to confirm.

8.1.4 Adjust the Ringer Volume

- Press <MENU> and <UP/DOWN> to select **HS Settings**.
- Press <Select> and <UP/DOWN> to select **Ring Setup**.
- Press <Select> and <UP/DOWN> to select **Ring Volume**.
- Press <Select> and <UP/DOWN> or <LEFT/RIGHT> to select your desired ringer volume level from Level 1 to Level 5 or Ringer Off.
- Note: The respective ringer volume will be played while changing the levels.
- If **Volume Off** is selected, <🔔> icon will display.
- Press <OK> to confirm.

8.1.5 Set the alert tones

Three different alert tones are set on by default, but can be turned off, if desired. Key Tone - a single beep is emitted when you press a key. Low Battery Tone - emitted while you are talking on the phone to alert you that you need to charge the handset battery.

- Out of Range Tone - emitted while you are talking on the phone to alert you to move closer to the base unit, before the call is lost.
- Press <MENU> and <UP/DOWN> to select **HS Settings**.
- Press <Select> and <UP/DOWN> to select **Tone Setup**.
- Press <Select> and <UP/DOWN> to select **Key Tone / Battery Low / Out of Range**.
- Press <Select> and <UP/DOWN> to turn on or off these tones.
- Press <Select> to confirm.

8.1.6 Set the Handset Language

- If required, you can change the language used for the handset display.
- Press <Menu> and <UP/DOWN> to select **HS Settings**.
- Press <Select> and <UP/DOWN> to select **Language**.
- Press <Select> and <UP/DOWN> to select the desired language.
- Press <Select> to confirm.

8.5.4.2 Restore to default OGM

- Repeat Steps 1 to 4 in Section 9.5.4.1
- Press <Select> and <UP/DOWN> to select **Default**.
- Press <Select> and <OK> to confirm restoring to default OGM.

9.5.5 Set the Answer Delay

- You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to nine rings or **Time Saver**.
- Time Saver is set the answering machine will answer after 4 rings if there are no new messages, or after 2 rings if there is a new message, so if you call in and don't get an answer after 2 or 3 rings, you can hang up and save on call charges.
- Press <Menu> and <UP/DOWN> to select **Answer Machine**.
- Press <Select> and <UP/DOWN> to select **TAM Settings**.
- Press <Select> and <UP/DOWN> to select **Answer Delay**.
- Press <Select> and <UP/DOWN> to select from 2 Rings, 3 Rings, 4 Rings, 5 Rings, 6 Rings, 7 Rings, 8 Rings, 9 Rings or Time Saver.
- Press <Select> to confirm your choice.

9.5.6 Set the Recording Time of Incoming Message

- You can set the maximum length of the recording time for each incoming message to be 60, 120 or 180 seconds, or unlimited up to the total recording time remaining on the answer machine.
- Press <Menu> and <UP/DOWN> to select **Answer Machine**.
- Press <Select> and <UP/DOWN> to select **TAM Settings**.
- Press <Select> and <UP/DOWN> to select **Recording Time**.
- Press <Select> and <UP/DOWN> to select from 60 Sec, 120 Sec, 180 Sec or Unlimited.
- Press <Select> to confirm your choice.

9.5.7 Activate Remote Access

Your phone lets you check your messages, or otherwise operate your answering machine, by calling the answering machine when you are away from home by entering a 4-digit remote access PIN on a tone-dialling phone. The 4-digit remote access PIN code is used to prevent other people from unauthorised access of your answering machine. The default remote access PIN is 0000.

9.5.7.1 Change the 4-digit Remote Access PIN

- Press <Menu> and <UP/DOWN> to select **Answer Machine**.
- Press <Select> and <UP/DOWN> to select **TAM Settings**.
- Press <Select> and <UP/DOWN> to select **Chg Remote PIN**.
- Press <Select> and then enter the Old remote access PIN (Default Remote Access PIN is 0000).
- Note: If the Old remote access PIN is incorrect, <PIN Invalid> is displayed and then it returns to the **Chg Remote PIN** menu.
- Press <OK> and then enter your new remote access PIN.
- Press <OK> and then enter your new remote access PIN again.
- Press <Select> and <UP/DOWN> to select **Record**.
- Press <Select> to start recording your personalised OGM and <Recording> is displayed on the screen.
- Press <OK> to stop and save your personalised OGM or press <Cancel> to return to the previous screen without saving the personalised OGM, and restoring the default OGM.

Note: Any subsequent newly recorded OGM will overwrite the previously recorded OGM. When the OGM recording is stopped, it will be played back automatically, and if it is not what you want simply repeat the recording process.

9.5.4 Playback (OGM)

- You can playback your own personalised OGM or the pre-set OGM for **Answer & Record** mode or **Answer Only** mode.
- Press <Menu> and <UP/DOWN> to select **Answer Machine**.
- Press <Select> and <UP/DOWN> to select **TAM Settings**.
- Press <Select> and <UP/DOWN> to select **OGM Settings**.
- Press <Select> and <UP/DOWN> to select **Answer & Record** or **Answer Only**.
- Press <Select> to playback your current OGM and <Playing> is displayed on the screen.
- Press <Back> to stop the OGM playback and return to the previous menu.

11 PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of 1 year.

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store. If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement. Your statutory rights remain unaffected.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW

8.1.7 Rename the handset

- If required, the handset name shown on the standby screen can be changed from its default of "Handset".
- Press <Menu> and <UP/DOWN> to select **HS Settings**.
- Press <Select> and <UP/DOWN> to select **Rename HS**.
- Press <Select> and then enter your desired handset name. Press <Clear> to delete one character or press and hold <Clear> to delete the whole character string.
- Note: The maximum number of characters for the handset name is 10.
- Press <OK> to confirm.

8.1.8 Select a colour theme

- To change the colours used in the handset display:
- Press <Menu> and <UP/DOWN> to select **HS Settings**.
- Press <Select> and <UP/DOWN> to select **Colour Theme**.
- Press <Select> and <UP/DOWN> to select the colour theme you prefer. There are four colour themes, and the display colours will change as you step through the list of options.
- Press <Select> to confirm.

8.1.9 Set the contrast level

- To change the contrast level of the handset display:
- Press <Menu> and <UP/DOWN> to select **HS Settings**.
- Press <Select> and <UP/DOWN> to select **Contrast**.
- Press <Select> and <UP/DOWN> to select the contrast level you prefer. There are four contrast levels, and the contrast will change as you step through the list of options.
- Press <Select> to confirm.

8.1.10 Turn on or off the auto answer

- When the Auto Answer is turned on, you can answer a call automatically by just lifting the handset off the base or charger, without having to press any key.
- Press <Menu> and <UP/DOWN> to select **HS Settings**.
- Press <Select> and <UP/DOWN> to select **Auto Answer**.
- Press <Select> and <UP/DOWN> to turn on or off the Auto Answer feature.
- Press <Select> to confirm.

8.1.11 Select base station

- Your handset can be registered to up to four different base stations, but can only link to one base at a time. To select the base you want to use:
- Press <Menu> and <UP/DOWN> to select **HS Settings**.
- Press <Select> and <UP/DOWN> to select **Select Base**.
- Press <Select> and <UP/DOWN> to select your desired base station.
- Note: The currently selected base is indicated in the list by an asterisk.
- Press <Select> to confirm.
- Note: If the selected base is found successfully, <Saved> will display, otherwise, <Fail> will display.

8.1.12 Reset handset settings to default

- You can reset your phone to the default settings. After a reset, all your handset settings will be reset, and your redial and calls lists made empty, but your phonebook entries remain unchanged.
- Press <Menu> and <UP/DOWN> to select **HS Settings**.
- Press <Select> and <UP/DOWN> to select **Reset Default**.
- Press <Select> and then enter the 4-digit system PIN (Default 4-digit system PIN: 0000).
- Note: If the new PIN entered in Step 6 is not the same as the new system PIN entered in Step 5, New PIN Invalid is displayed and you must enter your new remote access PIN again in step 5.
- If the PIN code is entered correctly and confirmed, the handset will chime and the display will return to its standby screen.
- Note: If the PIN code is entered incorrectly, <PIN Invalid> will display.

9.5.7.3 Access Your Answering Machine Remotely

- When you are away from home, you can check your messages or switch the answering machine on or off, by using a tone-dialling phone to call the answering machine, and entering a 4-digit remote access PIN. The 4-digit remote access PIN code is used to prevent other people from unauthorised access of your answering machine.
- Place a call from a tone-dialling phone to your Fusion 2925.
- When the answering machine answers the call and starts playing the OGM, press <KEY >.
- Note: The 4-digit Remote Access PIN (Default PIN is 0000).
- The tone <-> must be entered while the OGM is still playing, and the 4-digit PIN should follow without any delays.
- Note: If the 4-digit Remote Access PIN is entered incorrectly three times consecutively, the line will be released automatically.
- Press the following keys to carry out your desired function.

Keys	Functions
2	While message is not playing
4	Delete the current message playback
5	Repeat playing the current message from the beginning. Press twice to skip backward to play the previous message.
6	Stop the current message playback
7	Skip to play the next message
8	Stop the current message playback
9	Turn off the answering machine

Note: If your answering machine is switched off, the phone will answer after 14 rings and play the Answer Only OGM. You can then enter * followed by the 4-digit remote access PIN (Default Remote Access PIN is 0000) to activate the remote access feature. When your answering machine memory is full and the answer mode is in **Answer & Record**, the answer mode will change to **Answer Only** automatically. It will change back to **Answer & Record** mode automatically after some messages have been deleted.

9.5.8 Call Screening

- When the answering machine is on and takes a call, you can listen to the caller leaving a message. You can then identify the caller and decide whether to take the call in person.
- When the answering machine is set to ON, when there is an incoming message, the handset will display <Screen?>.
- Press <OK> to start call screening. Any handset can listen to who is leaving the message and decide whether to pick up the call or not.
- The handset will display <Screening>.
- You can adjust the speaker volume by pressing <UP or DOWN>.

Note: If the new remote access PIN entered in Step 6 is not the same as the new remote access PIN entered in Step 5, <New PIN Invalid> is displayed and you must enter your new remote access PIN again in step 5.

9.5.7.2 Activate or Deactivate the Remote Access

- To allow remote access this option must be turned "On", but you can turn this option "Off" to prevent any remote access at all.
- Press <Menu> and <UP/DOWN> to select **Answer Machine**.
- Press <Select> and <UP/DOWN> to select **TAM Settings**.
- Press <Select> and <UP/DOWN> to select **Remote Access**.
- Press <Select> and <UP/DOWN> to select **On** or **Off** to turn on or off the remote access respectively.
- Press <Select> to confirm.

8.2 Base Settings

8.2.1 De-register a Handset

This operation should only be necessary if one of your handsets becomes faulty or lost and needs to be replaced. You will need to enter the 4-digit system PIN code (default 0000) in order to de-register a handset from the base station. A de-registered handset will have the antenna icon flashing and <Unregistered> on the display.

- Note: You cannot de-register the handset that you are currently using.
- Press <Menu> and <UP/DOWN> to select **Base Settings**.
- Press <Select> and <UP/DOWN> to select **Delete HS**.
- Press <Select> and you are requested to enter the 4-digit system PIN.
- Enter the 4-digit system PIN.
- Press <OK> and a list of registered handsets is displayed.
- Press <UP/DOWN> to select the handset that you want to de-register.
- Press <Select> to confirm.

Note: If handset de-registration is successfully done, <HS Deleted> will display.

8.2.2 Change the dial mode

- You should normally leave the dial mode at its default setting of Tone (also called DTMF), unless the phone is connected to an old exchange that only recognises Pulse dialling.
- Note: If Pulse dialling is set, you can press the <-> key to switch to Tone dialling for the rest of that call.
- Press <Menu> and <UP/DOWN> to select **Base Settings**.
- Press <Select> and <UP/DOWN> to select **Dial Mode**.
- Press <Select> and <UP/DOWN> to select **Tone** or **Pulse**.
- Press <Select> to confirm.

8.2.3 Change the Recall (Flash) Time

- You may need to change the Recall (Flash) time if your phone is connected to a PBX. The recall time options are Short (the default value of 100ms) Medium (300ms) or Long (600ms).
- Press <Menu> and <UP/DOWN> to select **Base Settings**.
- Press <Select> and <UP/DOWN> to select **Flash Time**.
- Press <Select> and <UP/DOWN> to select your desired Recall (Flash) time (Short, Medium, Long).
- Press <Select> to confirm.

8.2.4 Change the System PIN Code

- A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorised use. The default system PIN code is 0000.
- Press <Menu> and <UP/DOWN> to select **Base Settings**.
- Press <Select> and <UP/DOWN> to select **Modify PIN**.
- Press <Select> to show a "Old PIN" with the cursor line flashing after it.
- Enter the current 4-digit system PIN.
- Note: If the old system PIN is incorrect, <Old PIN Invalid> is displayed and it returns to the **Modify PIN** menu.
- Press <OK> and enter your new 4-digit system PIN.
- Press <OK> and enter your new 4-digit system PIN again.
- Press <OK> to confirm.
- Note: If the new PIN entered in Step 6 is not the same as the new system PIN entered in Step 5, New PIN Invalid is displayed and you must enter your new remote access PIN again in step 5.

8.2.5 Reset base settings to default

- You can reset your phone to the default settings. After a reset, all your base and answering machine settings will be reset, including erasing all answering machine messages, but your phonebook entries remain unchanged.
- Press <Menu> and <UP/DOWN> to select **Base Settings**.
- Press <Select> and <UP/DOWN> to select **BS Default**.
- Press <Select> and then enter the 4-digit system PIN (Default 4-digit system PIN: 0000).
- Press <OK> to show "Confirm".
- Press <OK> again to confirm the reset.
- Note: If the PIN code is entered correctly and confirmed, the handset will chime and the display will return to the Base Settings menu. If the PIN code is entered incorrectly, <PIN Invalid> will display.

10 TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

Problem	Cause	Solutions
No dialling tone when pressing <TALK> key	a. The connection cord of the base station is not plugged in. b. The adapter cord is not plugged in correctly in the base station. c. Another handset is using the base to make a call. d. Wrong telephone line cord	a. Check the connections. Unplug and plug back in the base station. b. Check that the telephone line cord has been plugged into the base station and the phone socket. c. Check the base station plug and the 230V plug (remove and plug in). d. Wait until the line is unoccupied. e. Use the original telephone line cord supplied.
When connected to a PBX, no and/or wrong connection after dialling.	Dialling prefix is needed.	Insert the dialling prefix.
Searching is displayed.	Base station out of range. Base station not connected to mains.	Reduce the range. Connect base station to mains.
The call does not work.	Service not activated or wrong setting.	Check your Subscription with network or check the dial mode.
No display.	Empty battery	Recharge battery
Answering Machine	The unit does not record new messages.	The answering machine is turned off. Turn on the answering machine.
The caller cannot leave a message.	a. The answering machine is turned off. b. Message memory is full. c. ANSWER ONLY mode is set.	a. Turn on the answering machine. b. Erase unnecessary messages. c. Ch-up to ANSWER & RECORD mode.
I cannot operate the answering machine remotely.	a. You are entering the wrong remote access code. b. You are pressing the dial keys too quickly. c. You are using a pulse telephone.	a. If you forget the remote access code, reset to the default settings. b. Press each key firmly. c. Try again using a touch tone phone.
While recording an outgoing message or listening to messages, the unit rings and recording stops.	A call is being received.	Answer the incoming call and try again to record your outgoing message later.

This telephone is not equipped with a grounding function! Therefore some of the functions may be limited when used in PBX systems.

Technical Support

If the fault persists...

Disconnect all other instruments connected to the same line as the Fusion 2925 and try to make a call. Disconnect the base unit from the telephone line and plug a different phone into the master telephone socket.

Try making a call. If this works, the line is OK.

If the call does not work and you are using a two-way socket adapter, remove it and plug a telephone directly into the socket. If the call now works, the adapter may be faulty.

If you cannot make a call, the fault may be on the exchange line. Contact your telephone service provider.

If you still cannot identify the cause of the problem, please read out the serial number of this telephone to the Binatone Customer Service Center. The serial number can be found in the battery compartment after removing the batteries. For technical support, call Binatone Customer Service at 0845 345 9677 (UK only).

8.3 Registration

IMPORTANT: When you purchase your Fusion 2925 system, all handsets are already registered to the base, so you do not need to register them. Handset registration is only necessary if you buy extra handsets or if a handset has become faulty. Up to five handsets can be registered to a base station, with each handset's number (1 to 5) shown on its display. A handset can be registered to up to four base stations.

To register a new handset to your base:

- Press and hold <PAGE> on the base station for more than five seconds to put the base station into registration mode. It will stay in registration mode for about one minute, so the following handset sequence must be completed within this time.
- Press <Menu> and <UP/DOWN> to select **Registration**.
- Press <Select> and <UP/DOWN> to select the base number you want to register to. (If the handset is already registered to a base, it will be indicated by an asterisk.)
- Press <Select> and then enter the 4-digit system PIN. (Default 0000)
- Press <OK> to confirm and the handset shows "Waiting".
- If the handset registration is successful, you will hear a confirmation tone and the display will return to idle screen, with the "antenna icon" steady on. The handset will automatically be allocated the next available handset number, which is shown in the handset display in standby mode. If the handset registration is unsuccessful, the display will time out and return to the base selection list.

11 DECLARATION OF CONFORMITY

We the manufacturer / Importer : Binatone Telecom Plc

1 Lapsley Way London NW2 7HF.

Declare under our sole responsibility that the following product

Type of equipment: Digital cordless telephone

Model Name: Binatone Fusion 2925 Series

Country of Origin: China

Brand: Binatone

complies with the essential protection requirements of R&TE Directive 1999/5/EC on the approximation of the laws of the Member States relating to *Radio Spectrum* matters, the Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to *electromagnetic compatibility (EMC)* and the European

Community Directive 2006/95/EC relating to *Electrical*