

# Model 28127 Series DECT6.0 Cordless Handset Speakerphone User's Guide



Your new GE telephone system is **EXPANDABLE** up to a total of 7 handsets (by purchase of optional Model 28107 handset with charge cradle)

# Equipment Approval Information

---

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

## 1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

### Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

**US Number is located on the cabinet bottom.**

**REN Number is located on the cabinet bottom.**

## 2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

## **Interference Information**

---

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Privacy of Communications may not be ensured when using this product.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# Hearing Aid Compatibility (HAC)

This telephone system meets FCC standards for Hearing Aid Compatibility.

## Licensing

Licensed under US Patent 6,427,009.

## FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter."



For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the belt clip supplied with this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

## Information for DECT Product



This telephone is compliant with the DECT 6.0 standard which operates in the 1.92GHz to 1.93GHz frequency range. Installation of this equipment is subject to notification and coordination with UTAM. Any relocation of this equipment must be coordinated through and approved by UTAM. UTAM may be contacted at 1-800-429-8826.

**WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

 <p>THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	<p><b>CAUTION:</b> RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
<p>SEE MARKING ON BOTTOM / BACK OF PRODUCT</p>		

# Table of Contents

---

<b>EQUIPMENT APPROVAL INFORMATION .....</b>	<b>2</b>
<b>INTERFERENCE INFORMATION .....</b>	<b>3</b>
<b>HEARING AID COMPATIBILITY (HAC) .....</b>	<b>4</b>
<b>LICENSING .....</b>	<b>4</b>
<b>FCC RF RADIATION EXPOSURE STATEMENT .....</b>	<b>4</b>
<b>INFORMATION FOR DECT PRODUCT .....</b>	<b>4</b>
<b>TABLE OF CONTENTS .....</b>	<b>5</b>
<b>INTRODUCTION .....</b>	<b>7</b>
<b>BEFORE YOU BEGIN .....</b>	<b>7</b>
PARTS CHECKLIST .....	7
MAKE SURE YOUR PACKAGE	
INCLUDES THE ITEMS SHOWN HERE. ....	7
TELEPHONE JACK REQUIREMENTS.....	8
<b>INSTALLATION .....</b>	<b>9</b>
DIGITAL SECURITY SYSTEM .....	9
IMPORTANT INSTALLATION GUIDELINES .....	9
<b>HANDSET LAYOUT .....</b>	<b>10</b>
<b>BASE LAYOUT .....</b>	<b>11</b>
<b>INSTALLING THE PHONE.....</b>	<b>11</b>
INSTALLING THE HANDSET BATTERY.....	11
BASE STATION.....	12
BLUETOOTH® SETUP .....	13
CONNECT.....	13
DISCONNECT .....	13
RECONNECT .....	13
<b>PROGRAMMING INFORMATION .....</b>	<b>14</b>
<b>PROGRAMMING THE HANDSET .....</b>	<b>14</b>
PHONE BOOK .....	14
ADDING PHONE BOOK ENTRIES .....	14
STORING THE LAST NUMBER DIALED .....	16
INSERTING A PAUSE	
IN THE DIALING SEQUENCE.....	16
REVIEWING PHONE BOOK RECORDS .....	16
EDITING A PHONE BOOK RECORD.....	17
DELETING A PHONE BOOK RECORD.....	17
MANAGING THE RECORD GROUPING	
IN PHONE BOOK.....	18
ADDING THE PHONE BOOK ENTRIES	
IN DESIRED GROUP.....	18
DELETING THE PHONE BOOK ENTRIES	
IN DESIRED GROUP.....	18

SET GROUP RING.....	18
CHANGING THE GROUP NAME.....	18
MANAGING SPEED DIALING RECORD .....	19
ADDING THE SPEED DIALING NUMBER...	19
EDITING THE SPEED DIALING NUMBER...	19
DELETING THE SPEED DIALING NUMBER	19
TRANSFERRING THE PHONE BOOK RECORD	
BETWEEN HANDSET(S) .....	20
CALL RECORDS.....	20
RECEIVED CALLS .....	20
DIALED CALLS .....	21
ALARM .....	21
SET ALARM TIME.....	21
SNOOZE .....	22
SET CYCLE TIME .....	22
SET ALARM MELODY .....	22
SCHEDULER.....	22
ADDING A REMINDER.....	23
SET SNOOZE.....	23
SET CYCLE TIME.....	23
SET ALARM MELODY.....	24
REVIEWING AND EDITING	
THE REMINDER RECORD.....	24
DELETING A REMINDER RECORD.....	24
EXTRA FEATURES .....	25
ROOM MONITORING .....	25
INTERCOM OPERATION .....	26
HANDSET TO HANDSET INTERCOM CALL.....	26
RECEIVING AN INTERCOM CALL .....	26
PUSH TO TALK.....	27
PHONE SETTING .....	27
LANGUAGE .....	27
SET DATE/TIME.....	28
SET AREA CODE.....	28
TONE/PULSE.....	28
HANDSET NAME .....	29
REGISTRATION .....	29
GLOBAL DE-REGISTRATION .....	30
DEFAULT SETTING.....	30
SOUND SETTING .....	31
EQUALIZER .....	31

# Table of Contents

---

RINGER TONE .....	31	4-WAY CONFERENCE CALLS WITH AN OUTSIDE LANDLINE AND CELLULAR CALL SIMULTANEOUSLY .....	38
RINGER VOLUME .....	32	CALL TIMER .....	38
KEY TONE .....	32	AUTO STANDBY .....	39
BLUETOOTH® .....	32	FLASH/ CALL WAITING .....	39
DEVICE INFO .....	33	LAST NUMBER REDIAL .....	39
AUTO CONNECT .....	33	PAGE .....	39
<b>TELEPHONE OPERATION .....</b>	<b>34</b>	PAGING FROM THE BASE/GROUP PAGE .....	40
VISUAL INDICATORS .....	34	MUTE .....	40
IN USE INDICATOR ON THE BASE .....	34	RINGER VOLUME (SHORTCUT) .....	40
TALK INDICATOR AND SPKR INDICATOR ON THE HANDSET .....	34	<b>CALLER ID (CID) .....</b>	<b>40</b>
VMWI INDICATOR ON HANDSET .....	34	CALL WAITING CALLER ID .....	41
SPEAKERPHONE OPERATION .....	34	CID ERROR CODES .....	41
VOLUME SETTINGS .....	34	RECEIVING CID RECORDS .....	41
MAKING A CALL .....	34	STORING CID RECORDS (IN CID MEMORY) .....	41
LANDLINE CALLS .....	34	REVIEWING CID RECORDS .....	42
CELLULAR CALLS .....	35	DIALING A CID NUMBER .....	42
ANSWERING A CALL .....	35	FORMATTING A CID NUMBER BEFORE DIALING .....	42
LANDLINE CALLS .....	35	STORING CID RECORDS INTO PHONE BOOK .....	43
CELLULAR CALLS .....	35	DELETING A CID RECORD .....	44
RECEIVING A LANDLINE CALL DURING A CELLULAR CALL .....	35	<b>CONNECTING THE BELT CLIP .....</b>	<b>44</b>
RECEIVING A CELLULAR CALL DURING A LANDLINE CALL .....	36	<b>CONNECTING OPTIONAL HEADSET .....</b>	<b>44</b>
RECEIVING LAND LINE CALL AND CELL CALL SIMULTANEOUSLY .....	36	<b>CHANGING THE BATTERY .....</b>	<b>44</b>
AVAILABLE OPTIONS DURING A LANDLINE CALL .....	36	<b>BATTERY SAFETY PRECAUTIONS .....</b>	<b>45</b>
MORE .....	36	<b>DISPLAY MESSAGES .....</b>	<b>45</b>
HOLD .....	36	<b>HANDSET SOUND SIGNALS .....</b>	<b>47</b>
INTERCOM .....	37	<b>TROUBLESHOOTING GUIDE .....</b>	<b>47</b>
AVAILABLE OPTIONS DURING A CELL CALL .....	37	TELEPHONE SOLUTIONS .....	47
MORE .....	37	CALLER ID SOLUTIONS .....	49
HOLD .....	37	BATTERY SOLUTIONS .....	49
INTERCOM .....	37	<b>ACCESSORY INFORMATION .....</b>	<b>50</b>
TRANSFER TO CELL .....	37	<b>CAUSES OF POOR RECEPTION .....</b>	<b>50</b>
CONFERENCE .....	38	<b>GENERAL PRODUCT CARE .....</b>	<b>50</b>
3-WAY CONFERENCE CALLS WITH A SINGLE OUTSIDE LANDLINE OR CELLULAR CALL AND EITHER .....	38	<b>WARRANTY ASSISTANCE .....</b>	<b>51</b>
		<b>LIMITED WARRANTY .....</b>	<b>51</b>
		<b>INDEX .....</b>	<b>54</b>

# Introduction

---



**CAUTION:** When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the **IMPORTANT SAFETY INSTRUCTIONS** provided with this product and save them for future reference.

 
**IMPORTANT:** Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.

## Before You Begin


---

### Parts Checklist (for model 28127xx1)

Make sure your package includes the items shown here.



**Base and  
desktop stand**

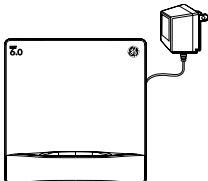

**Charger**




**Telephone  
line cord**




**Belt clip**




**Battery compartment  
cover**

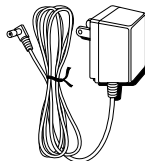

**AC power  
adaptor**

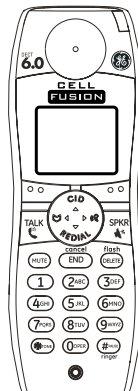

**Handset**

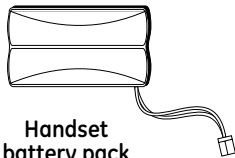

**Handset  
battery pack**

For **Model 28127xx2** there will be **ONE** additional handset, charge cradle, belt clip, battery pack and cover than shown.

**NOTE: if a headset is included in your package, it replaces one set of a handset, belt clip, battery pack and cover.**

For **Model 28127xx3** there will be **TWO** additional handsets, charge cradle, belt clips, battery packs and covers than shown.

For **Model 28127xx4** there will be **THREE** additional handsets, charge cradle, belt clips, battery packs and covers than shown.


For **Model 28127xx5** there will be **FOUR** additional handsets, charge cradle, belt clips, battery packs and covers than shown.

For **Model 28127xx6** there will be **FIVE** additional handsets, charge cradle, belt clips, battery packs and covers than shown.

For **Model 28127xx7** there will be **SIX** additional handsets, charge cradle, belt clips, battery packs and covers than shown.

## Telephone Jack Requirements

To use this phone, you need an RJ11C type modular telephone jack, which might look like the one pictured here, installed in your home. If you don't have a modular jack, call your local phone company to find out how to get one installed.

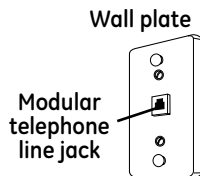



# Installation

---

## Digital Security System

Your cordless phone uses a digital security system to protect against false ringing, unauthorized access, and charges to your phone line.


**INSTALLATION NOTE:** Some cordless telephones operate at frequencies that may cause or receive interference with nearby TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave ovens, or VCR. If such interference continues, move the cordless telephone farther away from these appliances.

Certain other communications devices may also use the 1.9 GHz frequency for communication, and, if not properly set, these devices may interfere with each other and/or your new telephone. If you are concerned with interference, please refer to the owner's manual for these devices on how to properly set channels to avoid interference. Typical devices that may use the 1.9 GHz frequency for communication include wireless audio/video senders, wireless computer networks, multi-handset cordless telephone systems, and some long-range cordless telephone systems.

## Important Installation Guidelines


- Avoid sources of noise and heat, such as motors, fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- Avoid areas of excessive dust, moisture and low temperature.
- Avoid other cordless telephones or personal computers.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

# Handset Layout

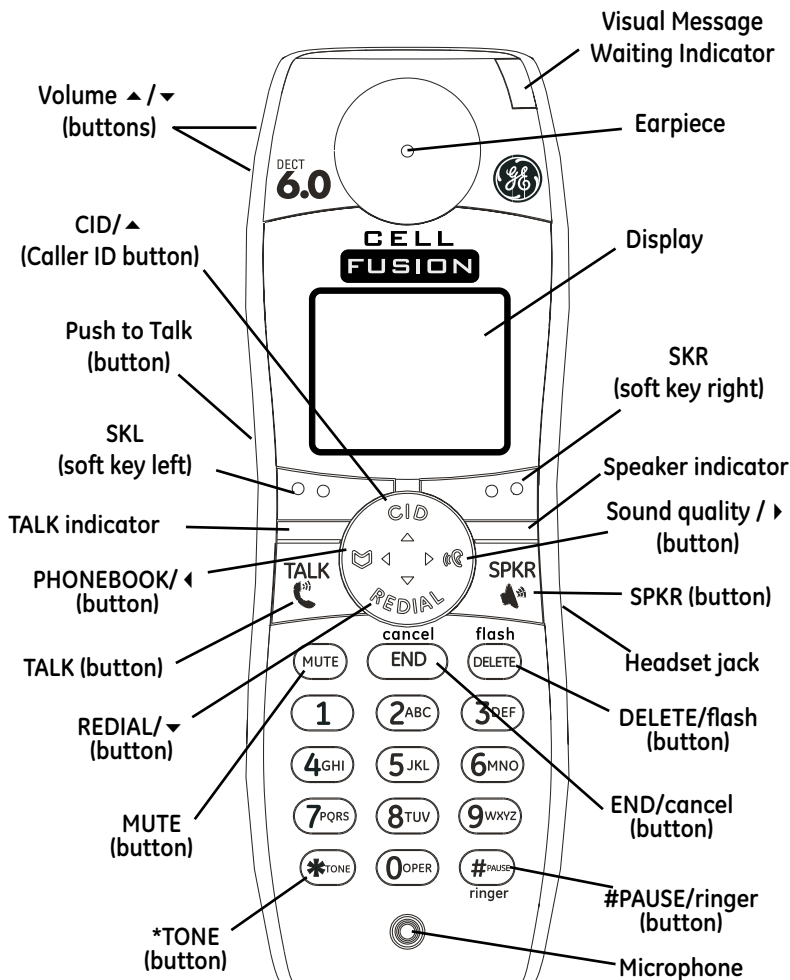

## Base Layout

---

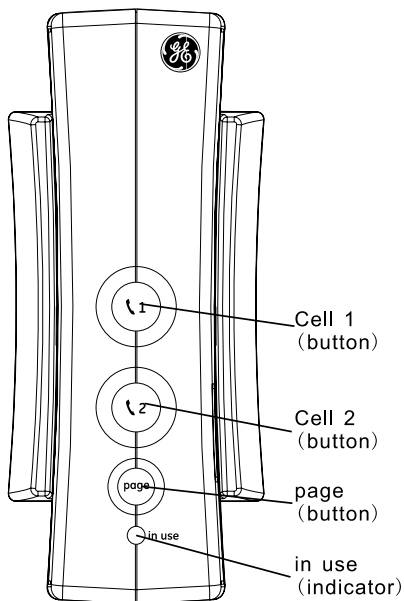

## Installing the Phone

---

### Installing the Handset Battery


**NOTE:** You must connect the handset battery before using the cordless handsets.



**CAUTION:** To reduce the risk of fire or personal injury, use only the Thomson Inc. approved model 5-2840 Nickel-metal Hydride battery (Ni-MH), which is compatible with this unit.

1. Locate battery and battery door which are packaged together inside a plastic bag and are separate from the handset.
2. Locate the battery compartment on the back of the handset.
3. Plug the battery pack cord into the jack inside the compartment.


**NOTE: To ensure proper battery installation, the connector is keyed and can be inserted only one way.**

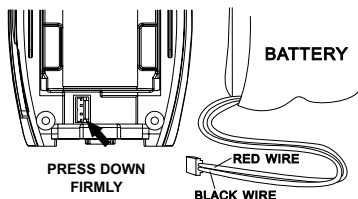

4. Insert the battery pack.
5. Close the battery compartment by pushing the door up until it snaps into place.
6. Place the handset in the charging cradle. **Allow handset to charge for 16 hours prior to first use. If you do not properly charge the handset, battery performance is compromised.**



## Base Station

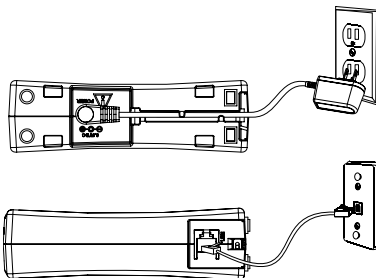1. Choose an area near an electrical outlet and a telephone wall jack (RJ11C), and place your cordless telephone on a level surface, such as a desktop or tabletop.
2. Plug one end of the telephone line cord into the TEL LINE jack on the bottom of the base and the other end into a modular jack.
3. Plug the AC power converter into the electrical outlet and the DC connector into the jack on the bottom of the base.
4. Place the handset in the charge cradle. The Charge indicator turns on, verifying the battery is charging.



**NOTE: After the Handset and Base have been powered up, the handset displays the Date/Time set up screen for entry. You MUST enter the date/time prior to operating the unit.**

5. Use the number keys to enter the year and the date.
6. Press the **Next (SKL)** button to move to **Set Time** menu.

7. Use the number keys to enter the time and use the  or  button to select **AM** or **PM**.
8. Press the **Store (SKL)** button to save the settings. You will hear a confirmation tone.
9. **Allow the phone to charge for 16 hours prior to first use. If you don't properly charge the phone, battery performance is compromised.**



**CAUTION:** To reduce risk of personal injury, fire or damage use only the 5-2812 power adaptor listed in the user's guide. This power adaptor is intended to be correctly orientated in a vertical or floor mount position.

## BlueTooth® Setup

This unit supports a maximum of two Bluetooth cell phone devices. To use your Bluetooth cell phone device with the 28127 System, you must activate Bluetooth on your device and then pair the device to the base.

**NOTE:** Your Bluetooth cell phone device should be within 2 feet to 10 feet from the base. If the device is too close it may create undesired noise. If device is too far it will not pair.

### Connect (and pair)

1. Make sure your phone is **OFF** (not in talk mode).
2. Press and hold the **CELL 1** or **CELL 2** button on base until the corresponding LED flashes. (refer to the instruction manual for your cell phone device on the proper procedure to add and pair a new device)

When "CELL FUSION" is shown on the device.

3. Use the number keys to enter the default PIN 0000 on your Bluetooth cell phone device. When the device is paired successfully, the corresponding LED illuminates.

### Disconnect

Press and hold the **CELL 1** or **CELL 2** button to disconnect the Bluetooth cell phone. The **CELL 1** or **CELL 2** indicator will no longer be illuminated.

### Reconnect



Press and release the **CELL 1** or **CELL 2** button again and the connection will resume.

**NOTE:** Certain cell phones may require an acceptance to allow reconnection.

## Programming Information

---

The handset menus give you access to all of the built-in features.

Press the Menu (SKL) button to display the menu options, then press the  or  button to navigate to the desired option. Press the **Select (SKL)** button to activate a menu option. For details on programming, refer to the applicable section. During programming, you may press the **Back (SKR)** button at any time to exit the menu and keep the previous setting.

**NOTE: You can press the END/cancel button at any time to go back to standby mode.**

### Text Entry:

Use the number keys to enter characters. More than one letter is stored in each of the number keys. For example, press the 2 key twice for the letter B. Press the 1 key to insert a space. Press the **\*TONE** button to toggle between upper and lower case.

**NOTE: If you make a mistake, use the DELETE/flash button to backspace and delete one character at a time.**

## Programming The Handset

---

There are eight programmable menus available: Phone book, Call records, Alarm, Scheduler, Extra Features, Phone setting, Sound settings and Bluetooth.



### Phone Book

**NOTE: At any time you may press the END/cancel button on handset to exit and return to stand-by mode.**

Each handset can store up to two hundred entries in phone book for quick dialing, each entry can contain a maximum of 20-digit numbers and 15-character names.

### Adding Phone Book Entries



For each entry you can enter up to 4 separate numbers and then assign a specific melody. The melody will **ONLY** work if you have subscribed to the Caller ID service. Then when that person calls, the assigned melody will ring instead of the normal ring. You may choose from 5 different ring tones.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button and use the  or  button to scroll to **Phone Book**.

**NOTE:** You may press the  button to short-cut to the phone book.

3. Press the **Select (SKL)** button to enter the phone book.



**NOTE:** If there are no records stored you will go directly to the **Add Record** menu.

4. Press the **Option (SKL)** button to enter submenu.
5. Use the  or  button to scroll to **Add Record**.
6. Press the **Select (SKL)** button to confirm. Phone book memory space shows on the display for 2 seconds. The screen displays **Enter Name**.
7. Use the number keys to enter a name ( up to 15 characters, including spaces). More than one letter is stored in each of the number keys. (The number 1 key can be used to enter "space", "-", "\*", and "!")









**NOTE:** Use the **\*/TONE** button to toggle between upper case/lower case text entry.

8. Press **Next (SKL)** button to move to save the name and proceed to **Enter Number** screen.
9. Use the number keys to enter the telephone number (up to 20 digits).

**NOTE:** If you make a mistake press the **DELETE/flash** button to backspace and erase the wrong character(s).

10. Use the  or  button to select from the desired category; **Home, Office, Cell** or **Other**.
11. Press the **Store (SKL)** button to save the number.






**- Add an additional Number to record (Up to 4 numbers)**

- Use the  or  button to scroll to **Add Number**.
  - Press the **Edit (SKL)** button to confirm.
  - Use number keys to enter the telephone number.
  - Use the  or  button to select from the desired category.
  - Press the **Store (SKL)** button to save the number.
12. Use the  or  button scroll to **Ring Tone**.
  13. Press the **Edit (SKL)** button and use the  or  button to scroll to desired ringtone.

14. Press the **Select (SKL)** button to confirm.

## Storing the Last Number Dialed

Store a dialed number when reviewing it:



1. Make sure the phone is **OFF** (not in talk mode).
2. Press the  button on the handset to access the **Dialed Calls** menu.
3. Use the  or  button to scroll to desired record.
4. Press the **Store (SKL)** button to save the number.
5. Use the  or  button to select from the desired category; **Home, Office, Cell** or **Other**.
6. Press the **Select (SKL)** button to confirm. The screen displays **Enter Name**.
7. Use the number keys to enter a name (up to 15 characters, including spaces). More than one letter is stored in each of the number keys. (The number 1 Key can be used to enter "space", "-", "\*", and "!")
8. Press the **Store (SKL)** button to save the record.

## Inserting a Pause in the Dialing Sequence (of a Stored Number)



Press the **#PAUSE/ringer** button on the handset to insert a delay in dialing sequence of a stored number when a pause is needed to wait for a dial tone (for example, after you dial 9 for an outside line, or to wait for a computer access tone.) Each pause counts as one digit in the dialing sequence.

You can press the **#PAUSE/ringer** button to insert a P (pause) when you enter the telephone number when adding a phone book entry.

## Reviewing Phone Book Records

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button and use the  or  button to scroll to **Phone Book**.
3. Press the **Select (SKL)** button to enter the phone book.

**NOTE:** You may press the  button to short-cut to the phone book, too.

4. Use the  or  button to scroll the records









- OR -

Press the number keys to go to the name of the records started with the corresponding character.





**NOTE: Your phone book records are sorted automatically in alphabetical order.**

5. Press the **Option (SKL)** button to view the details of the record.

## Editing a Phone Book Record

1. When reviewing the phone book records list, use the  or  button to scroll to the desired record or enter the first character of name for alphabetical search.
2. Press **Option (SKL)** button to access the option menu.
3. Use the  or  button to scroll to **Edit Record**.
4. Press the **Edit (SKL)** button to confirm. The screen displays the detail information of desired record.
5. Use the  or  button to scroll to desired edit item.
6. Press the **Select (SKL)** button.
7. The steps to edit are the same as steps in the section Adding Phone Book Entries.
  - Step 7 if you are editing the name.
  - Step 9 if you are editing the number.
  - Step 11 if you are editing the category.
  - Step 12 VIP ring you are editing the VIP ring tone.








## Deleting a Phone Book Record

1. When reviewing the phone book records list, use the  or  button or the number keys to scroll to the desired record.
2. Press **Option (SKL)** button to access the option menu.
3. Use the  or  button to scroll to **Delete Record**.
4. Press the **Select (SKL)** button. The screen displays **DELETE?**.
5. Press the **Yes (SKL)** button to confirm the deletion. The screen displays **DELETED**.

**NOTE: If you don't want to change or delete the record when the screen displays *DELETE?*, simply press the No (SKR) button, or wait for one minute to exit the review mode automatically.**



## Managing the Record Grouping in Phone Book

This enables you to group a selection of records together, then specify a certain ringtone for the group.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the  button to short-cut to phone book menu.
3. Use the  or  button to scroll to desired record.
4. Press the **Option (SKL)** button to access the Option menu.
5. Use the  or  button to scroll to **Grouping**.
6. Press the **Select (SKL)** button and use the  or  button to select desired group.
7. Press the **Select (SKL)** button to confirm. The screen displays 5 items for grouping.



### Adding the Phone Book Entries In Desired Group

From the **GROUPING** menu:

1. Use the  or  button to select the **Add Member** menu.
2. Press the **Select (SKL)** button to confirm the selection.





### Deleting the Phone Book Entries In Desired Group

From the **GROUPING** menu:

1. Press the **Option (SKL)** button and use the  or  button to scroll to **Delete Member**.
2. Press the **Select (SKL)** button to confirm the selection.

### Set Group Ring

From the **GROUPING** menu:

1. Press the **Option (SKL)** button and use the  or  button to scroll to **Set Group Ring**.
2. Use the  or  button to scroll to desired ring tone.
3. Press **Select (SKL)** button to confirm the **selection**.

### Changing the Group Name

From the **GROUPING** menu:

1. Press **Option (SKL)** button and use the  or  button to scroll to **Rename**.








2. Use the number keys to enter a name (up to 15 characters, including space.)

**NOTE: If you make a mistake press the DELETE/flash button to backspace and erase the wrong character(s).**










3. Press the **Store (SKL)** button to save the new group name.

## Managing Speed Dialing Record



### Adding the Speed Dialing Number

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the  button to short-cut to phone book menu.
3. Use the  or  button to scroll to desired record.
4. Press the **Option (SKL)** button to access the option menu.
5. Use the  or  button to scroll to **Speed Dialing**.
6. Press the **Select (SKL)** button and use the  or  button to select desired location. (Up to 10 locations, 0 to 9)
7. Press the **Select (SKL)** button to confirm.

### Editing the Speed Dialing Number








1. Make sure your phone is **OFF** (not in talk mode).
2. Press the  button to short-cut to phone book menu.
3. Press the **Option (SKL)** button to access the option menu.
4. Use the  or  button to scroll to **Speed Dialing**.
5. Press the **Select (SKL)** button and use the  or  button to select desired location.
6. Press the **Option (SKL)** button to access the option menu.
7. Use the  or  button to scroll to **Edit Number**.
8. Press the **Select (SKL)** button. The screen displays the phone book records.
9. Use the  or  button to scroll to desired record.
10. Press **Select (SKL)** button to confirm the selection.

### Deleting the Speed Dialing Number

1. Follow steps 1 to 6 in section “Editing the Speed Dialing Number”.
2. Use the  or  button to scroll to **Delete Number**.



3. Press the **Select (SKL)** button. The screen displays **DELETE?**.
4. Press the **Yes (SKL)** button to confirm the selection. The screen displays **DELETED**.

## Transferring the Phone book record between handset(s)

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the  button to short-cut to phone book menu.
3. Use the  or  button to scroll to desired record.
4. Press the **Option (SKL)** button to access the option menu.
5. Use the  or  button to scroll to **Transfer Record**.
6. Press the **Select (SKL)** button and the screen displays the list of registered handsets.
7. Use the  or  button to scroll to desired handset.
8. Press the **Select (SKL)** button to confirm the selection. After the transfer process finish, the screen displays **Successful**.







## Call Records

This option allows you to redial the number from a CID records or Dialed calls. There are maximum 40 CID records and 10 dialed calls stored in handset unit.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the main menu.
3. Use the  or  button to scroll to **Call Records**.
4. Press the **Select (SKL)** button to enter the submenu.

## Received Calls





From the **CALL RECORDS** menu:

1. Use the  or  button to scroll to **Received Calls**.
2. Press the **Select (SKL)** button to confirm, a total of **All** calls and **New** calls displays.
3. Press the **View (SKL)** button and the calls are shown in the order of the most recent date & time the calls was received.
4. Press the  or  button to scroll to the records for desired record
5. Press the **More (SKL)** button to see more options.
6. Press the  or  button to select **Format** or **Store**.

7. Press the **Select (SKL)** button to confirm the option. (If **Store** is selected, please refer to the Phone Book section of the manual for detailed information.)
8. Press the **Format (SKL)** button repeatedly to scroll through the formats available for selection. When it is on the preferred format, press the **Back (SKR)** button to return to review mode.
9. Press the **TALK** or **SPKR** button to dial out the number on the land line or press the **Cell (SKR)** button to dial out the number on the cell phone.





## Dialed Calls

From the **CALL RECORDS** menu:

1. Use the  or  button to scroll to **Dialed Calls**.
2. Press the **Select (SKL)** button to confirm, a listing of all calls display.
3. Press the  or  button to scroll to the desired number.
4. Press the **TALK** or **SPKR** button to dial out the number on the land line or press the **Cell (SKP)** button to dial out the number on the cell phone.

## Alarm



Set an alarm, then program the snooze time, occurrences, and melody preferences.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the main menu.
3. Use the  or  button to scroll to **ALARM**.
4. Press the **Select (SKL)** button to enter the submenu. The screen displays **Alarm on/off**.
5. Use the  or  button to scroll to **On** or **Off**.
6. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

## Set Alarm Time

**NOTE: Alarm must be activated to set time.**





From the **ALARM On** menu:

1. Press the **Select (SKL)** button to enter the menu. The screen displays **Set Alarm**.
2. Use number keys to enter the time, then use the  or  button to select **AM** or **PM**. The default setting is 12:00AM.

3. Press the **Store (SKL)** button to save your setting. You will hear a confirmation tone.





## Snooze

From the **ALARM On** menu:

1. Use the  or  button to scroll to **Snooze: Off**.
2. Press the **Select (SKL)** button to enter the menu. The screen displays **Snooze On/Off**.
3. Use the  or  button to select from **Off, Every 5 minutes, Every 10 minutes, Every 15 minutes** or **Every 30 minutes**. The default setting is **Off**.
4. Press the **Store (SKL)** button to save your selection. You will hear a confirmation tone.

## Set Cycle Time





From the **ALARM On** menu:

1. Use the  or  button to scroll to **Cycle: Once**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select **Once** or **Daily**. The default setting is **Once**.
4. Press the **Store (SKL)** button to save your selection. You will hear a confirmation tone.

**NOTE:** If you select **Daily**, the system will follow the current time setting to turn on the alarm.

## Set Alarm Melody



From the **ALARM On** menu:

1. Use the  or  button to scroll to **Alarm Melody**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select desired melody.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

## Scheduler





This feature allows you to set the reminder events by using the calendar.

1. Make sure your phone is **OFF** (not in talk mode).

2. Press the **Menu (SKL)** button to enter the main menu.
3. Use the  or  button to scroll to **Scheduler**.
4. Press the **Select (SKL)** button to enter the submenu.





## Adding a Reminder

### From the *Scheduler* menu

1. Use the  or  button to scroll to **Add Reminder**.
2. Press the **Select (SKL)** button to enter the **Set Date** menu. The screen displays **Year** and **Date**.
3. Use the number keys to enter the year and date desired for the reminder.
4. Press **Next (SKL)** button to move to **Set Time** menu.
5. Use the number keys to enter the time and use the  or  button to select **AM** or **PM**.
6. Press the **Store (SKL)** button to save the setting.
7. Press the **Select (SKL)** button to enter **Reminder Message** menu.
8. Use the number keys to enter the text content (up to 96 characters).
9. Press the **Store (SKL)** button to save the information. You will hear a confirmation tone. You may now program the snooze time, occurrences and melody preferences for your reminder.

## Set Snooze



### From the *Add Reminder* menu:

1. Use the  or  button to scroll to **Snooze On/Off**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select from **Off**, **Every 5 minutes**, **Every 10 minutes** or **Every 30 minutes**. The default setting is **Off**.
4. Press the **Store (SKL)** button to save your selection. You will hear a confirmation tone.

## Set Cycle Time

### From the *Add Reminder* menu:





1. Use the  or  button to scroll to **Cycle**.

2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select *Once, Daily, Weekly, Monthly or Yearly*. The default setting is *Once*.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

**NOTE: The system will follow the current time setting to turn on the alarm.**







## Set Alarm Melody

From the Add Reminder menu:

1. Use the  or  button to scroll to *Melody*.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select desired melody.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.



## Reviewing and Editing the Reminder Record

From the Scheduler menu:





1. Use the  or  button to scroll to *View Reminder*.
2. Press the **Select (SKL)** button to enter the menu. The screen displays the reminder records.
3. Use the  or  button to select the desired record and press the **Select (SKL)** button to view the record detail.
4. Press the **Option (SKL)** button to enter the option menu.
5. Use the  or  button to scroll to *Edit Reminder*.
6. Repeat steps 3 through 8 in “Adding a Reminder”.

## Deleting a Reminder Record

From the Scheduler menu:



1. Use the  or  button to scroll to *View Reminder*.
2. Press the **Select (SKL)** button to enter the menu. The screen displays the reminder records.



3. Use the  or  button to select the desired record and press the **Select (SKL)** button to view the record details.
4. Press the **Option (SKL)** button to enter the option menu.
5. Use the  or  button to scroll to **Delete Reminder**.
6. Press the **Option (SKL)** button to enter the menu. The screen displays **DELETE?**.
7. Press the **Yes (SKL)** button. You will hear a confirmation tone.





## Extra Features

In the extra features Menu, there are three programmable submenus: Room Monitoring, Intercom and Push to Talk.

1. Make sure you handset is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **Extra Features**.
4. Press the **Select (SKL)** button to enter the submenu.

## Room Monitoring

From the *Extra Features* menu:

1. Use the  or  button to scroll to **Room Monitoring**.
2. Press the **Select (SKL)** button and the screen displays all the list of registered handsets.
3. Use the  or  button to scroll to the desired handset. Press the **Select (SKL)** button to confirm.

### NOTE:

**1) If handsets have been named, then the name will be displayed on the screen instead of handset numbers.**

**2) During the room monitoring, it will emit a beep tone if there are incoming calls. You may press the TALK or SPKR button on the handset to answer the call and quit the room monitor mode.**





4. Press the **Back (SKR)** button to end room monitoring.

## Intercom Operation

The intercom feature allows you to have a conversation with another registered handset without tying up the telephone line, allowing you to still receive incoming calls.

### Handset to Handset Intercom Call

Form the Extra Features menu:

1. Use the  or  button to scroll to *Intercom*.
2. Press the **Select (SKL)** and the screen displays a list of registered handsets.
3. Use the  or  button to scroll to the desired handset. Press the **Select (SKL)** button to confirm.
4. The receiving handset is paged and emits a tone.

**NOTE: To cancel the page, press the Back (SKL) button or the END/cancel button on the originating handset.**

5. Wait for the person at the receiving handset to press the **Answer (SKL)** button.

**NOTE: If the receiving handset does not answer within two minutes, the intercom call is automatically cancelled and the originating handset displays *NO ANSWER*.**

6. When finished, press the **Back (SKR)** or **END/cancel** button on handset to deactivate the intercom.

**NOTE: The system is expandable up to 7 handsets (by purchase of optional Model 28107 handset with recharge cradle). When 7 handsets are registered, the system can handle 2 separate intercom operations simultaneously. For example, 1st handset intercoms with 2nd handset while 3rd handset intercoms with 4th handset.**





### Receiving an Intercom Call

When you receive an intercom call, your handset beeps. To answer the call press the **Answer (SKL)** button on the handset.



**NOTE: If you receive a telephone call during an intercom call, the intercom call is immediately terminated and the handset rings. Press the TALK or SPKR button on the handset to answer the call.**

## Push to Talk

This feature allows you to directly talk to another registered handset by pressing the **Push to Talk** button.



1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** to enter the main menu.
3. Use the  or  button to scroll to **Extra Features**.
4. Press the **Select (SKL)** button to enter the menu.
5. Use the  or  button to scroll to **Push To Talk**.

**NOTE: You may press the Push to Talk button on side of the handset to short-cut to the menu.**

6. Press the **Select (SKL)** button to enter the menu. The screen displays the list of registered handset and base.
7. Use the  or  button to select desired handset.
8. Press the **Select (SKL)** button to save your selection.
9. Press and hold the **Push to Talk** button to connect with the desired handset.

## Phone Setting





There are eight programmable menus available: Language, Set Date/Time, Set Area Code, Tone/Pulse, Handset Name, Registration, Deregistration and Default Setting.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **Phone Setting**.
4. Press the **Select (SKL)** button to enter the submenu.

### Language

This menu allows you to change the language of the display prompts on the handset.





**From the PHONE SETTING menu:**

1. Use the  or  button to scroll to **Language**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to the desired language. The default is *English*.

4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

## Set Date/Time



From the **PHONE SETTING** menu:

1. Use the  or  button to scroll to **Set Date/Time**.
2. Press the **Select (SKL)** button to enter the menu. The screen displays **Set Date**.
3. Use the number keys to enter the year and date.
4. Press the **Next (SKL)** button to move to time setup.
5. Use the number keys to enter the time and the  or  button to select **AM** or **PM**.
6. Press the **Store (SKL)** button to save the setting. You will hear a confirmation tone.

## Set Area Code

If you enter your local 3-digit area code in the area code menu, your local area code does not display on the Caller ID (CID) list. Instead, you only see the local 7-digit number. Calls received from outside your local area code will display the full 10-digits





From the **PHONE SETTING** menu:

1. Use the  or  button to scroll to **Set Area Code**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the number keys to enter your 3 digit area code. The default setting is " - - - ".
4. Press the **Store (SKL)** button to save the setting. You will hear a confirmation tone.

**NOTE:** To restore the default setting to "----", press and release the **DELETE/flash** button when the screen displays **Set Area Code**.

## Tone/Pulse



From the **Phone Setting** menu:

1. Use the  or  button to scroll to **Tone/Pulse**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select **Tone** or **Pulse**. The default is **Tone**.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

## Handset Name

This menu allows you to enter a name for the handset, which displays on the idle screen.





From the **PHONE SETTING** menu:

1. Use the  or  button to scroll to **Handset Name**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the number keys to enter a name (up to 15 characters). More than one letter is stored in each of the number keys. For example, to enter Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter I. Press the 5 key 3 times for the letter L. Wait for 1 second, press the 5 key 3 times for the second letter L, and press the 1 key to insert a space between the first and last name. Press the 7 key 4 times for the letter S; press the 6 key once for the letter M; press the 4 key 3 times for the letter I. Press the 8 key for the letter T; press the 4 key twice for the letter H.
4. Press the **Store (SKL)** button to save your setting. You will hear a confirmation tone.

**NOTE: If you make a mistake, use the DELETE/flash button to backspace and delete one character at a time.**





## Registration

From the **Phone Setting** menu:

1. Use the  or  button to scroll to **Registration**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **No** or **Yes**. The default is **NO**.
4. Press the **Select (SKL)** button to save your selection.
5. If you select **Yes**. The screen displays **PRESS AND HOLD BASE PAGE KEY**. (Your handset should be held near the base during registration process.)
6. Press and hold the Page button on the base until the in use indicator flashes. If the registration is successful, the screen displays Registration Successful. If the registration failed, the screen displays Failed.

## Deregistration

From the **PHONE SETTING** menu;

1. Use the  or  button to scroll to **Deregistration**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **No** or **Yes**. The default is **No**.
4. Press the **Select (SKL)** button to save your selection.
5. If you select **Yes**. The handset will automatically be deregistered. The screen displays **Successful Deregistration**, followed by **HANDSET NEEDS REGISTRATION**.
6. You must re-register the handset to main base through the handset using Phone Setting Registration menu before use.

## Global De-Registration

If one or more handsets become lost, you should deregister all handsets to ensure proper system operation. Follow the steps below to deregister all handsets at the same time.

**WARNING:** It is not recommended that a handset be deregistered unless absolutely necessary because once a handset is deregistered, that handset's telephone features cannot be used until the handset is re-registered.

**NOTE:** Before starting global deregistration procedure, let all handsets set idle for 20 seconds.



1. Disconnect the power from the base by unplugging the DC connector on back of base.
2. Press and hold the **Page** button on the base and reconnect the power.
3. Hold the **Page** button until the in use indicator flashes rapidly.
4. Release the **Page** button.
5. Press and release the **Page** button on the base once. All handsets are deregistered and the screen displays **HANDSET NEEDS REGISTRATION**.

## Default Setting

This option allows you to return the handset to factory preset settings.



From the **Phone Setting** menu:

1. Use the  or  button to scroll to **Default Setting**.

2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **No** or **Yes**. The default is **No**.
4. If you select **Yes**, all the settings in the programmable menu are returned to factory default setting. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

## Sound Setting






There are four programmable menus available: Equalizer, Ring Tone, Ring Volume and Key Tone.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button and use the  or  button to scroll to **Sound Setting**.
3. Press the **Select (SKL)** button to enter the menu.

### Equalizer

This feature lets you to adjust the audio quality.





**From the Sound Setting menu:**

1. Use the  or  button to scroll to **Equalizer**.  
**NOTE: You may press the  button from standby to shortcut to the Equalizer menu.**
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to desired selection. The default is **NATURAL**.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

### Ringer Tone

You may choose from the 15 preset melodies and 5 dual-tone ringer tones.

**From the Sound Setting menu:**





1. Use the  or  button to scroll to **Ringer Tone**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to the desired ringer tone. The default is **MELODY 1**.

4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

## Ringer Volume

You may choose ringer setting from this menu.

**From the Sound Setting menu:**





1. Use the  or  button to scroll to **Ringer Volume**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to the desired ringer volume. The default is *Volume 5*.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

**NOTE: If you turn the ringer OFF, the screen displays *Ringer Off*.**



## Key Tone

This feature allows you to set the key tone volume.

**From the Sound Setting menu:**

1. Use the  or  button to scroll to **Key Tone**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to the desired key tone volume. The default is *Level 3*.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.



## Bluetooth®

1. Make sure your handset is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the main menu.
3. Use the  or  button to scroll to **Bluetooth**.
4. Press the **Select (SKL)** button to enter the sub-menu. There are two programmable menus: **Device Info** and **Auto Connect**.



## Device Info





From the *Bluetooth* menu:

1. Use the  or  button to scroll to **Device Info**.
2. Press the **Select (SKL)** button to enter the sub-menu. The screen displays a list of registered devices.
3. Press the Exit (SKR) button to exit.

## Auto Connect

Enable or disable the auto connect function of the base Bluetooth to registered cell phone.

From the *Bluetooth* menu

1. Use the  or  button to scroll to **Auto Connect**.
2. Press the **Select (SKL)** button to enter the sub-menu.
3. Use the  or  button to scroll to **On** or **Off**. The default is **On**.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

# Telephone Operation

---

## Visual Indicators

### IN USE Indicator on the Base

The IN USE indicator is lit when the phone is in use. It flashes when you receive a call.

### TALK Indicator and SPKR Indicator on the Handset

The **TALK** Indicator or **SPKR** Indicator is lit when the handset is in use. It flashes when you receive a call.

### VMWI Indicator on Handset

**IMPORTANT:** In order to use this unit's Visual Message Waiting Indicator (VMWI) feature, you must subscribe to this service from your phone company.

The VMWI indicator on the top of the handset flashes when you receive a new message from your service provider.

## Speakerphone Operation

**NOTE:** If you are using the speakerphone, remain close to handset so the party you are speaking to can hear you.

- If you are using the handset and want to switch to the speakerphone, press the **SPKR** button, press the **END/cancel** button to end conversation.
- If you are using the speakerphone and want to switch to the handset, press the **TALK** button, press the **END/cancel** button to end conversation.

## Volume Settings

When the handset is **ON** (in talk mode), you may adjust the receiver volume by pressing the **VOLUME ▼** or **▲** button on the side of the handset. There are four volume levels to choose from. When the maximum or minimum volume level is reached, the phone beeps twice. **VOL 1** is minimum and **VOL 4** is maximum.



## Making a Call

### Landline Calls

1. Press the **TALK** or **SPKR** button on handset. Dial the desired number.  
**-OR-**

Dial the number and then press the **TALK** or **SPKR** button on handset.

**-OR-**

Press the  or  button to select the desired record, then press the **TALK** or **SPKR** button on handset.

**-OR-**

Press and hold the number key to get the corresponding speed dialing number.

2. When finished, press the **END/cancel** button on the handset to hang up.



**NOTE: You may enter up to 32 pre-dial digits.**

**NOTE: If you want to delete the pre-dial number you entered, press the DELETE/flash button until all of the digits are erased.**

**NOTE: To set the speed dialing number, refer to section "Phone Book -> Adding the Speed Dialing Number".**

## Cellular Calls

1. In standby mode, dial the desired number, press **Cell (SKR)** button.

**NOTE: If more than one bluetooth cell phone device is connected use the  or  button to select the desired device.**

2. Press **Select (SKL)** button to confirm.
4. Press the **END/cancel** button when finished.

## Answering a Call

Check the display to see who is calling.

## Landline Calls

1. Pick up the handset, and press the **TALK** or **SPKR** button on the handset.
2. When finished, press the **END/cancel** button on the handset, or place the handset in the cradle.

## Cellular Calls

1. Pick up the handset, and press the **Cell (SKR)** button on the handset.
2. When finished, press the **END/cancel** button on the handset, or place the handset in the cradle.

## Receiving a Landline Call during a Cellular Call

During a cellular call, if you receive an incoming landline call.

1. Press the **Line (SKR)** button to answer the incoming call and the cellular call will be on hold.
2. Press the **SPKR** button, the cellular call will switch to speakerphone mode.
3. To switch between the two calls, press the **Line (SKR)** button while landline call is on hold, press the **Cell (SKR)** button while cellular call is on hold.

## Receiving a Cellular Call during a Landline Call

During a landline call, if you receive an incoming cellular call.

1. Press the **Cell (SKR)** button to answer the incoming cellular call and the land line call will be on hold.
2. Press the **SPKR** button, the landline call will switch to speakerphone mode.
3. To switch between the two calls, press the **Line (SKR)** button while landline call is on hold, press the **Cell (SKR)** button while cellular call is on hold.

## Receiving Land line Call And Cell Call Simultaneously

If both landline call & Cell call rings at the same time, **Incoming Call** and **Incoming Cell Call** flash alternatively for 1 second before CID information comes up.

1. To answer the incoming landline call, press the **TALK** button on handset.
2. To answer the cellular call, press the **Cell (SKR)** button.

If both calls are answered from the same handset, to switch between the two calls, press the **Line (SKR)** button while landline call is on hold, press the **Cell (SKR)** button while cellular call is on hold.



## Available Options During a Landline Call

### More

During an external landline call, press **More (SKL)** button to enter the More sub-menu there are two options available: **Hold** and **Intercom**.

### Hold

From the **More** menu:

1. Use the  or  button to scroll to **Hold**.
2. Press the **Select (SKL)** button to confirm. The screen displays **LINE ON HOLD**, while the call is on hold, you can use the number keypad to make a new call out on the cell line. Press the **Line** or the **Cell (SKR)** to switch between the calls.

- To cancel hold, press the **UnHold (SKL)** button and return to original call.

## Intercom

### From the *More* menu:

- This feature allows you to create a 3-way conversation, please refer to Intercom Operation section of this manual for detail.



## Available Options During a Cell Call

### More

During an external cell call, press the **More (SKL)** button to enter the *More* sub-menu, there are three options available: *Hold*, *Intercom* and *Transfer to cell*.

### Hold

#### From the *More* menu:

1. Use the  or  button to scroll to *Hold*.
  2. Press **Select (SKL)** button to confirm, the screen displays **CELL ON HOLD**. While the call is on hold, you can use the number keypad to make a new landline cell .
- To cancel hold, press the **UnHold (SKL)** button and return to original call.

## Intercom

### From the *More* menu:

- This feature allows you to create a 3-way conversation, please refer to Intercom operation section of this manual for detail.

## Transfer to Cell

### From the *More* menu:

This feature allows you cancel Bluetooth capabilities and transfer the active cell call from the handset back to your cell phone. The handset in use will then return to stand-by mode.

**NOTE: Check your cell phone instruction manual regarding capabilities before attempting transfer.**

### Making a landline call when Talking To Cell Call

- During a cellular call, press the **line (SKR)** button to put the cellular call on hold, use the number keypad to make a land line call.

## Making a Cell Call When Talking To Landline Call



- During a landline call, press the **Cell (SKR)** button to put the land line call on hold. Enter the desired phone number, Press the **Cell( SKR)** button to dial.

## Conference

This feature allows you to create a 3-way conference calls with a single outside landline or cellular call and either; or a 4-way conference calls with the landline and cellular call simultaneously.

### 3-way conference calls with a single outside landline or cellular call and either

#### With a single outside landline or cellular call

- During a landline or cellular call, press the **TALK** or **SPKR** button to answer the incoming call.
- Press the **More (SKL)** button to enter sub-menu, Use the  or  button to select **Intercom** and press the **Select (SKL)** button to make the intercom call,
- Press the **Conf (SKL)** button for 3-way conference. The screen displays **Conference**.
- Press the **END/cancel** button to exit conference.

#### With an outside landline and cellular call

- During a landline or cellular call, press the **Line/Cell (SKR)** button to make the other landline or cellular call,
- Press the **Conf (SKL)** button to setup 3-way conference.
- Press the **END/cancel** button to terminate both calls.

### 4-way conference calls with an outside landline and cellular call simultaneously

- During the outside landline and cellular 3-way conference call, press the **TALK** button on another standby handset to join the 3-way cellular call
- Press the **END/cancel** button to terminate both calls

## Call Timer

After you press **TALK** or **SPKR** button on the handset, the screen displays the built-in call timer and begins counting the length of time of the call. The time will display for 3 seconds after the call has ended.

## Auto Stand-by

Placing the cordless handset in the charge cradle while the handset is **Off** the hook (or during a call) automatically hangs up the handset.

## Flash/Call Waiting

If you subscribe to the combined Call Waiting Caller ID service from your local telephone company, you will receive Caller ID information (if available) on Call Waiting calls. During a phone call, you will hear a beep to indicate another call is waiting on the line and Caller ID information for the waiting call shows on the handset display.


- To connect to the waiting call, press the **DELETE/flash** button on the handset, and your original call is put on hold.
- To switch between the two calls, press the **DELETE/flash** button.

**NOTE: Some cellular phones do not support this feature, refer to your cellular devices instruction Manual.**

## Last Number Redial




You may redial a number up to 32 digits long.

**To quickly redial the last number you dialed:**


1. Press the **TALK** or **SPKR** button on the handset or press the **Cell (SKR)** button to dial the number.
2. Press the  button, the number dials automatically.

-OR-

**To quickly choose from any of the last three numbers you dialed:**

1. Press the  button first, then use the  or  button to select the desired redial number.
2. Press the **TALK** or **SPKR** button on the handset, the number dials automatically.

-OR-

If you get a busy signal and want to keep dialing the number, press the  button to quickly redial the number.

## Page

The page feature helps you locate a misplaced handset. To send and receive pages, all handsets must be registered. If your handset is not registered, follow the instructions in the Registration section of this manual.

## Paging from the Base/Group Page

Use the base-only to page all registered handsets at the same time.

1. Make sure the phone is **OFF** (not in talk mode).
2. Press the **Page** button on the base.
3. All registered handsets beep for two minutes and the screen displays **PAGING**.
4. To cancel the page, press the **Page** button on the base, or press any button on each handset.



## Mute

To have a private, off-line conversation, use the mute feature. The party on the other end of the line cannot hear you, but you can still hear them.

When you are using the phone, press the **MUTE** button on handset to activate the mute function. The screen displays **Mute On**. To de-activate, press the **MUTE** button on handset again.

## Ringer Volume (Short-cut)

There are two ways to set the ringer volume. One is via the handset menu as described in the section Programming the Telephone-->Sound Setting-->Ringer Volume, while the other one is this short-cut.

1. Make sure the phone is **OFF** (not in talk mode).
2. Press and hold the **#PAUSE/ringer** button until the screen displays the **Ring Volume** menu.
3. Use the  or  button to scroll to the desired ringer volume. The default is **Volume 5**.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

## Caller ID (CID)

---


**IMPORTANT:** In order to use this unit's Caller ID features, you must subscribe to either the standard Name/Number Caller ID Service or Call Waiting Caller ID Service. To know who is calling while you are on the phone, you must subscribe to Call Waiting Caller ID Service.

This unit receives and displays information transmitted by your local phone company.



This information can include the phone number, date, and time; or the name, phone number, date, and time.

**NOTE: Unit will not display time and date setting from incoming cellular calls.**

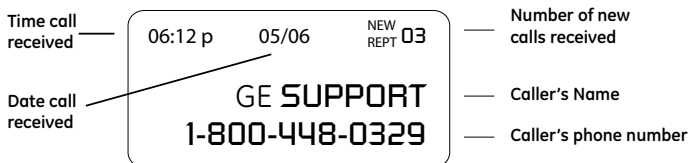

## Call Waiting Caller ID

Provided you subscribe to Call Waiting Caller ID service from your phone company; if you receive an incoming call and you are using the GE multi handset system, a beep indicates the presence of a Call Waiting call on the line. The Call Waiting Caller ID information will be displayed and stored in the history of all handsets in the system.

- When you hear the call waiting beep in the handset receiver, press the **DELETE/flash** button to put the current call on hold and answer the incoming call. Press the **DELETE/flash** button again to return to the original call.

## CID Error Codes

Various Caller ID error messages may appear on the display. Refer to the Display Messages section of this User's Guide for more information.

## Receiving CID Records

When you receive a call, the Caller ID information is transmitted between the first and second ring. The Caller ID information appears on the display while the phone rings, giving you a chance to monitor the information and decide whether or not to answer the call.




## Storing CID Records (In CID Memory)

If you are not at home or cannot answer, your telephone's Caller ID memory stores the data for the 40 most recent calls you received so you can see who called while you were unavailable. When the 41st call is received, the oldest Caller ID record (1st call) is automatically deleted.




You may review the stored information at any time. Calls received since your last review show on the top line of the display as; **All=XX, New=XX**.

## Reviewing CID Records

As calls are received and stored, the display is updated to let you know how many calls have been received. To scroll CID records:

1. Make sure the phone is **OFF** (not in talk mode).
2. Press the  button. (a total of **All** calls and **New** calls displays.)
3. Press the **View (SKL)** button.
4. Press the  button to review the newest CID record.
5. Press the  button to review the oldest CID record first.





## Dialing a CID Number

1. Make sure the phone is **OFF** (not in TALK mode).
2. Press the  button.
3. Press the **View (SKL)** button.
4. Use the  or  button to display the desired record.
5. Press the **TALK** or **SPKR** button. The number dials automatically.

## Formatting a CID Number Before Dialing

**NOTE:** Depending on (a) how the incoming caller's phone number is formatted when it is received, and (b) whether or not you previously preprogrammed your local area code into the **PHONE SETTING** menu, you may need to adjust the format of the incoming caller's stored phone number before calling back the record.

If the number does not dial as shown, follow steps below to format it:

1. Make sure the phone is **OFF** (not in talk mode).
2. Press the  button.
3. Press the **View (SKL)** button or press the  button again.
4. Use the  or  button to scroll to the desired CID record.
5. Press the **More (SKL)** button.
6. Press the **Select (SKL)** button.

7. Press the **Format (SKL)** button to change the format of the displayed number.
8. Press the **TALK** or **SPKR** button. The formatted number dials automatically.

**NOTE: TO dial from cellular line, press Back (SKR), then press the Cell (SKR) button.**







Available formats include:

<i>Number of digits</i>	<i>Explanation</i>	<i>Example</i>
<b>Eleven digits</b>	long distance code "1 " +3-digit area code +7-digit telephone number.	1-317-888-8888
<b>Ten digits</b>	3-digit area code + 7-digit telephone number.	317-888-8888
<b>Seven digits</b>	7-digit telephone number.	888-8888

## Storing CID Records into Phone Book




You may also store CID information in the Phone Book.

**NOTE: It is important that you format CID records correctly for dialing out BEFORE storing in the Phone Book as you cannot reformat CID records stored in memory.**

1. Make sure the phone is **OFF** (not in talk mode).
2. Press the  button.
3. Press the **View (SKL)** button or press the  button again.
4. Use the  or  button to scroll to the desired CID record.
5. Press the **More (SKL)** button.
6. Use the  or  button to scroll to Store.
7. Press the **Select (SKL)** button.
8. The screen displays the CID numbers. Refer to "Adding Phone Book Entries" section to save the record.

**NOTE: If the selected CID record contains any information that is non-numeric, the unit will not allow this record to transfer to the phone book.**

## Deleting a CID Record

1. Make sure the phone is **OFF** (not in TALK mode).
2. Press the  button.
3. Press the **View (SKL)** button.
4. Use the  or  button to scroll to the CID record.
5. Press the **DELETE/flash** button to show **DELETE?**.

**NOTE:** To delete all CID records, press and hold the **DELETE/flash** button.

6. Press the **Yes (SKL)** button to confirm the deletion. The screens displays **DELETED**.

**NOTE:** Press the **No (SKR)** button to return to the stand-by mode or if no action is taken, it will exit automatically after one minute.

## Connecting the Belt Clip

---

1. To attach the belt clip, insert the sides of the belt clip into the slots on each side of the handset.
2. Snap the ends of the belt clip into place.

## Connecting Optional Headset

---

Each handset can be used with an optional headset for hands free operation.

1. Connect the headset to the headset jack on the side of the handset. The handset receiver and microphone are disabled when the headset is connected.
2. Adjust the headset to rest comfortably on top of your head and over your ear. Move the microphone to approximately two to three inches from your mouth.
3. Press the **TALK** button to answer a call or make calls using the headset.
4. To return to normal operation, unplug the headset from the jack.

## Changing the Battery

---



**CAUTION:** To reduce the risk of fire or personal injury, use only the Thomson Inc. approved model 5-2840 Nickel-metal Hydride battery (Ni-MH), which is compatible with this unit.

1. Make sure the telephone is **OFF** (not in TALK mode) before you replace the battery.

2. Remove the battery compartment door.
3. Disconnect the cord attached to the battery pack and remove the battery pack from the handset.
4. Insert the new battery pack and connect the cord to the jack inside the battery compartment.
5. Put the battery compartment door back on.
6. Place handset in the charge cradle to charge. **Allow the handset battery to properly charge (for 16 hours) prior to first use or when you install a new battery pack. If you do not properly charge the phone, battery performance will be compromised.**

**NOTE:** The RBRC seal on the battery used in your Thomson Inc. product indicates that we are participating in a program to collect and recycle the rechargeable battery (or batteries).  
For more information go to the RBRC web site at [www.rbrc.org](http://www.rbrc.org) or call 1-800-8-BATTERY or contact a local recycling center.

## Battery Safety Precautions

---

- Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the **Nickel-metal Hydride** battery listed in the User's Guide.
- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.

## Display Messages

---

The following indicators show the status of a message or of the unit.

<b>BLOCKED NUMBER</b>	The person is calling from a number that has been blocked from transmission.
<b>CHARGING...</b>	Indicates the handset need to charge for a period of time before it can resume normal function.
<b>DELETE ALL?</b>	Prompt asking if you want to erase all Caller ID records.

<b>DELETE CALL ID?</b>	Prompt asking if you want to erase the Caller ID record that is shown on the display.
<b>DELETE?</b>	Prompt asking if you want to erase one of the 200 records stored in the phone's memory.
<b>END OF LIST</b>	Indicates that there is no additional information in Caller ID memory.
<b>ENTER NAME</b>	Prompt telling you to enter the name in one of the 200 memory locations.
<b>ENTER NUMBER</b>	Prompt telling you to enter a telephone number in one of the 200 memory locations.
<b>HANDSET NAME</b>	Prompt telling you to enter the user name for the registered handset.
<b>HANDSET NEEDS REGISTRATION</b>	Indicates you must register a non-registered handset prior to use.
<b>INCOMPLETE DATA</b>	Caller information is interrupted during transmission or the phone line is excessively noisy.
<b>INTERCOM FROM</b>	intercom call from other handset.
<b>LINE IN USE</b>	Displays on handset while the line is in use.
<b>LONG DISTANCE</b>	Indicates CID record is from a long distance call.
<b>LOW BATTERY</b>	Indicates the battery needs to be charged.
<b>NEW</b>	Indicates call or calls have not been reviewed.
<b>NEW CALL XX</b>	XX represents the number of new CID records not reviewed.
<b>NO CALLS</b>	Indicates there are no CID records in memory.
<b>NO DATA</b>	No Caller ID information was received.
<b>OUT OF RANGE</b>	May indicate handset is too far away from the base or that the power has been interrupted. Move closer and check connections.
<b>PAGING or PLEASE REGISTER</b>	Someone pressed the PAGE button on the base or Indicates the handset needs to be registered before use.

<b>REPEAT</b>	Repeat call message. Indicates that a new call from the same number was received more than once.
<b>SEARCHING</b>	Indicates handset is searching for the base.
<b>SPEAKER</b>	Indicates the handset is in speakerphone mode.
<b>UNKNOWN CALLER/NAME/NUMBER</b>	The incoming call is from an area not serviced by Caller ID or the information was not sent.

## Handset Sound Signals

<i>Signal</i>	<i>Meaning</i>
A long warbling tone (with ringer on)	Signals an incoming call
Three short beeps	Page signal
One long beep	Confirmation tone for the completion of a function
One short beep (during room monitoring mode)	Ring alert tone
One short beep (every 7 seconds)	Low battery warning

## Troubleshooting Guide

### Telephone Solutions

No dial tone

- Check and repeat installation steps:  
Ensure the base power cord is connected to a working electrical outlet .  
Ensure the telephone line cord is connected to the base and the wall jack.
- Connect another phone to the same jack; if there is still no dial tone, the problem might be your wiring or local service.
- The handset may be out of range of the base. Move closer to the base.
- Ensure the battery is properly charged (16 hours).
- Ensure the battery pack is installed correctly.
- The handset should beep when you press the **TALK** button and the charge indicator should be lit when the handset rests in the cradle. If not, the battery may need to be charged.
- Place handset in charge cradle for at least 20 seconds to reset the unit.

Handset does not ring

- Make sure the handset ringer switch is set to ON, this can be done through the handset setup menu - Ringer Volume.
  - The handset may be out of range. Move closer to the base.
  - You may have too many extension phones on your line. Try unplugging some phones.
  - Check for dial tone.
- 

You experience static, noise, or fading in and out

- The handset may be out of range of the base. Move closer to the base.
  - Make sure base is not plugged into an outlet with another household appliance. If necessary, relocate the base.
  - Charge the battery.
- 

Unit beeps

- Clean charging contacts on cordless handset.
  - See solutions for "No dial tone".
  - Replace the battery.
- 

Memory Dialing doesn't work

- Did you program the memory location keys correctly?
  - Did you follow proper dialing sequence?
- 

Unit locks up and there is no communication between the base and cordless handset

- Unplug the AC power adaptor from the wall outlet and the back of the base. Remove the handset battery. Wait for 30 seconds and plug the power adaptor back into the base and wall outlet. Reconnect the battery and charge for 16 hours.
- 

Handset displays **SEARCHING** or **OUT OF RANGE** and cannot link up with the base when the **TALK** button is pressed.

- Handset may be out of range of the base. Move closer to the base.
- Make sure the power adaptor is properly installed.
- Disconnect the handset battery and plug it in again. Place the handset on the cradle for at least 2 to 3 minutes.



- Disconnect the power adaptor and plug it in again. Then place the handset on the cradle for at least 2 to 3 minutes.
- 

Handset displays **HANDSET NEEDS REGISTRATION**

- Follow the programming in the telephone procedures to re-register the handset to the base.
  - Press the **Select (SKL)** button to begin handset registration. Follow instructions on Handset screen.
- 

## Caller ID Solutions

No Display

- Charge the battery (for 16 hours). Or replace the battery.
  - Make sure that the unit is connected to a non-switched electrical outlet. Disconnect the AC power adaptor from the base and reconnect it.
- 

Caller ID Error Message

- The unit displays this message if it detects anything other than valid Caller ID information during the silent period after the first ring. This message indicates the presence of noise on the line.
- 

No Caller ID

- In order to receive Caller ID information, you must subscribe to the standard name/number Caller ID service from your local telephone company.
- 

## Battery Solutions

If you experience any of the following problems, even after fully recharging the battery, you may need to replace the battery pack:

- Short talk time
- Poor sound quality
- Charge indicator on the cradle fails to illuminate.
- Limited range

## Causes of Poor Reception

---

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction that can shield radio signals.
- You're too close to appliances such as microwaves, stoves, computers, etc.
- Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into AC outlet with other electronic devices.
- Baby monitor is using the same frequency.
- Handset battery is low.

## General Product Care

---

To keep your unit working and looking good, follow these guidelines:

- Avoid dropping the handset, as well as other rough treatment to the phone.
- Clean the phone with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.
- Periodically clean the charge contacts on the handset and remote charger with a clean pencil eraser.

## Accessory Information

---

DESCRIPTION	MODEL NO.
AC power adapter	5-2812
Belt Clip	5-2717
Headset	5-2425 (black)
Replacement Handset Battery	5-2840

To place order, have your Visa, MasterCard, or Discover Card ready and call toll-free **1-800-338-0376**. A shipping and handling fee will be charged upon ordering. We are required by law to collect appropriate sales tax for each individual state, country, and locality to which the merchandise is being sent. Items are subject to availability.

## Warranty Assistance

---

If trouble is experienced with this equipment, for warranty information, please contact customer service at **1-800-448-0329**. If the equipment is causing harm to the telephone network, the telephone company may require that you disconnect the equipment until the problem is resolved.

Any unauthorized repairs, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product. For instructions on how to obtain a replacement unit, refer to the warranty included in this guide or call customer service at **1-800-448-0329**.

Or refer inquiries to:

**Thomson Inc.**  
**Manager, Consumer Relations**  
**P O Box 1976**  
**Indianapolis, IN 46206**

Attach your sales receipt to this booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date \_\_\_\_\_

Name of store \_\_\_\_\_

## Limited Warranty

---

### What your warranty covers:

- Defects in materials or workmanship.

### For how long after your purchase:

- One year, from date of purchase.  
(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

### What we will do:

- Provide you with a new unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

### How you get service:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.

- “Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period, must be presented to obtain warranty service.” For rental firms, proof of first rental is also required. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

**Thomson Inc.  
11721 B Alameda Ave.  
Socorro, Texas 79927**

- Insure your shipment for loss or damage. Thomson Inc. accepts no liability in case of damage or loss.
- A new unit will be shipped to you freight prepaid.

**What your warranty *does not* cover:**

- Customer instruction. (Your Owner’s Manual provides information regarding operating instructions and user controls. Any additional information, should be obtained from your dealer.)
- Installation and setup service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

**Product Registration:**

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

**Limitation of Warranty:**

- **THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.**

- **REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.**

**How state law relates to this warranty:**

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

**If you purchased your product outside the USA:**

- This warranty does not apply. Contact your dealer for warranty information.

# Index

---

3-way conference calls with...	38	Deleting a Phone Book Record	17
4-way conference calls with...	38	Deleting a Reminder Record	24
<b>A</b>		Deleting the Phone Book Entries In Desired Group	18
Accessory Information	50	Deleting the Speed Dialing Number	19
Adding a Reminder	23	Device Info	33
Adding Phone Book Entries	14	Dialed Calls	21
Adding the Phone Book Entries In Desired Group	18	Dialing a CID Number	42
Adding the Speed Dialing Number	19	Digital Security System	9
Alarm	21	Disconnect	13
Answering a Call	35	Display Messages	45
Auto Connect	33	<b>E</b>	
Auto Standby	39	Editing a Phone Book Record	17
Available Options During a Cell Call	37	Editing the Speed Dialing Number	19
Available Options During a Landline Call	36	Equalizer	31
<b>B</b>		Equipment Approval Information	2
Base Layout	11	Extra Features	25
Base Station	12	<b>F</b>	
Battery Safety Precautions	45	FCC RF Radiation Exposure Statement	4
Battery Solutions	49	Flash/Call Waiting	39
Before You Begin	7	Formatting a CID Number Before Dialing	42
Bluetooth®	32	<b>G</b>	
BlueTooth® Setup	13	General Product Care	50
<b>C</b>		Global De-Registration	30
Call Records	20	<b>H</b>	
Call Timer	38	Handset Layout	10
Call Waiting Caller ID	41	Handset Name	29
Caller ID (CID)	40	Handset Sound Signals	47
Caller ID Solutions	49	Handset to Handset Intercom Call	26
Causes of Poor Reception	50	Hearing Aid Compatibility (HAC)	4
Cellular Calls	35	Hold	36,37
Changing the Battery	44	<b>I</b>	
Changing the Group Name	18	Important Installation Guidelines	9
CID Error Codes	41	IN USE Indicator on the Base	34
Conference	38	Index	
Connect	13	Information for DECT Product	4
Connecting Optional Headset	44	Inserting a Pause in the Dialing Sequence	16
Connecting the Belt Clip	44	Installation	9
<b>D</b>		Installing the Handset Battery	11
Default Setting	30	Installing the Phone	11
Deleting a CID Record	44	Intercom	37

# Index

---

Intercom Operation	26	Reviewing and Editing	
Interference Information	3	the Reminder Record	24
Introduction	7	Reviewing CID Records	42
<b>K</b>		Reviewing Phone Book Records	16
Key Tone	32	Ringer Tone	31
<b>L</b>		Ringer Volume	32
Landline Calls	34,35	Ringer Volume (Shortcut)	40
Language	27	Room Monitoring	25
Last Number Redial	39	<b>S</b>	
Licensing	4	Scheduler	22
Limited Warranty	51	Set Alarm Melody	22,24
<b>M</b>		Set Alarm Time	21
Make sure your package includes the items		Set Area Code	28
shown here.	7	Set Cycle Time	22,23
Making a Call	34	Set Date/Time	28
Managing Speed Dialing Record	19	Set Group Ring	18
Managing the Record Grouping in Phone Book	18	Set Snooze	23
More	36,37	Snooze	22
Mute	40	Sound Setting	31
<b>P</b>		Speakerphone Operation	34
Page	39	Storing CID Records (In CID Memory)	41
Paging from the Base/Group Page	40	Storing CID Records into Phone Book	43
Parts Checklist	7	Storing the Last Number Dialed	16
Phone Book	14	<b>T</b>	
Phone Setting	27	Table of Contents	5
Programming Information	14	TALK Indicator and SPKR	
Programming The Handset	14	Indicator on the Handset	34
Push to Talk	27	Telephone Jack Requirements	8
<b>R</b>		Telephone Operation	34
Received Calls	20	Telephone Solutions	47
Receiving a Cellular Call during		Tone/Pulse	28
a Landline Call	36	Transfer to Cell	37
Receiving a Landline Call during		Transferring the Phone book	
a Cellular Call	35	record between handset(s)	20
Receiving an Intercom Call	26	Troubleshooting Guide	47
Receiving CID Records	41	<b>V</b>	
Receiving Land line Call And Cell Call		Visual Indicators	34
Simultaneously	36	VMWI Indicator on Handset	34
Reconnect	13	Volume Settings	34
Registration	29	<b>W</b>	
		Warranty Assistance	51

Visit the GE website at: [www.GE.com/phones](http://www.GE.com/phones)

---



Model 28127  
00026161 (Rev. 0 Dom E)  
08-15  
Printed in China

**Thomson Inc.**  
101 West 103rd Street  
Indianapolis, IN 46290-1102  
© 2008 Thomson Inc.  
Trademark(s) © Registered  
Marca(s) Registrada(s)