


| INSTRUCTION SHEET SPECIFICATIONS | |
|----------------------------------|-----------------|
| Toy: | BMB BATTLE CAPE |
| Toy No.: | N9303 |
| Part No.: | 0920 |
| Trim Size: | A4 |
| Folded Size: | A5 |
| Type of Fold: | 4 |
| # colors: | One |
| Colors: | Black |
| Paper Stock: | White Offset |
| Paper Weight: | 70 lb. |
| EDM No.: | |


2.

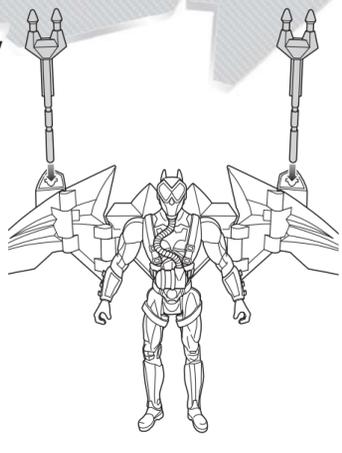

3.



4.

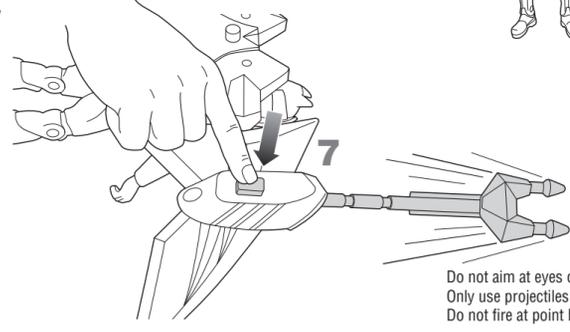

Do not aim at eyes or face.
Only use projectiles supplied with this toy.
Do not fire at point blank range.

RECYCLE INFORMATION (USA ONLY)

- Please recycle button cell battery(ies) contained in this product by:
- Visiting your nearest recycling center. For location of the nearest recycling center, visit us online at www.service.mattel.com.
 - If a recycling center is not available in your area, contact us for a pre-paid mailing label. Visit us online at www.service.mattel.com or call toll-free at 1-800-524-8697.
 - Valid in the US only. • Solo válido en los EE.UU. • Valable aux États-Unis seulement.

Mattel, Inc. All Rights Reserved.

Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Relations 1 (800) 524-8697. Retain this address for future reference. • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. • Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. • Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. • Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.

BATMAN and all related characters and elements are trademarks of and © DC Comics. (s08)




INSTRUCTIONS

4+

Please keep these instructions for future reference as they contain important information.

CONTENTS

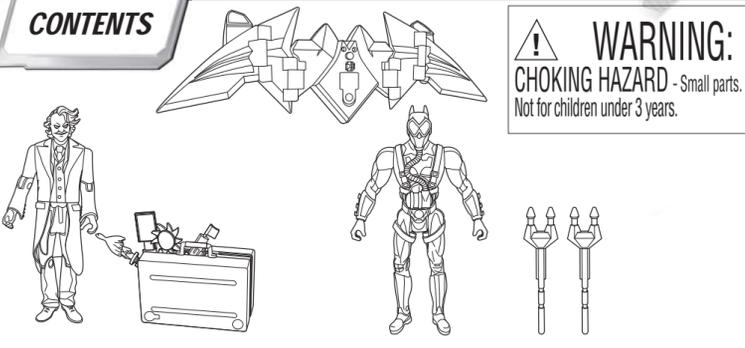

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

Requires 2 AG3 (LR41) or equivalent button-cell batteries. Batteries included are for demonstration purposes.


BATTERY INSTALLATION

Unscrew the battery cover with a Phillips head screwdriver (not included). Remove batteries included for demonstration purposes and dispose of them safely. Install 2 AG3 (LR41) or equivalent button-cell batteries in the orientation (+/-) shown. Replace battery cover and tighten screw. Replace the batteries if lights and sounds play slowly or distort.


1.



2.

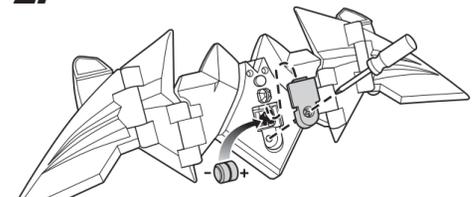

3.

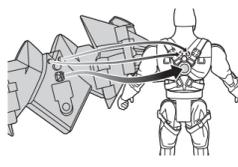


BATTERY SAFETY INFORMATION

- In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
 - Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Do not mix old and new batteries.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with the correct polarity.
 - Exhausted batteries are to be removed from the product.
 - The supply terminals are not to be short-circuited.
 - Dispose of battery(ies) safely.
 - Do not dispose of this product in a fire. The batteries inside may explode or leak.




Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.



ASSEMBLY

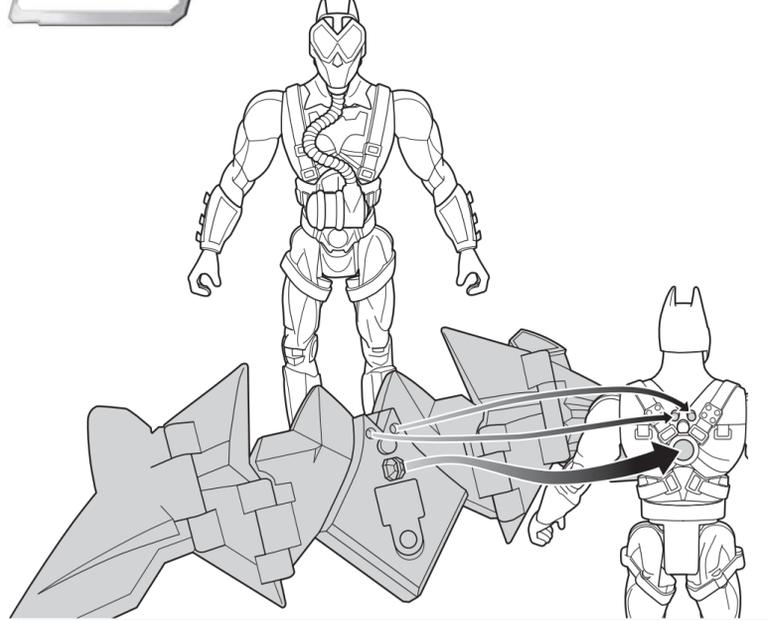

TO PLAY

1.

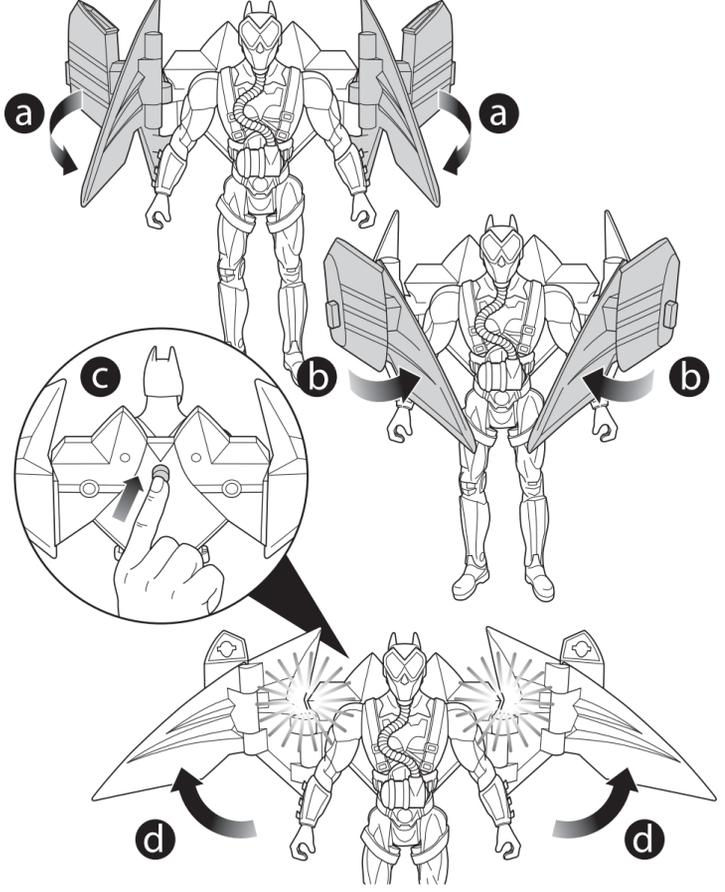

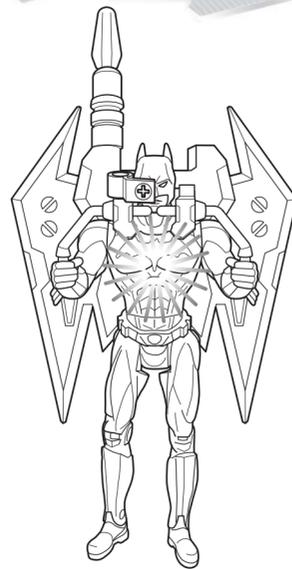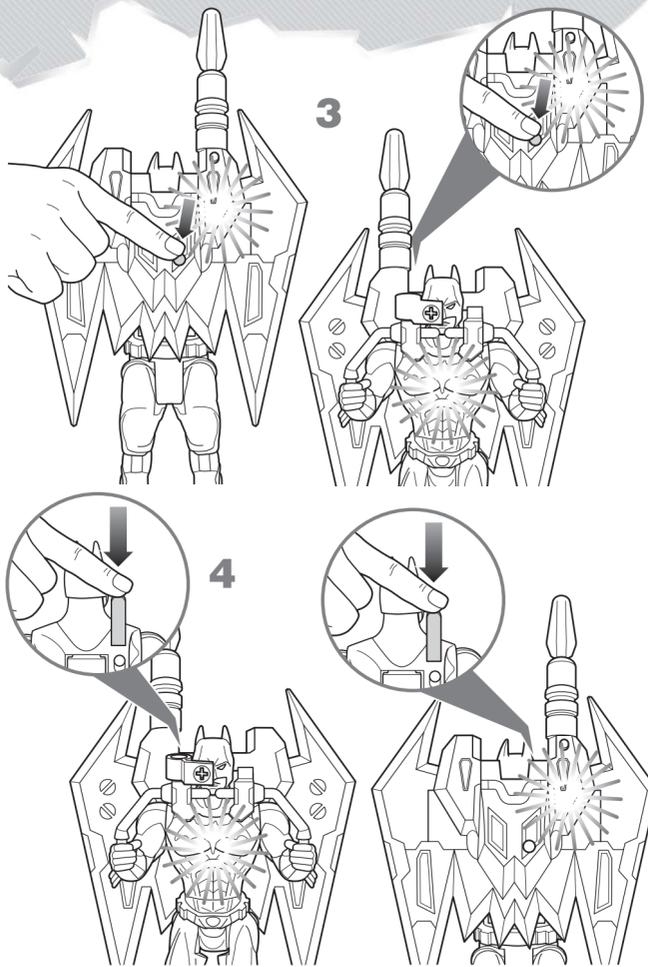

RECYCLE INFORMATION (USA ONLY)

- Please recycle button cell battery(ies) contained in this product by:
- Visiting your nearest recycling center. For location of the nearest recycling center, visit us online at www.service.mattel.com.
 - If a recycling center is not available in your area, contact us for a pre-paid mailing label. Visit us online at www.service.mattel.com or call toll-free at 1-800-524-8697.
 - Valid in the US only. • Solo válido en los EE.UU. • Valable aux États-Unis seulement.

Mattel, Inc. All Rights Reserved.

Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Relations 1 (800) 524-8697. Retain this address for future reference. • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. • Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB, Helpline 01628 500303. • Mattel Australia Pty., Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. • Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel: 03-78803817, Fax: 03-78803867. N9304-0920 Asst. M4863

BATMAN and all related characters and elements are trademarks of and © DC Comics. (s08)




INSTRUCTIONS 4+

THE DARK KNIGHT

Please keep these instructions for future reference as they contain important information.


CONTENTS

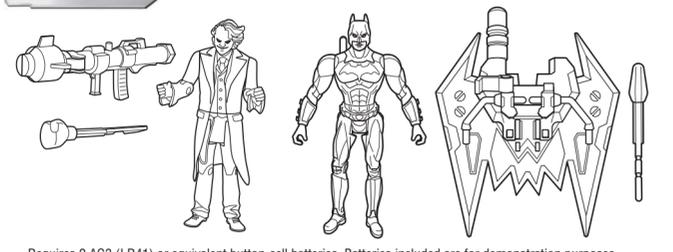

Requires 2 AG3 (LR41) or equivalent button-cell batteries. Batteries included are for demonstration purposes.

BATTERY INSTALLATION





Unscrew the battery cover with a Phillips head screwdriver (not included).
Remove batteries included for demonstration purposes and dispose of them safely.
Install 2 AG3 (LR41) or equivalent button-cell batteries in the orientation (+/-) shown.
Replace battery cover and tighten screw.
Replace the batteries if lights and sounds play slowly or distort.

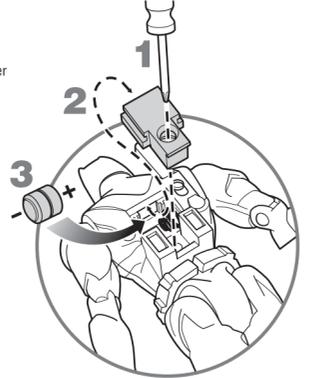

- BATTERY SAFETY INFORMATION**
- In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
 - Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Do not mix old and new batteries.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with the correct polarity.
 - Exhausted batteries are to be removed from the product.
 - The supply terminals are not to be short-circuited.
 - Dispose of battery(ies) safely.
 - Do not dispose of this product in a fire. The batteries inside may explode or leak.

Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

ASSEMBLY

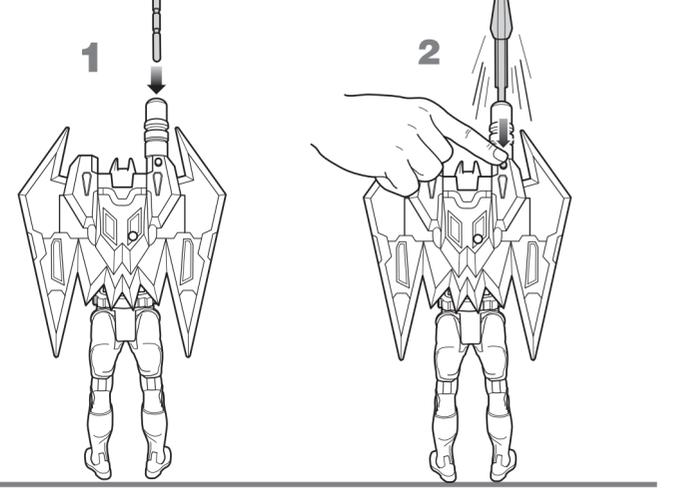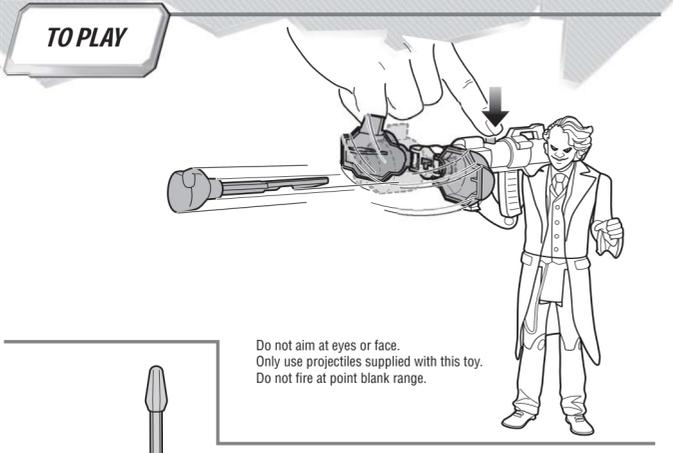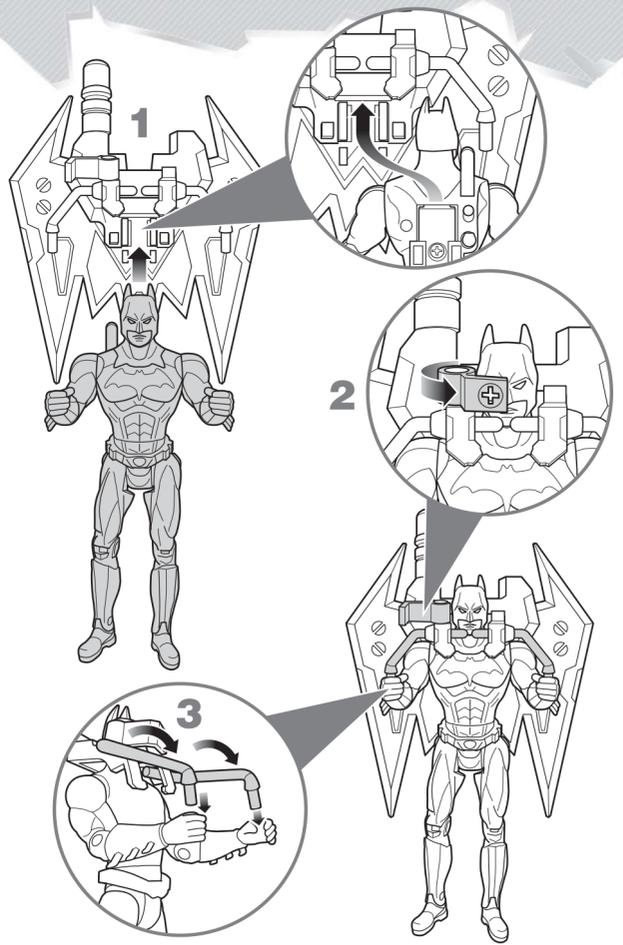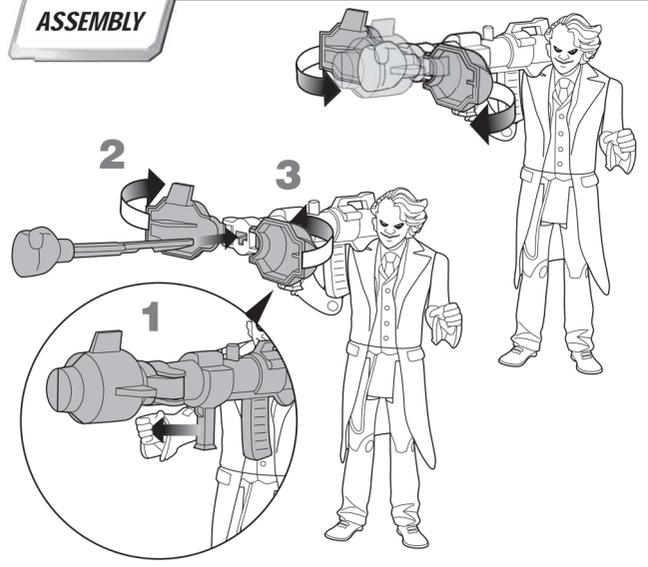

INSTRUCTION SHEET SPECIFICATIONS

| | |
|---------------|-----------------|
| Toy: | BMB BATTLE CAPE |
| Toy No.: | N9304 |
| Part No.: | 0920 |
| Trim Size: | 17.5" x 8.25" |
| Folded Size: | A5 |
| Type of Fold: | 4 |
| # colors: | One |
| Colors: | Black |
| Paper Stock: | White Offset |
| Paper Weight: | 70 lb. |
| EDM No.: | |