


THOMSON

speedtouch™ D150

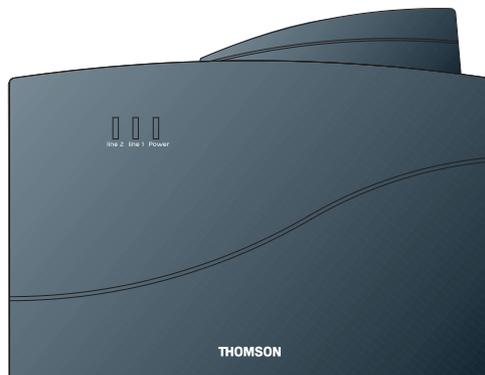

User guide

English

The package contains the following items:

- a base,
- two line cables,
- two handsets,
- two chargers,
- two electric power supply units for the chargers,
- one electric power supply unit for the base,
- six batteries,
- the user guide and a quick guide.

Please **read this guide carefully** to get to know the main features of the speedtouch™ D150.

1. INSTALLATION	5
1.1 <i>Precautions</i>	5
1.2 <i>Connecting the charger</i>	5
1.3 <i>Installing the handset</i>	5
1.4 <i>Installing the base</i>	6
1.5 <i>Getting to grips with your telephone</i>	7
2. CONFIGURING THE BASE'S LINES	8
2.1 <i>Line priority</i>	8
2.2 <i>Choosing the ringing group</i>	8
2.3 <i>Ringing priority</i>	9
3. USING THE TELEPHONE	10
3.1 <i>Making a call</i>	10
3.2 <i>Making an internal call</i>	10
3.3 <i>Receiving a call</i>	10
3.4 <i>Transferring a call</i>	11
3.5 <i>Redialling one of the last numbers called (bis)</i>	11
3.6 <i>Mute function (turning off the microphone) / putting on hold</i>	11
3.7 <i>Calling from the log of calls (list of the last 10 calls received)</i>	11
3.8 <i>Shuttling between an external and internal call</i>	12
3.9 <i>3-way conference (2 internal correspondents and 1 external)</i>	12
3.10 <i>Managing 2 simultaneous external calls on the same handset</i>	13
3.11 <i>Activating / deactivating hands-free mode during a call</i>	13
3.12 <i>Locking the keyboard</i>	14
4. YOUR PHONE BOOK	14
4.1 <i>Creating a contact page</i>	14
4.2 <i>Using the phone book to make a call</i>	15
4.3 <i>Modifying a contact page</i>	15
4.4 <i>Deleting a contact page</i>	15
5. CUSTOMISING YOUR HANDSET	16
5.1 <i>Adjusting the keytones</i>	16
5.2 <i>Choosing a melody and adjusting the volume</i>	16
5.3 <i>Emergency number</i>	16
5.4 <i>Naming a handset</i>	17
5.5 <i>Selecting the display language</i>	17
5.6 <i>Changing the automatic pick-up settings</i>	17
5.7 <i>Changing the handset's pin number</i>	18
5.8 <i>Adjusting the automatic line seizure</i>	18
6. ASSOCIATING / DISASSOCIATING A HANDSET WITH THE BASE	18
6.1 <i>Associating an extra handset with the base</i>	18
6.2 <i>Removing (disassociating) a handset</i>	19
7. BASE SETTING	19
7.1 <i>Dialling method</i>	19
7.2 <i>Call barring</i>	20
7.3 <i>Setting the flashing time</i>	20
7.4 <i>Setting the pause time</i>	20
8. TECHNICAL SPECIFICATIONS	21
9. TROUBLESHOOTING	22
10. WARRANTY	23
11. ENVIRONMENT	24
12. SAFETY	24

Handset keys



Access the address book
Increase the sound volume of the handset's earpiece and the hands-free speaker



Access the menu
Decrease the sound volume of the handset's earpiece and the hands-free speaker



Cancel/return key
Mute function



Line seizure and hang up key
Press and hold: activate/deactivate hands-free mode
ON/OFF switch



Intercom and menu confirmation



Recall last three numbers dialled
Long press: insertion of pause



Set up three-way conference

Display and associated icons



Battery charge level: flashes when charging. The icon appears on the screen when the batteries have only 25% of charge left and when they are exhausted.



Enter the menu indicator



Reception antenna: indicates the quality of reception



Fixed when transmitting and receiving a call



Silence (ringing volume in silent mode)



Indicates calls present in the log



Put on hold



Hands-free activated



Line 1 indicator



Hot call activated (SOS)

1. INSTALLATION

1.1 PRECAUTIONS

The quality of communication depends on the location and environment of the base.

Your speedtouch™ D150 handsets must be kept away from sources of excessive heat (radiators, direct sunlight, etc.) and protected against vibrations and dust. Never allow your telephones to come into contact with water or other liquids or with aerosols.

To reduce the risk of interference and optimise reception, take particular care to keep it away from the immediate vicinity of windows, large metal objects, reinforced concrete, televisions, music centres, halogen lamps or heating devices, fluorescent lighting, burglar alarms, microwave ovens, computers, etc.


To clean your handsets, use a lightly moistened antistatic cloth.

Informative note: your speedtouch™ D150 telephone is a DECT™* standard certified item of equipment. It is meant for transmitting and receiving telephone calls and for connection to the public switched telephone network.


1.2 CONNECTING THE CHARGER

Connect the power supply cable to the charger.

Plug the mains adaptor into a 230 V / 50 Hz electric socket.

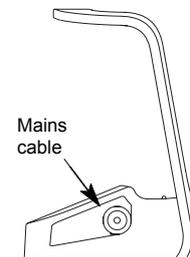

1.3 INSTALLING THE HANDSET

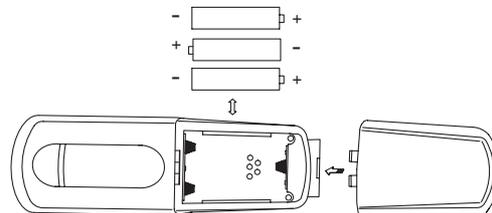

* DECT is a trade mark registered by the ETSI.

Fitting the batteries and charging up for the first time

Insert the batteries in the handset's compartment.

Before using for the first time, we recommend that you leave the handset to charge up on the charger for 24 hours in order to optimise battery performance and longevity.

Place the handset on the charger. It beeps. The  icon flashes during charging.

Obtain a line .

The tone confirms that the telephone is working. Check that the  symbol is not flashing.

! Only use rechargeable batteries with exactly the same specifications as those supplied with the product.

Using non-rechargeable or non-conforming batteries (see the "Safety" chapter) can damage the product and presents a health hazard.

Failure to comply with this recommendation will invalidate the manufacturer's warranty.

The batteries could split or leak if incorrectly inserted, opened or exposed to heat.

Never dispose of batteries in a fire: risk of explosion.

1.4 INSTALLING THE BASE


Fix the base about 2 metres above the floor and in a central point in the building in order to optimise the DECT™ radio range of all the terminals connected to it.

- Connect the power supply cable to the base and plug the mains adapter into a 230 V / 50 Hz electrical socket.

! The 9 V mains power supply unit must be connected to the base and is not suitable for the handset chargers.

- Connect the telephone cables to the base (line 1 and line 2) and to the corresponding telephone sockets.

- You can also connect a fax or answering machine to "Aux. 1".

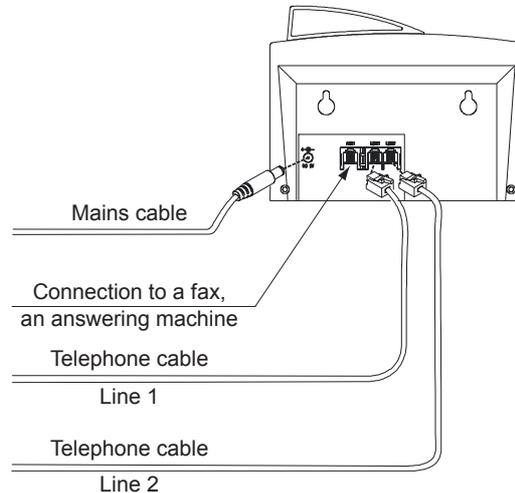

1.5 GETTING TO GRIPS WITH YOUR TELEPHONE

1.5.1 Navigating through the menus

It's easy to adjust and customise your DECT cordless telephone using the scrolling menu.

- To access the menu: press the  key.
- Press the  and  keys to find your way to the option you want to select. The options succeed each other in a loop.
- To validate an option, press .
- To return to the previous menu, press .
- To quit the menu and return to the idle screen, press and hold the  key.

Note: When an option is proposed, the current setting is displayed first.

1.5.2 Handset On/Off

In idle mode:

- To switch off the handset, press and hold  for at least 2 seconds.
- The display goes out. You can no longer call. The handset will not ring if you receive calls.
- To switch on the handset, press the  key (hold it down).

2. CONFIGURING THE BASE'S LINES

You can configure the base's lines according to your requirements.

2.1 LINE PRIORITY

You have the following options for managing the outgoing calls for each handset:

- Alternative (Line 1 or Line 2): default setting
- Line 1 First: line 1 takes priority and if this line is busy, line 2 will be used
- Line 2 First: line 2 takes priority and if this line is busy, line 1 will be used
- Line 1 Only (line 1): line 1 authorized and no access to line 2
- Line 2 Only (line 2): line 2 authorized and no access to line 1
- No Ext (internal calls only)

This line priority has no effects on the reception of incoming calls.

- Press  to enter the menu.
- Select "BS Setting" and press  to confirm.
- Enter the "MASTER PIN:" 1590 (default) and press  to confirm.
- Select "Select Line" and press  to confirm.
- Use the direction keys to choose the handset you want from the list and press  to confirm (HS 1 = handset 1).
- Choose the line priority from the 6 options given above and press  to confirm.

2.2 CHOOSING THE RINGING GROUP

Each handset may receive a call on line 1 and/or line 2.

For example, you may decide that handsets 1, 3 and 5 will be associated with line 1 and ring on line 1 and that handsets 2 and 4 will be associated with line 2 and ring on line 2.

- Press  to enter the menu.
- Select "BS Setting" and press  to confirm.
- Enter the "MASTER PIN:" 1590 (default) and press  to confirm.



- Select "Ring Group" and press  to confirm.
- Use the  and  keys to choose one of the lines and press  to confirm.
- Choose the handsets you want using the keyboard and press  to confirm.

The handsets which are not available for this line will be indicated by an "X".

2.3 RINGING PRIORITY

You can choose the handset that will ring first when an incoming call is received. You can also set the number of rings on the priority handsets before the others ring.

- Press  to enter the menu.
- Select "BS Setting" and press  to confirm.
- Enter the "MASTER PIN:" 1590 (default) and press  to confirm.
- Select "Ring Prior" and press  to confirm.
- Select "Line 1" or "Line 2" and press  to confirm.
- Use the  and  keys to choose the number of the handset that should ring first and press  to confirm.
- Now use the  and  keys to choose the number of rings on the priority handset before the other handsets ring and press  to confirm.
- To cancel the ringing priority for a handset, select "Off" with the  and  keys and press  to confirm.

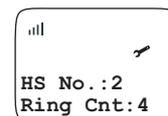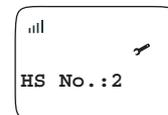

3. USING THE TELEPHONE

3.1 MAKING A CALL

Before you make a call, you can see on the screen if lines 1 and 2 are busy.

Direct dialling

- Press .
- Dial the number to be called.
- To hang up after finishing a call, press .

Pre-dialling

With the pre-dialling feature you can enter and modify a number before making the call.


- Dial a number of up to 25 digits.
- Press  to correct an input error.
- Press  to make the call and to hang up at the end of the call.

Note: You can insert a pause with a long press on .

3.2 MAKING AN INTERNAL CALL

If you have registered more than one handset, you can make internal calls.

- Press .
- Dial the number of the handset you want to call.
 - ▶ You will call your internal correspondent.

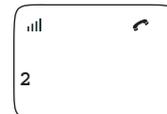

3.3 RECEIVING A CALL

To pick up the call:

- Press .
 - ▶ The icon  appears on the screen.
- Press  to increase the volume or  to decrease it (9 volume levels).
- To hang up at the end of the call, press .

3.4 TRANSFERRING A CALL

During a call, you can transfer it to another handset:

- Press  and dial the number of the handset to which you want to transfer the call.
- When your internal correspondent picks up the phone, press  to transfer the call.
- If your internal correspondent does not pick up the phone, press .

3.5 REDIALLING ONE OF THE LAST NUMBERS CALLED (BIS)

The last 3 numbers dialled on your DECT cordless telephone are recorded in the redial list.

To redial a number:

- Press .
- Scroll through the numbers using the  key.
- To dial the call, just press  when you reach the number you want.

3.6 MUTE FUNCTION (TURNING OFF THE MICROPHONE) / PUTTING ON HOLD

You can put a correspondent on hold so that he/she does not hear a private discussion.

- Press  briefly during the call.
- The icon  appears on the screen.
 - ▶ The handset's microphone is then disabled. The correspondent can then no longer hear you and you can talk internally in complete confidentiality.
- Press  again to reactivate the microphone.


3.7 CALLING FROM THE LOG OF CALLS (LIST OF THE LAST 10 CALLS RECEIVED)

- Press  to enter the menu.
- Select "Caller ID" and press  to confirm.
- Use the  and  keys to navigate through the list.
- When you get to the one you want, press  to make the call.

The last 10 incoming calls only appear in the log of calls if they were received via the analogue network and on condition that you have subscribed to the "Calling line identification presentation" service.

Deleting the list of calls from the log

- Press  to enter the menu.
- Select "HS Setting" and press  to confirm.
- Select "Erase CID" and press  to confirm.
 - ▶ The screen displays:
- Confirm with .
 - ▶ The log's list of calls is empty.
- To undelete it, press .

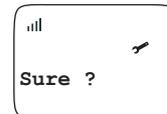

3.8 SHUTTLING BETWEEN AN EXTERNAL AND INTERNAL CALL

- Press  to put the external call on hold.
- Now dial the number of the internal handset you want to call.
- To pick up the external call again, press .

3.9 3-WAY CONFERENCE (2 INTERNAL CORRESPONDENTS AND 1 EXTERNAL CORRESPONDENT)

You can talk to an internal correspondent and an external correspondent at the same time.

When you are on-line with an external correspondent:

- Press .
- Dial the number of the internal handset you want. The external correspondent is put on hold.
- When the internal correspondent pick up the phone, press and hold .
 - ▶ The 3-way conference has been set up.
- If one of the internal correspondents hangs up, the internal correspondent who is still on-line must press  twice to resume the call with the external correspondent.

3.10 MANAGING 2 SIMULTANEOUS EXTERNAL CALLS ON THE SAME HANDSET

You can manage 2 external calls simultaneously on the same handset.

You are on-line with an external correspondent and you receive a second external call (you hear a beep in the earpiece). To take the second call:

- Put the first call on hold by pressing .
- Press .
- Press  again to take the second call when the handset rings.

You have two options:

- You can continue your conversation with the second caller and hang up at the end of your conversation by pressing . Then press  again when the handset rings to resume your conversation with the first caller.
- Alternatively, you can put the second caller on hold in order to resume your conversation with the first caller. Press  then .

When the handset rings, press  to obtain a line. When your conversation has ended, press  to hang up. The handset will ring; you can take the line by pressing  in order to speak to the second caller who you had put on hold.

3.11 ACTIVATING / DEACTIVATING HANDS-FREE MODE DURING A CALL

To talk on the phone while doing something else, or share a conversation with someone next to you:

- Press and hold .
 - ▶ The icon  appears on the display.

To adjust the hands-free volume:

- Press  or .

To deactivate hands-free mode:

- Press and hold .

3.12 LOCKING THE KEYBOARD

You can lock your handset's keyboard.

- Press  to enter the menu.
- Select "Key Lock" and press  to confirm.
 - ▶ The screen displays "Locked".
- To unlock, press 
 - ▶ The screen displays "Unlock ?".
- Confirm by pressing the  key.
 - ▶ Your keyboard is unlocked.

4. YOUR PHONE BOOK


Each handset contains an phone book capable of storing your 20 most useful contacts.

Each contact page in the address book consists of a name (max. 12 characters) and a number (max. 25 digits).

4.1 CREATING A CONTACT PAGE

With your DECT cordless telephone, you can key in letters as well as digits. Handy for entering names in the address book or for naming a handset!

- Enter the menu by pressing the .
- Select "Phone Book" and press  to confirm.
- Select "Add" and press  to confirm.
- Enter the name using the alphanumeric keyboard (maximum 12 characters).
- To select a letter, press the corresponding key as many times as required.

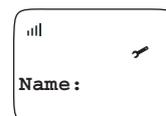

For example:


- for S, press  4 times.
- for E, press  twice.

To toggle from capitals to small letters, press .

To enter a space: . To make a correction: .

Confirm by pressing the  key.

- Enter the number and press  to confirm.

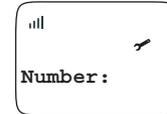

4.2 USING THE PHONE BOOK TO MAKE A CALL

- Enter the phone book by pressing .
- Use the  and  keys to scroll through the list of names.
- To quit the menu, press .
- Press  to make the call.

4.3 MODIFYING A CONTACT PAGE

- Enter the phone book by pressing .
- Select "Phone Book" and press .
- Select "Edit" and press .
- Select the page you want to modify and press .
- Use the  key to delete the name or correct it, then enter the new name and press .
- Use the  key to delete the number or correct it, then enter the new number and press .

4.4 DELETING A CONTACT PAGE

- Enter the menu by pressing .
- Select "Phone Book" and press .
- Select "Delete" and press .
- Select the page you want to delete and press  to confirm.
 - ▶ The screen displays "Sure ?".
- Press  to confirm.
 - ▶ The contact page is deleted.
- To delete all the pages, select "Erase all".

5. CUSTOMISING YOUR HANDSET

5.1 ADJUSTING THE KEYTONES

A sound is emitted every time you press a key on your DECT cordless telephone handset: it can be activated or deactivated.

- Press  to enter the menu.
- Select "HS Setting" and press  to confirm.
- Select "Set Keytone" and press  to confirm.
- To deactivate: select "Off" with the  and  keys and press  to confirm.
 - ▶ The keytones are deactivated.
- To reactivate: select "On" with the  and  keys and press  to confirm.

5.2 CHOOSING A MELODY AND ADJUSTING THE VOLUME

- Press  to enter the menu.
- Select "HS Setting" and press  to confirm.
- Select "Melody Ext" (sonnerie externe) or "Melody Int" (sonnerie interne) and press  to confirm.
- Use the  and  keys to select the melody you want (9 melodies) and press  to confirm.
- Use the  and  keys to select the volume you want (1 to 9) and press  to confirm.

5.3 EMERGENCY NUMBER

If you activate this function, the emergency number recorded will be dialled automatically, whatever the key pressed.

- Press  to enter the menu.
- Select "HS Setting" and press  to confirm.
- Select "Hot Call" and press  to confirm.
- Dial the emergency number and press  to confirm.
- To deactivate this function, press  twice quickly.

5.4 NAMING A HANDSET

You can change the name of your handset.

- Press  to enter the menu.
- Select "HS Setting" and press  to confirm.
- Select "User Name" and press  to confirm.
- Enter the name (max. 8 characters) and press  to confirm.

5.5 SELECTING THE DISPLAY LANGUAGE

Your DECT cordless telephone has menus in 3 languages. To change the language:

- Press  to enter the menu.
- Select "HS Setting" and press  to confirm.
- Select "Language" and press  to confirm.
- Select the language and press  to confirm.

5.6 CHANGING THE AUTOMATIC PICK-UP SETTINGS

This means that when you lift the handset off its charger to answer a call, you automatically pick up the line without having to press .

To activate this feature:

- Press  to enter the menu.
- Select "HS Setting" and press  to confirm.
- Select "Auto answer" and press  to confirm.
- Select "On" and press  to confirm.

To turn off this setting, follow the first three steps then select "Off" and press  to confirm.

5.7 CHANGING THE HANDSET'S PIN NUMBER

- Press  to enter the menu.
- Select "HS Setting" and press  to confirm.
- Select "Set PIN:" and press  to confirm.
- Enter the PIN code: 1590 (by default) and press  to confirm.
- Enter the new PIN code and press  to confirm.
- Confirm the new PIN code and press  to confirm.

5.8 ADJUSTING THE AUTOMATIC LINE SEIZURE

The automatic line seizure function allows you to take an incoming call, by pressing any of the keys on the telephone.

- Press  to enter the menu.
- Select "HS Setting" and press  to confirm.
- Select "Anykey talk" and press  to confirm.
- Select "On" or "Off" to activate or deactivate this setting.

6. ASSOCIATING / DISASSOCIATING A HANDSET WITH THE BASE

6.1 ASSOCIATING AN EXTRA HANDSET WITH THE BASE

You can associate up to 5 handsets with the base.

To register a handset that is not yet associated:

From a handset which has already been registered:

- Press  to enter the menu.
- Select "BS Setting" and press  to confirm.
- Enter "MASTER PIN:" 1590 (by default) and press  to confirm.
- Select "New HS" and press  to confirm.
- Enter the PIN code: 1590 (by default) and press  to confirm.
- Select a number from 1 to 9 or "Auto" and press  to confirm.

The numbers which have already been assigned are marked by "-".

Then, on the handset which has not yet been registered: you have about 2 minutes to register the handset.

- Press  to enter the menu.
- Select "HS register" and press  to confirm.
- Select the base with which the handset is to be associated and press  to confirm.
 - ▶ A message will appear on the screen within 15 seconds and press .
- Enter the PIN code: 1590 (by default) and press  to confirm.
 - ▶ The number of the handset will be displayed within 15 seconds.

If this fails, repeat the complete operation.

6.2 REMOVING (DISASSOCIATING) A HANDSET

This operation can only be performed using the handset you want to remove (disassociate).

- Press  to enter the menu.
- Select "BS Setting" and press  to confirm.
- Enter "MASTER PIN:" 1590 (by default) and press  to confirm.
- Select "Remove HS" and press  to confirm.
- Enter the number of the handset you are removing (disassociating) and press  to confirm.

7. BASE SETTING

7.1 DIALLING METHOD

You can choose tone or pulse dialling. The default is tone dialling.

- Press  to enter the menu.
- Select "BS Setting" and press  to confirm.
- Enter "MASTER PIN:" 1590 (by default) and press  to confirm.
- Select "Dial Mode" and press  to confirm.
- Select "DTMF Dial" or "PULSE Dial" and press  to confirm.


7.2 CALL BARRING

You can program up to 5 call barrings. These call barrings may cover all the terminals or just some of them. It is possible to bar the first 5 digits.


- Press  to enter the menu.
- Select "BS Setting" and press  to confirm.
- Enter "MASTER PIN:" 1590 (by default) and press  to confirm.
- Select "CallBarring" and press  to confirm.

For example, to bar access to the international network:

- Enter 00 and press  to confirm.
- Then choose the handset or handsets that will be covered by the barring and press  to confirm.

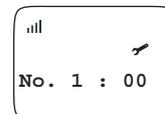

The call barring is activated on handsets 1, 2 and 5, on the screen given as an example.

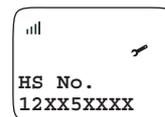

7.3 SETTING THE FLASHING TIME

- Press  to enter the menu.
- Select "BS Setting" and press  to confirm.
- Enter "MASTER PIN:" 1590 (by default) and press  to confirm.
- Select "Flash Time" and press  to confirm.
- Use the  and  keys to choose the flashing time you want and press  to confirm.

7.4 SETTING THE PAUSE TIME

- Press  to enter the menu.
- Select "BS Setting" and press  to confirm.
- Enter "MASTER PIN:" 1590 (by default) and press  to confirm.
- Select "Pause Time" and press  to confirm.

Use the  and  keys to choose the pause time you want and press  to confirm.

8. TECHNICAL SPECIFICATIONS

Standard	DECT
Radio frequency	From 1880 MHz to 1900 MHz
Channels	10
Bandwidth	1.728 MHz
Modulation	GFSK
Range in open air	300 m*
Range inside	50 m*
Base mains adapter	Input AC 230 V / 50 Hz / 59 mA Output DC 9 V / 600 mA
Charger mains adapter	Input AC 230 V / 50 Hz / 59 mA Output DC 7.5 V / 210 mA
Handset batteries	Ni-MH 1.2 V AAA x 3
Battery life	Standby: 150 hours Talktime: 15 hours
Operating temperature	+ 5 °C to + 40 °C

* Data supplied for informative purposes

9. TROUBLESHOOTING ...

Generally speaking, if you have a problem, take the batteries out of all the handsets in your installation, disconnect the base's electricity power supply. Wait for 1 minute, reconnect the base and re-insert the batteries.

Problems	Causes	Remedies
The display is off.	The handset is off (deactivated).	Press and hold the  key to reactivate it.
	The batteries are discharged.	Place the handset on its charger to recharge the batteries and check that the charger is correctly connected to the mains.
You hear no tone.	The handset is out of base range.	Move closer to the base.
	The handset is not registered with the base.	Refer to the "Associating an extra handset with the base" paragraph.
	The batteries are discharged.	Place the handset on its base to recharge the batteries.
Reception quality deteriorates during the call.	You are out of range of the base or in a disturbed environment.	Move closer to the base.
Your correspondent cannot hear you.	The mike is deactivated, the Mute function is activated.	Refer to the "Mute function" paragraph.
The batteries are still discharged after several hours of charging.	The charger is not receiving power.	Check the electrical power supply connection.
	The handset batteries are faulty.	Contact your reseller to obtain new batteries.

However, if the problem persists, you can call the hotline on the following number: **1300 302 699**, from Monday to Friday, from 9 a.m. to 5 p.m. (call billed at current rates).

The store where you bought your speedtouch™ D150 is also able to inform you and provide after-sales service.

10. WARRANTY

speedtouch™ D150 complies with requirements of the Australian Communications Authority as certified by the A-Tick.

You are covered by a legal warranty for this product and for all information concerning this warranty, please contact your reseller.

Notwithstanding other applicable statutory warranties, the reseller warrants that the product complies with the applicable technical specifications and is free from any defect in workmanship and materials for a period of twelve (12) months from the date of purchase shown on the invoice or receipt. You should therefore keep your invoice or till receipt specifying the date of purchase of the product and the name of the reseller. Nonetheless, if the statutory warranty in force in your country exceeds twelve (12) months, the statutory warranty in force in your country will apply in lieu of the manufacturer's warranty.

The manufacturer undertakes to repair or replace at its option the defective product or part thereof with a comparable product or part or at least equivalent as to the performances and functionality. The replacement product or parts, which may be new or reconditioned, are warranted for a period expiring either simultaneously with the initial warranty of the concerned product or part thereof or three (3) months after delivery of such repaired product or part, whichever ever is later. Moreover, upon proof evidence, the initial warranty period may be extended for the period you have not been able to use the product due to the repair. All product or parts that are replaced become the property of the manufacturer.

This warranty does not cover damage caused by:

- Non-compliance with the instructions for use, installation or maintenance of the product, in particular regarding the power supply and climatic conditions.
- Improper maintenance of energy sources and of the general electrical installation.
- Acts of vandalism, lightning, fire, humidity, bad weather.
- Use of the product in combination with, or integration of the product into, equipment not supplied by the reseller, unless such combination or integration has been expressly approved in writing by the reseller.
- Use of the product for a purpose other than that for which it is intended.
- Faults and deterioration caused by normal wear and tear, a shock or a fall.
- Product malfunctioning due to external causes (e.g., radio-electric interference produced by other equipment, variation in voltage of the mains supply and/or telephone line).
- Changes made to the product, including mandatory changes.
- Product from or on which the brand or serial numbers have been removed or altered.
- Defects as a result of other goods and services being connected to the product which disturb or affect the predicted level of service.

UNLESS OTHERWISE STIPULATED BY LAW, ANY AND ALL WARRANTY PROVISION OTHER THAN THOSE MENTIONED HEREIN ARE EXPRESSLY EXCLUDED.

11. ENVIRONMENT



Used handset batteries must be disposed of in compliance with current environmental protection regulations. You should return your batteries to your reseller or dispose of them in an approved recycling centre.

12. SAFETY

In the event of danger, the mains adapter acts as 230V power isolating device. It should therefore, as a precaution, be installed close to the appliance and be easily accessible.

If the mains adapter fails, it must be replaced by an identical model.

If they are not connected to the mains power or if there is a mains power failure, installations with cordless handsets will no longer work. You will then be unable to make or receive calls in the event of an emergency. This is why we recommend that you also have a conventional telephone as a backup.

Battery type: rechargeable batteries Ni-MH AAA 1.2V / 650 mAh.

Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, mouth and nose. In the event of contact, rinse the affected part for twenty minutes in running water and seek medical assistance immediately.

Clean the telephone with absorbent paper or a dry cloth and contact your reseller to change your batteries.

! Do not use your telephone to notify a gas leak when you are in the vicinity of the leak.

We recommend that you avoid using this device during electrical storms.



THOMSON

Thomson Telecom Australia
1st Floor
Building B
1 Moorebank Avenue
Moorebank NSW 2170
Australia

© Thomson Telecom - Reproduction interdite / All rights reserved / Reproducción prohibida
THOMSON et "Speedtouch" sont des marques déposées / THOMSON and "Speedtouch" are registered trade marks / THOMSON y "speedtouch" son marcas registradas
Le constructeur se réserve le droit de modifier les caractéristiques de ses produits en vue d'y apporter des améliorations techniques ou de respecter de nouvelles réglementations. / The manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations. / El fabricante se reserva el derecho de modificar sin previo aviso las características de sus productos para introducir mejoras técnicas o cumplir con nuevas regulaciones oficiales.

Ref: XX-XXX-XXX-XX - 29/11/04