



MOTOROLA

User Guide


**DIGITAL CORDLESS
TELEPHONE**

**WITH INTEGRATED DIGITAL
ANSWERING DEVICE**



Model ME4067 Series
Digital 1.8 GHz

Congratulations on your purchase of a Motorola product!
Your Motorola Telephone at a glance:

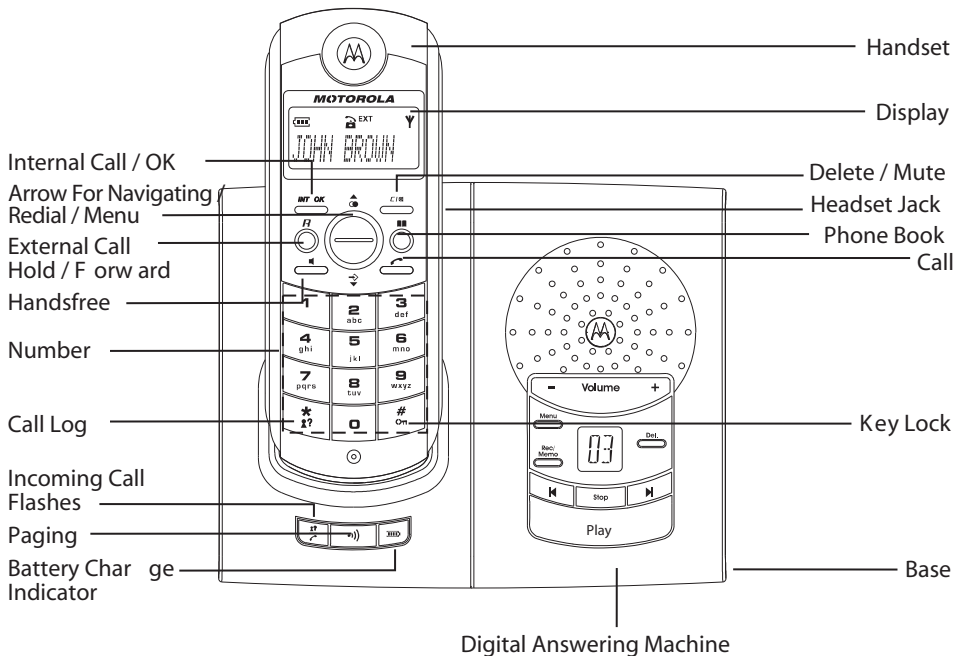

Welcome

1

For product-related questions, please refer to the Warranty section.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Product, you will need to provide a copy of your dated sales receipt to confirm warranty status.

CE Complies with the essential protective requirements and objectives of the EC's R&TTE Directive 1999/5/EC; EC Low Voltage Directive 72/23/EEC; EC EMC Directive 89/336/EEC

Copyright © 2004 Motorola, Inc.

All rights reserved. No part of this publication may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation or adaptation) without written permission from Motorola, Inc.

Motorola reserves the right to revise this publication and to make changes in content from time to time without obligation on the part of Motorola to provide notification of such revision or change. Motorola provides this guide without warranty of any kind, either implied or expressed, including but not limited to, the implied warranties of merchant ability and fitness for a particular purpose. Motorola may make improvements or changes in the product(s) described in this manual at any time.

MOTOROLA, the Stylized M Logo, and PhoneWrap are registered in the U.S. Patent and Trademark Office. All other product or service names are the property of their respective owners.

For details, please contact :
0870 197 4131 UK

Welcome

2

Contents

Welcome	1	Making External Calls	18
Contents	3	Direct dialing	18
Important Safety Instructions	5	On-hook dialing	18
Technical Amendments	7	Out of Range Warning	18
Installation	8	Hands-free Mode	18
Package Contents	8	Making a handsfree call.....	19
Setting up the Base Station and Charger Unit	8	In standby mode	19
Connecting the Base Station and Mains Adaptor...	9	Switching During a Call	19
Connecting the Charger Unit	9	Taking Calls	19
Inserting the Batteries / Attaching the Belt Clip...	10	Handset is in the Base Station	19
Attaching the Headset	11	Handset is not in the Base Station	19
Technical Data	11	Prefix Dialing	20
Features	12	Dialing from the Phone Book	20
Control Buttons	13	Call Log Operations	21
Control Buttons	13	Viewing the call log	21
Control Buttons (on Charger) / Display Icons.....	14	Call a number in the call log	21
Menu Structure	15	Delete a call log entry.....	22
Navigating the Menu	16	Delete all call log entries	22
Using the Telephone	17	Save a call log number to the phonebook..	22
Switching the Handset On / Off /		Muting the Microphone	23
Display Illumination	17	Teleconference and Calls transfer	23
Selecting the Language	17	Holding and Forwarding calls	24
Making Internal Calls	17	Entering a Dialing Pause (P)	24
		Phone Book	25
		Phone Book	25
		Store Entries.....	25
		View Entries.....	26

Contents

Searching for a name in the phone book	26	How to Record Your Announcement	39
Edit Entries	27	Recording Announcement A1	
Delete Entries	27	(Announce Only set to OFF)	39
Handset Settings	28	Recording Announcement A2	
Changing the Ringer Volume	28	(Announce Only set to ON)	40
Changing the Ringer Melody(external / internal).....	28	Remote Operation	40
Entering / Changing Handset Name	29	Set "Announce Only"	
Saving a Prefix	29	On / Off (preset to OFF)	41
Switching the Key Tone On / Off	30	Turn Audible Message Alert On / Off	41
Automatic Call Answering	30	Turn Base Ringer	41
Call Timer	31	On / Off (preset to ON)	41
Restore Default Settings	31	Set Number of Rings to Answer	41
Default Settings	32	Voice Prompt Language selection.....	41
Registering Additional Handsets	32	Recording a Memo	42
Base Station Settings	33	Listening to Your Messages	42
Barring Calls	33	Message Playback	43
Emergency Number	33	Deleting Messages	44
Changing the Flash Time	34	Important Information	44
Select Dial Mode	35	Quick Reference	45
Changing the PIN	35	Using the Phone	45
Default Settings	36	Phone Book	47
Deregister Handset	36	Handset Settings	48
Answering Machine Operation	37	Base Settings.....	49
General	37	Answering Machine	50
Turn Answering Machine ON / OFF (preset to ON)	37	Warranty	52
Clock Setting	37		
Outgoing Announcement	38		

Important Safety Instructions

Follow these safety precautions when using your cordless phone to reduce the risk of fire, electric shock and injury to persons or property.

Reduce risk of fire and shock by:

1. Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
2. Do not use while wet or while standing in water.
3. Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
4. Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
5. Never insert objects of any kind into the product slits as that may result in fire or shock.
6. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
7. Do not disassemble this product. If service or repair work is required, contact the Warranty Service phone number found in the back of this user's guide.
8. Do not overload wall outlets and extension cords.
9. Avoid using during an electrical storm. Use a surge protector to protect the equipment.
10. Do not use this cordless phone to report a gas leak, especially if you are in the vicinity of the gas line.

Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled into the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

Installation Guidelines

1. Read and understand all instructions and save them for future reference.
2. Follow all warnings and instructions marked on the product.
3. Do not install this product near a bath tub, sink or shower.
4. Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
5. Do not place this product on an unstable cart, stand or table. This product may fall, causing serious damage to the product.
6. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
7. Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.

8. Use only the power supply that came with this unit. Using other power supplies may damage the unit.
9. Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.
10. To avoid interference to nearby appliances, do not place the base of the cordless phone on or near a TV, microwave oven, or VCR.
11. It is impossible to make emergency calls when the keypad lock is enabled.

Technical Amendments

These Operating Instructions are issued for information purposes. Their content is not the subject of a contract.

All indicated data are merely nominal values. The described equipment and options may differ depending on requirements which are specific to each country.

This device is dedicated to be used in the analog public switched telecommunication network (PSTN).

Package Contents	ME4067-1	ME4067-2	ME4067-3	ME4067-4
	Single Pack	Twin Pack	Triple Pack	Quad Pack
Base Station	1	1	1	1
Mobile Handset	1	2	3	4
Mains Adaptor	1	2	3	4
Telephone Line Cord	1	1	1	1
Rechargeable Batteries type micro AAA	2	4	6	8
Charger Unit	0	1	2	3
User's Guide	1	1	1	1

Please check the contents of the package carefully. If something is missing or has become damaged in transit, you should NOT use the telephone. In such a case you should return to the dealer with your sales receipt or contact the Motorola's distributor directly. (For details, please refer to the Warranty section.)

Note: Retain the packaging of your appliance to prevent it from being damaged should you ever need to return it.

Setting up the Base Station and Charger Unit

Place the base station and charger unit in an easily accessible location. Make sure that the location is stable and flat and that the surface is non-slip. When choosing the location, also make sure that all cables can be routed so as to prevent people tripping over them. Furthermore, avoid placing the base station and charger unit in the immediate vicinity of other electronic appliances such as microwaves, PCs or Hi-Fi's, for example.




Do not expose the base station and charger unit to direct sunlight. Do not allow the base station and charger unit to become wet. They should not be set up in rooms which are subject to condensation or corrosive steam or a high concentration of dust (e.g. cellars, garages or conservatories). The room temperature must be between 0°C and 35°C.

Connecting the Base Station and Mains Adaptor

1. Plug the telephone line cord into the base station socket.
2. Route the cord underneath the base station towards the back.
3. Plug the other end into the telephone wall socket.
4. Connect the mains power supply.




The base station does not have a power switch. Only use the mains adaptor supplied with your phone.

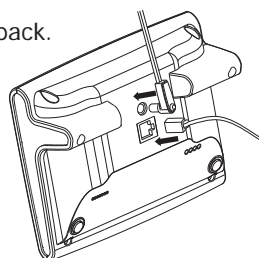

Connecting the Charger Unit

Insert the plug of the mains adaptor in the socket on the underneath of the charger unit. Plug the mains adaptor into the mains socket. The charger unit is now ready to use.

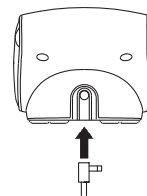

Installation


9

Inserting the Batteries

Open the battery compartment by pushing downwards on the battery compartment cover. Insert the 2 x AAA batteries supplied, observing the correct polarity.



The mobile handset will not operate if the batteries are inserted incorrectly. There is also a possibility that the handset may be damaged.

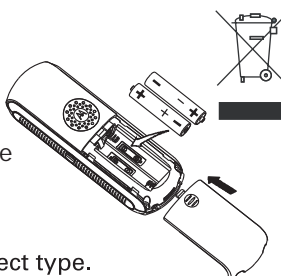

CAUTION : Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Replace the cover on the battery compartment and push it upwards until it clicks into place. Place the handset on the base station. You will hear a beep and the charging light comes on.

Note: When used for the first time, allow the batteries to charge for at least 14 hours without interruption. If possible, only take the handset out of the base station when the charging process has ended. This will help to guarantee optimum operation.

Note: To ensure the battery charges properly, clean the charging contacts on the handset and charger with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.


Attaching the Belt Clip

Push the belt clip into the opening on the back of the handset. The clip will bend slightly until it clicks into place.

Installation

10

Attaching the Headset

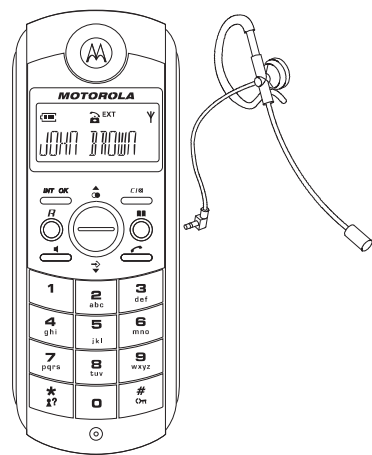

You can connect a headset to the mobile handset. The 2.5mm jack plug must be inserted fully into the jack socket on the right-hand side of the handset.

The microphone and receiver loudspeaker of the handset are automatically switched off.

Technical Data

Receiver impedance	32Ω
Microphone impedance	1.4Ω
Receiver output power	60mW
Plug	2.5mm jack plug
Microphone sensitivity	-54dB

Note: The headset is not included as standard.

Features

Congratulations on your purchase of this high quality, cordless telephone and answering machine. The set offers the following features:


- Comfortable cordless phone with digital sound quality (DECT)
- Caller ID* function with up to 20 name / number call log.
- Dot matrix alphanumeric LCD display
- Blue backlit display
- Phone book for 30 entries with names and numbers
- Extended redialing for 5 call numbers
- Microphone mute
- Battery and range warning tone
- Keypad lock
- 25 ringtone melodies
- Operation guidance in 10 languages
- Teleconference +
- Call forwarding
- Internal, free communication between handsets
- Prefix dialing
- Automatic call answering on/off
- Key input tone on/off
- Operates with up to 4 handsets
- Paging function from base station to handset
- Programmable number barring
- Up to 100 hours standby
- Up to 10 hours continuous call time
- Digital Answering Machine with 40 minutes recording time, 59 messages capacity
- Handsfree operation on handset

DECT : Digitally Enhanced Cordless Telephone = Standard for cordless telephones.


GAP compatible - use up to 4 handsets with ME4067 base
Use ME4067 handset on up to 4 bases

*user must subscribe to the network's caller id service.
+ more than one handset required.

Control Buttons

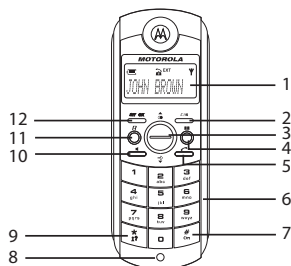


1. Display
2. Delete/Mute key
Press to delete digits or letters in the display.
During a call press to stop your caller from hearing you.
3. Up / Down / Menu / Redial / Volume
4. Phone book - Press to open the phone book.
5. Talk/End call key - Press to receive, make and end calls.
6. Keypad with alphanumeric keys
7. #/ Keypad lock key - Press to enter a hash
Press and hold to lock/unlock the keypad.
8. Microphone
9. Call log - Press to view the call log memory.
10. Handsfree (speakerphone) key
Press to hear your calls on the handset loudspeaker.
11. Hold/Transfer key - Put external callers on hold,
transfer an incoming caller to another extension.
12. INT/OK key - Press to make internal calls.
Confirm menu options.
13. Volume down (-) - Press to decrease loudspeaker volume.
14. Volume up (+) - Increase loudspeaker volume.
15. Delete key - Use to delete messages/memos.
16. Mailbox indicators
Flash when new messages are stored. The display shows
the number of messages.

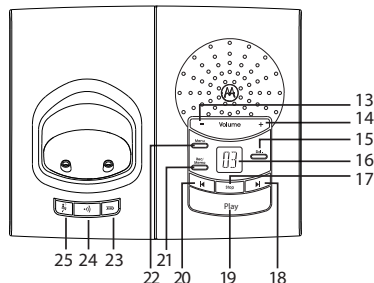

17. Stop - Stops message playback. Ends recording.
Use to store messages and memos into the mailbox.
18. Next key - During message playback,
press to skip forward to the next message.
19. Play
20. Replay/previous key
During message playback, press to replay the current message
or press twice to play the previous message.
21. Record/Memo key
Use to record your outgoing message or memo.
22. Menu key - Press to open the answering machine menu.
23. Charging indicator
Illuminates when the handset is charging in the base station.
24. Page (Find Handset) key
Press to locate a missing handset/page all handsets registered
to the base.
25. Call indicator
Flashes when you have incoming calls.
Flashes when you have new missed calls.

Control Buttons

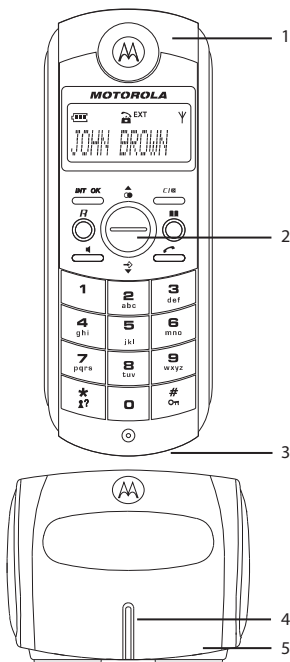

1. Handset
2. Menu symbol
3. Charge contacts
4. Charging indicator
5. Charging station

Display Icons

- Indicates the battery charge status.
Flashes when battery is empty.
- Indicates that the outside line is engaged.
- EXT** Indicates an incoming, external call.
- INT** Indicates an incoming, internal call.
- Flashes if you have unanswered calls.
(Details available in the calls list).
- Indicates that the keypad lock is on.
- Microphone is muted.
- Ringer is switched off.
- Indicates the handset is registered to the
base. Flashes if there is no radio
communication contact.
- Scroll (UP) or (DOWN) to see further details
of the entry.

Display Backlight

The backlight on your handset display comes on
when any key is pressed. The light remains on for
10 seconds after the last button press.

1-CALL LOG

2-PHONE BOOK

- 1-NEW ENTRY
- 2-LIST ENTRY
- 3-EDIT ENTRY
- 4-DELETE
- 5-DELETE ALL

3-HANDSET

- 1-RINGER
- 2-HS NAME
- 3-PREFIX MEM
- 4-KEY TONE
- 5-AUTO ANS
- 6-CALL TIMER
- 7-DEFAULT
- 8-REGISTER

4-BASE




- 1-BARRING
- 2-EMERGENCY
- 3-FLASH TIME
- 4-DIAL MODE
- 5-CHANGE PIN
- 6-DEFAULT
- 7-DEREGISTER

5-LANGUAGE

- ENGLISH
- DEUTSCH
- ITALIANO
- FRANCAIS
- ESPANOL
- NEMET
- NEDERLANDS
- POLSKI
- SVENSKA
- TURKCE

Navigating the Menu

In standby mode:

1. Press the  key to open the main menu and display the first menu option.
2. Press  or  key to scroll through and display all the available options in the main menu.
3. Press **INT OK** to select the menu option you want. You can now scroll through the sub-menu options and press **INT OK** to select.
4. To return to the previous menu level, press **C/⌫**.

Alternatively, after pressing menu, select the function you want using the digit keys.
select the required menu item directly using the digit keys.

For example: Enter 44 to access Menu 4-BASE > 4-DIAL MODE.

Note : For the answering machine operation, please refer to pg.37.

Switching the Handset On/Off / Display Illumination




When the handset is placed on the base station or charging unit, it switches on automatically and starts to charge up. Allow the batteries to be charged for 14 hours without interruption when the first time they are charged. The telephone does not have an On/Off switch.

Note: The display illumination switches on automatically when the handset is removed from the charging station or by pressing any key. It also lights up when calls are received. The display switches off after 10 seconds if no key is pressed.

Selecting the Language

Ten different languages are available for selection for each handset.


Proceed as follows to select a language:

1. Press the  key repeatedly until menu item LANGUAGE appears.
2. Press the **INT OK** key to confirm the item.
3. Press  or  as often as necessary to select the required language.
4. Press the **INT OK** key to confirm the selection.

Note: The following languages are available: English, German, Italian, France, Spanish, Hungarian, Dutch, Polish, Swedish, Turkish.

Making Internal Calls

With more than one handset registered to the same base as you, you can make internal calls between handsets.



1. Press the **INT OK** key.
2. Press the number of the required handset (1..4). The other handset will ring.
3. Press the  key to end the call.

 
Note: If an external call is received during an internal call, you will hear short beeps to indicate you have a call waiting. (call waiting).

Making External Calls



There are two ways to dial a number, namely direct dialing and on-hook dialing.



Direct dialing

1. Press the  key and wait for the dialing tone.
2. Dial the telephone number and complete the call.
3. Press the  key to end the call.



On-hook dialing

  1. Dial the telephone number.
2. Delete any incorrect entries by pressing the **C/⊗** key.
3. Press the  key. The number entered is dialed and a connection established.
4. Press the  key to end the call.



Out of Range Warning




If the handset moves out of communication range with the base station,  will flash.

Using Handsfree



In handsfree mode, all communication is via the handset speakerphone and microphone, leaving your 'hands free'. You can make a call handsfree or switch to handsfree during a call.

Make a handsfree call

In standby mode

1. Dial the telephone number and press the  key. The handset speaker comes on.
Or
2. Press the  key and wait until the handset speaker comes on then dial the telephone number as required.
3. Press the  key to end the call.



Switching during a Call

1. Press the  key to switch hand-free mode on or off.
2. Press the  key to end the call.




Taking Calls

When an external call is received, all the handsets registered and the base station ring.

Handset is in the base station


1. Lift the handset from the base station; a connection is automatically established (when the AUTO ANS function is active). Otherwise, press the  key.
2. Carry out the conversation.
3. Press the  key to end the call.

Handset is not in the base station

1. Press the  key. Or the  key to answer the call.
2. Press the  key to end the call.





Prefix Dialling

When prefix dialling number has been entered, (see Handset Settings page 29) the prefix number that you set will be dialled out first whenever you make an external call. The prefix can be a number up to 5 digits. You can use the prefix memory to store an area code that you frequently use, for example 0207 or 08457, to save you dialling it each time you make a call.

1. Press the **0** key for two seconds.
2. Supplement the call number and press the  key to establish a connection.

Dialling from the Phone Book

Note. To store a number in the Phonebook, see 'Store entries' page 25.

1. Press the  key; the first entry in the phone book appears.
2. Press the  or  key to select the required subscriber from the phone book.
Alternatively, enter the first letter of the name required.
3. Press the  key. The number is dialed. Carry out the conversation.

Call Log Operations

You can view, call back, delete or save numbers shown in the Calls Log. If you have unanswered calls/calls that have been received in your absence, they are stored in the Calls Log. When using the calls log the **1?** will be displayed.

Viewing the call log

Note: The **1?** only disappears after all the entries have been viewed.

From standby mode:

1. Press **↵**. The display shows CALL LOG. Press **INT OK** to see the first entry in the call log.
2. Press **▲** or **▼** to scroll through the list.

Alternatively, press and hold the ***** key to open the call log then scroll **▲** or **▼**.

Call a number in the Calls log

1. Press **↵**. The display shows CALL LOG. Press **INT OK** to see the first entry in the call log.
2. Press **▲** or **▼** to scroll through the list to the number you want.
3. Press **☎** to dial the number displayed.

Delete a call log entry

1. Press **↵**. The display shows CALL LOG. Press **INT OK** to see the first entry in the call log.
2. Press **▲** or **▼** to scroll through the list to the number you want.
3. Press and hold the **C/✖** key for two seconds. The display shows ERASE? Press **INT OK** to confirm.

Delete all call log entries


1. Press **↵**. The display shows CALL LOG. Press **INT OK** to see the first entry in the call log.
2. Press and hold the **C/✖** key for two seconds. The display shows ERASE? Press **▲** or **▼** to display ERASE ALL? then press **INT OK** to confirm.


Save a call log number to the phone book.

 
Note: You can only save numbers that are not already stored in the phone book.

1. Press **↵**. The display shows CALL LOG. Press **INT OK** to see the first entry in the call log.
2. Press **▲** or **▼** to scroll through the list to the number you want.
3. Press **■** then press **INT OK**.
4. Enter a name to go with the number.
5. Press **INT OK**. The ring tone is played for that number. Press **▲** or **▼** to select the ring tone you want and press **INT OK**.

Muting the Microphone

During a call you can mute the microphone so your caller cannot hear you while you speak privately to someone else in the room. The  icon is displayed when the microphone is muted.



1. Press the  key to switch the microphone on or off during a call.



Teleconference and Call Transfer


If you are already on an external call, you can include another internal handset in the conversation and hold a three-way conference call. Or you can simply transfer the caller to the other handset.



1. Press the **INT OK** key and enter the number of the corresponding handset (e.g. 2) which should be included in the call.
2. The external caller is kept on hold. As soon as handset 2 takes the call, press  key to transfer the call to handset 2.
Or
3. The external caller is kept on hold. As soon as handset 2 takes the call, press and hold **#** key to begin the conference call.
4. By pressing the  key, any of the handsets can be disconnected from the teleconference and the other handset continues with the external call.

Holding and Forwarding Calls


If the telephone is connected to a switchboard network, it is possible to put calls on hold and call other extensions or to forward calls.

1. Press the **R** key to put the call on hold.
2. Dial the number of the extension (e.g. 23).
3. Press the **R** key once more to take the call back again or the  key to forward the call.



Note: The above information can vary according to the PBX network used. Therefore, refer to the relevant information in the PBX/switchboard user guide.


Entering a Dialling Pause (P)

If your Motorola ME4067 is connected to a switchboard/PBX it may be necessary to enter a dialling pause in order to give the switchboard time to get an outside line before dialling the number. To do this, press the  key after entering the relevant digit, e.g. 0, for an outside line (0P...). A 'P' appears in the display indicating a pause. The pause can also be entered when programming numbers in the phone book.



Phone Book

Your MOTOROLA phone can store up to 30 entries in the phone book with name and call number.

Store Entries






1. Press the  key until the PHONE BOOK menu appears.
2. Press the **INT OK** key. The display shows NEW ENTRY.
3. Press the **INT OK** key.
4. Enter the number (max. 25 digits).
5. Press the **INT OK** key.
6. Enter the name (max.10 characters).

Note: To enter the characters, press the relevant key the corresponding number of times, 1, 2, 3 or 4 times, according to the position on the key. For example, to enter an L, press the 5 key three times or to enter a B press the 2 key twice. Delete incorrect entries by pressing the **C/** key.


7. Press the **INT OK** key.
8. Select the ringing tone with the  or  key.
9. Press the **INT OK** key.

Note: If certain phone book entries should appear at the start of a list, e.g. 'FIRE', enter a space before the name 'FIRE'. The space is entered by pressing the **1** key.

View Entries



1. Press the  key repeatedly until PHONE BOOK appears.
2. Press the **INT OK** key.
3. Press  or  key to select LIST ENTRY.
4. Press the **INT OK** key.
5. Press  or  key to select the required entry.

Note: if there is no entry in the phone book, "MEM EMPTY" will display.






6. Press **INT OK** key to view the number.
Or
7. Press  key to dial the number.

Search for a name in the phone book



You can search for a name alphabetically.

1. Press the **■** key then press the alphanumeric key with the first letter of the stored name. For example, to display names beginning with N press 6 twice. The first stored name beginning with N is displayed.
2. Press  or  to scroll through all stored names beginning.




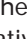

Edit Entries

1. Press the  key repeatedly until PHONE BOOK appears.
2. Press the **INT OK** key.
3. Press  or  key to select EDIT ENTRY.
4. Press the **INT OK** key.
5. Press  or  key to select the required entry.

Note: if there is no entry in the phone book, "MEM EMPTY" will display.






6. Press the **INT OK** key.
7. Enter the number.
8. Press **INT OK** key.
9. Enter the name.
10. Press **INT OK** key.
11. Press  or  key to select the normal ring or VIP ring.
12. Press **INT OK** key.

Delete Entries




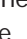

1. Press the  key as often as necessary until the PHONE BOOK menu appears.
2. Press the  or  key to select the DELETE or DELETE ALL submenu.
3. Press the **INT OK** key. Press the  or  key to select the phone book entry.
Alternatively, enter the first letter of the name required.
4. Press the **INT OK** key to confirm the setting.

Note: The delete process can be stopped at any time prior to confirmation of it by pressing the **CL/** key several times.

Changing the ringer volume

1. press  key repeatedly until HANDSET appears.
2. press **INT OK** twice.
3. press  or  key to select VOLUME.
4. press **INT OK** key.
5. press  or  key to select the ringer volume (0-5 level, level 0 means ringer off).
6. press **INT OK** key to confirm the setting.




Changing the Ringer Melody (external/internal)

1. Press the  key as often as necessary until the HANDSET menu appears.
2. Press the **INT OK** key twice.
3. Use the  or  key to select the required submenu (EXT RINGER or INT RINGER).
4. Press the **INT OK** key.
5. Use the  or  key to select the required melody.
6. Press the **INT OK** key to confirm the setting.

Note: For polyphonic ringer melody, please select melody (11-25)

Entering/Changing Handset Name

It is possible to assign a name to each handset. This name is then displayed when the phone is in Standby mode.




1. Press the  key as often as necessary until the HANDSET menu appears.
2. Press the **INT OK** key.
3. Press the  or  key to select the HS NAME submenu.
4. Press the **INT OK** key.
5. Enter/Change the name of the handset (e.g. MOBIL 1).

Note: To enter the characters, press the relevant key the corresponding number of times, 1, 2, 3 or 4 times, according to the position on the key. Press the **5** key three times for an L, for example.






6. Press the **INT / OK** key to confirm the input.

Saving a Prefix



It is possible to save prefix numbers in the handset. This number is then recalled after pressing the 0 key for two seconds.






1. Press the  key as often as necessary until the HANDSET menu appears.
2. Press the **INT OK** key.
3. Press the  or  key to select the PREFIX MEM submenu.
4. Press the **INT OK** key.
5. Enter the prefix number (e.g. access code of the subscriber you call most frequently).
6. Press the **INT OK** key to confirm the input.

Switching the Key Tone On/Off

1. Press the  key as often as necessary until the HANDSET menu appears.
2. Press the **INT OK** key.
3. Press the  or  key to select the KEY TONE submenu.
4. Press the **INT OK** key.
5. Press the  or  key to select the setting.
6. Press the **INT OK** key to confirm the setting.






Automatic Call Answering

The automatic call answering function (auto answer on) enables an incoming call to be taken immediately when the handset is lifted from the base station (or charger unit) without pressing the  or  button.

1. Press the  key as often as necessary until the HANDSET menu appears.
2. Press the **INT OK** key.
3. Press the  or  key to select the AUTO ANS submenu.
4. Press the **INT OK** key.
5. Use the  or  key to switch automatic call answering on or off.
6. Press the **INT OK** key to confirm the setting.




Call Timer

The duration of each call is displayed. You can switch this function on and off.

1. Press the  key as often as necessary until the HANDSET menu appears.
2. Press the **INT OK** key .
3. Press the  or  key to select the CALL TIMER submenu.
4. Press the **INT OK** key .
5. Use the  or  key to switch the call timer on or off.
6. Press the **INT OK** key to confirm the setting.

Restore Default Settings

The handsets can be reset to the default settings. In doing so, all the settings which you have changed are returned to their DEFAULT values. The phone book entries will not be affected.

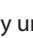1. Press the  key until the HANDSET menu appears.
2. Press the **INT OK** key .
3. Press the  or  key to select the DEFAULT submenu.
4. Press the **INT OK** key .
5. Press the **INT OK** key to confirm the setting.

Note: The handset is reset to its DEFAULT settings.

Default Settings

External Ringer Melody = Melody 1

Internal Ringer Melody = Melody 2

VIP Ringer Melody = selectable when you store a new number

Ringer Volume Level 3





Receiver Volume Level 3

External Call Ring On/Off ON

Internal Call Ring On/Off ON

Registering Additional Handsets

Further handsets can be registered on the base station. They must support the GAP standard. Please note, it is possible that some of the handset functions will not be available.

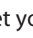








1. On the handset you wish to register, press the  key as often as necessary until the HANDSET menu appears.
2. Press the **INT OK** key .
3. Press the  or  key to select the REGISTER submenu.
4. Press the **INT OK** key .
5. Press and hold the  key on the base station for 2-3 seconds, then enter the PIN when requested. (Default setting = 0000)
6. Press the **INT OK** key .

Note: After the connection has been established, the name and number of the handset (the next available number if less than 4 are already registered) appear in the display

Barring Calls

You can select from various call barring options:




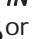

Option	Meaning
DISABLE	All telephone calls are possible.
EXTERNAL	All external calls are barred.
NUMBER	Define a number which should be barred, e.g. 0190.

1. Press the  key as often as necessary until the BASE menu appears.
2. Press the **INT OK** key.
3. Press the  or  as often as necessary to select the BARRING submenu.
4. Press the **INT OK** key.
5. Enter the 4-digit PIN code (pre-set code 0000).
6. Press the **INT OK** key.
7. Use the  or  key to select the handset which should be barred.
8. Press the **INT OK** key.
Use the  or  key to select Disable or External.
or
10. Use the  or  key to select NUMBER, press **INT OK** key, then input the number you want to barring call. Maximum first 5 digits only.
11. Press the **INT OK** key.

Emergency Number

You can store 2 emergency call numbers which can be dialled out at any time even when call restrictions are set (for example, if the keypad is locked or call barring is set). Each emergency number can have a maximum of 5 digits.






Example: If you set 123 as an emergency number - any numbers beginning with 123 are dialled out even with call restrictions

1. Press the  key as often as necessary until the BASE menu appears.
2. Press the **INT OK** key.
3. Press the  or  as often as necessary to select the EMERGENCY submenu.
4. Press the **INT OK** key.
5. Enter the 4-digit PIN code (pre-set code 0000).
6. Press the **INT OK** key.
7. Use the  or  key to select the emergency number to be changed and change it.
8. Press the **INT OK** key to confirm the setting.

Note: It is recommended that you store any emergency number in the phone book with an appropriate name, e.g. Doctor.






Changing the Flash Time

If your phone is connected to a PBX/switchboard, you can change the recall (flash) time according to your Switchboard/PBX requirements.


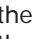
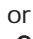
1. Press the  key as often as necessary until the BASE menu appears.
2. Press the **INT OK** key.
3. Press the  or  as often as necessary to select the FLASH TIME submenu.
4. Press the **INT OK** key.
5. Press the  or  key to select the required flash time.
6. Press the **INT OK** key to confirm the setting.

Note: Ask your switchboard/PBX provider for advice.




Select Dial Mode

1. Press the  key repeatedly until BASE appears.
2. Press the **INT OK** key.
3. Press  or  key to select DIAL MODE.
4. Press the **INT OK** key.
5. Press  or  key to select TONE or PULSE.
6. Press the **INT OK** key to confirm the setting.

Changing the PIN

1. Press the  key as often as necessary until the BASE menu appears.
2. Press the **INT OK** key.
3. Press the  or  as often as necessary to select the CHANGE PIN submenu.
4. Press the **INT OK** key.
5. Enter the old PIN (0000).
6. Press the **INT OK** key.
7. Enter the new PIN (e.g. 1111).
8. Press the **INT OK** key.
9. Enter the new PIN again (e.g. 1111).
10. Press the **INT OK** key to confirm the setting.

Restore Base Settings

1. Press the  key as often as necessary until the BASE menu appears.
2. Press the **INT OK** key.
3. Press the  or  as often as necessary to select the required DEFAULT submenu.
4. Press the **INT OK** key.






5. Enter the 4-digit PIN code (pre-set code 0000).
6. Press the **INT OK** key, "CONFIRM?" appears.
7. Press the **INT OK** key again to confirm.

Default Settings

E.G. PIN NO - 0000
 DIAL MODE - TONE
 FLASH TIME - 100 / 250 / 600
 EMERGENCY NO - EMPTY
 BARRING - EMPTY

Deregister Handset

If several handsets are registered on one base station, they can deregister each other mutually. The last handset cannot be deregistered.

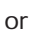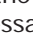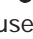1. Press the  key as often as necessary until the BASE menu appears.
2. Press the **INT OK** key.
3. Press the  or  as often as necessary to select the DEREGISTER submenu.
4. Press the **INT OK** key.
5. Enter the PIN. Note: (Factory setting is 0000).
6. Press the **INT OK** key.
7. If necessary, use the  or  key to select the handset.
8. Press the **INT OK** key.
9. Press the **INT OK** key to confirm the setting.

General

1. In the idle (standby) mode, press **MENU** to program each of the following options:
Turn Answering Machine On / Off
Set the Day and Time
Record your outgoing Announcement
Set your Remote Access code
Set 'Announce Only' On / Off
Turn audible Message Alert On / Off
Set Base ringer On / Off
Set number of Rings to answer
Voice prompt language selection

Press **MENU** on the base to set the options. The current setting is announced.

2. Once the desired option is reached and the current setting is announced, press **◀** or **▶** to change the setting.
3. Press **MENU** to confirm your setting.
4. At any time, press **STOP** to exit setup mode.

Switch Answering Machine ON/OFF (preset to ON)

When you first switch on your phone, the answering machine is in the ON mode.

1. Press **MENU**. When you hear the announcement, press **◀** or **▶** to switch between the On/Off setting.

Clock Setting

Follow the steps above to program the current Day of the week, then the Hour, and then the Minute:

First, program the Day. As you program, the display shows 'd' and a number, 1 to 7, representing the day of the week. 1 represents Monday; 2 represents Tuesday, and so on. Press **MENU** when done.

Next, program the Hour. Be careful that you program pm hour if the current time is in the afternoon or evening, or an am hour if the current time is after midnight or in the morning. Press **MENU** when done.

Next, program the Minute. You'll be programming the 'tens' column first. Your choices are 0 through 5, as the minutes range from 00 to 59. Press **MENU**. Now, you are programming the 'ones' column, where your choices are 0 through 9. Press **MENU** to confirm.

Note: If the mains power to the base is lost, your answer machine will display "St." (Set time) to remind you adjust the clock when it is switch on.

Outgoing Announcement

You can record 2 different outgoing announcements: A 1 inviting your caller to leave a message (Announce Only OFF), and A 2 asking your caller to call back later (Announce Only ON).

Outgoing Announcement A 1 is played when Announce Only mode is OFF. Callers can leave a message in this mode. Your answering machine is preset with Announce Only set to OFF, allowing callers to leave a message.

Outgoing Announcement A 2 is played when Announce Only mode is ON. Callers cannot leave a message in this mode.

If you do not record your own announcements, your answering system will play a pre-programmed message to your callers:

- A1: "Please leave your message after the beep."
A2: "I am sorry that I am not available. Please call back later."

Recording Announcement A1 (Announce Only set to OFF)

1. Press **MENU** until you hear 'Announcement One'
2. Press **REC/MEMO**. You will hear 'Now Recording' followed by a beep. Speak toward the Base Unit. You have up to 60 seconds for your announcement. Your announcement must be at least 3 seconds in length.
3. Press **STOP** when finished. Your recording will be played automatically. If you're not satisfied, record your announcement again.

Recording Announcement A2 (Announce Only set to ON)

Follow the same steps as recording Announcement A1. However, this time you will hear 'Announcement Two' since you have set Announce Only to ON.

Set remote access code

Your Remote Access code allows you to retrieve messages, and record memos and announcements when you're away from your Answering Machine.

The remote access code helps prevent unauthorized people from ringing up your answering machine and listening to your messages. The code can be any 4-digit number, from 0000 to 9999. The pre-set code is 0000.

1. Press **MENU** until you hear "Remote access code is 0000" and the display shows Ac.
2. Press **Left Arrow** or **Right Arrow** to set the first digit between 0-9. Press **MENU** to confirm.
3. Repeat Step 2 until all 4 digits have been set. The machine announces the new code.

Remote Operation

1. Call your answering machine from any touch-tone phone.
2. When you hear your outgoing announcement, enter your 4-digit Remote Access code.
3. You can now perform the following functions:

IF YOU WANT TO	PRESS
Play messages in mailbox	1
Repeat / Play Previous Message	4 / Press 4 Twice
Stop playback or recording	5
Play Next Message	6
Delete current message	7
Record a Memo	8, then 5 to stop
Record Announcement	9, then 5 to Stop
Turn System On /Off	0
Play Help Menu	*

Set 'Announce Only' On / Off (preset to OFF)

If you want callers to leave messages, Announce Only must be set to OFF.

If you do not want callers to leave messages, set Announce Only to ON.

Follow the steps in the beginning of the Set up section.

Turn Audible Message Alert On / Off

With Message Alert programmed ON, the Base unit will beep approximately every 10 seconds, alerting you to new, unplayed messages and memos. Follow the steps in the beginning of the Set up section to program this feature.

Turn Base Ringer On / Off (preset to ON)

Your Base Ringer is independent of the Handset ringer. To program this feature, follow the steps in the beginning of the Answering Machine section.

Set Number of Rings to Answer

Your Answering System can answer after 2-6 rings or you can choose the Toll Saver option. The Toll saver option instructs the Answering System to answer after 4 rings only if there are new, unplayed messages; otherwise, it will answer after 6 rings. The benefit to you is if you are making a long distance call to retrieve messages, if the Answering System does not answer after 4 rings, you can hang up. There are no new messages, and you will save the expense of a long distance call.

To set the number of rings to answer, follow the steps in the beginning of the Set up section.

Voice Prompt language selection

1. Press **MENU** key until display "LA" (Language) to enter Voice Prompt language selection mode.

2. After one second the display shows the language code, 1, 2 or 3 representing the three options of English, German or French.
3. Press forward key **▶** swap language code ie "1 > 2 > 3...", and unit will sound the current new message status in the selected language type.
4. Press **MENU** key or **STOP** key to confirm the selected language type.

Recording a Memo

You can record a memo, either at the Base Unit or from a remote location. To record a Memo at the Base:

1. Press and hold **REC/MEMO**.
2. You will hear 'Now Recording', followed by a beep.
3. Speak towards the Base Unit. Press **STOP** when finished. Your memo is stored like a message from an outside caller.

To record a memo from a remote location, follow instructions in the Remote Operation section.

Note: If memory is full while recording, DAM will announce "memory is full" and a beep is heard, at the same time the 7-segments LED will display "Fu" and the message count alternatively.

Listening to Your Messages

When you have new messages, the message counter will flash, showing the number of unplayed messages.

When you have new messages, the indicator will flash. If the Mailbox only contains old messages, the indicator will glow steadily.

Recorded messages and memos are retained until you delete them.

Your Answering System has approximately 40 minutes of storage capacity (or 59 messages/memos). If its capacity is full, the system will answer after 10 rings, and the caller will hear 'Memory is Full'.

Message Playback

1. Press the Play key . The prompt will tell you how many new and old messages are stored in that Mailbox. If there are one or more new messages, only the new messages will be played. After new message playback is completed, you can press the Play key again to hear all old messages.

Note: If short press the Play key, the order of playback is oldest messages first, newest last. If long press the Play key, the order of playback is newest messages first, oldest last.

Before each message is played, the day and time it was recorded is announced.

2. Press **STOP** at any time to end playback.
3. Press **⏮** to replay the current message from the beginning.
Press **⏮** **twice** to play the previously recorded message.
4. Press **⏭** to skip to the next message.

Deleting Messages

To delete the message or memo currently playing, press **DEL** .

To delete all old messages stored in the Mailbox:

1. In the idle mode, press and hold **DEL** . You will hear "All old Messages are Deleted"
2. All old messages will be deleted.

NOTE: New,unplayed messages cannot be deleted until you play them.

Once you deleted the message,it cannot be covered.

Important information

There is a total of 40 minutes of record time. This includes messages, memos, and announcements.

The maximum number of messages that can be stored is 59.

A message, memo, or announcement can be a maximum of 60 seconds.

If a call comes in while you are listening to messages, playback automatically stops.

Using the phone

Selecting the language	/ 5-LANGUAGE / INT OK / or / ENGLISH / INT OK
Making internal calls	INT OK / 1 ... 4
Making external calls	/ 030123... or 030123... /
Hands-free mode	/ 030123... or switch on/off during a call with
Taking calls	/
End call	
Redialing	/ or / or / or
Prefix dialing	0 press for 2 seconds / add rest of number /
Dialing from the phone book	/ or / or
View call log entries	/ 1-CALL LOG / INT OK / or /
Call call log entries	/ 1-CALL LOG / INT OK / or / or
Delete call log entries	/ 1-CALL LOG / INT OK / or / press for 2 seconds / ERASE? / INT OK
Delete all call log entries	/ 1-CALL LOG / INT OK / or / press for 2 seconds / or / ERASE ALL? / INT OK / CONFIRM? / INT OK

Muting	to switch on/off during a call
Hold call, extension	R / 22 / R
Forward call, extension	R / 22 /
Hold call and speak to another handset.	INT OK / 1 ... 4 / INT OK
Forward call to another handset	INT OK / 1 ... 4 /
Teleconference	INT OK / 1 ... 4 / press and hold #
Receiver/Microphone volume	/ or / or, during a call, or
Insert dialing pause	press at relevant position during pre-dialling
Key lock on/off	# press for 2 seconds

Phone Book

Store entries	↵ / 2-PHONE BOOK / INT OK / 1-NEW ENTRY / INT OK / ENTER NO / 030123... / INT OK / ENTER NAME / ABC... / INT OK / NORMAL RING / INT OK
Store VIP entries	↵ / 2-PHONE BOOK / INT OK / 1-NEW ENTRY / INT OK / ENTER NO / 030123... / INT OK / ENTER NAME / ABC... / INT OK / NORMAL RING / ↵ or ⬆ / VIP RING 1 - 25 / INT OK
List entries	↵ / 2-PHONE BOOK / INT OK / ↵ or ⬆ / 2-LIST ENTRY / INT OK / ↵ or ⬆
Edit call numbers	↵ / 2-PHONE BOOK / INT OK / ↵ or ⬆ / 3-EDIT ENTRY / INT OK / ↵ or ⬆ / INT OK / 030123... / INT OK / ABC... / INT OK / NORMAL RING / INT OK
Edit call numbers, VIP entries	↵ / 2-PHONE BOOK / INT OK / ↵ or ⬆ / 3-EDIT ENTRY / INT OK / ↵ or ⬆ / INT OK / 030123... / INT OK / ABC... / INT OK / NORMAL RING / ↵ / VIP RING 1 - 25 / INT OK
Delete call numbers	↵ / 2-PHONE BOOK / INT OK / ↵ or ⬆ / 4-DELETE / INT OK / ↵ or ⬆ / INT OK
Delete all call numbers	↵ / 2-PHONE BOOK / INT OK / ↵ or ⬆ / 5-DELETE ALL / INT OK / CONFIRM? / INT OK

Handset Settings

Ringer volume	↵ / 3-HANDSET / INT OK / 1-RINGER / INT OK / 1-VOLUME / INT OK / ↵ or ⬆ / INT OK
Ringer melody, external	↵ / 3-HANDSET / INT OK / 1-RINGER / INT OK / ↵ or ⬆ / 2-EXT RINGER / INT OK / ↵ or ⬆ / INT OK
Ringer melody, internal	↵ / 3-HANDSET / INT OK / 1-RINGER / INT OK / ↵ or ⬆ / 3-INT RINGER / INT OK / ↵ or ⬆ / INT OK
Change handset name	↵ / 3-HANDSET / INT OK / ↵ or ⬆ / 2-HS NAME / INT OK / DECT... / INT OK
Save prefix number	↵ / 3-HANDSET / INT OK / ↵ or ⬆ / 3-PREFIX MEM / INT OK / 030... / INT OK
Key tone on/off	↵ / 3-HANDSET / INT OK / ↵ or ⬆ / 4-KEY TONE / INT OK / ↵ or ⬆ / INT OK
Automatic call answering	↵ / 3-HANDSET / INT OK / ↵ or ⬆ / 5-AUTO ANS / INT OK / ↵ or ⬆ / INT OK
Call timer on/off	↵ / 3-HANDSET / INT OK / ↵ or ⬆ / 6-CALL TIMER / INT OK / ↵ or ⬆ / INT OK
Default settings	↵ / 3-HANDSET / INT OK / ↵ or ⬆ / 7-DEFAULT / INT OK / CONFIRM? / INT OK
Register handset	↵ / 3-HANDSET / INT OK / ↵ or ⬆ / 8-REGISTER / INT OK

Base Settings

Barring, off and external	↵ / 4-BASE / INT OK / 1-BARRING / INT OK / ENTER PIN / 0000 / INT OK / ↵ or ⬆ / INT OK / ↵ or ⬆ / INT OK
Barring, number	↵ / 4-BASE / INT OK / 1-BARRING / INT OK / ENTER PIN / 0000 / INT OK / ↵ or ⬆ / INT OK / ↵ or ⬆ / NUMBER / INT OK / ENTER NO / 321... / INT OK
Entering emergency numbers	↵ / 4-BASE / INT OK / ↵ or ⬆ / 2-EMERGENCY / INT OK / ENTER PIN / 0000 / INT OK / ↵ or ⬆ / 321... / INT OK
Set flash time	↵ / 4-BASE / INT OK / ↵ or ⬆ / 3-FLASH TIME / INT OK / ↵ or ⬆ / INT OK
Changing the dialing mode	↵ / 4-BASE / INT OK / ↵ or ⬆ / 4-DIAL MODE / INT OK / ↵ or ⬆ / INT OK
Changing the PIN	↵ / 4-BASE / INT OK / ↵ or ⬆ / 5- CHANGE PIN / INT OK / ENTER PIN / 0000 / INT OK / NEW PIN / 1111 / INT OK / REPEAT / 1111 / INT OK
Default settings	↵ / 4-BASE / INT OK / ↵ or ⬆ / 6-DEFAULT / INT OK / ENTER PIN / 0000 / INT OK / CONFORM? / INT OK
Delete HS	↵ / 4-BASE / INT OK / ↵ or ⬆ / 7-DEREGISTER / INT OK / ENTER PIN / 0000 / INT OK / ↵ or ⬆ / INT OK / CONFIRM? / INT OK

Answering Machine

Turn Answering System ON / OFF MENU / Display "An" for Answering / ⬅ or ➡	
Clock Setting	MENU / Display "CL" for Day and time / ⬅ or ➡ / MENU to set Day / ⬅ or ➡ / MENU to set Hour / ⬅ or ➡ / MENU to set "tens" column of Minute / ⬅ or ➡ / MENU to set "ones" column of Minute
Set 'Announce Only' On / Off (preset to OFF)	MENU / Display "Ao" for Announce Only / ⬅ or ➡
Recording Announcement A1 (Announce Only set to OFF)	MENU / Display "A1" for Announcement One / REC/MEMO / Speak toward the Base Unit / STOP
Recording Announcement A2 (Announce Only set to ON)	MENU / Display "A2" for Announcement Two / REC/MEMO / Speak toward the Base Unit / STOP
Set your Remote Access Code (Default: 0000)	MENU / Display "Ac" for Remote Access Code / ⬅ or ➡ / MENU repeatedly to set each digit in the code
Turn Audible Message Alert On / Off	MENU / Display "AL" for Message Alert / ⬅ or ➡
Turn Base Ringer On / Off (preset to ON)	MENU / Display "br" for Base Ringer / ⬅ or ➡
Set Number of Rings to Answer	MENU / Display "Nr" for Number of Rings selected ➡
Set Voice Prompt Language	MENU / Display "LA" for Language selection ➡

Record a Memo	Press and hold REC/MEMO 'Now Recording' / Speak towards the Base Unit / STOP
Message Playback	Play key / new messages are played / Play key to hear all old messages
Deleting Messages	DEL to delete the message or memo currently playing To delete all old messages stored in the Mailbox: In the idle mode, press & hold DEL
Remote Operation	Enter your 4-digit Remote Access code when hearing your outgoing announcement, press number keys to perform the different functions. (please refer to the section, Remote Access)

WARRANTY INFORMATION

MOTOROLA DOES NOT WARRANT ITS CORDLESS TELEPHONE PRODUCTS (PRODUCT(S)) TO YOU, THE END-USER. A LIMITED WARRANTY FOR THIS PRODUCT IS PROVIDED TO YOU BY MOTOROLA'S DISTRIBUTOR (DISTRIBUTOR) PURSUANT TO DOCUMENTATION INCLUDED WITH THIS PRODUCT. PLEASE CONTACT THE DISTRIBUTOR IF YOU EXPERIENCE PROBLEMS WITH THIS PRODUCT .

TO THE FULLEST EXTENT PERMITTED UNDER APPLICABLE LAW (A) MOTOROLA HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND RELATING TO THE PRODUCT THAT BIND THE MANUFACTURER, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTY AGAINST INFRINGEMENT PROVIDED UNDER ANY LAW, AND (B) IN NO EVENT SHALL MOTOROLA BE LIABLE TO YOU OR ANY OTHER PARTY FOR ANY DIRECT, INDIRECT, GENERAL, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR OTHER DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF INFORMATION OR ANY OTHER PECUNIARY LOSS), OR FROM ANY BREACH OF WARRANTY, EVEN IF MOTOROLA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. MOTOROLA SHALL NOT BE BOUND BY PRODUCT RELATED STATEMENTS NOT DIRECTLY MADE BY MOTOROLA NOR ANY WARRANTY OBLIGATIONS APPLICABLE TO THE DISTRIBUTOR.

WARRANTY INFORMATION

Giant Telecom, BVI (Distributor) guarantees to you, the original purchaser, the digital cordless telephone and accessories which you have purchased from an authorised reseller (the "Products"), to be in conformance with the applicable specifications current at the time of manufacture for a term of 12 months from date of purchase of the Product(s) (Warranty Term). You must inform Distributor of the lack of conformity to the applicable specifications of any of the Products within a period of two (2) months from the date on which you detect a defect in material, workmanship or lack of conformity and in any event within a term not to exceed the Warranty Term, and must immediately submit the Product for service to Distributor's Repair or Service Centre.

During the Warranty term, Distributor will, at its discretion and without extra charge, as your exclusive remedy, repair or replace your Product which does not comply with this warranty; or failing this, to reimburse the price of the Product but reduced to take into account the use you have had of the Product since it was delivered. This warranty will expire at the end of the Warranty Term.

For details, please contact:
0870 197 4131 UK

HOW TO GET WARRANTY SERVICE?

In order to be eligible to receive warranty service, you must present your receipt of purchase or a comparable substitute proof of purchase bearing the date of purchase. The digital cordless telephone should also clearly display the original compatible electronic serial number. Such information is contained with the Product.

You must ensure that all and any repairs or servicing is handled at all times by a Distributor's Service Centre in accordance with the Distributor's Service requirements. In some cases, you may be requested to provide additional information concerning the maintenance of the Products by Distributor's Service Centres only, therefore it is important to keep a record of any previous repairs, and make them available if questions arise concerning maintenance.

CONDITIONS

This warranty will not apply if the type or serial numbers on the Product has been altered, deleted, duplicated, removed, or made illegible. Distributor reserves the right to refuse free-of-charge warranty service if the requested documentation can not be presented or if the information is incomplete, illegible or incompatible with the factory records. Repair, at Distributor's option, may include reflashing of software, the replacement of parts or boards with functionally equivalent, reconditioned or new parts or boards. Replaced parts, accessories, batteries, or boards are warranted for the balance of the original warranty time period. The Warranty Term will not be extended. All original accessories, batteries, parts, and digital cordless telephone that have been replaced shall become the property of Distributor.

Distributor does not warrant the installation, maintenance or service of the products, accessories, batteries or parts.

Distributor will not be responsible in any way for problems or damage caused by any ancillary equipment not furnished by Distributor which is attached to or used in connection with the Products.



When the Product is used in conjunction with ancillary or peripheral equipment not supplied for this digital cordless telephone by Distributor, Distributor does not warrant the operation of the Product/peripheral combination and Distributor will not honour any warranty claim where the Product is used in such a combination and it is determined by Distributor that there is no fault with the Product.

WHAT IS NOT COVERED BY THE WARRANTY

This warranty is not valid if the defects are due to damage, misuse, tampering, neglect or lack of care and in case of alterations or repair carried out by unauthorised persons. The following are examples of defects or damage not covered by this product warranty

- Defects or damage resulting from use of the Product in other than its normal and customary manner.
- Defects or damage from misuse, access to incompatible sources, accident or neglect.
- Defects or damage from improper testing, operation, maintenance, installation, adjustment, unauthorised software applications or any alteration or modification of any kind.
- Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- Products disassembled or repaired other than by Distributor in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim.
- Defects or damage due to range, coverage, availability, grade of service, or operation of the cellular system by the cellular operator.
- Defects or damage due to moist, liquid or spills of food.



- All plastic surfaces and all other externally exposed parts that are scratched or damaged due to customer normal use.
- Products rented on a temporary basis.
- Periodic maintenance and repair or replacement of parts due to normal wear and tear.

Note: The talk-time, stand-by time and total life cycle of the rechargeable batteries for your digital cordless telephone will depend on usage conditions and network configurations. As a consumable product, the specifications indicate that you should be able to obtain optimum performance for your digital cordless telephone within the first two months from date of purchase.

The warranty for the rechargeable batteries becomes void if (i) the batteries are charged other than by original battery chargers specified for the charging of the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, (iii) the battery is used in equipment or service other than the digital cordless telephone for which it is specified.

Depending on operating conditions and your usage habits, wear and tear might take place of components including mechanical problems related to Product housing, paint, assembly, sub-assemblies, displays and keyboards and any accessories which are not part of the Product's in-box configuration. The rectification of faults generated through wear and tear and the use of consumable items like batteries is considered to be your responsibility and therefore Distributor will not provide the free Warranty repair service for these items.





Please make and retain a note of all data you have inserted into your Product for example names and phone numbers, before submitting your Product for a Warranty service as such data may be deleted or erased as part of the repair or service process.

OUT OF WARRANTY REPAIRS

If you request Distributor to repair your Product any time after the Warranty term or where this warranty does not apply due to the nature of the defect or fault, then Distributor may in its discretion carry out such repairs subject to you paying Distributor its fees for such a repair or it may refer you to an authorised third party to carry out such repairs.

