



Nortel Communication Server 1000

DECT 4027, 4070, and 4075 Handsets User Guide



Revision history

May 2009

Standard 01.10. This document is up-issued to support the DECT 4027, 4070, and 4075 Handsets. Minor corrections.

April 2009

Standard 01.09. This document is up-issued to support the DECT 4027, 4070, and 4075 Handsets.

April 2008

Standard 01.08. This document is issued to support the DECT 4027 and 4070 Handsets and to reflect editorial changes.

March 2008

Standard 01.07. This document is issued to support the DECT 4027 and 4070 Handsets and to reflect editorial changes.

March 2008

Standard 01.06. This document is issued to support the DECT 4027 and 4070 Handsets and to reflect editorial changes.

March 2008

Standard 01.05. This document is issued to support the DECT 4027 and 4070 Handsets and to reflect editorial changes.

February 2008

Standard 01.04. This document is issued to support the DECT 4027 and 4070 Handsets and to reflect editorial changes.

February 2008

Standard 01.03. This document is issued to support the DECT 4027 and 4070 Handsets and to reflect change to the technical content.

February 2008

Standard 01.02. This document is issued to support the DECT 4027 and 4070 Handsets and to reflect change to the technical content and editorial changes.

January 2008

Standard 01.01. This document is issued to support the DECT 4027 and 4070 Handsets.

Contents

Welcome to DECT 4027, 4070, and 4075 Handsets	13
Feature overview	13
Regulatory and safety information	14
Safety precautions	16
Getting started	18
Installing the MEM card and Bluetooth wireless module	18
Installing the battery pack (4027 and 4070 only)	18
Installing the charger	20
Charging the batteries	22
Important battery information	22
Charging guidelines	23
Charging and operating times	24
Charge display	25
Switching the handset on or off	26
Display areas	26
Icon line	27
Dialogue area	29
Soft key line	33
LED indicator (4075 only)	33
Handset controls	35
Key functions in Idle mode	36
Key functions in Call mode	38
Key functions in Dialogue mode	40
Key functions in Menu mode	40
Key functions in Edit mode	41
Locking or unlocking the dialpad	45

DECT system configuration	46
Accessing the Connectivity menu	46
Subscribing the handset to a DECT system	47
Manually selecting the DECT system	49
Enabling automatic DECT system selection	50
Deregistering the handset	51
Editing the system name and phone number	51
Call features	53
Make calls	53
Dialling a number	54
Predial mode	54
Using Speed dial	55
Using Loudspeaker	55
Using the telephone book to dial a number	56
Using the Central Directory to dial a number	57
Making an SOS call	59
Making an Emergency call	59
Answer calls	60
Answering a call in Normal mode	61
Answering a call using any key	61
Auto-answering mode	61
Muting the ringer	61
Rejecting a call	62
Change settings during a call	62
Adjusting the headset or loudspeaker volume	62
Using mute during a call	63
Transfer calls	63
Transferring a call	63
Voice mail	64
Accessing voice mail	65
Defining a voice mail number	66

Calls list	68
All calls list	70
Accessing the All calls list	70
Viewing information about a call	71
Dialling a number	71
Transferring a number to your contacts list	72
Transferring a number to the caller filter list	73
Deleting an entry	74
Deleting all entries	75
Answered calls list	75
Accessing the Answered calls list	76
Viewing information about an answered call	76
Dialling a number	77
Transferring a number to your Contacts list	77
Transferring a number to the caller filter list	78
Deleting an entry	79
Deleting all entries	80
Dialled calls list	81
Accessing the Dialled calls list	81
Viewing information about a dialled call	81
Dialling a number	82
Transferring a number to your contacts list	82
Transferring a number to the Caller filter list	84
Deleting an entry	85
Deleting all entries	85
Missed calls list	86
Accessing the Missed calls list	87
Viewing information about a missed call	88
Dialling a number	89
Transferring a number to your Contacts list	89
Transferring a number to the Caller filter list	90
Deleting an entry	91
Deleting all entries	92

Contacts	93
Accessing the Contacts menu	94
Adding a new contact	94
Adding a contact number	95
Editing a contact number	96
Deleting a contact number	97
Editing a contact name	98
Editing a contact ringtone	99
Deleting a contact	100
Speed dial feature	101
Transfer numbers to your contacts list	103
 Messaging	 106
Message limitations	107
New messages and drafts	107
Accessing the Messaging menu	107
Saving a new message or editing a draft	108
Sending a message	109
Deleting a draft message	111
Deleting all draft messages	112
Inbox	112
Accessing the Messaging Inbox	113
Reading a message	113
Replying to a message	114
Forwarding a message	115
Saving a number to the contacts list	117
Deleting a message	117
Deleting all messages from the Inbox	118
Sent messages	120
Accessing the Sent Messages menu	120
Reading a sent message	120
Forwarding a sent message	121
Deleting a sent message	122

Deleting all sent messages	123
Message settings	123
Accessing the message Settings menu	124
Configuring the Overwrite option	124
Managing sent messages	125
Normal and urgent messages	126
Confirming urgent messages	127
Message list full	127
Calendar	128
Accessing the Calendar	129
Changing the calendar format	129
Selecting a date	130
Adding an appointment	130
Viewing an appointment	132
Editing an appointment	133
Copying an appointment	134
Deleting an appointment	136
Calculator, Stopwatch, and Alarms	137
Using the Calculator	137
Using the Stopwatch	139
Alarms	141
Nonrecurrent alarms	141
Recurrent alarms	144
Telephone settings	149
General settings	149
Accessing the General settings menu	150
Profile configuration	150
Configuring the time and date	153
Choosing a language	156
Configuring shortcuts	157

Configuring the LED Indicator (4075 only)	158
Security options	159
Defining the handset name	163
Resetting the handset	164
Resetting the MEM card	164
Viewing information	165
Audio settings	166
Accessing the Sounds and alerts menu	167
Configuring the ring volume	167
Defining the ring external melody	168
Defining the ring internal melody	169
Defining the Ring unknown call melody	170
Defining the Normal message melody	170
Defining the Urgent message melody	171
Defining the Ring emergency melody	172
Enabling the Increasing ring feature	172
Configuring Alert volume	173
Defining the Alert tone melody	173
Enabling Increasing alert	174
Enabling the Vibrator	175
Enabling the Key sound	175
Enabling Confirmation sound	176
Enabling the Coverage warning	177
Enabling the Charger warning	178
Configuring Cadence Mode	179
Display settings	180
Accessing the Display settings menu	181
Wallpaper customisation	181
Selecting a theme	183
Startup customisation	184
Configuring power save	186
Call settings	187
Accessing the call settings menu	188

Accessing call and message statistics	188
Answer mode configuration	189
Caller filter configuration	191
Emergency call configuration	198
Mandown configuration (4075 only)	200
Activating the Silent charging feature	207
Connectivity settings	208
Accessing additional features using FFC or SPRE codes	210
Handset accessories	212
Available accessories	212
Belt clip	214
Installing the headset	218
Removing and installing the battery pack (4075 only)	218
Charging the battery pack (4075 only)	220
MEM card installation and removal	222
Bluetooth wireless technology module installation	225
Bluetooth wireless technology headset installation	229
Terms you should know	235
Index	237

Welcome to DECT 4027, 4070, and 4075 Handsets

Nortel Digital Enhanced Cordless Telecommunications (DECT) 4027, 4070, and 4075 Handsets are cordless phones with enhanced features suitable for office use. The handsets include a single-press SOS key used to make one-touch calls or send messages to a particular contact number.

The DECT 4070 and 4075 Handset offer a text-messaging facility to send and receive messages. The messaging feature is not available on the DECT 4027 Handset. The DECT 4075 offers all of the features of the 4070 Handset, as well as Mandown and an LED Indicator. The DECT 4075 also offers IP54 protection and has a changeable battery that uses inductive charging technology.

Nortel DECT 4027, 4070, and 4075 Handsets are compatible both with traditional DECT system (based on DMC cards) and with the SIP DECT solution.

Note: This User Guide is applicable to handset software release 1.70 or later. On 4027 and 4070 handsets with an earlier software version some of the described features are not available.

To determine the software release installed on your handset, see [“Viewing information” \(page 165\)](#).

Basic information about your handset is described in the following sections:

- [“Feature overview” \(page 13\)](#)
- [“Regulatory and safety information” \(page 14\)](#)
- [“Safety precautions” \(page 16\)](#)

Feature overview

You can use your Nortel DECT 4027, 4070, and 4075 Handsets to perform the following tasks:

- send and receive messages (DECT 4070 and 4075 Handsets only)
- configure audio and display settings
- create daily and recurrent alarms
- use the calculator and stopwatch

If you use your handset with Nortel SIP DECT, the following additional features are available:

- automatic update of the time and date settings when switching on the handset
- send and receive messages without DECT Messenger (4070 and 4075 only)
- individual ring melodies to distinguish between internal and external calls
- central directory

Regulatory and safety information

Read the following information before you use your Nortel DECT 4027, 4070, and 4075 Handset.



CAUTION

Like all cordless telephones, this handset uses radio signals, which do not guarantee a connection under all circumstances. Do not rely exclusively on cordless telephones when making indispensable calls (such as medical emergencies).



This device complies with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC, the Restriction of Hazardous Substances (RoHS) 2002/95/EC, and the WEEE Directive 2002/95/EC.



You can obtain a copy of the Declaration of Conformity from Nortel using the contact for End user and Private Product as shown in the following Web page:

http://www.nortel.com/corporate/community/environment/life_cycle/declarations.html



DECT 4027 and 4070 comply with IP50, DECT 4075 complies with IP54, according to IEC 60 529. Use only in countries where authorized.

Declaration of Conformity

Hereby, Nortel declares that the Nortel DECT 4027, 4070, and 4075 Handsets are in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

This equipment complies with EMC requirements of Class B.

Safety precautions

Observe the following safety precautions before you use your handset.



CAUTION

Modifications to this equipment not approved by Nortel can make this equipment noncompliant with the applied requirements.

Nortel recommends that you use only compatible headsets.



WARNING

Do not open the handset when it is switched on or connected to the charger; doing so can expose you to high voltage. Only authorised service personnel must perform repairs.

Do not dispose of defective or used batteries in municipal waste. Return old batteries to the battery supplier, a licensed dealer, or a designated collection facility. Do not destroy batteries.

Do not remove, install, or charge batteries in hazardous environments (such as explosive environments), hospitals or vehicles.

If your interior handset becomes wet, do not use a blow dryer or oven to dry it. Switch off the handset, remove the battery, shake out excess liquid from the handset, and let it dry for 72 hours at room temperature.



CAUTION

The handset product contains a magnet. Do not allow metallic objects to come in contact with the magnet, because that can deteriorate audio quality and damage the handset. Do not allow the charger and the battery to come into contact with conductive objects, such as keys, paper clips, rings, or bracelets.

Keep the handset at least 10 centimeters away from other electronic equipment.



WARNING

Keep the charger, handset, and accessories out of reach of small children.

Getting started

This section describes the tasks you must complete before you use your handset.

Use the following information to prepare your handset for use, and to familiarize yourself with the operation of the handset:

- [“Installing the MEM card and Bluetooth wireless module” \(page 18\)](#)
- [“Installing the battery pack \(4027 and 4070 only\)” \(page 18\)](#)
- [“Installing the charger” \(page 20\)](#)
- [“Charging the batteries” \(page 22\)](#)
- [“Charge display” \(page 25\)](#)
- [“Switching the handset on or off” \(page 26\)](#)
- [“Display areas” \(page 26\)](#)
- [“Handset controls” \(page 35\)](#)


Installing the MEM card and Bluetooth wireless module

If your handset is supplied with a MEM card or Bluetooth® wireless technology module, see the following sections:

- [“MEM card installation and removal” \(page 222\)](#)
- [“Bluetooth wireless technology module installation” \(page 225\)](#)

Installing the battery pack (4027 and 4070 only)


You must install the battery pack before you can use your handset. The battery compartment is on the back of the handset as shown in [Figure 1](#).

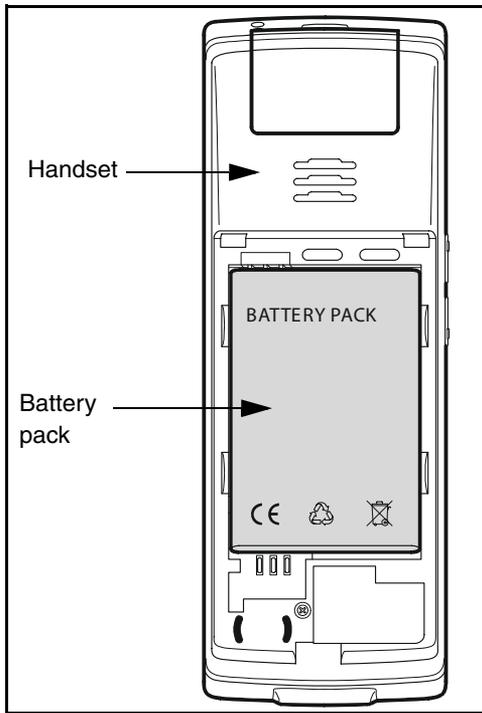Figure 1: Battery pack

To install a battery pack in your handset, perform the following steps:

1. Place the handset face down on a flat surface.
2. Remove the battery compartment cover.
3. Push the battery pack into the casing as shown in [Figure 2](#).
4. Press the battery pack down until it locks.
5. Replace the battery cover.

Figure 2: Installing the battery pack

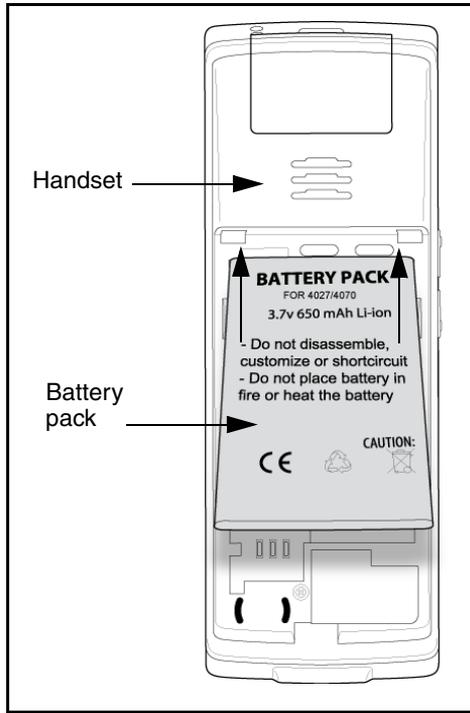


Installing the charger

To install the charger, perform the following steps:

1. Place the charger on a flat surface.
2. Connect the AC adapter cable to the terminal on the bottom of the charger.
3. Connect the adapter to an electrical outlet.
4. Place the handset on the charger as shown in [Figure 3](#).

Note: (4075 only) The 4075 Handset charger has a slot that you can use to charge a battery pack without having the battery pack installed in the phone. See "[Charging the battery pack \(4075 only\)](#)" (page 220) for more details.


Figure 3: Installing the charger

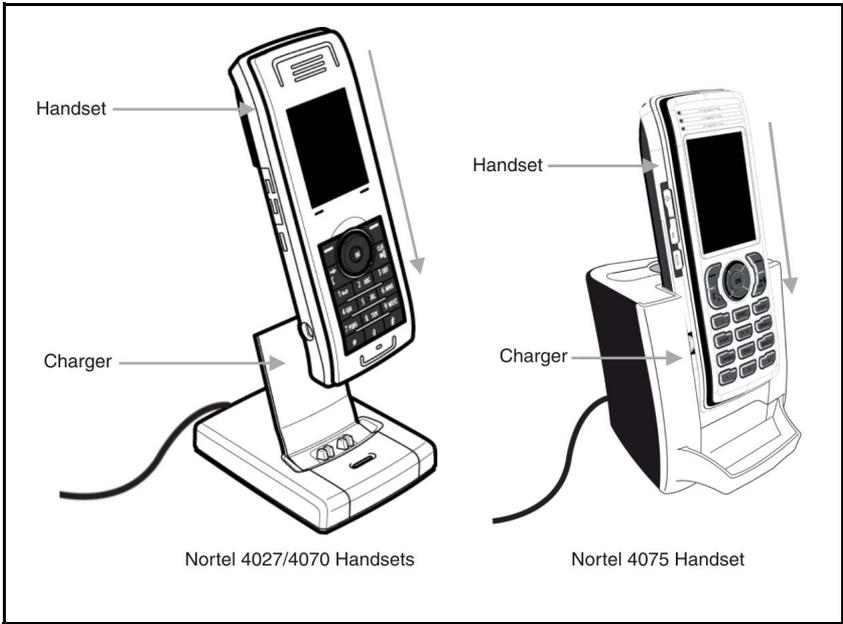

Charging the batteries

Place the handset in the charger as shown in the following figure.

Figure 4: Handset installed on charger

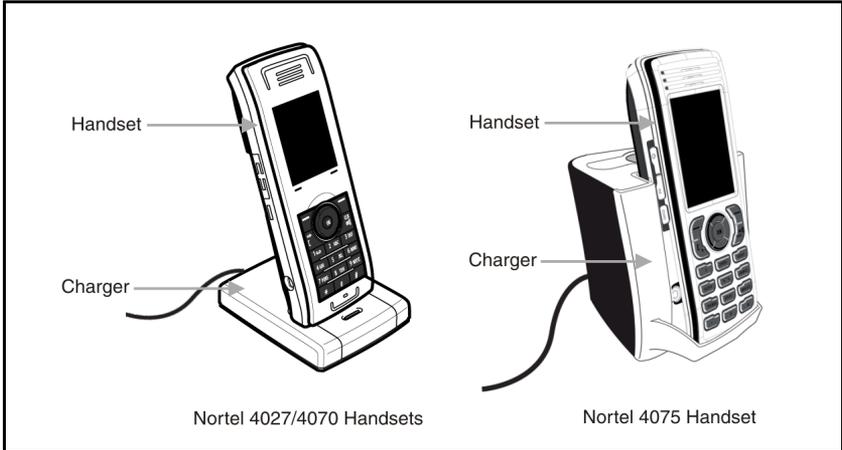

CAUTION

The batteries become hot during the charge cycle.

Attention: The handset, if switched off, automatically switches on when placed in the charger.

Important battery information

Use the battery pack only as directed. Heat or cold reduces the performance and service life of the batteries. Handsets with hot or cold batteries can become temporarily out-of-service, even if the batteries are

fully charged. Charge the batteries only using the DECT Handset charger supplied with the handset.

Attention: Use a CPC N0162957 charger if you have a DECT 4027 or 4070 Handset, and a CPC N0206072 charger if you have a DECT 4075 Handset.

Charging guidelines

Observe the following when you charge your handset:

- Charge the battery for at least 6 hours before you use the handset for the first time. This protective measure extends the service life of the batteries.

Note: The batteries attain maximum power output only after several charging and discharging cycles.

- Do not leave the handset inserted into the charger for more than 30 days without using it.
- You can charge and discharge the batteries hundreds of times, but eventually they wear out. If the operating time (talk and standby time) becomes significantly shorter than usual, replace the batteries.
- To maintain optimum operating time, periodically discharge the batteries by leaving the handset off the charger and switched on, until the handset switches itself off. Use only this method to discharge the batteries. If you want to accelerate the discharge of the battery, you can enable the display. For more information about configuring power save, see [“Configuring power save” \(page 186\)](#).

Note: Extreme temperatures influence the charging capability of the batteries.

Charging and operating times

Discharged batteries require 6 hours to completely recharge. Completely charged batteries provide the handset with approximately 8 hours of talk time and 100 hours of standby time.



WARNING

Use only the batteries that Nortel provides or authorises.

Charge the batteries only using the supplied charger.

Do not replace the batteries in potentially explosive environments, such as rooms where flammable liquids or gasses are present.

Do not dispose of batteries in a fire. Recycle or dispose of batteries in accordance with local regulations.



WARNING

You must charge your handset before you reset the handset time and date. Every time you remove the battery pack or switch the handset off it loses the time and date information; you must manually reset it after you reinstall the battery pack or switch the handset off and on.

If your system provides the date and time information to DECT handsets, the date and time settings update automatically when you switch on the handset. Contact your system administrator to determine if you can use this feature.

Attention: Your handset displays the battery status accurately after charging for at least 6 hours.

Attention: You must have a mains connection to operate the charger.

**CAUTION**

Do not install the charger, handset, and accessories in the following locations:

- near water, moisture, sources of heat, or direct sunlight
- near devices that generate strong magnetic fields, including electrical appliances, fluorescent lamps, computers, radios, televisions, and fax or telephone terminals
- in locations where the handset can be covered or where excessive dust is present, or in areas subject to vibration, shock, or extreme temperature fluctuations
- in locations with poor ventilation

**CAUTION**

Use only the plug-in AC adapter and battery type supplied, and use only approved accessories.

Ensure the mains voltage of the adapter matches the local mains voltage.

Do not use AC adapters that are visibly damaged (cracked or broken) and keep the ventilation slits on the AC adapters free from obstruction.

Attention: The handset, if switched off, automatically switches on when placed in the charger.

Charge display

A battery charge status symbol appears on the display. When the battery is nearly discharged, the battery charge status symbol flashes and a warning tone sounds. If you are on a call when this happens, the handset switches off after approximately 3 to 5 minutes. If you are not on a call and the handset is not in the charging station, the message “*Battery empty*” appears on the display. You cannot make calls while this message appears.

The following table shows the battery charge status icons.

Table 1: Battery charge status icons

Icon	Description
	empty
	less than 33%
	more than 33% and less than 75%
	more than 75%

Note: (4075 only) You can configure the LED indicator to flash when the handset battery is low. When you place the handset on the charger, the LED indicator turns off. See [“Configuring the LED Indicator \(4075 only\)” \(page 158\)](#) for more details.

Switching the handset on or off

To switch your handset on or off, perform the following step:



1. Long press the **Clr** key to switch your handset on or off.

Display areas

The DECT 4027, 4070, and 4075 Handsets include a Liquid Crystal Display (LCD), and the DECT 4070 and 4075 include a backlit dialpad.

The DECT 4075 handset also includes an LED indicator above the display area, to the left of the speaker.


The display is divided into the following three areas:

- “Icon line” (page 27)

- “Dialogue area” (page 29)
- “Soft key line” (page 33)

The following figure shows the various areas of the display.

Figure 5: Handset display

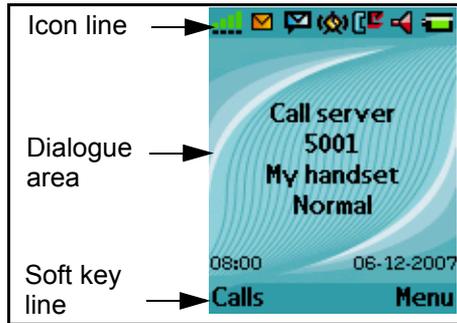

Icon line

The icon line displays the status of the handset. The icons for the level of radio signal and battery charge status always appear in the icon line. Other icons appear only when the corresponding functions are active.

The following table shows the icons in the icon line.

Table 2: Icon line icons

Icon	Description
	Level of radio signal
	Bluetooth wireless connection status (only for DECT 4070 and 4075 Handsets) See Table 18 for Bluetooth wireless connection status icons.

Table 2: Icon line icons

Icon	Description
	<p>New text message received</p> <hr/> <p>Attention: This icon, if active, appears in place of the Bluetooth wireless connection icon.</p> <hr/>
	Voice message waiting indication
	Dialpad locked
	<p>Activated alarm</p> <hr/> <p>Attention: This icon, if active, appears in place of the Dialpad locked icon.</p> <hr/>
	Missed calls
	Ringer deactivated
	<p>Caller filter (only for DECT 4070 and 4075 Handsets)</p> <hr/> <p>Attention: This icon, if active, appears in place of the Ringer deactivated icon.</p> <hr/>
	<p>Battery charge status.</p> <p>See Table 1 for Battery status icons.</p>

Dialogue area

The Dialogue area is the main area of the handset display. The information that appears in the Dialogue area varies according to the operational mode of the handset.

Idle mode


In Idle mode, the following information appears in the dialogue area:

- the name of the DECT system
- the Directory Number (DN) of the handset
- the handset name (if configured)
- the name of the active profile
- the time and date

If you leave the range of the DECT system, the message “No Network” appears.

The following figure shows the handset in Idle mode.

Figure 6: Idle mode

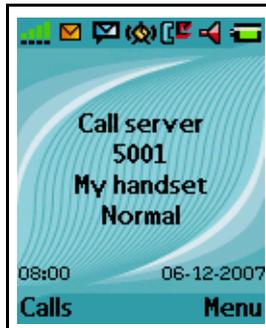

For more information about key functions, see [“Key functions in Idle mode”](#) (page 36).

Call mode

In Call mode, the following information appears in the dialogue area:

- the number and name (if available) of the calling party for an incoming call
- the number and name (if added to your contacts list) of the called party for an outgoing call
- the loudspeaker icon (if enabled)
- the microphone muted icon (if muted)

The following table shows the icons that can appear in the dialogue area when in Call mode.

Table 3: Dialogue area icons

Icon	Description
	Incoming call
	Outgoing call
	Loudspeaker on
	Microphone muted while loudspeaker on
	Microphone muted while loudspeaker off


For more information about key functions associated with the icons in the preceding table, see [“Key functions in Call mode” \(page 38\)](#).

Dialogue mode

In Dialogue mode, icons or information appear in the Dialogue area according to the operational mode of the handset

The following figure shows the Missed call(s) page.

Figure 7: Missed call(s) page

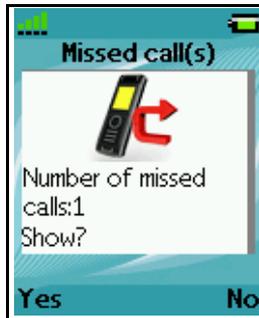

For more information about key functions, see [“Key functions in Dialogue mode” \(page 40\)](#).

Menu mode

In Menu mode, menu items (entries) or menu sections appear in the dialogue area.


The following figure shows the Main menu.

Figure 8: Main menu



The following figure shows the General settings menu.

Figure 9: General settings menu

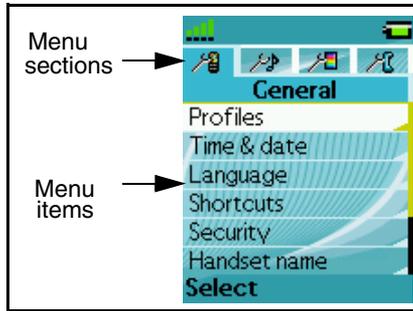

For more information about key functions see [“Key functions in Menu mode”](#) (page 40).

Edit mode

In Edit mode, you can use the dialogue area to enter and edit digits (numbers, date, time, or PIN) and text.

The following figure shows the Contacts name editing page.

Figure 10: Contacts name editing page



The following figure shows the Contact number editing page.

Figure 11: Contacts number editing page



The following figure shows the appointment Start date editing page.

Figure 12: Appointment Start date editing page



For more information about key functions, see “[Key functions in Edit mode](#)” (page 41).

Soft key line

Soft keys appear below the handset dialogue area. The key functions change automatically according to the operational state of the handset. For example, when the handset is in idle mode, you can press the **Menu** soft key, as shown in [Figure 5](#), to access the Main menu.

LED indicator (4075 only)

An LED indicator appears to the left of the speaker on the DECT 4075 handset. This indicator can flash red, green, or orange. Red signals a

high-priority event, green a medium priority event, and orange a low-priority event.

You can assign one of the following events to each priority level:

- Missed calls
- Text messages
- Voice messages
- Text and voice messages
- Mandown
- Low battery

For an example of event assignments, see the following table:

Table 4: Example event assignments

Priority	LED Colour	Example event assignment
High	Red	Low battery
Medium	Green	Missed call
Low	Orange	New message

With these example assignments in place, the following can occur:

- If you miss a call, the LED indicator flashes green.
- When the LED indicator is flashing green to indicate a missed call, and a new message arrives, the LED indicator continues to flash green because green signal events have a higher priority than orange signal events.
- When the LED indicator is flashing green to indicate a missed call, and the battery becomes low on charge, the LED indicator flashes red because red signal events have a higher priority than green signal events.

The LED indicator priorities are permanently assigned (red always indicates high priority, green medium, and orange low). LED indicator


priorities do not control the order in which the dialogs for the corresponding events appear on the display.

See [“Configuring the LED Indicator \(4075 only\)” \(page 158\)](#) for more details.

Handset controls

Use the following figure to familiarise yourself with the handset display and keys.

Figure 13: Handset controls

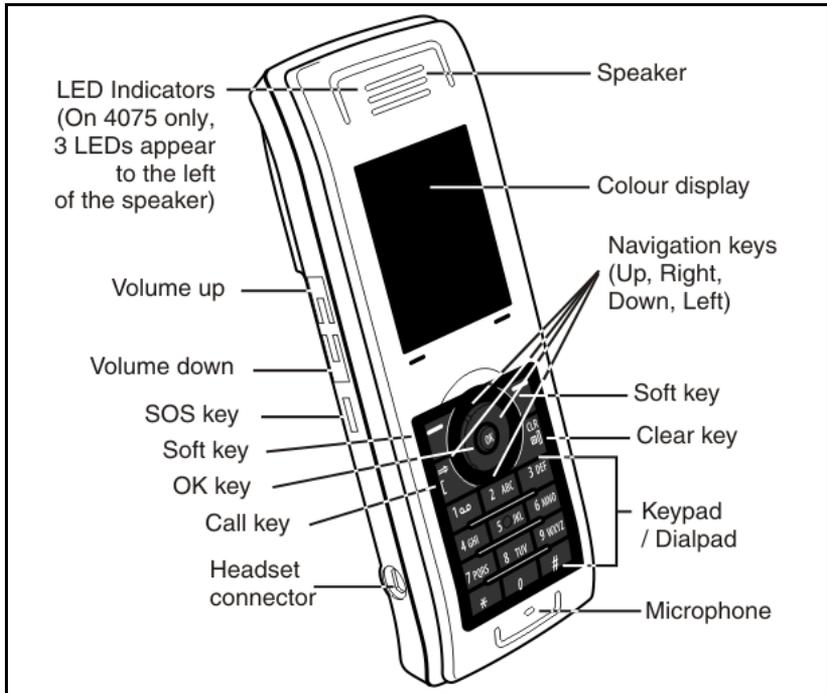

This section describes the following components and functions of your DECT 4027, 4070, or 4075 Handset:

- [“Key functions in Idle mode” \(page 36\)](#)
- [“Key functions in Call mode” \(page 38\)](#)

- “Key functions in Dialogue mode” (page 40)
- “Key functions in Menu mode” (page 40)
- “Key functions in Edit mode” (page 41)
- “Locking or unlocking the dialpad” (page 45)

Key functions in Idle mode

The following table describes the handset key functions in Idle mode.

Table 5: Keys functions in Idle mode

Key		Description
Left soft key		Press the Calls soft key to access the Calls menu.
Right soft key		Press the Menu soft key to access the Main menu.
Up key		Press the programmable Up navigation key to access the shortcut assigned to that key. The default shortcut assigned is the Contacts menu.
Down key		Press the programmable Down navigation key to access the shortcut assigned to that key. The default shortcut assigned is the Central Directory menu.
Left key		Press the programmable Left navigation key to access the shortcut assigned to that key. The default shortcut assigned is the Messaging menu.
Right key		Press the programmable Right navigation key to access the shortcut assigned to that key. The default shortcut assigned is the Profile menu.

Table 5: Keys functions in Idle mode (Continued)

 
Key		Description
OK key		Press the OK key, and then the Lock or Unlock soft key to lock or unlock the dialpad.
Call key		Press the Call key to initiate a call.
Clear key		Long press the Clr key to switch your handset on or off.
SOS key		<p>Long press the SOS key to make an emergency call (if configured).</p> <hr/> <p>Attention: You can make an emergency call using the SOS key even if the dialpad is locked.</p> <hr/>
1–9		<ul style="list-style-type: none"> • Press the 1–9 keys to enter predial mode. • Long press the 1–9 keys to speed dial a number (if configured).
0		Press the 0 key to enter predial mode.
*		<ul style="list-style-type: none"> • Press the * key to enter predial mode. • Long press the * key to enter a comma to indicate a pause when you edit a number.

Table 5: Keys functions in Idle mode (Continued)

Key		Description
#		<ul style="list-style-type: none"> Press the # key to enter predial mode. Long press the # key to switch between the current active profile and the Silent profile.

For more information about Idle mode, see [“Idle mode” \(page 29\)](#).

Key functions in Call mode

The following table describes the handset key functions in Call mode.

Table 6: Key functions in Call mode

Key		Description
Left soft key		<ul style="list-style-type: none"> Press the Spk on or Spk off soft key to turn the loudspeaker on or off during a call. Press the Silence soft key to mute the ringer for an incoming call.
Right soft key		<ul style="list-style-type: none"> Press the Mute soft key to mute the microphone during a call. Press the Reject soft key to reject an incoming call.
Up key		Press the Up navigation key to access the Contacts menu.

Table 6: Key functions in Call mode (Continued)

Key	Key	Description
OK key		<ul style="list-style-type: none"> Press the OK soft key to turn the loudspeaker on or off during a call. Press the OK key to answer an incoming call in handsfree mode (using the loudspeaker).
Call key		Press the Call key to place the established call on hold (and access a dial tone if only one call is active) or to switch between calls if more than one call is active.
Clear key		Press the Clr key to end a call.
Volume up key		Press the Volume up key to increase the handset volume during a call. A beep sounds when you reach the Max volume level.
Volume down key		Press the Volume down key to decrease the handset volume during a call. A beep sounds when you reach the Min volume level.
0-9, *, #		Press the 0-9 , * , or # key to enter digits, * , or # .

For more information about Call mode, see “Call mode” (page 29).

Key functions in Dialogue mode

The following table describes the handset key functions in Dialogue mode.

Table 7: Key functions in Dialogue mode

Key		Description
Left soft key		Press the Left soft key to select the item marked in the display.
Right soft key		Press the Right soft key to select the item marked in the display.
Clear key		Press the Clr key to exit Dialogue mode.
SOS key		Long press the SOS key to make an emergency call (if configured).

For more information about Dialogue mode, see [“Dialogue mode”](#) (page 31).

Key functions in Menu mode

The following table describes the handset key functions in Menu mode.

Table 8: Key functions in Menu mode

Key		Description
Left soft key		Press the Left soft key to select the item marked in the display.
Right soft key		Press the Right soft key to select the item marked in the display.
Up key		Press the Up key to position the cursor.

Table 8: Key functions in Menu mode (Continued)

Key		Description
Down key		Press the Down key to position the cursor.
Left key		Press the Left key to position the cursor.
Right key		Press the Right key to position the cursor.
Clear key		<ul style="list-style-type: none"> Press the Clr key to cancel the current action and to return to the previous menu. Long press the Clr key to return to Idle mode.
SOS key		Long press the SOS key to make an emergency call (if configured).

For more information about Menu mode, see [“Menu mode”](#) (page 31).

Key functions in Edit mode

The following table describes the handset key functions in Edit mode.

Table 9: Key functions in Edit mode

Key		Description
Left soft key		Press the Left soft key to select the item that is currently highlighted.
Right soft key		Press the Right soft key to select the item that is currently highlighted.

Table 9: Key functions in Edit mode (Continued)

Key		Description
Up key		Press the Up key to position the cursor.
Down key		Press the Down key to position the cursor.
Left key		Press the Left key to position the cursor.
Right key		Press the Right key to position the cursor.
Clear key		<ul style="list-style-type: none"> • Press the Clr key to cancel the current action and to return to the previous menu. • Long press the Clr key to return to Idle mode.
SOS key		Long press the SOS key to make an emergency call (if configured).
1		<ul style="list-style-type: none"> • Press the 1 key one or more times to enter the digit (for example, to enter a number, date, time, or PIN). • Press the 1 key one or more times to enter a special character. For more information, see “Key functions in text mode” (page 44).

Table 9: Key functions in Edit mode (Continued)

Key		Description
2–9	 	<ul style="list-style-type: none"> Press the 2–9 keys to enter the digits (for example, to enter a number, date, time, or PIN). Press the 2–9 keys one or more times to enter a letter. For more information, see “Key functions in text mode” (page 44).
0		<ul style="list-style-type: none"> Press the 0 key to enter the digit (for example, to enter a number, date, time, or PIN). Press the 0 key one or more times to insert a space or a punctuation mark. For more information, see “Key functions in text mode” (page 44).
*		<ul style="list-style-type: none"> Press the * key one or more times to enter a special character. For more information, see “Key functions in text mode” (page 44). Long press the * key to enter a comma when you edit a number. The comma indicates a pause.

Table 9: Key functions in Edit mode (Continued)

Key		Description
#		Press the # key to switch between modes: <ul style="list-style-type: none"> mode "abc": enter lowercase characters mode "Abc": enter an uppercase character followed by lowercase characters mode "ABC": enter uppercase characters mode "123": enter digits

You can use your handset keys to enter a number, symbol, or character in text mode.

The following table shows the keys you can press, (when the handset is in text mode) to insert letters, numbers, or symbols.

Table 10: Key functions in text mode

Key	Uppercase	Lowercase
1	1 £ \$ ¥ € @ % & # § ^	1 £ \$ ¥ € @ % & # § ^
2	A B C 2 Æ À Á Â Ã Ä Ç	a b c 2 æ à á â ã ç
3	D E F 3 È É Ê Ë	d e f 3 è é ê ë
4	G H I 4 Í Î Ï	g h i 4 í î ï
5	J K L 5	j k l 5
6	M N O 6 Æ Ó Ô Õ Ø	m n o 6 æ ó ô õ ø
7	P Q R S 7 Š Š	p q r s 7 š š
8	T U V 8 Ù Ú Û Ü	t u v 8 ù ú û ü
9	W X Y Z 9 Ÿ Ž	w x y z 9 Ÿ ž

Key	Uppercase	Lowercase
0	(space) . , ? ! 0 : ; ' " ' ; _ ~	(space) . , ? ! 0 : ; ' " ' ; _ ~
*	* / + - = () < > { } [] \	* / + - = () < > { } [] \

Locking or unlocking the dialpad

Use the dialpad Lock feature to prevent accidental operation of the handset. When the Lock feature is active and you receive an incoming call, the dialpad temporarily unlocks so you can answer the call. The Lock reactivates when you terminate the call.

To lock the dialpad, perform the following step:

Attention: You can dial 911 or 112, or use the SOS key, when the dialpad is locked.

OK

1. Press the **OK** key to toggle between the **Calls** soft key and the **Lock** soft key.

Lock

2. Press the **Lock** soft key.

To unlock the dialpad, perform the following step:

OK

1. Press the **OK** key

Unlock

2. Press the **Unlock** soft key within three seconds.

Attention: The **Unlock** soft key is available for only three seconds after you press the **OK** key.

To configure automatic dialpad Lock, see [“Automatic dialpad lock”](#) (page 160).

DECT system configuration

Use the information in this section to configure your DECT handset to work with a DECT system.

This section describes the following tasks:

- [“Accessing the Connectivity menu” \(page 46\)](#)
- [“Subscribing the handset to a DECT system” \(page 47\)](#)
- [“Manually selecting the DECT system” \(page 49\)](#)
- [“Enabling automatic DECT system selection” \(page 50\)](#)
- [“Deregistering the handset” \(page 51\)](#)
- [“Editing the system name and phone number” \(page 51\)](#)

For more information about using the handset controls, see [“Handset controls” \(page 35\)](#).

Accessing the Connectivity menu

To access the Connectivity menu, perform the following steps:

Menu



1. Press the **Menu** soft key to access the **Main** menu.
2. Press the **Up** or **Down** key to highlight the **Settings** icon.

Select



3. Press the **Select** soft key.
4. Press the **Left** or **Right** key to highlight the **Connectivity** menu.

Subscribing the handset to a DECT system

You must subscribe the handset to at least one DECT system before you can use the handset to make a call. The handset can operate with a maximum of four DECT systems, for which the handset stores the name of the system in a subscription record. Whenever the handset enters the range of a subscribed DECT system, the name of the system appears on the handset display.

Attention: If your supplier preinstalls the handset, you need not subscribe your handset to a system. When the handset is not yet subscribed to a system, the message “Register” appears.

Use the PABX-PIN code to register the handset with a DECT system.

Before you subscribe to a DECT system, obtain the following information from your system administrator:

- **PARK code:** A system ID that enables your telephone to differentiate between DECT systems when more than one DECT system is present.
- **DECT system name:** The name of the system to which you subscribe. After you enter the system name, it appears on the idle display.
- **Phone number:** The local phone number assigned to your DECT handset.

Attention: Once you have obtained your PIN code, you have 15 minutes to subscribe the handset. After 15 minutes have elapsed, the PIN code is deactivated you must activate a new one.

To subscribe your handset to a DECT system, perform the following steps:



1. Open the **Connectivity** menu as shown in “Accessing the Connectivity menu” (page 46).



Register

Select



Empty

Select

Yes



Save



OK

2. Press the **Up** or **Down** key to highlight the **Register** option.

3. Press the **Select** soft key to start the registration process.

4. Press the **Up** or **Down** key to choose one of the following:
If the handset is subscribed to fewer than four systems, choose **Empty**
OR
If the handset is already subscribed to four systems, choose the name of the system to overwrite.

5. Press the **Select** soft key, and then press the **Yes** soft key if you want to overwrite a system. The **PARK** prompt appears.

6. Use the **Dialpad** to enter the PARK code.

Attention: If more than one DECT system overlaps in your location, you are sometimes required to enter a PARK code (system ID). If only one DECT system is available, make no entry, and press the **Skip** soft key.

7. Press the **Save** soft key. The **PIN** prompt appears.

8. Use the **Dialpad** to enter the PIN (authorisation code).

9. Press the **OK** soft key. The **Network name** prompt appears.



10. Use the **Dialpad** to enter the system name.

11. Press the **Save** soft key.
The **Number** prompt appears.

Save



12. Use the **Dialpad** to enter the phone number assigned to your handset.

13. Press the **Save** soft key.

Save



14. Press the **Clr** key one or more times to return to the idle display.

You can now use the handset to make and receive calls.

Manually selecting the DECT system

If you subscribe the handset to more than one DECT system, you can manually select which system the handset uses. To manually select a DECT system, perform the following steps:



1. Open the **Connectivity** menu using the steps in “[Accessing the Connectivity menu](#)” (page 46).



2. Press the **Up** or **Down** key to highlight the **Network select** option.

Network select

Select

3. Press the **Select** soft key.

Select

4. Choose the name of the system from the list.

5. Press the **Select** soft key.
The name of the currently active system highlights.



6. Press the **Clr** key one or more times to return to the idle display.

Enabling automatic DECT system selection

If you subscribe the handset to more than one DECT system, you can configure your handset to automatically select the system to which it connects.

If Automatic selection is enabled, when the handset moves out of range of the current system, it automatically attempts to connect and log on to another available (subscribed) DECT system.

To enable automatic selection of a DECT system, perform the following steps:



1. Open the **Connectivity** menu using the steps in “[Accessing the Connectivity menu](#)” (page 46).



2. Press the **Up** or **Down** key to highlight the **Network select** option.

Network select

Select

3. Press the **Select** soft key.

Auto. select

4. Highlight **Auto. select**.

Select

5. Press the **Select** soft key.

The name of the currently active system highlights.



 
6. Press the **Clr** key one or more times to return to the idle display.

Deregistering the handset

To deregister the handset from a DECT system, perform the following steps:



1. Open the **Connectivity** menu, using the steps in “Accessing the Connectivity menu” (page 46).



2. Press the **Up** or **Down** key to highlight the **Deregister** option.

Deregister

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the system to deregister.

Select

5. Press the **Select** soft key.

Yes

6. Choose one of the following:
Press the **Yes** soft key to deregister the selected DECT system.

No

OR

Press the **No** soft key to exit without making any changes.



7. Press the **Clr** key one or more times to return to the idle display.

Editing the system name and phone number

To edit the system name and phone number of your handset, perform the following steps:



1. Open the **Connectivity** menu using the steps in “Accessing the Connectivity menu” (page 46).



Network select

Select



Select

Edit



Save



Save



2. Press the **Up** or **Down** key to highlight the **Network select** option.
3. Press the **Select** soft key.
4. Press the **Up** or **Down** key to highlight the system to edit.
5. Press the **Select** soft key.
6. Choose the name of the system from the list.
7. Press the **Edit** soft key.
The name of the currently active system highlights.
8. Use the **Dialpad** to edit the system name and.
9. Press the **Save** soft key.
10. Use the **Dialpad** to edit the local phone number.
11. Press the **Save** soft key.
12. Press the **Clr** key one or more times to return to the idle display.

Call features

Use the information in this section to make and receive calls, and to configure and use call features:

- “Make calls” (page 53)
- “Answer calls” (page 60)
- “Change settings during a call” (page 62)
- “Transfer calls” (page 63)
- “Voice mail” (page 64)

Make calls

This section describes the features associated with making a call. You can make a call from your handset using any of the following methods:

- “Dialling a number” (page 54)
- “Predial mode” (page 54)
- “Using Speed dial” (page 55)
- “Using Loudspeaker” (page 55)
- “Using the telephone book to dial a number” (page 56)
- “Using the Central Directory to dial a number” (page 57)
- “Making an SOS call” (page 59)
- “Making an Emergency call” (page 59)

Attention: To conserve the battery charge of your handset, the display automatically dims during calls. Press the **OK** key to restore the display.

To configure the number of seconds that elapse before the display dims, change the “first value” timer in Power save settings. For more information, see **Configuring power save (p. 186)**.

Dialling a number

To dial a number, perform the following steps:



1. Press the **Call** key.



2. Use the **Dialpad** to enter the phone number.

You can add additional digits to the number you dial. For example, in some offices you must add a digit at the beginning of the number to place a call to an outside line.

Predial mode

Use the information in this section to enter a phone number before you dial.

Predialling a number

To predial a number, perform the following steps:



1. Use the **Dialpad** to enter the phone number.

You can add additional digits to the number you dial. For example, in some offices you must add a digit at the beginning of the number to place a call to an outside line.



2. Press the **Call** key to dial the number.

OR

Press the **OK** key to dial the number using the Loudspeaker.

Editing a number in Predial mode

To edit a number in Predial mode, perform the following steps:



1. Use the **Left** or **Right** key to position the insertion point.



2. Use the **Dialpad** to enter the new digits.

Press the **Clr** key to delete individual digits or to cancel predial.

Long press the ***** key to insert a comma to indicate a pause when you enter a number.



3. Press the **Call** key.



4. Press the **Clr** key to return to the idle display.

Attention: When you predial a number, if the input cursor is positioned after the telephone number, the new digits are inserted at the end of that telephone number. If the input cursor is positioned at any other point, the new digits are inserted in front of the insertion point.

Using Speed dial

Use the Speed dial feature to make calls by dialling a one-digit code.

To use speed dial, perform the following step:



1. Long press the number key assigned to the phone number.

You can use speed dial only after it is configured. For more information, see [“Assigning a speed dial number” \(page 101\)](#).

Using Loudspeaker

Your handset includes a Loudspeaker feature to allow several people in a room to listen to a call. You can predial a call using the Loudspeaker by first dialling the number, and then pressing the OK key.

When the loudspeaker function is active, the loudspeaker icon appears. When using loudspeaker:

Call features

- Place the handset upright on a smooth, flat surface, and ensure that the loudspeaker and microphone free of obstruction.
- Position the handset approximately 0.5 metres away from yourself while you speak.

To enable the Loudspeaker feature during a call, perform the following steps:

1. Make or answer a call.

Spk. on

2. Press the **Spk. on** soft key to enable the feature. The loudspeaker icon appears.



3. Press the **Volume up** or **Volume down** key to configure the volume.



Spk. off

4. Press the **Spk. off** soft key to disable the feature.

Using the telephone book to dial a number

To use the handset telephone book to dial a number, perform the following steps:

Menu

1. Press the **Menu** soft key to access the **Main** menu.



2. Press the **Up** or **Down** key to highlight the **Contacts** icon.



Select

3. Press the **Select** soft key.



Private

Select

4. If your communication system supports the **Central Directory** feature, press the **Up** or **Down** key to highlight the **Private** option, and press the **Select** soft key.

OR

If your communication system does not support the **Central Directory** feature, skip this step.



OR



5. Press the **Up** or **Down** keys to select the number you want to dial.

OR

Enter the first characters of the name using the dialpad. For example enter “B” to display the first name in the contacts list starting with the letter B. For more information, see Table 9, “**Key functions in text mode**” (page 44).



6. Press the **Call** key to make a call.

Using the Central Directory to dial a number

Your handset allows you to use the Central Directory to dial a number. The Central Directory is a database that contains user names and Directory Numbers (DN).

Attention: The Central Directory feature is available only if provided by your communication system.

To use the Central Directory to dial a number, perform the following steps:

Menu

 
1. Press the **Menu** soft key to access the **Main** menu.



2. Press the **Up** or **Down** key to highlight the **Contacts** icon.

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select the **Central Directory** option.

 
Central Directory

Select

5. Press the **Select** key.

OK

6. Perform one of the following:
Press the **OK** key and press the **Up** and **Down** keys to select the number you want to dial.



OR

OR



Enter the first characters of the name using the dialpad. For example enter “B” to display the first name in the contacts list starting with the letter B. For more information, see Table 9, “[Key functions in text mode](#)” (page 44).



7. Press the **Call** key to make a call.

Making an SOS call

Use this option to make emergency calls to a specific telephone number. When you press the **SOS** key, the phone sends a text message or initiates a voice call.

Attention: The Messaging feature is available on DECT 4070 and 4075 Handsets only.

You must program an SOS number to use the SOS function. For more information, see [“Emergency call configuration” \(page 198\)](#).

To make an SOS call, perform the following step:



1. Long press the **SOS** key to dial the number or send a message.

Making an Emergency call

When the dialpad is locked, the only calls you can make are SOS calls, or Emergency calls to 911 or 112.

To make an emergency call when the handset is locked use the following steps:



1. Dial the number (either 911 or 112)

2. Perform one of the following:



Press the **Call** key to make the call using the handset, or using a wired headset if you have one installed.

OR



OR



Press the **OK** key or **Left** soft key to make the call using the loudspeaker

Note: If you have a Bluetooth wireless technology headset installed, the handset makes the emergency call using the Bluetooth headset when you press **Call** key, **OK** key, or **Call** soft key.

Answer calls

When you receive an incoming call, the ringer sounds and the call alert symbol flashes. You can choose to answer or reject an incoming call. This section describes the following features:

- “Answering a call in Normal mode” (page 61)
- “Answering a call using any key” (page 61)
- “Auto-answering mode” (page 61)
- “Muting the ringer” (page 61)
- “Rejecting a call” (page 62)

Attention: To conserve the battery charge of your handset, the display automatically dims during calls. Press the **OK** key to restore the display.

To configure the number of seconds that elapse before the display dims, change the “first value” timer in Power save settings. For more information, see **Configuring power save (p. 186)**.

Answering a call in Normal mode

To answer a call in Normal mode, perform the following step:



1. Press the **Call** key (Loudspeaker is off).
OR



- Press the **OK** key (Loudspeaker is on).

Answering a call using any key

To answer a call using any key, perform the following step:



1. Press any key on the dialpad to answer the call.

Attention: This feature is available only when configured. For more information, see [“Answer mode configuration” \(page 189\)](#).

Auto-answering mode

In Auto-answering mode, calls are answered automatically on the handset.

Attention: This feature is available only when configured. For more information, see [“Answer mode configuration” \(page 189\)](#).

Muting the ringer

To mute the ringer, perform the following step:

Silence

1. Press the **Silence** soft key to mute the ringer during a call alert.

Rejecting a call

To reject an incoming call, perform the following step:

Reject

1. Press the **Reject** soft key during a call alert.

The call diverts to your voice mail system or another number if call forward feature is configured. Contact your system administrator to determine if you can use this feature.

Attention: If you reject or do not answer a call, or if the call is blocked by Caller Filter (4070 and 4075 only), the message *Number of missed calls: N Show?* appears on the display, where N is the number of calls that have been blocked, missed, or rejected.

Press the **Yes** soft key to open the Missed calls list or press the **No** soft key to close the dialogue. For more information, see “Missed calls list” (page 86).

Change settings during a call

During a call, you can adjust the headset or loudspeaker volume or mute the handset.

This section describes the following tasks:

- “Adjusting the headset or loudspeaker volume” (page 62)
- “Using mute during a call” (page 63)

Adjusting the headset or loudspeaker volume

During a call, you can change the headset or loudspeaker volume using the volume keys. A bar in the display increases or decreases to indicate the volume setting. A beep sounds at the minimum or maximum volume.

To adjust the headset or loudspeaker volume, perform the following step:



1. Press the **Volume up** or **Volume down** key.

When you adjust the headset or loudspeaker volume, the handset remembers the new setting the next time you use the handset.

Using mute during a call

To mute and unmute the handset microphone, perform the following steps:

Mute

1. Press the **Mute** soft key to deactivate the handset microphone.

Unmute

2. Press the **Unmute** soft key to activate the handset microphone.

Transfer calls

You can use this option to transfer a call or add a third party to a conference call. The behavior of the Transfer feature can vary depending on your system configuration. Contact your system administrator to find out what transfer options are available for your use.

Transferring a call

To transfer a call, perform the following steps:



1. Press the **Call** key to place the active call on hold.



2. Use the **Dialpad** to dial the phone number of the third party.



3. Press the **Call** key to alternate between the two callers.



4. Press the **Clr** key to transfer the call.

Voice mail

Use the Voice mail feature to listen to voice messages left by calling parties. You can receive a voice mail in the following situations:


- if your handset is switched off
- if your handset is busy
- if your handset is out of the coverage area

A new voice message dialogue appears once per caller, when the caller leaves a first new message in the mailbox. A voice mail symbol appears in the icon line and disappears after you play the message.

Attention: The Voice mail feature is available only when configured on the PBX.

The following figure shows the voice mail display page.

Figure 14: New voice message page

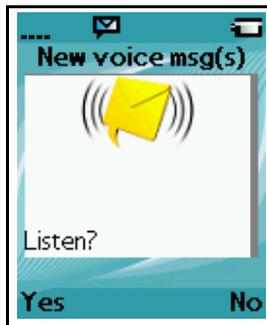

To listen to a New voice message, perform the following step:

Yes

1. Choose one of the following:
Press the **Yes** soft key to listen to the new voice message. To do so, you must first configure a voice mail number. See [“Defining a voice mail number” \(page 66\)](#) for more information.

OR

No

- OR
- Press the **No** soft key to close the dialogue. For more information, see [“Normal and urgent messages” \(page 126\)](#).

Note: (4075 only) You can configure the LED indicator to flash when voice mail messages are waiting. After you have listened to the voice mail message, the LED indicator turns off. See [“Configuring the LED Indicator \(4075 only\)” \(page 158\)](#), for more details.

Use this section to perform the following tasks:

- [“Accessing voice mail” \(page 65\)](#)
- [“Defining a voice mail number” \(page 66\)](#)

Accessing voice mail

To access voice mail, perform the following steps:

Menu



Select



1. Press the **Menu** soft key to access the **Main** menu.
2. Press the **Up** or **Down** key to highlight the **Messaging** icon.
3. Press the **Select** soft key.
4. Press the **Left** or **Right** key to select the **Inbox** menu.



Listen to voice mail

Select

5. Press the **Up** or **Down** key to select the **Listen to voice mail** option.
6. Press the **Select** soft key.

The handset automatically dials the voice mail access number.

Attention: Ensure that you configure the voice mail access number in the messaging settings. For more information about configuring message settings, see “[Normal and urgent messages](#)” (page 126).



7. Press the **Clr** key one or more times to return to the idle display.

Defining a voice mail number

To define a voice mail access number, perform the following steps:



 
1. Open the **Settings** menu using the steps in “[Accessing the message Settings menu](#)” (page 124).



Voice mail number

2. Press the **Up** or **Down** key to highlight the **Voice mail number** option.

Select



Enter number

Lookup contact

3. Press the **Select** soft key.
4. Press the **Up** or **Down** key to choose one of the following options:
 - Highlight **Enter number** to use the **Dialpad** to enter the number, and then press the **Save** soft key. **Note:** Long press the * key to insert a comma to indicate a pause.
 - Highlight **Lookup contact** to select the number from your contacts list, and then press the **Select** soft key. Press the **Up** or **Down** key to choose a contact, and press the **Select** soft key.
5. Press the **Clr** key one or more times to return to the idle display.



Attention: You can also dial the voice mail number directly.

Calls list

The Calls list stores information about dialled, answered, or missed calls (maximum 50 entries for all lists).

Attention: The maximum number of entries you can store varies depending on the amount of storage space used by other features.

When there is more than one call to or from a phone number, only the most recent call appears in the appropriate call list.

The Calls menu contains four tabs: All, Answered, Dialled, and Missed. You can open the required list by pressing the **Left or Right** key. When you open the list, the call information appears. The first entry is highlighted, the contact name or CLID (Calling Line Identification) and the time and date appear.

Figure 15: Calls list with normal text size

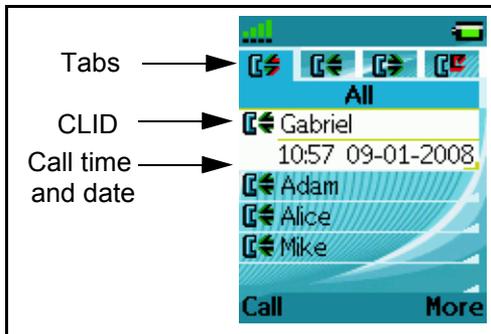


Figure 16: Calls list with small text size

Attention: Depending on the selected Time and Date format, the font size varies, as shown in [Figure 16](#).

If you change the time format to am/pm mode and the date format is dd/mm/yyyy (for example 06/12/2007), or mm/dd/yyyy (for example 12/06/2007), or dd-mmm-yyyy (06-Dec-2007), only the date appears in the lists. You can view the time of the call by following the procedures for viewing call information which are found in each Calls list section.

This section describes the following features:

- “All calls list” ([page 70](#))
- “Answered calls list” ([page 75](#))
- “Dialled calls list” ([page 81](#))
- “Missed calls list” ([page 86](#))

The following table describes the Calls list tabs.

Table 11: Calls list tabs

Tab	Description
	All calls
	Answered calls

Tab	Description
	Dialled calls
	Missed calls

All calls list

The All calls list shows all entries from the Answered, Dialled, and Missed calls lists. The most recent entry appears at the top of the list.

This section describes the following tasks:

- [“Accessing the All calls list” \(page 70\)](#)
- [“Viewing information about a call” \(page 71\)](#)
- [“Dialling a number” \(page 71\)](#)
- [“Transferring a number to your contacts list” \(page 72\)](#)
- [“Transferring a number to the caller filter list” \(page 73\)](#)
- [“Deleting an entry” \(page 74\)](#)
- [“Deleting all entries” \(page 75\)](#)

Attention: To conserve the battery charge of your handset, the display automatically dims during calls. Press the **OK** key to restore the display.

To configure the number of seconds that elapse before the display dims, change the “first value” timer in Power save settings. For more information, see [Configuring power save \(p. 186\)](#).

Accessing the All calls list

To access the All calls list, perform the following steps:

Calls

1. Press the **Calls** soft key.



2. Press the **Left** or **Right** key to select the **All calls** list.

Viewing information about a call

To view the information about calls in the All calls list, such as time and date, perform the following steps:



 
1. Open the **All calls** list using the steps in “[Accessing the All calls list](#)” (page 70).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **View** option.

View

Select

5. Press the **Select** soft key.



 
6. Press the **Clr** key one or more times to return to the idle display.

Dialling a number

To dial a number from the All calls list, perform the following steps:



1. Open the **All calls** list using the steps in “[Accessing the All calls list](#)” (page 70).



2. Press the **Up** or **Down** key to highlight the required entry.

Attention: If you want to predial from the **All calls** list, press the **More** soft key, press the **Up** or **Down** key to highlight the **Edit** before call option, and press the **Select** soft key.



3. Press the **Call** key to dial the number.

Transferring a number to your contacts list

To transfer a number from the Missed calls list to a new entry in your Contacts list, perform the following steps:



1. Open the **All calls** list using the steps in “[Accessing the All calls list](#)” (page 70).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Save** option.

Save

Select

5. Press the **Select** soft key.



6. Press the **Up** or **Down** key to highlight the **Contacts** option.

Contacts

Select

7. Press the **Select** soft key.

Add

- Press the **Add** soft key and use the **Dialpad** to edit the number and enter the name (if necessary).

Save

- Press the **Save** soft key.

Yes

- Press the **Yes** soft key to confirm the changes.



- Press the **Clr** key one or more times to return to the idle display.

Transferring a number to the caller filter list

Attention: The Caller filter feature is available on the DECT 4070 and 4075 Handsets only.

To transfer a number from the All calls list to the caller filter list, perform the following steps:



- Open the **All calls** list using the steps in “[Accessing the All calls list](#)” (page 70).



- Press the **Up** or **Down** key to highlight the required entry.

More

- Press the **More** soft key.

 


- Press the **Up** or **Down** key to highlight the **Save** option.

Save

Select

- Press the **Select** soft key.



Caller filter

Select



Save



6. Press the **Up** or **Down** key to highlight the **Caller Filter** option.

7. Press the **Select** soft key.

 
8. Use the **Dialpad** to edit the number and enter the name (if necessary).

9. Press the **Save** soft key.

10. Press the **Clr** key one or more times to return to the idle display.

Deleting an entry

To delete an entry from the All calls list, perform the following steps:



More



Delete entry

Select

Yes



1. Open the **All calls** list using the steps in “[Accessing the All calls list](#)” (page 70).

2. Press the **Up** or **Down** key to highlight the required entry.

3. Press the **More** soft key.

4. Press the **Up** or **Down** key to highlight the **Delete entry** option.

5. Press the **Select** soft key.

6. Press the **Yes** soft key to confirm the changes.

7. Press the **Clr** key one or more times to return to the idle display.

Deleting all entries

To delete all entries from the All calls list, perform the following steps:



1. Open the **All calls** list using the steps in “[Accessing the All calls list](#)” (page 70).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Delete all** option.

Delete all

5. Press the **Select** soft key.

Select

Yes

6. Press the **Yes** soft key to confirm the changes.



7. Press the **Clr** key one or more times to return to the idle display.

Answered calls list

The Answered calls list stores information about the answered calls. The most recent entry appears at the top of the list.

 
This section describes the following tasks:

- “[Accessing the Answered calls list](#)” (page 76)
- “[Viewing information about an answered call](#)” (page 76)
- “[Dialling a number](#)” (page 77)
- “[Transferring a number to your Contacts list](#)” (page 77)
- “[Transferring a number to the caller filter list](#)” (page 78)
- “[Deleting an entry](#)” (page 79)

- [“Deleting all entries” \(page 80\)](#)


Accessing the Answered calls list

To access the Answered calls list, perform the following steps:

- 
1. Press the **Calls** soft key.
- 
2. Press the **Left** or **Right** key to select the **Answered calls** list.
- 

Viewing information about an answered call

 To view information about an answered call, such as time and date, perform the following steps:


- 
1. Open the **Answered calls** list using the steps in [“Accessing the Answered calls list” \(page 76\)](#).
- 
2. Press the **Up** or **Down** key to highlight the required entry.
- 
3. Press the **More** soft key.
- 
4. Press the **Up** or **Down** key to highlight the **View** option.
- 
5. Press the **Select** soft key.
- 
6. Press the **Clr** key one or more times to return to the idle display.
- 

Dialling a number

To dial a number from the Answered calls list, perform the following steps:



 1. Open the **Answered calls** list using the steps in “[Accessing the Answered calls list](#)” (page 76).



2. Press the **Up** or **Down** key to highlight the required entry.

Attention: If you want to redial from the **Answered calls** list, press the **More** soft key, press the **Up** or **Down** key to highlight the **Edit** before call option, and press the **Select** soft key.



3. Press the **Call** key to dial the number.

Transferring a number to your Contacts list

To transfer a number from the Missed calls list to a new entry in your Contacts list, perform the following steps:



1. Open the **Answered calls** list using the steps in “[Accessing the Answered calls list](#)” (page 76).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Save** option.

Save

5. Press the **Select** soft key.

Select



6. Press the **Up** or **Down** key to highlight the **Contacts** option.

Contacts

Select

7. Press the **Select** soft key.

Add

8. Press the **Add** soft key and use the **Dialpad** to edit the number and enter the name (if necessary).



Save

9. Press the **Save** soft key.

Yes

10. Press the **Yes** soft key to confirm your changes.



11. Press the **Clr** key one or more times to return to the idle display.

Transferring a number to the caller filter list

Attention: The Caller filter feature is available on the DECT 4070 and 4075 Handsets only.

To transfer a number from the Answered calls list to the caller filter list, perform the following steps:



1. Open the **Answered calls** list using the steps in “Accessing the Answered calls list” (page 76).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Save** option.

Save

Select

5. Press the **Select** soft key.



6. Press the **Up** or **Down** key to highlight the **Caller Filter** option.

Caller filter

Select

7. Press the **Select** soft key.



8. Use the **Dialpad** to edit the number and enter the name (if necessary).

Save

9. Press the **Save** soft key.



10. Press the **Clr** key one or more times to return to the idle display.

Deleting an entry

To delete an entry from the Answered calls list, perform the following steps:



 
1. Open the **Answered calls** list using the steps in “Accessing the Answered calls list” (page 76).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Delete entry** option.

Delete entry

Select

5. Press the **Select** soft key.

Yes

6. Press the **Yes** soft key to confirm the changes.



7. Press the **Clr** key one or more times to return to the idle display.

Deleting all entries

To delete all entries from the Answered calls list, perform the following steps:



1. Open the **Answered calls** list using the steps in “[Accessing the Answered calls list](#)” (page 76).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Delete all** option.

Delete all

Select

5. Press the **Select** soft key.

Yes

6. Press the **Yes** soft key to confirm the changes.



7. Press the **Clr** key one or more times to return to the idle display.

Dialled calls list

The Dialled calls list stores information about dialled calls. The most recent entry appears at the top of the list.

This section describes the following tasks:

- “Accessing the Dialled calls list” (page 81)
- “Viewing information about a dialled call” (page 81)
- “Dialling a number” (page 82)
- “Transferring a number to your contacts list” (page 72)
- “Transferring a number to the Caller filter list” (page 84)
- “Deleting an entry” (page 85)
- “Deleting all entries” (page 85)

Accessing the Dialled calls list

To access the Dialled calls list, perform the following steps:

Calls

1. Press the **Calls** soft key.



2. Press the **Left** or **Right** key to select the **Dialled calls** list.

Viewing information about a dialled call

To view information about a dialled call, such as time and date, perform the following steps:



1. Open the **Dialled calls** list using the steps in “Accessing the Dialled calls list” (page 81).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **View** option.

View

Select

5. Press the **Select** soft key.



6. Press the **Clr** key one or more times to return to the idle display.

Dialling a number

To dial a number from the Dialed calls list, perform the following steps:



1. Open the **Dialed calls** list using the steps in “[Accessing the Dialed calls list](#)” (page 81).



2. Press the **Up** or **Down** key to highlight the required entry.

Attention: If you want to redial from the **Dialed calls** list, press the **More** soft key, press the **Up** or **Down** key to highlight the **Edit** before call option, and then press the **Select** soft key.



 
3. Press the **Call** key to dial the number.

Transferring a number to your contacts list

To transfer a number from the Missed calls list to a new entry in your Contacts list, perform the following steps:



1. Open the **Dialed calls** list using the steps in “[Accessing the Dialed calls list](#)” (page 81).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Save** option.

Save

Select

5. Press the **Select** soft key.



6. Press the **Up** or **Down** key to highlight the **Contacts** option.

Contacts

Select

7. Press the **Select** soft key.

Add

8. Press the **Add** soft key and use the **Dialpad** to edit the number and enter the name (if necessary).



Save

9. Press the **Save** soft key.

Yes

10. Press the **Yes** soft key to confirm the changes.



11. Press the **Clr** key one or more times to return to the idle display.

 
Transferring a number to the Caller filter list

Attention: The Caller filter feature is available on the DECT 4070 and 4075 Handsets only.

To transfer a number from the Dialed calls list to the Caller filter list, perform the following steps:



1. Open the **Dialed calls** list using the steps in [“Accessing the Dialed calls list” \(page 81\)](#).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Save** option.

Save

Select

5. Press the **Select** soft key.



6. Press the **Up** or **Down** key to highlight the **Caller filter** option.

Caller filter

Select

7. Press the **Select** soft key.



8. Use the **Dialpad** to edit the number and enter the name (if necessary).

Save

9. Press the **Save** soft key.



 
10. Press the **Clr** key one or more times to return to the idle display.

Deleting an entry

To delete an entry from the Dialed calls list, perform the following steps:



1. Open the **Dialed calls** list using the steps in [“Accessing the Dialed calls list” \(page 81\)](#).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Delete entry** option.

Delete entry

Select

5. Press the **Select** soft key.

Yes

6. Press the **Yes** soft key to confirm the changes.



7. Press the **Clr** key one or more times to return to the idle display.

Deleting all entries

To delete all entries from the Dialed calls list, perform the following steps:



1. Open the **Dialed calls** list using the steps in [“Accessing the Dialed calls list” \(page 81\)](#).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Delete all** option.

Delete all

Select

5. Press the **Select** soft key.

Yes

6. Press the **Yes** soft key to confirm the changes.



7. Press the **Clr** key one or more times to return to the idle display.

Missed calls list

The Missed calls list stores information about unanswered calls. The most recent entry appears at the top of the list.

Note: (4075 only) You can configure the LED indicator to flash when you have missed calls. After you view information about missed calls, the LED indicator turns off. See “[Configuring the LED Indicator \(4075 only\)](#)” (page 158), for more details.

The Missed calls list includes the following features:

- Recently missed (unanswered, rejected or blocked by Caller filter (4070 and 4075 only)) and unchecked calls are bolded.

Attention: If you configure the handset to display the time using am/pm, the date appears for recently missed unchecked calls, but the time does not appear.

- When you do not answer a call, or a call is rejected or blocked by Caller Filter (4070 and 4075 only), the handset stores the number in the Missed calls list.
- If you answer a call from a number in the Missed calls list, the handset moves the number from the Missed calls list to the Answered calls list.

- If you dial a number from the Missed calls list, the number automatically moves from the Missed calls list to the Dialed calls list.

This section describes the following tasks:

- [“Accessing the Missed calls list”](#) (page 87)
- [“Viewing information about a missed call”](#) (page 88)
- [“Dialling a number”](#) (page 89)
- [“Transferring a number to your Contacts list”](#) (page 89)
- [“Transferring a number to the Caller filter list”](#) (page 90)
- [“Deleting an entry”](#) (page 91)
- [“Deleting all entries”](#) (page 92)

The following table shows the missed call icons.

Table 12: Missed calls icon

Icon	Description
	Unanswered or rejected call
	Blocked call by Caller filter (4070 and 4075 only)

Accessing the Missed calls list

When the message “*Number of missed calls: N Show?*” appears, you have missed one or more calls (N is the number of calls you missed).

Note: The message “*Number of missed calls: N Show?*” indicates the total number of missed calls, including both new calls and calls you have already checked in the Missed calls list.

To access the Missed calls list, perform the following steps:

Yes

OR

 
Calls




1. When the message “*Number of missed calls: N Show?*” appears, perform one of the following:
Press the **Yes** soft key.
OR
Press the **Calls** soft key, and then press the **Left** or **Right** key to select the **Missed calls** list.
The list of missed calls appears.

Viewing information about a missed call

To view the information about a missed call, such as time and date, perform the following steps:



More

 

View

Select



 
1. Open the **Missed calls** list using the steps in “[Accessing the Missed calls list](#)” (page 87).
2. Press the **Up** or **Down** key to highlight the required entry.
3. Press the **More** soft key.
4. Press the **Up** or **Down** key to highlight the **View** option.
5. Press the **Select** soft key.
6. Press the **Clr** key one or more times to return to the idle display.

Dialling a number

To dial a number from the Missed calls list, perform the following steps:



1. Open the **Missed calls** list using the steps in “[Accessing the Missed calls list](#)” (page 87).



2. Press the **Up** or **Down** key to highlight the required entry.

Attention: To redial from the **Missed calls** list, press the **More** soft key, press the **Up** or **Down** key to highlight the **Edit** before call option, and press the **Select** soft key.



3. Press the **Call** key to dial the number.

Transferring a number to your Contacts list

To transfer a number from the Missed calls list to a new entry in your Contacts list, perform the following steps:



1. Open the **Missed calls** list using the steps in “[Accessing the Missed calls list](#)” (page 87).



2. Press the **Up** or **Down** key to highlight the required entry.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Save** option.

Save

Select

 
5. Press the **Select** soft key.



6. Press the **Up** or **Down** key to highlight the **Contacts** option.




7. Press the **Select** soft key.



8. Press the **Add** soft key and use the **Dialpad** to edit the number and enter the name (if necessary).



 9. Press the **Save** soft key.



10. Press the **Yes** soft key to confirm the changes.



11. Press the **Clr** key one or more times to return to the idle display.

Transferring a number to the Caller filter list

Attention: The Caller filter feature is available only on the DECT 4070 and 4075 Handsets.

To transfer a number from the Missed calls list to the Caller filter list, perform the following steps:



1. Open the **Missed calls** list using the steps in "[Accessing the Missed calls list](#)" (page 87).



2. Press the **Up** or **Down** key to highlight the required entry.



3. Press the **More** soft key.



Save

Select

- Press the **Up** or **Down** key to highlight the **Save** option.

- Press the **Select** soft key.



Caller filter

Select

- Press the **Up** or **Down** key to highlight the **Caller Filter** option.

- Press the **Select** soft key.



Save

- Use the **Dialpad** to edit the number and enter the name (if necessary).

- Press the **Save** soft key.



- Press the **Clr** key one or more times to return to the idle display.

Deleting an entry

To delete an entry from the Missed calls list, perform the following steps:



- Open the **Missed calls** list using the steps in [“Accessing the Missed calls list” \(page 87\)](#).



More

- Press the **Up** or **Down** key to highlight the required entry.

- Press the **More** soft key.



Delete entry

Select

Yes



4. Press the **Up** or **Down** key to highlight the **Delete entry** option.
5. Press the **Select** soft key.
6. Press the **Yes** soft key to confirm the changes.
7. Press the **Clr** key one or more times to return to the idle display.

Deleting all entries

To delete all entries from the Missed calls list, perform the following steps:



More



Delete all

Select

Yes



1. Open the **Missed calls** list using the steps in [“Accessing the Missed calls list” \(page 87\)](#).
2. Press the **Up** or **Down** key to highlight the required entry.
3. Press the **More** soft key.
4. Press the **Up** or **Down** key to highlight the **Delete all** option.
5. Press the **Select** soft key.
6. Press the **Yes** soft key to confirm the changes.
7. Press the **Clr** key one or more times to return to the idle display.

Contacts

You can use your handset to store contact numbers and names.

The Contacts menu allows you to store a maximum of 50 phone numbers and names without a MEM card, or a maximum of 200 with an installed MEM card. You can search for names in the Contacts list.

Attention: The maximum number of entries you can store varies depending on the amount of storage space used by other features.

The following restrictions apply:

- Each entry must have a unique name, however, you can store the same number under more than one name.
- Each entry can include a maximum of 16 characters in the name, and a maximum of 32 digits in the contact number.
- Each entry can contain up to 4 numbers. You can identify each number using one of the following types: work, mobile, home, or other.
- If you receive a call from a caller whose number is in the Contact list, the caller name appears on the display.

This section describes the following tasks.

- [“Accessing the Contacts menu” \(page 94\)](#)
- [“Adding a new contact” \(page 94\)](#)
- [“Adding a contact number” \(page 95\)](#)
- [“Editing a contact number” \(page 96\)](#)
- [“Deleting a contact number” \(page 97\)](#)
- [“Editing a contact name” \(page 98\)](#)
- [“Editing a contact ringtone” \(page 99\)](#)
- [“Deleting a contact” \(page 100\)](#)

- “Speed dial feature” (page 101)
- “Transfer numbers to your contacts list” (page 103)
- “Transferring numbers to the caller filter list” (page 104)

Accessing the Contacts menu

To access the Contacts menu, perform the following steps:

Menu



Select

1. Press the **Menu** soft key.
2. Press the **Up** or **Down** key to highlight the **Contacts** icon.
3. Press the **Select** soft key.

Attention: If your communication system supports the **Central Directory** feature, press the **Up** or **Down** key to highlight the **Private** option, and then press the **Select** soft key.

Adding a new contact

To add a new contact, perform the following steps:



New contact

Add



Save

1. Open the **Contacts** menu using the steps in “Accessing the Contacts menu” (page 94).
2. Highlight the **New contact** option.
3. Press the **Add** soft key.
4. Use the **Dialpad** to enter the phone number. Long press the * key to insert a comma to indicate a pause when you enter a number.
5. Press the **Save** soft key.



6. Use the **Dialpad** to enter the name.

Save

7. Press the **Save** soft key.

Yes

8. Press the **Yes** soft key to save the contact.



 
9. Press the **Clr** key one or more times to return to the idle display.

Adding a contact number

A contact can have more than one number associated with it; a maximum of 50 phone numbers without a MEM card, or a maximum of 200 with an installed MEM card. To add an additional number to a contact, perform the following steps:



1. Open the **Contacts** menu using the steps in “[Accessing the Contacts menu](#)” (page 94).



2. Press the **Up** or **Down** key to choose the contact to edit.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Edit contact** option.

Edit contact

5. Press the **Select** soft key.

Select



6. Press the **Up** or **Down** key to highlight the **New number** option.

New number

7. Press the **Add** soft key to add a new number for this contact.

Add



8. Press the **Up** or **Down** key to highlight the required number type.

OK

9. Press the **OK** soft key.



10. Use the **Dialpad** to enter the phone number.

Save

11. Press the **Save** soft key.

Save

12. Press the **Save** soft key.

Yes

13. Press the **Yes** soft key to confirm the changes.



 
14. Press the **Clr** key one or more times to return to the idle display.

Editing a contact number

To edit a contact number, perform the following steps:



1. Open the **Contacts** menu using the steps in “[Accessing the Contacts menu](#)” (page 94).




2. Press the **Up** or **Down** key to choose the contact to edit.



3. Press the **More** soft key.

 More



4. Press the **Up** or **Down** key to highlight the **Edit contact** option.

Edit contact

5. Press the **Select** soft key.

Select



6. Press the **Up** or **Down** key to highlight the number you want to edit.

Attention: If more than one number is stored for the contact you select, select the number you want to edit; you cannot restore information once you edit it.

Edit

7. Press the **Edit** soft key.



8. Press the **Up** or **Down** key to highlight the required number type.

OK

9. Press the **OK** soft key.



10. Use the **Dialpad** to edit the phone number.

Save

11. Press the **Save** soft key.

Save

12. Press the **Save** soft key.

Yes

13. Press the **Yes** soft key to confirm the changes.



14. Press the **Clr** key one or more times to return to the idle display.

Deleting a contact number

To delete a contact number, perform the following steps:



1. Open the **Contacts** menu using the steps in “[Accessing the Contacts menu](#)” (page 94).



2. Press the **Up** or **Down** key to choose the contact to edit.

More

3. Press the **More** soft key.



Edit contact

Select



Edit

4. Press the **Up** or **Down** key to highlight the **Edit contact** option.
5. Press the **Select** soft key.

Note: You can delete the number only if more than one number is stored for the contact you select.

6. Press the **Up** or **Down** key to highlight the number you want to delete.

Attention: If more than one number is stored for the contact you select, select the number you want to delete; you cannot restore information once you delete it.

7. Press the **Edit** soft key.

OK

8. Press the **OK** soft key.

Clear

9. Press the **Clear** soft key to delete the number.

Save

10. Press the **Save** soft key.

Save

11. Press the **Save** soft key.

Yes

12. Press the **Yes** soft key to confirm the changes.



 
13. Press the **Clr** key one or more times to return to the idle display.

Editing a contact name

To edit a contact name, perform the following steps:




1. Open the **Contacts** menu using the steps in “[Accessing the Contacts menu](#)” (page 94).



2. Press the **Up** or **Down** key to choose the contact to edit.

More

 3. Press the **More** soft key.




4. Press the **Up** or **Down** key to highlight the **Edit contact** option.

Edit contact

Select

 5. Press the **Select** soft key.



6. Press the **Left** or **Right** key to choose the **Name** menu.

Edit

7. Press the **Edit** soft key.



8. Use the **Dialpad** to edit the contact name.

Save

9. Press the **Save** soft key.

Yes

10. Press the **Yes** soft key to confirm the changes.



11. Press the **Clr** key one or more times to return to the idle display.

Editing a contact ringtone

To change a contact ringtone, perform the following steps:



1. Open the **Contacts** menu using the steps in “[Accessing the Contacts menu](#)” (page 94).



2. Press the **Up** or **Down** key to choose the contact to edit.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Edit contact** option.

Edit contact

Select

5. Press the **Select** soft key.



Edit

6. Press the **Left** or **Right** key to choose the **Ringtone** menu.

7. Press the **Edit** soft key.

Note: The ringtone you assign to a contact applies to all numbers associated with that contact.



Select

8. Press the **Up** or **Down** key to highlight the required ringtone.

9. Press the **Select** soft key.

Save

10. Press the **Save** soft key.

Yes

11. Press the **Yes** soft key to confirm the changes.



 
12. Press the **Clr** key one or more times to return to the idle display.

Deleting a contact

To delete a contact, perform the following steps:



1. Open the **Contacts** menu using the steps in “[Accessing the Contacts menu](#)” (page 94).



More

2. Press the **Up** or **Down** key to choose the contact to delete.

3. Press the **More** soft key.



Delete contact

Delete all contacts

Select

Yes



4. Press the **Up** or **Down** key to highlight the **Delete contact** option and press the **Select** soft key.

OR

Press the **Up** or **Down** key to highlight the **Delete all contacts** option to delete all contacts and press the **Select** soft key.

5. Press the **Yes** soft key to delete the contact.

6. Press the **Clr** key one or more times to return to the idle display.

Speed dial feature

Use the Speed dial feature to place calls by dialling a one-digit code. To dial a number using Speed dial, ensure that your handset is in idle mode and long press the key to which you assigned the number.

Attention: Only the first number added to the contact can be assigned to a Speed Dial key.

This section describes the following tasks:

 
- [“Assigning a speed dial number” \(page 101\)](#)
- [“Reassigning the speed dial number” \(page 102\)](#)
- [“Clearing the speed dial number” \(page 103\)](#)

Assigning a speed dial number

To assign a speed dial number, perform the following steps:



1. Open the **Contacts** menu using the steps in [“Accessing the Contacts menu” \(page 94\)](#).



2. Press the **Up** or **Down** key to choose the required contact.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Speed dial** option.

Speed dial



5. Press the **Up** or **Down** key to choose a digit for the speed dial.

Add

6. Press the **Add** soft key.



7. Press the **Clr** key one or more times to return to the idle display.

Reassigning the speed dial number

To reassign a speed dial number, perform the following steps:



1. Open the **Contacts** menu using the steps in "[Accessing the Contacts menu](#)" (page 94).



2. Press the **Up** or **Down** key to choose a new contact for which to configure a speed dial number.

 
More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Speed dial** option.

Speed dial



5. Press the **Up** or **Down** key to choose the assigned digit for speed dial.

Replace

6. Press the **Replace** soft key.



7. Press the **Clr** key one or more times to return to the idle display.

Clearing the speed dial number

To clear a speed dial assignment, perform the following steps:



1. Open the **Contacts** menu using the steps in [“Accessing the Contacts menu” \(page 94\)](#).



2. Press the **Up** or **Down** key to choose a contact.



3. Press the **More** soft key.



More



4. Press the **Up** or **Down** key to highlight the **Speed dial** option.



Speed dial



5. Press the **Up** or **Down** key to choose the digit assigned for speed dial.



Delete

6. Press the **Delete** soft key.



7. Press the **Clr** key one or more times to return to the idle display.

Transfer numbers to your contacts list

You can transfer phone numbers from any calls list to your contacts list. See the following sections for information about transferring a number to your contacts list:

- To transfer a number from the All calls list, see “[Transferring a number to your contacts list](#)” (page 72).
- To transfer a number from the Answered calls list, see “[Transferring a number to your Contacts list](#)” (page 77).
- To transfer a number from the Dialed calls list, see “[Transferring a number to your contacts list](#)” (page 82).
- To transfer a number from the Missed calls list, see “[Transferring a number to your Contacts list](#)” (page 89).

Transferring numbers to the caller filter list

Attention: The Caller filter feature is available on the DECT 4070 and 4075 Handsets only.

To transfer a number to the Caller filter list from the contacts list, perform the following steps:



1. Open the **Contacts** menu using the steps in “[Accessing the Contacts menu](#)” (page 94).

Select



2. Press the **Up** or **Down** key to choose the contact to edit.

More



3. Press the **More** soft key.
4. Press the **Up** or **Down** key to highlight the **Save in caller filter** option.

Save in caller filter

Select

5. Press the **Select** soft key.



6. Use the **Dialpad** to edit the number and name (if necessary).

Save

7. Press the **Save** soft key.



8. Press the **Clr** key one or more times to return to the idle display.

Messaging

You can send and receive text messages using the DECT 4070 and 4075 Handsets.

Attention: The Messaging feature is not available on the 4027 Handset.

Note: (4075 only) You can configure the LED indicator to flash when you have new (unread) text messages. After you check the messages, the LED indicator turns off. See [“Configuring the LED Indicator \(4075 only\)” \(page 158\)](#) for more details.

This section describes the following tasks:

- [“Message limitations” \(page 107\)](#)
- [“New messages and drafts” \(page 107\)](#)
- [“Inbox” \(page 112\)](#)
- [“Sent messages” \(page 120\)](#)
- [“Message settings” \(page 123\)](#)
- [“Normal and urgent messages” \(page 126\)](#)
- [“Message list full” \(page 127\)](#)

Attention: The Messaging feature is available only if supported by your communication system. Contact your system administrator to determine if you can use this feature.

Message limitations

The following limitations apply to the Messaging feature:

- With a MEM card installed, the system can store up to 80 messages.

Attention: The maximum number of messages you can store can be less than 80, depending on how much memory is used by other features.

- You can send or receive messages if your handset is in range of a DECT system to which the handset is subscribed.
- An error beep sounds if the message is undelivered.
- If you receive a message while you are making changes in a menu, the phone exits from the menu, and any entries that you have not yet saved are lost. Similarly, if you receive a message while you are dialing, the phone number you are dialing is lost, and if you receive a message while you are writing a text message, the text of the message you are writing is lost.

New messages and drafts

This section describes the following tasks:

- [“Accessing the Messaging menu” \(page 107\)](#)
- [“Saving a new message or editing a draft” \(page 108\)](#)
- [“Sending a message” \(page 109\)](#)
- [“Deleting a draft message” \(page 111\)](#)
- [“Deleting all draft messages” \(page 112\)](#)

Accessing the Messaging menu

To access the Messaging menu, perform the following steps:

Menu

1. Press the **Menu** soft key to access the **Main** menu.



2. Press the **Up** or **Down** key to highlight the **Messaging** icon.

Select

3. Press the **Select** soft key.

The following table describes the message icons.

Table 13: Menu section icons

Icon	Description
	Draft message
	Inbox message
	Outbox message
	Message settings

Saving a new message or editing a draft

To save a new message or edit a draft, perform the following steps:



1. Open the **Messaging** menu using the steps in [“Accessing the Messaging menu”](#) (page 107).



2. Press the **Left** or **Right** key to choose the **New and draft** option.



3. Press the **Up** or **Down** key to highlight the **New Message** option or the existing draft.

New message



4. Use the **Dialpad** to create or edit the message.



5. Press the **Clr** key.

Yes

6. Press the **Yes** soft key to save the message as a draft.

Sending a message

To send a new message or draft, perform the following steps:



1. Open the **Messaging** menu using the steps in “[Accessing the Messaging menu](#)” (page 107).



2. Press the **Left** or **Right** key to choose the **New and draft** option.

 


3. Press the **Up** or **Down** key to highlight the new message or the existing draft.



4. Use the **Dialpad** to edit the message (if necessary).

Send



Normal

Urgent

5. Press the **Send** soft key.
6. Press the **Up** or **Down** key to select **Normal** or **Urgent**.

Attention: For more information about normal and urgent messages, see “[Normal and urgent messages](#)” (page 126).

Select



Lookup contact

Enter number

Send to many

7. Press the **Select** soft key,
8. Press the **Up** or **Down** keys to choose any of the following options:
 - **Lookup contact** to choose the number from your contacts list.
 - **Enter number** to use the **Dialpad** to enter the number of the addressee.
 - **Send to many** to send the same text message to multiple recipients. The Contact list appears; choose the contact name and number of the first recipient.

Note: You can use the **Send to many** option to send messages only to numbers that are in the Contact list.

Send

Send to many



Send

9. Press the **Send** soft key.
10. Optionally, if you selected **Send to many** in step 6, perform the following:
 - a. Choose another contact name and number.
 - b. Press the **Send** soft key.
 - c. Repeat steps a and b until you have sent the message to all of the recipients.



11. Press the **Clr** key one or more times to return to the idle display.

Deleting a draft message

To delete a draft message, perform the following steps:



1. Open the **Messaging** menu using the steps in “Accessing the Messaging menu” (page 107).



2. Press the **Left** or **Right** key to choose the **New and draft** option.



3. Press the **Up** or **Down** key to highlight the existing draft.

More

4. Press the **More** soft key.



Delete message

5. Press the **Up** or **Down** key to select the **Delete message** option.

Select

6. Press the **Select** soft key.

Yes

7. Press the **Yes** soft key to confirm the changes.



 
8. Press the **Clr** key one or more times to return to the idle display.

Deleting all draft messages

To delete all draft messages, perform the following steps:



1. Open the **Messaging** menu using the steps in “Accessing the Messaging menu” (page 107).



2. Press the **Left** or **Right** key to choose the **New and draft** option.



3. Press the **Up** or **Down** key to highlight the existing draft.

More

4. Press the **More** soft key.



5. Press the **Up** or **Down** key to select **Delete all messages**.

Delete all messages

Select

6. Press the **Select** soft key.

Yes

7. Press the **Yes** soft key to confirm the changes.



8. Press the **Clr** key one or more times to return to the idle display.

Inbox

This section describes the following tasks:

- “Accessing the Messaging Inbox” (page 113)
- “Reading a message” (page 113)
- “Replying to a message” (page 114)
- “Forwarding a message” (page 115)

 
- “Saving a number to the contacts list” (page 117)
- “Deleting a message” (page 117)
- “Deleting all messages from the Inbox” (page 118)

Accessing the Messaging Inbox

To access the Messaging Inbox, perform the following steps:

Menu

1. Press the **Menu** soft key to access the **Main** menu.



2. Press the **Up** or **Down** key to highlight the **Messaging** icon.



3. Press the **Select** soft key.

Select



4. Press the **Left** or **Right** key to choose the **Inbox** menu section.

Reading a message

To read a message that you have received, perform the following steps:



 
1. Open the **Inbox** using the steps in “Accessing the Messaging Inbox” (page 113).



2. Press the **Up** or **Down** key to highlight the message you want to read.

Select

3. Press the **Select** soft key to read the message.



4. Press the **Up** or **Down** key to scroll through the text of the message.



 
5. Press the **Clr** key one or more times to return to the idle display.

Replying to a message

To reply to a message, perform the following steps:



1. Open the **Inbox** using the steps in “[Accessing the Messaging Inbox](#)” (page 113).



2. Press the **Up** or **Down** key to highlight the message to which you want to reply.

Select

3. Press the **Select** soft key to read the message.



4. Press the **Up** or **Down** key to scroll through the text of the message.

Reply

 
5. Press the **Reply** soft key.



6. Use the **Dialpad** to enter the message you want to send.

Send

7. Press the **Send** soft key.



8. Press the **Up** or **Down** key to select **Normal** or **Urgent**.

Normal

Urgent

Attention: For more information, see “[Normal and urgent messages](#)” (page 126).

Select

9. Press the **Select** soft key.

Forwarding a message

To forward a message, perform the following steps:



1. Open the **Inbox** using the steps in “[Accessing the Messaging Inbox](#)” (page 113).



2. Press the **Up** or **Down** key to highlight the message you want to forward.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Forward** option.

Forward



5. Optionally, use the **Dialpad** to edit the message.

Send

6. Press the **Send** soft key.



7. Press the **Up** or **Down** key to select **Normal** or **Urgent**.

Normal

 
Urgent

Attention: For more information, see “[Normal and urgent messages](#)” (page 126).

8. Press the **Select** soft key.

Select

9. Press the **Select** soft key



Lookup contact

Enter number

Send to many

10. Press the **Up** or **Down** key to choose any of the following options:

- **Lookup contact** to choose the number from your contacts list.
- **Enter number** to use the **Dialpad** to enter the number of the addressee.
- **Send to many** to choose several numbers from your contact list.

Send

11. Press the **Send** soft key to send the message.



12. Press the **Clr** key one or more times to return to the idle display.

Saving a number to the contacts list

To save a number from the Inbox to your contacts list, perform the



1. Open the **Inbox** using the steps in “[Accessing the Messaging Inbox](#)” (page 113).



2. Press the **Up** or **Down** key to highlight a message.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Save to contacts** option.

Save to contacts

Add

5. Press the **Add** soft key.



6. Optionally, use the dialpad to edit the number and enter the name.

Save

7. Press the **Save** soft key.

Yes

8. Press the **Yes** soft key to confirm the changes.



9. Press the **Clr** key one or more times to return to the idle display.

 
following steps:

Deleting a message

To delete a message from the Inbox, perform the following steps:



1. Open the **Inbox** using the steps in “[Accessing the Messaging Inbox](#)” (page 113).



2. Press the **Up** or **Down** key to highlight the message you want to delete.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to select the **Delete message** option.

Delete message

Select

5. Press the **Select** soft key.

Yes

6. Press the **Yes** soft key to confirm the changes.



 
7. Press the **Clr** key one or more times to return to the idle display.

Deleting all messages from the Inbox

To delete all messages from the Inbox, perform the following steps:




1. Open the **Inbox** using the steps in “[Accessing the Messaging Inbox](#)” (page 113).



2. Press the **Up** or **Down** key to highlight a message.

More

 3. Press the **More** soft key.



Delete all messages

4. Press the **Up** or **Down** key to select the **Delete all messages** option.

Select

5. Press the **Select** soft key.

Yes

6. Press the **Yes** soft key to confirm the changes.



7. Press the **Clr** key one or more times to return to the idle display.

Sent messages

This section describes the following tasks:

- “Accessing the Sent Messages menu” (page 120)
- “Reading a sent message” (page 120)
- “Forwarding a sent message” (page 121)
- “Deleting a sent message” (page 122)
- “Deleting all sent messages” (page 123)

Accessing the Sent Messages menu

To access the Sent Messages menu, perform the following steps:

Menu



Select



 
1. Press the **Menu** soft key to access the **Main** menu.
2. Press the **Up** or **Down** key to highlight the **Messaging** icon
3. Press the **Select** soft key.
4. Press the **Left** or **Right** key to choose the **Sent** menu section.

Reading a sent message

To read a sent message, perform the following steps:



1. Open the **Sent** menu using the steps in “Accessing the Sent Messages menu” (page 120).



2. Press the **Up** or **Down** key to highlight the sent message.

View

3. Press the **View** soft key to read the message.



4. Press the **Up** or **Down** key to scroll through the text of the message.



5. Press the **Clr** key one or more times to return to the idle display.

Forwarding a sent message

To forward a sent message, perform the following steps:



1. Open the **Sent** menu using the steps in [“Accessing the Sent Messages menu”](#) (page 120).



2. Press the **Up** or **Down** key to highlight the sent message to forward.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to highlight the **Edit** option.

Edit



5. Use the **Dialpad** to edit the sent message (if necessary).

Send

6. Press the **Send** soft key.



Normal

Urgent

7. Press the **Up** or **Down** key to select **Normal** or **Urgent**.

For more information, see [“Normal and urgent messages”](#) (page 126).

Select



Lookup contact

Enter number

Send to many

8. Press the **Select** soft key and press the **Up** or **Down** key to choose any of the following options:

- **Lookup contact** to choose the number from your contacts list.
- **Enter number** to use the **Dialpad** to enter the number of the addressee.
- **Send to many** to choose several numbers from your contacts list.

Send

9. Press the **Send** soft key to send the message.



 
10. Press the **Clr** key one or more times to return to the idle display.

Deleting a sent message

To delete a sent message, perform the following steps:



1. Open the **Sent** menu using the steps in [“Accessing the Sent Messages menu”](#) (page 120).



2. Press the **Up** or **Down** key to highlight the sent message to delete.

More



Delete message

3. Press the **More** soft key.
4. Press the **Up** or **Down** key to select the **Delete message** option.

Select

Yes

5. Press the **Select** soft key and then press the **Yes** soft key to confirm the changes.



6. Press the **Clr** key one or more times to return to the idle display.

Deleting all sent messages

To delete all sent messages, perform the following steps:



1. Open the **Sent** menu using the steps in “[Accessing the Sent Messages menu](#)” (page 120).



2. Press the **Up** or **Down** key to highlight any sent message.

More

3. Press the **More** soft key.



4. Press the **Up** or **Down** key to select the **Delete all messages** option.

Delete all messages

Select

Yes

5. Press the **Select** soft key.
6. Press the **Yes** soft key to confirm the changes.



7. Press the **Clr** key one or more times to return to the idle display.

Message settings

 
This section describes the following tasks:

- “[Accessing the message Settings menu](#)” (page 124)
- “[Configuring the Overwrite option](#)” (page 124)
- “[Managing sent messages](#)” (page 125)

Accessing the message Settings menu

To access the message Settings menu, perform the following steps:

Menu



Select



1. Press the **Menu** soft key to access the **Main** menu.
2. Press the **Up** or **Down** key to highlight the **Messaging** icon.
3. Press the **Select** soft key.
4. Press the **Left** or **Right** key to choose **Settings**.

Configuring the Overwrite option

Use the Overwrite option to control what happens when the handset receives a new message, but there is no room to store more messages. When there is no room to store an incoming message, the handset does one of the following:

- If the Overwrite option is enabled, the oldest message stored on the phone is overwritten.
- If the Overwrite option is disabled, the handset does one of the following:
 - for urgent messages, the handset shows the message but does not store it.
 - for normal messages, the handset rejects the message.

To configure the overwrite option, perform the following steps:



1. Open the message **Settings** menu using the steps in “[Accessing the message Settings menu](#)” (page 124).

 


2. Press the **Up** or **Down** key to highlight the **Overwrite old** option.

Overwrite old

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to choose one of the following:

on
OR
off.

on

OR

off

Select

5. Press the **Select** soft key.



6. Press the **Clr** key one or more times to return to the idle display.

Managing sent messages

Use this option to choose whether sent messages are stored in the handset:

- If the Sent message option is enabled, sent messages are stored in the handset.
- If the Sent message option is disabled, sent messages are not stored.

To configure the sent message option, perform the following steps:



1. Open the message **Settings** menu using the steps in [“Accessing the message Settings menu”](#) (page 124).



2. Press the **Up** or **Down** key to highlight the **Sent message** option.

Sent message

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to choose one of the following:

on
OR
off.

on

OR

off

Select

5. Press the **Select** soft key.



6. Press the **Clr** key one or more times to return to the idle display.

Normal and urgent messages

The system differentiates between normal and urgent messages, which the handset signals with different ringer melodies.

- Normal messages

You need not confirm normal messages. If you enable normal message display, normal messages appear on the display immediately upon receipt. If you disable normal message display, normal messages do not appear.

The melody for normal messages plays when you receive a message, unless you disable the ringer. A short alert tone sounds if you receive a normal message during a call.

- Urgent messages

You must confirm urgent messages. Urgent messages appear immediately on the display.

If the dialpad on your handset is locked, the lock temporarily deactivates when you receive an urgent message so that you can acknowledge the receipt.

A melody plays when you receive an urgent message, unless you disable the ringer. The ringer volume increases to the maximum during the signalling process. If you receive an urgent message during a call, a repeated alert tone sounds.

This section describes the following tasks:

- [“Confirming urgent messages” \(page 127\)](#)

Confirming urgent messages

You must confirm the receipt of an urgent message. If you do not confirm an urgent message within 60 seconds, the system notifies the originator that the message was not delivered.

When you receive an urgent message, perform the following step:

OK

1. Press **OK** or **Delete** to confirm the receipt of a message.

Delete

All other keys are blocked until you confirm the message by pressing **OK** or **Delete**.

Message list full

The message list can store a maximum of 80 messages if a MEM card is installed; if the MEM card is full, the message “Storage full” appears, and the system handles new messages according to the overwrite setting.

You can configure how your handset handles new messages once the message list is full:

- if Overwrite is on, the handset deletes the oldest message before it stores the new message.
- if Overwrite is off (this is the default configuration), the handset does one of the following:
 - for urgent messages, the handset shows the message but does not store it.
 - for normal messages, the handset rejects the message.

For more information about configuring Overwrite, see [“Configuring the Overwrite option” \(page 124\)](#).

Calendar

View the calendar in weekly or monthly format. You can also configure reminders, appointments, and meeting alerts.

The Calendar allows you to store a maximum of 80 (without the MEM card) and a maximum of 100 (with installed MEM card) appointments.

Attention: The maximum number of entries you can store varies depending on the amount of storage space used by other features.

This section describes the following tasks:

- [“Accessing the Calendar” \(page 129\)](#)
- [“Changing the calendar format” \(page 129\)](#)
- [“Selecting a date” \(page 130\)](#)
- [“Adding an appointment” \(page 130\)](#)
- [“Viewing an appointment” \(page 132\)](#)
- [“Editing an appointment” \(page 133\)](#)
- [“Copying an appointment” \(page 134\)](#)
- [“Deleting an appointment” \(page 136\)](#)

**CAUTION**

You must charge your handset before you configure the handset time and date. Each time you remove the battery pack or switch the handset off it loses the time and date information; you must manually reset it after you reinstall the battery pack or switch the handset off and on.

If your system provides the date and time information to DECT handsets, the date and time settings update automatically when you switch on the handset. Contact your system administrator to determine if you can use this feature.

Accessing the Calendar

To access the Calendar, perform the following steps:

Menu

1. Press the **Menu** soft key to access the **Main** menu.



2. Press the **Up** or **Down** key to highlight the **Calendar** icon.



Select

3. Press the **Select** soft key.

Changing the calendar format

To change the calendar format, perform the following steps:



1. Open the **Calendar** menu using the steps in “[Accessing the Calendar](#)” (page 129).

More

2. Press the **More** soft key
3. Press the **Up** or **Down** key to highlight the **View week** or **View month** option.



View week

View month

Select

4. Press the **Select** soft key.
5. Press the **Clr** key one or more times to return to the idle display.



Selecting a date

To select a date in the calendar, perform the following steps:



1. Open the **Calendar** menu using the steps in “[Accessing the Calendar](#)” (page 129).

More

Go to date

2. Press the **More** soft key to highlight the **Go to date** option

Select

3. Press the **Select** soft key.



4. Use the **Dialpad** to enter the required date

Select

5. Press the **Select** soft key.

More

Go to today

6. To return to the current date, press the **More** soft key, and highlight the **Go to today** option

Select

7. Press the **Select** soft key.



8. Press the **Clr** key one or more times to return to the idle display.

Adding an appointment

To add an appointment to the calendar, perform the following steps:



1. Open the **Calendar** menu using the steps in “[Accessing the Calendar](#)” (page 129).

More

Go to date

2. Press the **More** soft key to highlight the **Go to date** option

Select

3. Press the **Select** soft key.



Select

4. Use the **Dialpad** to enter the required date
5. Press the **Select** soft key.

Select



New appointment

Add

6. Press the **Select** soft key.
7. Use the **Up** or **Down** key to highlight the **New appointment** option.

8. Press the **Add** soft key.



Continue

9. Use the **Dialpad** to enter the start date.

10. Press the **Continue** soft key.



Continue

11. Use the **Dialpad** to enter the start time.

12. Press the **Continue** soft key.



Select

13. Press the **Up** or **Down** key to highlight the required duration.

14. Press the **Select** soft key.



Continue

15. Use the **Dialpad** to enter the subject of the appointment.

16. Press the **Continue** soft key.



Continue

17. Use the **Dialpad** to enter the location of the appointment.

18. Press the **Continue** soft key.



19. Press the **Up** or **Down** key to highlight the required reminder.

Select

20. Press the **Select** soft key.



21. Press the **Clr** key one or more times to return to the idle display.

Viewing an appointment

To view an appointment in the calendar, perform the following steps:



1. Open the **Calendar** menu using the steps in “[Accessing the Calendar](#)” (page 129).

More

2. Press the **More** soft key, to highlight the **Go to date** option.

Go to date

Select

3. Press the **Select** soft key.



4. Use the **Dialpad** to enter the date of the appointment.

Select

5. Press the **Select** soft key.

Select

6. Press the **Select** soft key.



7. Press the **Up** or **Down** key to highlight the appointment to view.

View

8. Press the **View** soft key.



9. Press the **Clr** key one or more times to return to the idle display.

Editing an appointment

To edit an appointment in the calendar, perform the following steps:



1. Open the **Calendar** menu using the steps in “[Accessing the Calendar](#)” (page 129).

More

Go to date

2. Press the **More** soft key, to highlight the **Go to date** option.

Select

3. Press the **Select** soft key.



4. Use the **Dialpad** to enter the date of the appointment.

Select

5. Press the **Select** soft key.

Select

6. Press the **Select** soft key and then press the **Up** or **Down** key to highlight the appointment to edit.



7. Press the **More** soft key.

More



8. Press the **Up** or **Down** key to highlight the **Edit** option.

Edit

9. Press the **Select** soft key.

Select



10. Use the **Dialpad** to edit the start date.

Continue

 
11. Press the **Continue** soft key.



12. Use the **Dialpad** to edit the start time.

Continue

13. Press the **Continue** soft key.



14. Press the **Up** or **Down** key to highlight the required duration.

Select

15. Press the **Select** soft key.



16. Use the **Dialpad** to edit the subject of the appointment.

Continue

17. Press the **Continue** soft key.



18. Press the **Up** or **Down** key to highlight the required reminder.

Select

19. Press the **Select** soft key.



20. Press the **Clr** key one or more times to return to the idle display.

Copying an appointment

To copy an appointment, perform the following steps:



1. Open the **Calendar** menu, using the steps in [“Accessing the Calendar” \(page 129\)](#).

More

2. Press the **More** soft key to highlight the **Go to date** option

Go to date

Select

3. Press the **Select** soft key.



4. Use the **Dialpad** to enter the date of the appointment.

Select

5. Press the **Select** soft key.

Select



6. Press the **Select** soft key and then press the **Up** or **Down** key to highlight the appointment to copy.

More



7. Press the **More** soft key.

Copy

Select

9. Press the **Select** soft key



 
Continue

10. Optionally, use the **Dialpad** to enter the start date of the new appointment, press the **Continue** soft key.



Continue

11. Optionally, use the **Dialpad** to enter the start time of the new appointment, and press the **Continue** soft key.



Select

12. Press the **Up** or **Down** key to highlight the required duration.

13. Press the **Select** soft key.



Continue

14. Optionally, use the **Dialpad** to enter the subject of the appointment, and press the **Continue** soft key.



Continue

15. Optionally, use the **Dialpad** to enter the location of the appointment, and press the **Continue** soft key.



Select

16. Press the **Up** or **Down** key to highlight the required reminder.

17. Press the **Select** soft key.



18. Press the **Clr** key one or more times to return to the idle display.

Deleting an appointment

To delete an appointment from the calendar, perform the following steps:



1. Open the **Calendar** menu using the steps in [“Accessing the Calendar” \(page 129\)](#).

More

Go to date

2. Press the **More** soft key to highlight the **Go to date** option.

Select

3. Press the **Select** soft key.



4. Use the **Dialpad** to enter the date of the appointment.

Select

5. Press the **Select** soft key.



6. Press the **Select** soft key and then press the **Up** or **Down** key to highlight the appointment to delete.

Select

More

7. Press the **More** soft key.



8. Press the **Up** or **Down** key to highlight the **Delete** option.

Delete

9. Press the **Select** soft key.

Select

Yes

10. Press the **Yes** soft key to confirm the deletion.



11. Press the **Clr** key one or more times to return to the idle display.

Calculator, Stopwatch, and Alarms

This section explains the following features available on your DECT 4027, 4070, or 4075 Handset:

- “Using the Calculator” (page 137)
- “Using the Stopwatch” (page 139)
- “Alarms” (page 141)

Using the Calculator

Use the calculator to perform basic mathematical calculations.

To use the calculator, perform the following steps:

Menu

1. Press the **Menu** soft key to access the **Main** menu.



2. Press the **Up** or **Down** key to highlight the **Accessories** icon.



Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Calculator** option.

Calculator

Select

5. Press the **Select** soft key.



6. Use the **Dialpad** to enter a value.



Select

7. Press the **Left** or **Right** key to choose the required operation icon.
8. Press the **Select** soft key.

Attention: Alternatively, you can press the **#** key to choose the required operation, and then press the **OK** key.

To enter a decimal point (.), press the ***** key.



9. Use the **Dialpad** to enter a second value of up to 9 digits.



Select

10. Press the **Left** or **Right** key to choose the equal sign icon.
11. Press the **Select** soft key.
The result appears.
12. Optionally, perform either of the following:
To perform calculations using the result, repeat steps 7 to 11.
OR
To perform a new calculation, repeat steps 3 to 11.
13. Press the **Clr** key one or more times to return to the idle display.



Attention: Invalid calculations result in an error message.

The following table shows the calculator icons available for your use.

Table 14: Calculator icons

Symbol	Description
	Addition sign
	Division sign
	Dot sign
	Equal sign
	Multiplication sign
	Percentage sign
	Subtraction sign

Using the Stopwatch

Use the stopwatch to measure elapsed time.

To start the stopwatch, perform the following steps:

1. Press the **Menu** soft key to access the Main menu.
2. Press the **Up** or **Down** key to highlight the **Accessories** icon.
3. Press the **Select** soft key.

Menu



Select



Stopwatch

Select

Start

Lap

4. Press the **Up** or **Down** key to highlight the **Stopwatch** option.

5. Press the **Select** soft key.

6. Press the **Start** soft key to start timing.

The **Stop** or **Continue** soft key appears in place of the **Start** soft key.

7. Press the **Lap** soft key to save the current elapsed time, and start timing again.

Attention: You can store two lap values in your handset. If you press the **Lap** soft key after two Lap values are already stored, the handset overwrites the oldest stored value.

Stop

8. Press the **Stop** soft key to stop measuring.

Continue

9. Choose one of the following:

Reset

Press the **Continue** soft key to continue measuring
OR
Press the **Reset** soft key to reset the stopwatch.



10. Press the **Clr** key one or more times to return to the idle display.

Alarms

Use the Alarm feature to configure alarms.

This section describes the following tasks:

- [“Nonrecurrent alarms” \(page 141\)](#)
- [“Recurrent alarms” \(page 144\)](#)

**CAUTION**

You must charge your handset before you configure the handset time and date. Each time you remove the battery pack or switch the handset off it loses the time and date information; you must manually reset it after you reinstall the battery pack or switch the handset off and on.

If your system provides the date and time information to DECT handsets, the date and time settings update automatically when you switch on the handset. Contact your system administrator to determine if you can use this feature.

**CAUTION**

If you configure your handset to use Silent charging, any Alarms you configure cannot provide an audible alert while the handset is on the charger.

Nonrecurrent alarms

Use the procedures in this section to manage nonrecurrent alarms:

- [“Creating an alarm” \(page 142\)](#)
- [“Editing an alarm” \(page 143\)](#)
- [“Turning off an alarm” \(page 144\)](#)

Creating an alarm

To create a nonrecurrent alarm, perform the following steps:

Menu



Select



Alarms

Select



Alarm

Select



Save



1. Press the **Menu** soft key to access the Main menu.
2. Press the **Up** or **Down** key to highlight the **Accessories** icon.
3. Press the **Select** soft key.
4. Press the **Up** or **Down** key to highlight the **Alarms** option.
5. Press the **Select** soft key.
6. Press the **Up** or **Down** key to highlight the **Alarm** option.
7. Press the **Select** soft key.
8. Use the **Dialpad** to enter the alarm time.
9. Press the **Save** soft key.
10. Press the **Clr** key one or more times to return to the idle display.

Editing an alarm

To edit a nonrecurrent, perform the following steps:

- Menu

1.

Press the **Menu** soft key to access the Main menu.
- 

2.

Press the **Up** or **Down** key to highlight the **Accessories** icon.
- 

3.

Press the **Select** soft key.
- Select

4.

Press the **Up** or **Down** key to highlight the **Alarms** option.
- 

5.

Press the **Select** soft key.
- Alarms

6.

Press the **Up** or **Down** key to highlight the **Alarm** option.
- Select

7.

Press the **Select** soft key.
- 

8.

Use the **Dialpad** to edit the alarm time.
- Save

9.

 
Press the **Save** soft key.
- 

10.

Press the **Clr** key one or more times to return to the idle display.

Turning off an alarm

To turn off a nonrecurrent, perform the following steps:

-  1. Press the **Menu** soft key to access the Main menu.
-  2. Press the **Up** or **Down** key to highlight the **Accessories** icon.

-  3. Press the **Select** soft key.
-  4. Press the **Up** or **Down** key to highlight the **Alarms** option.

-  5. Press the **Select** soft key.
-  6. Press the **Up** or **Down** key to highlight the **Alarm** option.

-  7. Press the **Select** soft key.
-  8. Press the **Turn off** soft key.
-  9. Press the **Clr** key one or more times to return to the idle display.

Recurrent alarms

Use the procedures in this section to manage weekly recurrent alarms:

- “Creating a recurrent alarm” (page 145)
- “Editing a recurrent alarm” (page 146)
- “Turning off a recurrent alarm” (page 147)

Creating a recurrent alarm

To create a recurrent alarm, perform the following steps:

- Menu

1. Press the **Menu** soft key to access the Main menu.
- 



2. Press the **Up** or **Down** key to highlight the **Accessories** icon.
- Select

3. Press the **Select** soft key.
- 


4. Press the **Up** or **Down** key to highlight the **Alarms** option.
- Alarms

Select

5. Press the **Select** soft key.
- 


6. Press the **Up** or **Down** key to highlight the **Recurrent alarm** option.
- Recurrent alarm

Select

7. Press the **Select** soft key.
- 

8. Use the **Dialpad** to enter the alarm time.
- Continue

9. Press the **Continue** soft key.
- 


10. Press the **Up** or **Down** key to highlight the required days of the week.
- Mark

11. Press the **Mark** soft key.
- OK

12. Press the **OK** soft key to confirm the settings.



13. Press the **Clr** key one or more times to return to the idle display.

Editing a recurrent alarm

To edit a recurrent alarm, perform the following steps:

Menu

1. Press the **Menu** soft key to access the Main menu.



2. Press the **Up** or **Down** key to highlight the **Accessories** icon.



Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Alarms** option.

Alarms

5. Press the **Select** soft key.

Select



6. Press the **Up** or **Down** key to highlight the **Recurrent alarm** option.

Recurrent alarm

Select

 
7. Press the **Select** soft key.



8. Use the **Dialpad** to edit the alarm time.

Continue

9. Press the **Continue** soft key.



10. Press the **Up** or **Down** key to highlight the required days of the week.

Mark

11. Press the **Mark** soft key.

Unmark

12. Press the **Unmark** soft key to unmark a marked day of the week (if necessary).

OK

13. Press the **OK** soft key to confirm the settings.



14. Press the **Clr** key one or more times to return to the idle display.

Turning off a recurrent alarm

To turn off a recurrent alarm, perform the following steps:

Menu

1. Press the **Menu** soft key to access the Main menu.

 


2. Press the **Up** or **Down** key to highlight the **Accessories** icon.



Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Alarms** option.

Alarms

5. Press the **Select** soft key.

Select



6. Press the **Up** or **Down** key to highlight the **Recurrent alarm** option.

Recurrent alarm

Select

7. Press the **Select** soft key.

Turn off

8. Press the **Turn off** soft key.



9. Press the **Clr** key one or more times to return to the idle display.

Attention: If the alarm or the recurrent alarm is off when you open the time editor, the current time appears.

Telephone settings

Use the information in this chapter to configure the following:

- “General settings” (page 149)
- “Audio settings” (page 166)
- “Display settings” (page 180)
- “Call settings” (page 187)
- “Connectivity settings” (page 208)

General settings

The following table describes the telephone setting icons on the display.

Table 15: Telephone setting icons

Icon	Description
	General settings
	Sound settings
	Display settings
	Calls settings
	Connectivity settings

This section describes the following tasks:

- “Accessing the General settings menu” (page 150)
- “Profile configuration” (page 150)
- “Configuring the time and date” (page 153)

- “Choosing a language” (page 156)
- “Configuring shortcuts” (page 157)
- “Configuring the LED Indicator (4075 only)” (page 158)
- “Security options” (page 159)
- “Defining the handset name” (page 163)
- “Resetting the handset” (page 164)
- “Resetting the MEM card” (page 164)
- “Viewing information” (page 165)

Accessing the General settings menu

To access the General settings menu, perform the following steps:

Menu



1. Press the **Menu** soft key to access the Main menu.

2. Press the **Up** or **Down** key to highlight the **Settings** icon.

Select

3. Press the **Select** soft key.



4. Press the **Left** or **Right** key to choose the **General** menu.

 
Profile configuration

Use the profile option to personalise your handset.


To configure your profile, perform the following steps:



1. Open the **General** settings menu using the steps in “Accessing the General settings menu” (page 150).



- Press the **Up** or **Down** key to highlight the **Profiles** option.

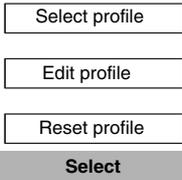

- Press the **Select** soft key.
- Press the **Up** or **Down** key to highlight any of the following options:
 - **Select profile** to select a profile and press the **Select** soft key.
 - **Edit profile** to edit a profile and press the **Select** soft key.
 - **Reset profile** to return to the default values of the settings and press the **Select** soft key.



- Press the **Clr** key one or more times to return to the idle display.

You can use the following profiles:

- Normal (default)
- Meeting
- Outdoors
- Office
- Home
- Silent (disables, or decreases the volume of, all alert signals)
- Loudspeaker

Long press the **#** key in Idle mode to switch between the active profile and the Silent profile. If the active profile is Silent, long press the **#** key in Idle mode to switch to the Normal profile.

You can configure the following features for each profile:

- Ring volume

- Ring melody for external calls
- Ring melody for internal calls
- Ring melody for unknown calls
- Normal message alert
- Urgent message alert
- Ring melody for emergency calls
- Increasing ring feature
- Alert volume
- Alert tone
- Increasing alert
- Vibrator
- Key sound
- Confirmation sound
- Coverage warning
- Charger warning

For more information about audio settings, see [“Audio settings”](#) (page 166).

Editing a profile

To edit a selected profile, perform the following steps:



1. Open the **General** settings menu using the steps in [“Accessing the General settings menu”](#) (page 150).

 


2. Press the **Up** or **Down** key to highlight the **Profiles** option.

Profiles

Select

3. Press the **Select** soft key.



Edit profile

Select

- Press the **Up** or **Down** key to highlight the **Edit profile** option.

- Press the **Select** soft key.



Select

- Press the **Up** or **Down** key to highlight the required option.

- Press the **Select** soft key.

Select

OR

OK

- Make the required changes and perform one of the following:

Press the **Select** soft key.

OR

Press the **OK** soft key.



- Press the **Clr** key one or more times to return to the idle display.

Configuring the time and date

Use the time and date option to configure the time and date.



WARNING

You must charge your handset before you configure the handset time and date. Each time you remove the battery pack or switch the handset off it loses the time and date information; you must manually reset it after you reinstall the battery pack or switch the handset off and on.

If your system can provide the date and time information to DECT handsets, the date and time settings update automatically when you switch on the handset. Contact your system administrator to determine if you can use this feature.

Configuring the time

To configure the time, perform the following steps:



1. Open the **General** settings menu using the steps in “[Accessing the General settings menu](#)” (page 150).



2. Press the **Up** or **Down** key to highlight the **Time & Date** option.

Time & Date

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Time** option.

Time

Select

5. Press the **Select** soft key.



6. Use the **Dialpad** to edit the time.

More

7. Press the **More** soft key to edit the time format.



8. Press the **Up** or **Down** key to highlight the required time format.

Select

9. Press the **Select** soft key.

Attention: Depending on the Time and Date format you choose, the font size in the Calls list changes (see “[Calls list with normal text size](#)” (page 68)). If you choose am/pm time format in combination with dd/mm/yyyy (mm/dd/yyyy) or dd-mmm-yyyy date format, the entries in the Calls list contain information about date only.

Save

10. Press the **Save** soft key to save the changes.



11. Press the **Clr** key one or more times to return to the idle display.

Configuring the date

To configure the date, perform the following steps:



1. Open the **General** settings menu using the steps in “[Accessing the General settings menu](#)” (page 150).



2. Press the **Up** or **Down** key to highlight the **Time & Date** option.

Time & Date

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Date** option.

Date

Select

5. Press the **Select** soft key.



6. Use the **Dialpad** to edit the date.

More

7. Press the **More** soft key to edit the date format.



Select

8. Press the **Up** or **Down** key to highlight the required date format.
9. Press the **Select** soft key.

Attention: Depending on the Time and Date format you choose, the font size in the Calls list changes (see “Calls list with normal text size” (page 68)). If you choose am/pm time format in combination with dd/mm/yyyy (mm/dd/yyyy) or dd-mmm-yyyy date format, the entries in the Calls list contain information about date only.

Save

10. Press the **Save** soft key to save the changes.



11. Press the **Clr** key one or more times to return to the idle display.

Choosing a language

You can configure your handset to operate in any of the following languages:

- English
- Spanish
- German
- French
- Italian
- Dutch
- Portuguese
- Danish
- Swedish
- Turkish
- Polish

- Greek
- Russian
- Norwegian

To choose a language, perform the following steps:



1. Open the **General** settings menu using the steps in “[Accessing the General settings menu](#)” (page 150).



2. Press the **Up** or **Down** key to highlight the **Language** option.

Language

Select

3. Press the **Select** soft key.



Select

4. Press the **Up** or **Down** key to highlight the required language.

5. Press the **Select** soft key.



6. Press the **Clr** key one or more times to return to the idle display.

 
Configuring shortcuts

Use the information in this section to assign shortcuts that allow you to access handset menus or features by pressing a single button.

To assign a shortcut, perform the following steps:



1. Open the **General** settings menu using the steps in “[Accessing the General settings menu](#)” (page 150).




2. Press the **Up** or **Down** key to highlight the **Shortcuts** option.

Shortcuts

Select

 3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the key to which you want to assign a shortcut.

Select

5. Press the **Select** soft key.



Select

6. Press the **Up** or **Down** key to choose the option you want to assign as a shortcut.

7. Press the **Select** soft key.



8. Press the **Clr** key one or more times to return to the idle display.

Configuring the LED Indicator (4075 only)

Use the information in this section to configure the LED indicator that appears to the left of the speaker on the DECT 4075 handset. For more information, see “[LED indicator \(4075 only\)](#)” (page 33).

Use the following steps to configure the LED indicator:



1. Open the **General** settings menu using the steps in “[Accessing the General settings menu](#)” (page 150).



2. Press the **Up** or **Down** key to highlight the **LED signal** option.

LED signal

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select the LED colour to configure:
 - Red LED
 - Green LED
 - Orange LED

Select

5. Press the **Select** soft key.



6. Press the **Up** or **Down** key to highlight the option to associate with the selected LED colour:
 - Missed calls
 - Text messages
 - Voice messages
 - Text and voice messages
 - Mandown
 - Low Battery
 - Off

Select

7. Press the **Select** soft key to apply the setting.



8. Press the **Clr** key one or more times to return to the idle display.

Security options

You can use the following options to secure your handset: phone lock, automatic key lock, and PIN code.

This section describes the following tasks:

- [“Using the Phone lock feature” \(page 160\)](#)
- [“Automatic dialpad lock” \(page 160\)](#)
- [“Unlocking the dialpad” \(page 161\)](#)
- [“Changing the PIN code” \(page 162\)](#)

Using the Phone lock feature

Enable the Phone lock feature to avoid unauthorised use of your handset.

 
To enable or disable the phone lock, perform the following steps:



1. Open the **General** settings menu using the steps in “[Accessing the General settings menu](#)” (page 150).




2. Press the **Up** or **Down** key to highlight the **Security** option.



3. Press the **Select** soft key.



 4. Press the **Up** or **Down** key to highlight the **Phone lock** option.



5. Press the **Select** soft key.



 
6. Use the **Dialpad** to enter your PIN code.



7. Press the **OK** soft key.



8. Press the **Up** or **Down** key to choose the required option.



9. Press the **Select** soft key.



10. Press the **Clr** key one or more times to return to the idle display.

Automatic dialpad lock

 
The Automatic dialpad lock feature disables key input if you do not press any keys for a configurable period of time. To configure the number of seconds the system waits before enabling dialpad lock, change the “second value” timer in the Power save menu; if you configure this value

to 0, the system waits 30 seconds before activating dialpad lock. For more information about configuring Power save, see [Configuring power save \(p. 186\)](#).

To enable Automatic dialpad lock, perform the following steps:



1. Open the **General** settings menu using the steps in [“Accessing the General settings menu” \(page 150\)](#).



2. Press the **Up** or **Down** key to highlight the **Security** option.

Security

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Automatic keylock** option.

Automatic keylock

Select

5. Press the **Select** soft key.

The left soft key label becomes a lock icon.



6. Press the **Up** or **Down** key to choose the required option.

Select

7. Press the **Select** soft key.



8. Press the **Clr** key one or more times to return to the idle display.

Unlocking the dialpad

To unlock the dialpad, perform the following steps:



1. Press the **OK** key.

Unlock

2. Press the **Unlock** soft key.

Note: The **Unlock** soft key is available for three seconds after you press the **OK** key.

Attention: When you receive a call with key lock active, the dialpad lock temporarily suspends and you can use all keys. The key lock reactivates when you terminate the call.

Changing the PIN code

Use the information in this section to change the PIN code on the handset.

To change the PIN code, perform the following steps:



1. Open the **General** settings menu using the steps in [“Accessing the General settings menu”](#) (page 150).



2. Press the **Up** or **Down** key to highlight the **Security** option.

Security

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Change PIN code** option.

Change PIN

Select

5. Press the **Select** soft key.



6. Use the **Dialpad** to enter the current PIN code.

OK

7. Press the **OK** soft key.



8. Use the **Dialpad** to enter a new PIN code.

OK

9. Press the **OK** soft key.



10. Use the **Dialpad** to verify the new PIN code.

OK

11. Press the **OK** soft key.



12. Press the **Clr** key one or more times to return to the idle display.

Defining the handset name

You can define a handset name (maximum of 16 characters) to appear on the idle display.

To define the handset name, perform the following steps:



1. Open the **General** settings menu using the steps in [“Accessing the General settings menu”](#) (page 150).



2. Press the **Up** or **Down** key to highlight the **Handset name** option.

Handset name

Select

3. Press the **Select** soft key.



4. Use the **Dialpad** to enter or edit the handset name.

Save

5. Press the **Save** soft key.



6. Press the **Clr** key one or more times to return to the idle display.

Resetting the handset

Reset the handset to restore all options to the factory default state. Your contacts, the handset PIN, and system subscriptions are not impacted by reset.

To reset the handset, perform the following steps:



1. Open the **General** settings menu using the steps in [“Accessing the General settings menu” \(page 150\)](#).



2. Press the **Up** or **Down** key to highlight the **Reset settings** option.

Reset settings

Select

3. Press the **Select** soft key.

Yes

4. Press the **Yes** soft key.



5. Use the **Dialpad** to enter the current PIN code.

OK

6. Press the **OK** soft key.



7. Press the **Clr** key one or more times to return to the idle display.

Resetting the MEM card

Use the information in this section to erase all data from the memory (MEM) card.

To reset the MEM card, perform the following steps:



1. Open the **General** settings menu using the steps in [“Accessing the General settings menu” \(page 150\)](#).



2. Press the **Up** or **Down** key to highlight the **Reset memory card** option.

Reset memory card

Select

3. Press the **Select** soft key.

Yes

4. Press the **Yes** soft key.



5. Use the **Dialpad** to enter the current PIN code.

OK

6. Press the **OK** soft key.



7. Press the **Clr** key one or more times to return to the idle display.

8. Switch off the handset.

9. Switch on the handset.

 
Viewing information

Use the status option to view information about the software release installed on the handset, hardware version of the handset, battery charge status, level of radio signal, and available memory.

To view status information, perform the following steps:



1. Open the **General** settings menu using the steps in [“Accessing the General settings menu”](#) (page 150).



2. Press the **Up** or **Down** key to highlight the **Status** option.

Status

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to scroll through available status information.

OK

5. Press the **OK** soft key to exit the menu.



6. Press the **Clr** key one or more times to return to the idle display.

Audio settings

You can customize your handset audio. Use the Audio settings menu to configure the following:

- [“Accessing the Sounds and alerts menu” \(page 167\)](#)
- [“Configuring the ring volume” \(page 167\)](#)
- [“Defining the ring external melody” \(page 168\)](#)
- [“Defining the ring internal melody” \(page 169\)](#)
- [“Defining the Ring unknown call melody” \(page 170\)](#)
- [“Defining the Normal message melody” \(page 170\)](#)
- [“Defining the Urgent message melody” \(page 171\)](#)
- [“Defining the Ring emergency melody” \(page 172\)](#)
- [“Enabling the Increasing ring feature” \(page 172\)](#)
- [“Configuring Alert volume” \(page 173\)](#)
- [“Defining the Alert tone melody” \(page 173\)](#)
- [“Enabling Increasing alert” \(page 174\)](#)
- [“Enabling the Vibrator” \(page 175\)](#)
- [“Enabling the Key sound” \(page 175\)](#)
- [“Enabling Confirmation sound” \(page 176\)](#)
- [“Enabling the Coverage warning” \(page 177\)](#)
- [“Enabling the Charger warning” \(page 178\)](#)

- “Configuring Cadence Mode” (page 179)

 
Accessing the Sounds and alerts menu

To access the Sounds and alerts menu, perform the following steps:

1. Press the **Menu** soft key to access the Main menu.
 
2. Press the **Up** or **Down** key to highlight the **Settings** icon.
 
3. Press the **Select** soft key.
 
4. Press the **Left** or **Right** key to choose the **Sounds and alerts** menu.
 

Configuring the ring volume

To change the ringer volume, perform the following steps:

1. Open the **Sounds and alerts** menu using the steps in “Accessing the Sounds and alerts menu” (page 167).
 
2. Press the **Up** or **Down** key to highlight the **Ring volume** option.
 
3. Press the **Select** soft key.
 
4. Press the **Left** or **Right** key to select the volume level.
 
5. Press the **OK** soft key to apply the changes.
 



6. Press the **Clr** key one or more times to return to the idle display.

Defining the ring external melody

The DECT 4070 and 4075 Handsets offer 20 melodies, while the DECT 4027 Handset offers 10 melodies.



WARNING

If your handset is subscribed to a traditional DECT system based on DMC cards, the system identifies all incoming calls as external.

To define a melody for external calls, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in “[Accessing the Sounds and alerts menu](#)” (page 167).

 


2. Press the **Up** or **Down** key to highlight the **Ring external** option.

Ring external

Select

3. Press the **Select** soft key.



Play

Select

4. Press the **Up** or **Down** key to select a melody.

5. Press the **Play** soft key to listen to the melody or the **Select** soft key to apply it.



6. Press the **Clr** key one or more times to return to the idle display.

Defining the ring internal melody



WARNING

This feature is available only for handsets subscribed to SIP DECT system.

To define a melody for internal rings, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in “[Accessing the Sounds and alerts menu](#)” (page 167).



2. Press the **Up** or **Down** key to highlight the **Ring internal** option.

Ring internal

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select a melody.

Play

Select

5. Press the **Play** soft key to listen to the melody or the **Select** soft key to apply it.



6. Press the **Clr** key one or more times to return to the idle display.

Defining the Ring unknown call melody

Attention: Nortel DECT systems do not support the Ring unknown call melody feature.

Defining the Normal message melody

Attention: The Normal message alert melody feature is available on the DECT 4070 and 4075 Handsets only.

To define a melody for normal message alerts, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in “[Accessing the Sounds and alerts menu](#)” (page 167).



2. Press the **Up** or **Down** key to highlight the **Ring normal msg.** option.

Ring normal msg.

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select a melody.

Play

Select

5. Press the **Play** soft key to listen to the melody or the **Select** soft key to apply it.



6. Press the **Clr** key one or more times to return to the idle display.

For more information about normal and urgent messages, see “[Normal and urgent messages](#)” (page 126).

 
Defining the Urgent message melody

Attention: The Urgent message alert melody feature is available on the DECT 4070 and 4075 Handsets only.

To define a melody for urgent message alerts, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in “[Accessing the Sounds and alerts menu](#)” (page 167).



2. Press the **Up** or **Down** key to highlight the **Ring urgent msg.** option.

Ring urgent msg.

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select a melody.

Play

Select

5. Press the **Play** soft key to listen to the melody or the **Select** soft key to apply it.



6. Press the **Clr** key one or more times to return to the idle display.

For more information about normal and urgent messages, see “[Normal and urgent messages](#)” (page 126).

Defining the Ring emergency melody

Attention: Nortel DECT systems do not support the Ring emergency call melody feature.

Enabling the Increasing ring feature

If you enable the Increasing ring feature, the volume level gradually increases during an alert.

To enable the Increasing ring feature, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in “[Accessing the Sounds and alerts menu](#)” (page 167).



2. Press the **Up** or **Down** key to highlight the **Increasing ring** option.

Increasing ring

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select **On** or **Off**.

On

Off

Select

5. Press the **Select** soft key to apply the changes.



6. Press the **Clr** key one or more times to return to the idle display.

Configuring Alert volume

Use this function to change the alert volume.

To change the alert volume, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in “[Accessing the Sounds and alerts menu](#)” (page 167).



2. Press the **Up** or **Down** key to highlight the **Alert volume** option.

Alert volume

Select

3. Press the **Select** soft key.



4. Press the **Left** or **Right** key to select the volume level.

OK

5. Press the **OK** soft key to apply the changes.



6. Press the **Clr** key one or more times to return to the idle display.

Defining the Alert tone melody

To define a melody for alerts, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in “[Accessing the Sounds and alerts menu](#)” (page 167).

 


2. Press the **Up** or **Down** key to highlight the **Alert tone** option.

Alert tone

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select a melody.

Play

Select

5. Press the **Play** soft key to listen to the melody or the **Select** soft key to apply it.



6. Press the **Clr** key one or more times to return to the idle display.

Enabling Increasing alert

If you enable the Increasing alert feature, the volume level gradually increases during an alert.

To enable the Increasing alert feature, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in [“Accessing the Sounds and alerts menu”](#) (page 167).



2. Press the **Up** or **Down** key to highlight the **Increasing alert** option.

Increasing alert

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select **On** or **Off**.

On

Off

Select

5. Press the **Select** soft key to apply the changes.



6. Press the **Clr** key one or more times to return to the idle display.

Enabling the Vibrator

Attention: The Vibrator feature is available on the DECT 4070 and 4075 Handsets only.

If you enable the Vibrator feature, the handset vibrates to alert you about incoming calls. You can configure the handset to vibrate, ring, or both.

To enable the Vibrator feature, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in [“Accessing the Sounds and alerts menu”](#) (page 167).



2. Press the **Up** or **Down** key to highlight the **Vibrator** option.



3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select **Off** (disabled), **Vibrate then ring**, or **Vibrate and ring**.



5. Press the **Select** soft key to apply the changes.



6. Press the **Clr** key one or more times to return to the idle display.

Enabling the Key sound

If you enable the Key sound feature, a sound occurs when you press a key.

To enable the Key sound feature, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in “[Accessing the Sounds and alerts menu](#)” (page 167).



2. Press the **Up** or **Down** key to highlight the **Key sound** option.

Key sound

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select **Silent** (disabled), **Click**, or **Tone** (different types of sounds).

Silent

Click

Tone

Select

5. Press the **Select** soft key to apply the changes.



6. Press the **Clr** key one or more times to return to the idle display.

Enabling Confirmation sound

You can configure your handset to play a Confirmation sound when you successfully perform an action.

To enable Confirmation sound, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in “[Accessing the Sounds and alerts menu](#)” (page 167).



2. Press the **Up** or **Down** key to highlight the **Confirmation sound** option.

Confirmation sound

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select **On** or **Off**.

On

Off

Select

5. Press the **Select** soft key to apply the changes.



6. Press the **Clr** key one or more times to return to the idle display.

Attention: The default volume of the Confirmation sound is 1.

 
Enabling the Coverage warning

If you enable the Coverage warning feature, a sound occurs when the handset is out of base station coverage.

To enable the Coverage warning feature, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in “[Accessing the Sounds and alerts menu](#)” (page 167).



2. Press the **Up** or **Down** key to highlight the **Coverage warning** option.

Coverage warning

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select **On** or **Off**.

On

Off

Select

5. Press the **Select** soft key to apply the changes.



6. Press the **Clr** key one or more times to return to the idle display.

Enabling the Charger warning

If you enable the Charger warning feature, a sound occurs when the handset is placed in the charger.

To enable the Charger warning feature, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in [“Accessing the Sounds and alerts menu”](#) (page 167).



2. Press the **Up** or **Down** key to highlight **Charger warning**.

Charger warning

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select **On** or **Off**.

5. Press the **Select** soft key to apply the changes.



6. Press the **Clr** key one or more times to return to the idle display.

Configuring Cadence Mode

A cadence defines the duration of the on and off phases of a ringing cycle. You can use the Tones and Cadences feature on the Communication Server 1000 (CS 1000) system to configure ring cadences to identify different types of incoming calls. For more information about Tones and Cadences on CS 1000, see *Features and Services Fundamentals* (NN43001-106).

 
Attention: Cadence Mode is applicable to traditional DECT systems only (based on DMC cards). If you enable or disable Cadence Mode for a SIP DECT solution, there is no impact.

To cause your DECT handset to use the ring cadences configured on your CS 1000 system, you must activate Cadence Mode on your DECT handset. This allows the PBX system to control the on and off phases of the ringing cycles on the handset. If Cadence Mode is disabled on your handset, the handset continuously plays its ringing melody on any incoming call, irrespective of the Tones and Cadences configuration on your CS 1000 system.

To activate Cadence Mode on your handset, perform the following steps:



1. Open the **Sounds and alerts** menu using the steps in “[Accessing the Sounds and alerts menu](#)” ([page 167](#)).



2. Press the **Up** or **Down** key to highlight **Cadence Mode**.

Cadence Mode

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select **On** or **Off**.

On

Off

Select

5. Press the **Select** soft key to apply the changes.



6. Press the **Clr** key one or more times to return to the idle display.

After you activate Cadence Mode, you can optionally select a handset ring melody that has a desirable interaction with the cadences programmed on the CS 1000 system. For more information about selecting a ring melody, see [“Defining the ring external melody” \(page 168\)](#).

Display settings

Use the information in this section to customise the handset display as follows:

- [“Accessing the Display settings menu” \(page 181\)](#)
- [“Wallpaper customisation” \(page 181\)](#)
- [“Selecting a theme” \(page 183\)](#)
- [“Startup customisation” \(page 184\)](#)
- [“Configuring power save” \(page 186\)](#)

Accessing the Display settings menu

To access the Display settings menu, perform the following steps:

- Menu**
1. Press the **Menu** soft key to access the Main menu.
 2. Press the **Up** or **Down** key to highlight the **Settings** icon.
- Select**
3. Press the **Select** soft key.
 4. Press the **Left** or **Right** key to choose the **Display** menu.

 
Wallpaper customisation

Use the information in this section to customise the image that appears as a background when your handset is in idle mode.

Selecting wallpaper by theme

To select wallpaper according to the selected theme, perform the following steps:

1. Open the **Display** menu using the steps in “[Accessing the Display settings menu](#)” (page 181).
2. Press the **Up** or **Down** key to highlight the **Wallpaper** option.
3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select the **Theme** option.

Theme

Select

5. Press the **Select** soft key.



6. Press the **Clr** key one or more times to return to the idle display.

Selecting wallpaper other than from the current theme

To select wallpaper from a source other than the current theme, perform the following steps:



1. Open the **Display** menu using the steps in “[Accessing the Display settings menu](#)” (page 181).



2. Press the **Up** or **Down** key to highlight the **Wallpaper** option.

Wallpaper

 
Select

3. Press the **Select** soft key.




4. Press the **Up** or **Down** key to select the **Picture** option.

Picture



 5. Press the **Up** or **Down** key to select an image from the list.




6. Perform one of the following:
Press the **Show** soft key to view the selected image.
OR
Press the **Select** soft key to use the selected image as your wallpaper.



7. Press the **Clr** key one or more times to return to the idle display.

Clearing wallpaper

If you do not want wallpaper to appear on your handset, perform the following steps:



1. Open the **Display** menu using the steps in [“Accessing the Display settings menu”](#) (page 181).



 
2. Press the **Up** or **Down** key to highlight the **Wallpaper** option.




3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select **None**.




5. Press the **Clr** key one or more times to return to the idle display.

 
Selecting a theme

A theme is a combination of images and colour gradations for the wallpaper, startup display, and menu of your handset.



To select a theme, perform the following steps:



1. Open the **Display** menu using the steps in “[Accessing the Display settings menu](#)” (page 181).



  2. Press the **Up** or **Down** key to highlight the **Themes** option.



3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select a theme from the list.



5. Press the **Select** soft key.



6. Press the **Clr** key one or more times to return to the idle display.

Startup customisation

Use the information in this section to customise the image that appears on the handset display during startup.

Selecting a startup image by theme

 
To select a startup image according to the selected theme, perform the following steps:




1. Open the **Display** menu using the steps in “[Accessing the Display settings menu](#)” (page 181).



2. Press the **Up** or **Down** key to highlight the **Startup screen** option.



 3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select the **Theme** option.

Theme

Select

5. Press the **Select** soft key.



 
6. Press the **Clr** key one or more times to return to the idle display.

Selecting a startup image other than from the current theme

To select a startup image from a source other than the selected theme, perform the following steps:



1. Open the **Display** menu using the steps in “[Accessing the Display settings menu](#)” (page 181).



2. Press the **Up** or **Down** key to highlight the **Startup screen** option.

Startup screen

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select the **Picture** option.

Picture



5. Press the **Up** or **Down** key to select a picture from the list.

Show

Select

6. Perform one of the following:
Press the **Show** soft key to view the selected image.
OR
Press the **Select** soft key to use the selected image as your startup image.



7. Press the **Clr** key one or more times to return to the idle display.

Clearing the startup image

If you do not want to use a startup image, perform the following steps:



1. Open the **Display** menu using the steps in [“Accessing the Display settings menu”](#) (page 181).



2. Press the **Up** or **Down** key to highlight the **Startup screen** option.

Startup screen

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to select the **None** option.

None



5. Press the **Clr** key one or more times to return to the idle display.

Configuring power save

To configure how long the handset remains idle before entering an energy-saving state, perform the following steps:



1. Open the **Display** menu using the steps in [“Accessing the Display settings menu”](#) (page 181).



Power save

Select



2. Press the **Up** or **Down** key to highlight the **Power save** option.
3. Press the **Select** soft key.
4. Use the **Dialpad** to enter the time period:
 - the first value (from 1 to 59 seconds) defines the time before the display becomes dim.
 - the second value (from 1 to 59 seconds) defines the time before the display switches off (after the display becomes dim). If you configure the second value as 0, the display never switches off and the handset battery discharges faster.

Attention: To conserve the battery charge of your handset, the display automatically dims during calls. Press the **OK** key to restore the display. To configure the number of seconds that elapse before the display dims, change the “first value” timer in Power save settings. For more information, see [Configuring power save \(p. 186\)](#).

Save



5. Press the **Save** soft key.
6. Press the **Clr** key one or more times to return to the idle display.

Call settings

You can change the call settings for your handset.

Use the handset Settings menu to perform the following:

- [“Accessing the call settings menu” \(page 188\)](#)

- “Accessing call and message statistics” (page 188)
- “Answer mode configuration” (page 189)
- “Caller filter configuration” (page 191)
- “Emergency call configuration” (page 198)
- “Mandown configuration (4075 only)” (page 200)
- “Activating the Silent charging feature” (page 207)

Accessing the call settings menu

To access the call settings menu, perform the following steps:

Menu



Select



1. Press the **Menu** soft key to access the Main menu.
2. Press the **Up** or **Down** key to highlight the **Settings** icon.
3. Press the **Select** soft key.
4. Press the **Left** or **Right** key to choose the **Calls** menu.

 
Accessing call and message statistics

You can view Call and message statistics using the units menu.

To access statistics information, perform the following steps:



1. Open the **Calls** menu using the steps in “Accessing the call settings menu” (page 188).



2. Press the **Up** or **Down** key to highlight the **Units** option.

Units

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Call time** option or the **Message count** option.

Call time

Message count

Attention: The message count option is available on the DECT 4070 and 4075 Handsets only. The **Call time** and **Message count** options reflect statistics for outgoing calls and messages.

Reset

Yes

5. Optionally, press the **Reset** soft key to clear stored statistics.

6. Press the **Yes** soft key to confirm the changes.



7. Press the **Clr** key one or more times to return to the idle display.

Answer mode configuration

You can configure your handset to handle incoming calls in any of the following ways:

- Any key answer mode—you can answer with any key
- Autoanswer mode—the handset goes off-hook automatically
- Normal answer mode—answer using the **OK** or **Call** key

This section describes the following tasks:

- [“Activating Any key answer mode” \(page 190\)](#)
- [“Activating Autoanswer mode” \(page 190\)](#)
- [“Activating Normal answer mode” \(page 191\)](#)

Activating Any key answer mode

To activating Any key answer mode, perform the following steps:



1. Open the **Calls** menu using the steps in “[Accessing the call settings menu](#)” (page 188).

 


2. Press the **Up** or **Down** key to highlight the **Answer mode** option.

Answer mode

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Any key** option.

Any key

Select

5. Press the **Select** soft key.



6. Press the **Clr** key one or more times to return to the idle display.

Activating Autoanswer mode

To activate Autoanswer mode, perform the following steps:



1. Open the **Calls** menu using the steps in “[Accessing the call settings menu](#)” (page 188).



2. Press the **Up** or **Down** key to highlight the **Answer mode** option.

Answer mode

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Auto. answer** option.

Auto. answer

Select

5. Press the **Select** soft key.



6. Press the **Clr** key one or more times to return to the idle display.

Activating Normal answer mode

To activate Normal answer mode, perform the following steps:



1. Open the **Calls** menu using the steps in “[Accessing the call settings menu](#)” (page 188).



2. Press the **Up** or **Down** key to highlight the **Answer mode** option.

Answer mode

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Normal** option.

Normal

Select

5. Press the **Select** soft key.



6. Press the **Clr** key one or more times to return to the idle display.

Caller filter configuration

You can use the Caller filter to selectively block or accept calls from specified phone numbers. You can filter up to 10 phone numbers using the caller filter list.

When the caller filter function is active, a filter icon appears on the display.

Attention: The Caller filter feature is available on the DECT 4070 and 4075 Handsets only.

The Caller filter functions only when the caller number transmits through Integrated Services Digital Network (ISDN).

This section contains information to help you manage Caller filter, including steps to add and edit entries, and activate or deactivate Caller filter.

- [“Accessing the Caller filter menu” \(page 192\)](#)
- [“Adding an entry to the Caller filter list” \(page 193\)](#)
- [“Editing entries in the Caller filter list” \(page 194\)](#)
- [“Deleting an entry from the Caller filter list” \(page 194\)](#)
- [“Deleting all entries in the Caller filter list” \(page 195\)](#)
- [“Activating Caller filter” \(page 196\)](#)

Accessing the Caller filter menu

To open the Caller filter menu, perform the following steps:



1. Open the **Calls** menu using the steps in [“Accessing the call settings menu” \(page 188\)](#).



2. Press the **Up** or **Down** key to highlight the **Caller filter** option.

Caller filter

Select

3. Press the **Select** soft key.

Adding an entry to the Caller filter list

To add an entry to the Caller filter list, perform following steps:

 
1. Open the **Caller filter** menu using the steps in “[Accessing the Caller filter menu](#)” (page 192).

 2. Press the **Up** or **Down** key to highlight the **List** option.

 3. Press the **Select** soft key.

 4. Press the **Add** soft key.

 5. Press the **Up** or **Down** key to highlight the **Enter number** option, press the **Select** soft key, use the **Dialpad** to enter the telephone number and the name, and press the **Save** soft key.




- OR
- Press the **Up** or **Down** key to highlight the **Lookup contact** option, press the **Select** soft key, use the **Up** or **Down** key to highlight the required contact, and press the **Select** soft key.
-
- Attention:** Numbers can consist of a maximum of 32 characters. Names can consist of a maximum of 16 characters. You can use one asterisk at the end of a number to filter all numbers that begin with a given sequence.
-
6. Press the **Clr** key one or more times to return to the idle display.

 

Editing entries in the Caller filter list

To edit entries in the Caller filter list, perform the following steps:

-  1. Open the **Caller filter** menu using the steps in “[Accessing the Caller filter menu](#)” (page 192).
-  2. Press the **Up** or **Down** key to highlight the **List** option.
-  3. Press the **Select** soft key.
-  4. Press the **Up** or **Down** key to highlight the required entry.
-  5. Press the **More** soft key.
-  6. Press the **Up** or **Down** key to highlight the **Edit** option.
-  7. Press the **Select** soft key.
-  8. Use the **Dialpad** to edit the telephone number and name.
-  9. Press the **Save** soft key.
-  10. Press the **Clr** key one or more times to return to the idle display.

Deleting an entry from the Caller filter list

To delete an entry from the Caller filter list, perform the following steps:

-  1. Open the **Caller filter** menu using the steps in “[Accessing the Caller filter menu](#)” (page 192).



2. Press the **Up** or **Down** key to highlight the **List** option.



 
3. Press the **Select** soft key.




4. Press the **Up** or **Down** key to highlight the required entry to delete.



5. Press the **Up** or **Down** key to highlight the **Delete** option.



 6. Press the **Select** soft key.




7. Press the **Yes** soft key to confirm the changes.




8. Press the **Clr** key one or more times to return to the idle display.

Deleting all entries in the Caller filter list

 
To delete all entries in the Caller filter list, perform the following steps:



 1. Open the **Caller filter** menu using the steps in [“Accessing the Caller filter menu”](#) (page 192).



 2. Press the **Up** or **Down** key to highlight the **List** option.



3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight any entry.



5. Press the **More** soft key.

More



6. Press the **Up** or **Down** key to highlight the **Delete all** option.



Delete all

7. Press the **Select** soft key.

Select

Yes

8. Press the **Yes** soft key to confirm the changes.



9. Use the **Dialpad** to enter the PIN code.

OK

10. Press the **OK** soft key.



11. Press the **Clr** key one or more times to return to the idle display.

 
Activating Caller filter

Attention: If you activate the Caller filter and configure the accept list, the handset accepts calls only from the numbers in the caller filter list. If you configure the block list, the handset blocks all calls from the numbers in the caller filter list.


To activate an accept or block list, perform the following steps:

Caller filter


1. Open the **Caller filter** menu using the steps in “[Accessing the Caller filter menu](#)” (page 192).



 2. Press the **Up** or **Down** key to highlight the **Mode** option.



 3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the required mode.



5. Press the **Select** soft key.



6. Press the **Clr** key one or more times to return to the idle display.

Deactivating Caller filter

 
To deactivate an accept or block list, perform the following steps:



1. Open the **Caller filter** menu using the steps in [“Accessing the Caller filter menu” \(page 192\)](#).




2. Press the **Up** or **Down** key to highlight the **Mode** option.



3. Press the **Select** soft key.



 4. Press the **Up** or **Down** key to highlight the **Filter off** mode.



5. Press the **Select** soft key.



6. Press the **Clr** key one or more times to return to the idle display.

Emergency call configuration

Use the Emergency call feature to dial a number or send a text message rapidly. Use the Emergency call menu to store an emergency number and a text message. When you press the emergency key, one of the following actions occur:

- If you define a message, the handset initiates a voice call using the emergency number.
- If you define a message (up to 160 characters in length), the handset sends the emergency message to the emergency number.

Attention: The Emergency call feature is available on the DECT 4027, 4070, and 4075 Handsets, but the message can be sent from the DECT 4070 and 4075 Handsets only.

You can send text messages only if your system supports this feature. Contact your system administrator to determine if you can use this feature.

After you send a message, the handset stores the message in the text message list. For more information, see [“Messaging” \(page 106\)](#).

Configuring an emergency call number

To configure an emergency call number, perform the following steps:



1. Open the **Calls** menu using the steps in [“Accessing the call settings menu” \(page 188\)](#).




2. Press the **Up** or **Down** key to highlight the **Emergency call** option

Emergency call


3. Press the **Select** soft key.

Select

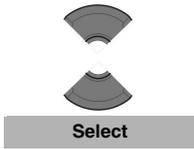


4. Press the **Up** or **Down** key to highlight the **Number** option.


5. Press the **Select** soft key.

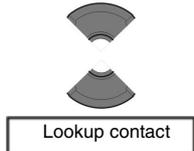

6. Press the **Up** or **Down** key to highlight **Lookup contact**, press the **Select** soft key, press the **Up** or **Down** key to highlight the required number from your contacts list, and press the **Select** soft key.

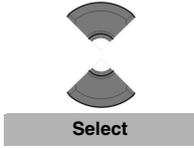

OR

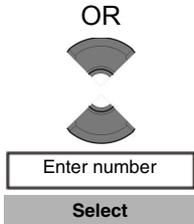

Press the **Up** or **Down** key to highlight **Enter Number**, press the **Select** soft key, use the **Dialpad** to enter or edit the number, and press the **Save** soft key.



 
7. Press the **Clr** key one or more times to return to the idle display.

Creating an emergency call text message

To create an emergency call text message, perform the following steps:



1. Open the **Calls** menu using the steps in “[Accessing the call settings menu](#)” (page 188).



Emergency call

Select

2. Press the **Up** or **Down** key to highlight the **Emergency call** option.



Message

Select

3. Press the **Select** soft key.
4. Press the **Up** or **Down** key to highlight the **Message** option.



Save

5. Press the **Select** soft key.
6. Use the **Dialpad** to enter the text of the emergency message.

7. Press the **Save** soft key.

8. Configure the emergency call number to which to send the message.
To configure an emergency call number, follow the steps in ["Configuring an emergency call number"](#) (page 198).



9. Press the **Clr** key one or more times to return to the idle display.

Mandown configuration (4075 only)

When the Mandown feature is enabled, the handset constantly monitors its vertical position using the built-in motion sensor. If the handset tilts towards horizontal and remains in that position for a configured period of time (the "mandown call delay"), the handset sets the Mandown condition. If you do not cancel the Mandown condition within a configured period of time (the "prealarm time"), the handset automatically sends a mandown call or text message, as follows:

- If you do not enter a message when configuring the Mandown feature, the handset dials the Mandown call number.

- If you enter a Mandown text message (up to 160 characters in length), the handset sends that message to the configured number.

Attention: You can configure Mandown to send text messages only if your system supports this feature. Contact your system administrator to determine if you can use this feature. After you send a message, the handset stores the message in the text message list. For more information, see [“Messaging” \(page 106\)](#).

Note 1: If you want to cancel the Mandown condition, you must deliberately clear it; the handset does not automatically cancel the Mandown condition if you return the handset to its vertical position.

Note 2: You can configure the LED indicator to flash when the Mandown condition is detected. If you manually clear the mandown condition before the prealarm time elapses, the LED indicator turns off; otherwise the LED indicator continues to flash until the handset places the mandown call or message. See [“Configuring the LED Indicator \(4075 only\)” \(page 158\)](#) for more details.

Note 3: The Mandown feature is separate from the Emergency Call feature, and you must configure it separately.

**CAUTION**

 
The Mandown feature only functions when the handset is in idle mode. If the handset is in any other mode (for example, if you are in a call) the Mandown feature is unavailable.

Activating or deactivating Mandown

To activate or deactivate the Mandown feature, perform the following steps:



1. Open the **Calls** menu using the steps in [“Accessing the call settings menu” \(page 188\)](#).



Mandown call

Select

2. Press the **Up** or **Down** key to highlight the **Mandown call** option.



Mode

Select

3. Press the **Select** soft key.
4. Press the **Up** or **Down** key to highlight the **Mode** option.



Select

5. Press the **Select** soft key.
6. Press the **Up** or **Down** key to select the required option
 - on - to activate mandown feature
 - off - to deactivate Mandown feature



7. Press the **Select** soft key to apply the changes.
8. Press the **Clr** key one or more times to return to the idle display.

Configuring the Mandown call number

 
To configure the number the handset calls in the event of a Mandown event, perform the following steps:



Mandown call

Select

1. Open the **Calls** menu using the steps in [“Accessing the call settings menu”](#) (page 188).
2. Press the **Up** or **Down** key to highlight the **Mandown call** option.
3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Number** option.

Number

Select

5. Press the **Select** soft key.



Lookup contact

Select

6. Press the **Up** or **Down** key to highlight **Lookup contact**, press the **Select** soft key, press the **Up** or **Down** key to highlight the required number from your contacts list, and press the **Select** soft key.



Select

OR

OR



Enter number

Select

Press the **Up** or **Down** key to highlight **Enter Number**, press the **Select** soft key, use the **Dialpad** to enter or edit the number, and press the **Save** soft key.



Save



 
7. Press the **Clr** key one or more times to return to the idle display.

Create a Mandown text message

To compose a text message that the Mandown feature sends instead of the Mandown call, perform the following steps:



1. Open the **Calls** menu using the steps in “[Accessing the call settings menu](#)” (page 188).




2. Press the **Up** or **Down** key to highlight the **Mandown call** option.

Mandown call

Select

 3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the **Message** option.

Message

Select

5. Press the **Select** soft key.



Save

6. Use the **Dialpad** to enter the text of the emergency message.

7. Press the **Save** soft key.

8. Configure the emergency call number to which to send the message.



9. Press the **Clr** key one or more times to return to the idle display.

When the Mandown call Auto answer option is enabled, the handset automatically answers the next incoming call after the Mandown notification is performed, and enables the speaker and handsfree profile.

 
Attention: If you configure a text message for Mandown, the Auto answer feature does not apply to Mandown calls.

Enabling Mandown Auto answer

To enable Auto answer for a Mandown call, perform the following steps:



1. Open the **Calls** menu using the steps in “[Accessing the call settings menu](#)” (page 188).




2. Press the **Up** or **Down** key to highlight the **Mandown call** option.

Mandown call

Select

 3. Press the **Select** soft key.




4. Press the **Up** or **Down** key to highlight the **Auto answer** option.

Auto answer

Select

 5. Press the **Select** soft key.



6. Press the **Up** or **Down** key to select the required option:

- on - to activate auto answer feature
- off - to deactivate auto answer feature

Select

7. Press the **Select** soft key to apply the changes.



8. Press the **Clr** key one or more times to return to the idle display.

Configuring Mandown call Delay

To control how long the handset waits after it detects that the handset has left the vertical orientation before it sets the Mandown condition, configure the Mandown Call Delay using the following steps:



1. Open the **Calls** menu using the steps in “[Accessing the call settings menu](#)” (page 188).

 


2. Press the **Up** or **Down** key to highlight the **Mandown call** option.


Mandown call

Select

3. Press the **Select** soft key.



 4. Press the **Up** or **Down** key to highlight the **Delay** option.



5. Press the **Select** soft key.



6. Press the **Up** or **Down** key to select the required option:

- off - to disable the delay.
- 5s
- ...
- 240s - to define a delay period in seconds.



7. Press the **Select** soft key to apply the changes.



8. Press the **Clr** key one or more times to return to the idle display.

Configuring Mandown call Prealarm time

 
To control how long the handset waits after it sets the Mandown condition before dialling the Mandown call number or sending the Mandown text message, configure the Mandown call Prealarm time using the following steps:




1. Open the **Calls** menu using the steps in [“Accessing the call settings menu”](#) (page 188).



2. Press the **Up** or **Down** key to highlight the **Mandown call** option.



 3. Press the **Select** soft key.




4. Press the **Up** or **Down** key to highlight the **Prealarm time** option.

Prealarm time

Select

 5. Press the **Select** soft key.



6. Press the **Up** or **Down** key to select the required option:

- off - to disable the prealarm.
- 5s
- ...
- 240s - to define a delay period in seconds.

Select

7. Press the **Select** soft key to apply the changes.



8. Press the **Clr** key one or more times to return to the idle display.

Activating the Silent charging feature

Activate the Silent charging feature if you do not want the handset to ring or vibrate while in the charger. Operation returns to normal when you lift the handset from the charger.



 
CAUTION

If you configure your handset to use Silent charging, any Alarms you configure cannot provide an audible alert while the handset is on the charger.

To activate the Silent charging feature, perform the following steps:



1. Open the **Calls** menu using the steps in “[Accessing the call settings menu](#)” (page 188).



Silent charging

Select

2. Press the **Up** or **Down** key to highlight the **Silent charging** option.



Off

Discon.

Silent

3. Press the **Select** soft key.
4. Press the **Up** or **Down** key to select the required option:
 - **Off** to disable silent charging
 - **Discon.** to disconnect from the CS 1000 system while in the charger
 - **Silent** to turn off the vibrator and ringer while in the charger

Attention: Auto-answer mode remains active when you select the **Silent** option. Even if you choose Silent charging, the handset continues to ring when you place it in the charger.

Select

5. Press the **Select** soft key to apply the changes.



6. Press the **Clr** key one or more times to return to the idle display.

Connectivity settings

You can configure the connectivity settings for your handset as follows:

- Register
For information about registering the handset, see “[Subscribing the handset to a DECT system](#)” (page 47).
- Deregister
For information about deregistering the handset, see “[Deregistering the handset](#)” (page 51).

- Selecting a network
For information about selecting a network, see [“Manually selecting the DECT system”](#) (page 49).
- Bluetooth wireless technology

Attention: Support for Bluetooth wireless technology is available on the DECT 4070 and 4075 Handsets only.

For more information about configuring Bluetooth wireless technology, see:

- [“Bluetooth wireless technology module installation”](#) (page 225)
- [“Bluetooth wireless technology headset installation”](#) (page 229)

 
Accessing additional features using FFC or SPRE codes

Attention: FFC and SPRE codes are not applicable to SIP DECT system.

Use Flexible Feature Codes (FFC) and Special Prefix (SPRE) codes to access additional features. Contact your system administrator to check if these features are available for your use. You can use the two types of codes as follows:

- **FFC codes**—dial an FFC to access some of your handset features. To use an FFC, enter the FFC and press the **Call** key.
- **SPRE codes**—dial a SPRE code plus a one- or two-digit number to access some of your handset features. The SPRE codes are unique to your system; however, the digits that follow the SPRE are fixed. For example, dial SPRE + 74 to forward all your calls to another number.

To access additional features using FFC or SPRE codes:



1. Use the **Dialpad** to enter the FFC or SPRE code while the handset is idle.
2. Press the **Call** key.

Attention: Contact your system administrator for the specific FFC and SPRE code numbers.

Use the following table to record FFC or SPRE codes for features available on your system, based on the information provided by your system administrator.

Table 16: FFCs and SPRE codes

FFC or SPRE code	Feature
	Call Forward— to activate
	Call Forward— to deactivate

Handset accessories

This section describes the accessories that you can use with your handset:

- “Available accessories” (page 212)
- “Belt clip” (page 214)
- “Installing the headset” (page 218)
- “Removing and installing the battery pack (4075 only)” (page 218)
- “Charging the battery pack (4075 only)” (page 220)
- “MEM card installation and removal” (page 222)
- “Bluetooth wireless technology module installation” (page 225)
- “Bluetooth wireless technology headset installation” (page 229)

Available accessories

The following table lists the accessories available for the DECT 4027, 4070, and 4075 Handsets.

Table 17: List of accessories

Item	Description	Order code
Multi Charger (for 4027 and 4070)	Multi Charger allows you to charge up to eight DECT 4027 and 4070 Handsets. Universal AC Adapter included.	N0162958
Desktop Charger (for 4027 and 4070)	Desktop Charger for DECT 4027 and 4070 Handsets.	N0162957
AC Adapter Int (for 4027 and 4070)	AC Adapter for Desktop Charger—International mains plug.	N0162959

Item	Description	Order code
AC Adapter UK (for 4027 and 4070)	AC Adapter for Desktop Charger—UK mains plug.	N0162962
AC Adapter ANZ (for 4027 and 4070)	AC Adapter for Desktop Charger—Australia and New Zealand mains plug.	N0162961
Battery Pack (for 4027 and 4070)	Extra handset battery pack for DECT 4027 and 4070 Handsets.	N0165276
Belt Clip (for 4027 and 4070)	Extra belt clip for DECT 4027 and 4070 Handsets.	N0162963
Handset Carry Case (for 4027 and 4070)	Carry case for DECT 4027 and 4070 Handsets.	N0162964
Multi Charger (for 4075)	Multi Charger allows you to charge up to six DECT 4075 Handsets. Universal AC Adapter included.	N0206073
Desktop Charger (for 4075)	Desktop Charger for DECT 4075 Handsets.	N0206072
AC Adapter Universal (for 4075)	AC Adapter for Desktop Charger—universal mains plug.	N0206074
Battery Pack (for 4075)	Extra handset battery pack for DECT 4075 Handsets.	N0206076
Belt Clip (for 4075)	Extra belt clip for DECT 4075 Handsets.	N0206075
Horizontal Handset Carry Case (for 4075)	To carry the DECT 4075 handset horizontally.	N0206788

Item	Description	Order code
Vertical Handset Carry Case (for 4075)	To carry the DECT 4075 handset vertically.	N0206789
MEM Card	Replacement memory (MEM) card for 4027, 4070 and 4075 Handsets.	N0162965
Headset	Headset for 4027, 4070 and 4075 Handsets.	A0550712
Bluetooth wireless technology Module	Bluetooth wireless technology module for the DECT 4070 and 4075 Handsets.	N0162966

Belt clip

You can use the belt clip to fasten the handset on a belt (swivel belt clip), shirt, or coat pocket (executive clip).

Installing the belt clip

To install the belt clip, perform the following steps:

1. Place the handset face down on a flat surface.
2. If you have a 4075 Handset, unscrew the belt clip compartment cover, install the belt clip and tighten the screws.

If you have a 4027 or 4070 Handset, go to step 3.

3. Use the plastic tool to unlock the fastening of the belt clip compartment cover as shown in [Figure 17](#).

The plastic tool is shipped in the box with the handset.

4. Slide out the belt clip compartment cover.
5. Remove the plastic tool.
6. Install the swivel belt clip as shown in [Figure 18](#) or the executive clip as shown in [Figure 19](#).

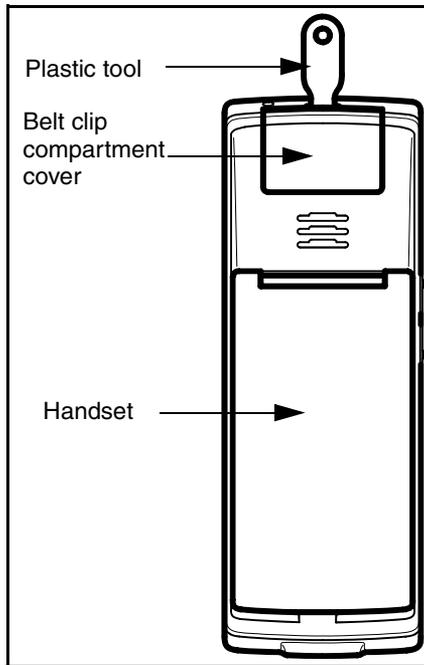
Figure 17: Using plastic tool (only for 4027 and 4070)

Figure 18: Installed swivel belt clip (only for 4027 and 4070)


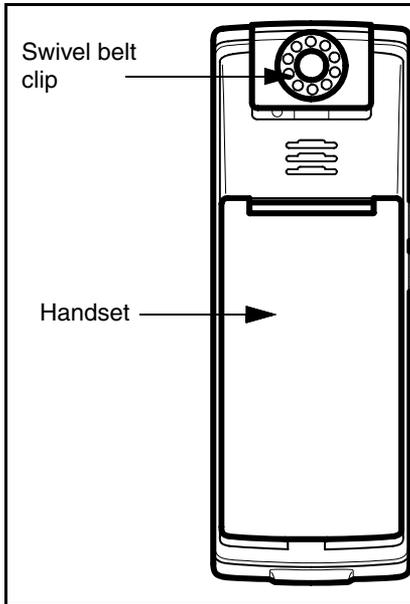


Figure 19: Installed executive clip

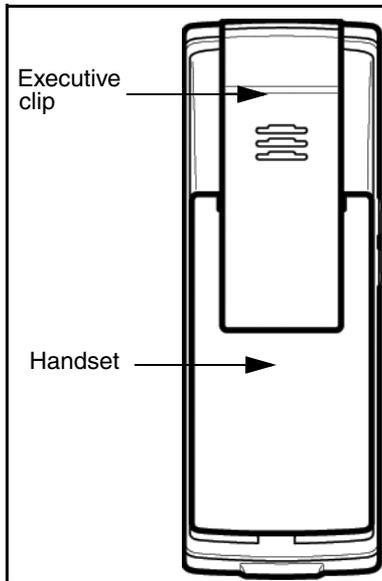

Uninstalling the belt clip


To uninstall the belt clip, perform the following steps:

1. Place the handset face down on a flat surface.
2. If you have a 4075 Handset, unscrew the belt clip, install the belt clip compartment cover and tighten the screws.

If you have a 4027 or 4070 go to step 3.

3. Use the plastic tool to unlock the belt clip fastening.
The plastic tool is shipped in the box with the handset.
4. Slide out the belt clip.
5. Remove the plastic tool.
6. Install the belt clip compartment cover as shown in [Figure 20](#).

Figure 20: Belt clip compartment cover

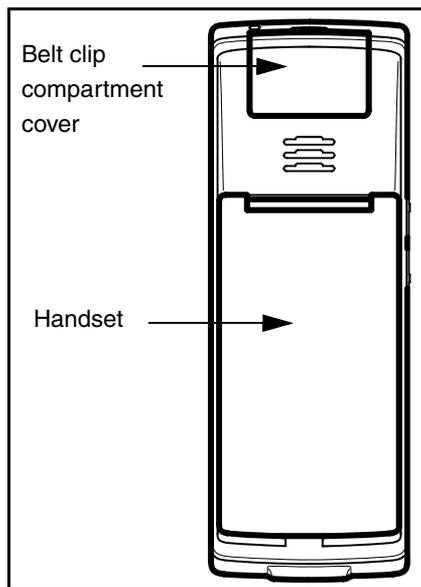


Installing the headset

To use the optional wired headset with your DECT 4027, 4070, or 4075 Handset, install it as shown in the following figure.

Note: (4075 only) The headset jack is covered by a protective plug. Remove it before installing the headset.

Figure 21: Installing the headset

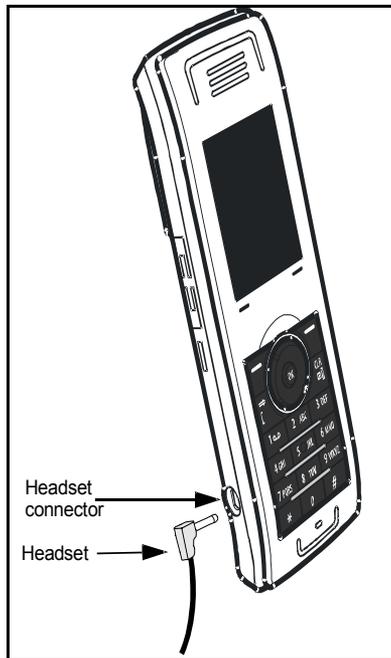

Removing and installing the battery pack (4075 only)

Use the following steps to remove and install the battery pack and cover:

1. Place the handset face down on a flat surface.
2. Unlock the battery cover as shown in [Figure 22](#).
3. Remove the battery compartment cover.

4. If you need:
 - to install a memory (MEM) card, see [“MEM card installation and removal”](#) (page 222);
 - to install a Bluetooth wireless technology module, see [“Bluetooth wireless technology module installation”](#) (page 225);
 - to charge the battery pack refer, see [“Charging the battery pack \(4075 only\)”](#) (page 220).
5. Install the battery pack, pushing it into the casing as shown in [Figure 23](#).
6. Press the battery pack down until it locks.
7. Install the battery cover and lock it.

Figure 22: Unlocking the battery cover


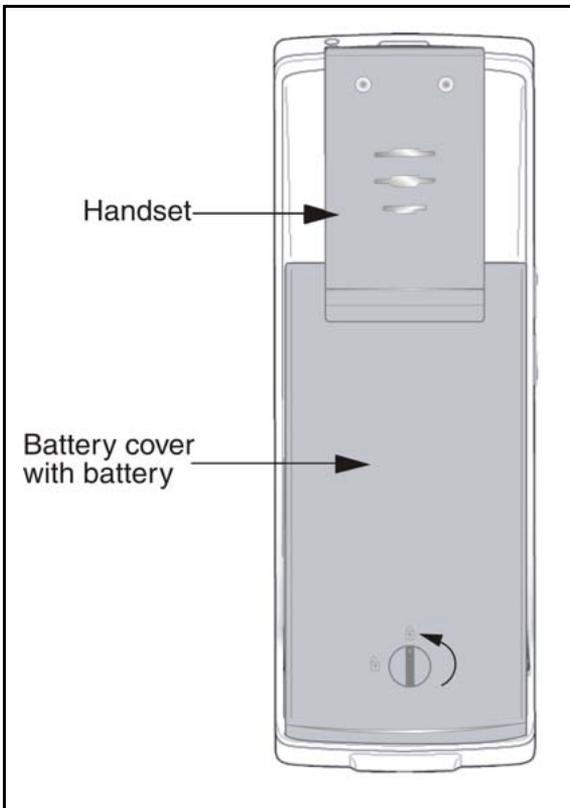


Figure 23: Installing the battery pack

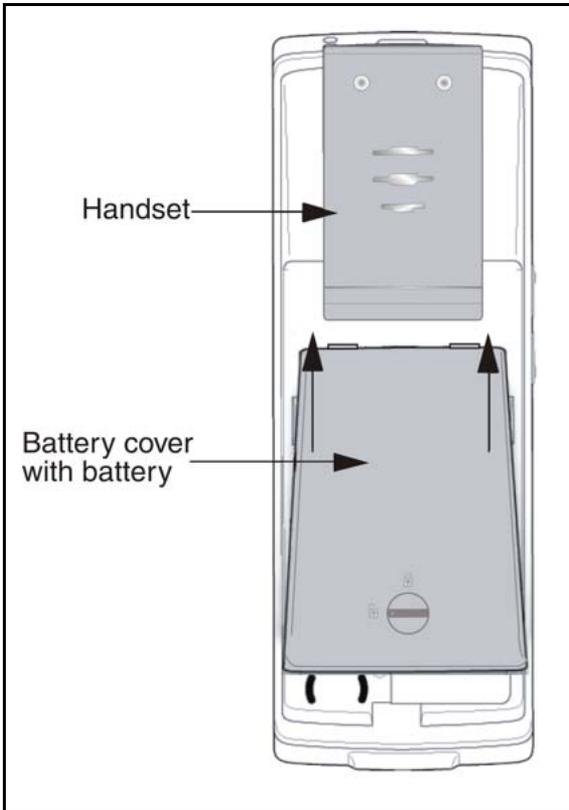

Charging the battery pack (4075 only)

You can charge the battery for your DECT 4075 Handset without having the battery installed in the handset.

Use the following steps to charge the battery pack:

1. If the battery pack is installed in the handset, remove it. See [“Removing and installing the battery pack \(4075 only\)”](#) (page 218) for more information.
2. Remove the plastic cover that protects the battery charger slot.


3. Insert the battery pack into the charger slot as shown in [Figure 24](#).

Attention: Insert the battery pack in the same orientation as it is shown in the figure, otherwise the battery pack cannot charge. When the battery pack is correctly inserted, the indicator lamp lights.

When the battery pack is fully charged, the indicator lamp goes out.

4. Remove the battery pack from the charger, and replace the protective plastic cover over the battery charger slot.
5. Install the battery pack in the handset. See [“Removing and installing the battery pack \(4075 only\)”](#) (page 218) for more information.

Figure 24: Charging the battery pack

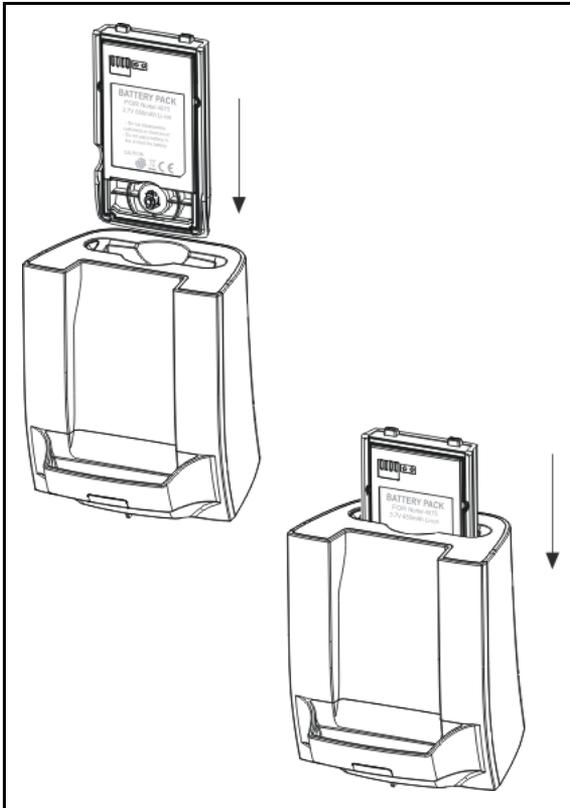

MEM card installation and removal

You can install an optional removable memory (MEM) card in your DECT 4027, 4070, or 4075 handset. The MEM card allows you to personalise your handset.

Attention: You can operate your handset without a MEM card. An installed MEM card allows you to personalise the handset and retain subscriber data. As well, using a MEM card makes it much easier for you to transfer your data, such as contacts, calendar entries, messages, and call filter information, to another handset.

If you install a blank MEM card, the handset automatically copies configuration data to the MEM card. When this happens, the DECT subscriptions of the handset are copied onto the MEM card and removed from the handset memory. This ensures that two handsets never have identical subscription data.

If you install a MEM card that already contains configuration data for a 4027, 4070, or 4075 handset, the configuration data on the MEM card is used, and any configuration data already on the handset is ignored. The parameters stored in the handset memory are not affected, including existing subscriptions that are stored in the handset memory.

Once you have installed the MEM card, all configuration changes, contacts, messages, call entries, calendar items, and new call filter entries are stored on the MEM card only -- not in the handset memory. The parameters that are stored in the handset memory remain intact but are not accessible unless you remove the installed MEM card from the handset.

Attention: You can erase the contents of the MEM card using “[Resetting the MEM card](#)” (page 164). If you do so, the subscription information stored on the MEM card is lost, and you must re-subscribe your handset to the DECT system. Any configuration changes, contacts, messages, call entries, calendar items, and call filter items you added after installing the MEM card in the handset are lost.

You must remove the battery pack before you can remove or install the MEM card. Reinstall the battery pack after you remove or install the MEM card. The MEM card tray is under the battery pack on the back of the handset.

Extracting the MEM card from the frame


To install the MEM card into the handset, you must extract it from the frame.

Attention: A new MEM card is delivered in a larger frame; use the following procedure to remove it from the frame before you install it into the handset.

To extract the MEM card from the frame, perform the following step:

1. Remove the MEM card from the frame as shown in the following figure.

Figure 25: Extracting the MEM card from the frame

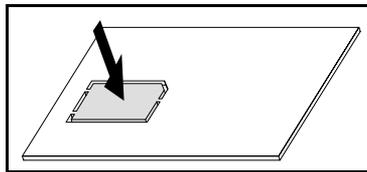

Attention: When you remove the MEM card from the frame, do not touch the metal contacts.

Installing the MEM card

To install the MEM card in the handset, perform the following steps:


1. Place the handset face down on a flat surface.
2. Remove the battery compartment cover and the battery.

Note: For information about removing the DECT 4027 or 4070 handset battery compartment cover, see [“Installing the battery pack \(4027 and 4070 only\)”](#) (page 18).

Note: For information about removing the DECT 4075 handset battery compartment cover, see “Removing and installing the battery pack (4075 only)” (page 218).

3. Slide in the MEM card from under the two small crescents and press it, as shown in [Figure 26](#).
4. Ensure that you have inserted the MEM card completely.


Figure 26: Installing the MEM card

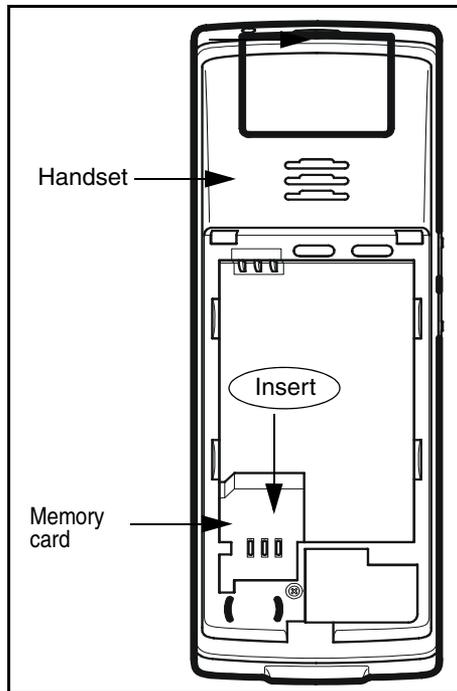

Removing the MEM card

To remove the MEM card from the handset, perform the following steps:

1. Place the handset face down on a flat surface.
2. Remove the battery compartment cover and the battery.
3. Slide out the MEM card under the two small crescents, as shown in [Figure 27](#).

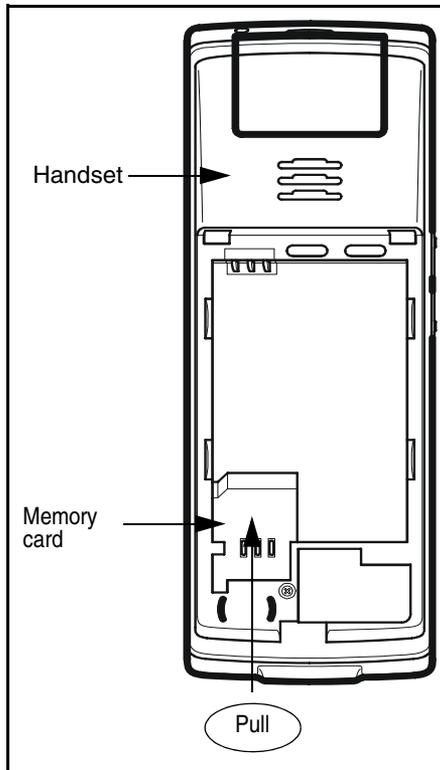Figure 27: Removing the MEM card

Bluetooth wireless technology module installation

Your DECT 4070 and 4075 Handsets are equipped with a radio system to support Bluetooth wireless technology enabled headsets. Ensure that you are familiar with the operation of the navigation keys before you attempt

to use Bluetooth wireless technology. For more information about handset controls, see [“Handset controls”](#) (page 35).

Attention: This feature is available on the DECT 4070 and 4075 Handsets only. Contact your system administrator to determine if you can use the Bluetooth wireless technology feature with your handset.

To install or remove the Bluetooth wireless technology module, you must remove the battery pack.

Installing the Bluetooth wireless technology module on your DECT 4070 or 4075 Handset

To install the Bluetooth wireless technology module on your DECT 4070 or 4075 Handset, perform the following steps:

1. Place the handset face down on a flat surface.
2. Remove the battery compartment cover and the battery.


Note: For information about removing the DECT 4027 or 4070 handset battery compartment cover, see [“Installing the battery pack \(4027 and 4070 only\)”](#) (page 18).

Note: For information about removing the DECT 4075 handset battery compartment cover, see [“Removing and installing the battery pack \(4075 only\)”](#) (page 218).

3. Slide the Bluetooth wireless technology module into the compartment as shown in [Figure 28](#).

Note: On the DECT 4075 Handset, the Bluetooth wireless technology compartment is oriented 90 degrees clockwise in comparison to DECT 4070 handset.

4. Replace the cover after you reinstall the battery pack as shown in [Figure 2](#).

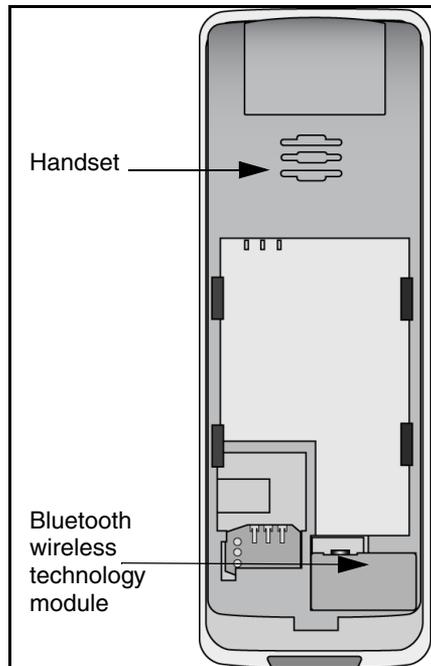Figure 28: Bluetooth wireless technology module installed**Removing the Bluetooth wireless technology module from your DECT 4070 or 4075 Handset**

To remove the Bluetooth wireless technology module from your DECT 4070 or 4075 Handset, perform the following steps:

1. Place the handset face down on a flat surface.
2. Remove the battery compartment cover and the battery.

Note: For information about removing the DECT 4027 or 4070 handset battery compartment cover, see [“Installing the battery pack \(4027 and 4070 only\)”](#) (page 18).


Note: For information about removing the DECT 4075 handset battery compartment cover, see [“Removing and installing the battery pack \(4075 only\)”](#) (page 218)

3. Pull the Bluetooth wireless technology module from the compartment as shown in [Figure 29](#).

Note: On the DECT 4075 Handset, the Bluetooth wireless technology compartment is oriented 90 degrees clockwise in comparison to DECT 4070 handset.

4. Reinstall the battery pack as shown in [Figure 2](#).
5. Replace the battery cover.

Figure 29: Bluetooth wireless technology module removed

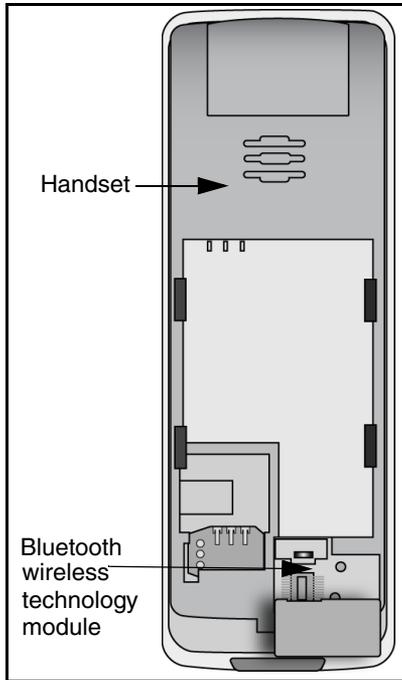

Bluetooth wireless technology headset installation

You can install a Bluetooth wireless technology headset on your handset.

The following table describes the Bluetooth wireless technology headset status icons.

Table 18: Bluetooth wireless technology headset status

Icon	Description
	Connected
	Disconnected
	In conversation

This section describes the following tasks:

- [“Accessing the Bluetooth wireless technology configuration menu” \(page 229\)](#)
- [“Enabling and disabling Bluetooth wireless technology connectivity” \(page 231\)](#)
- [“Adding a Bluetooth wireless technology headset” \(page 231\)](#)
- [“Connecting and disconnecting a paired Bluetooth wireless technology headset” \(page 232\)](#)
- [“Deleting a Bluetooth wireless technology headset” \(page 233\)](#)

Accessing the Bluetooth wireless technology configuration menu

To access the Bluetooth wireless technology configuration menu, perform the following steps:

Menu

1. Press the **Menu** soft key to access the Main menu.



2. Press the **Up** or **Down** key to highlight the **Settings** icon.



Select

3. Press the **Select** soft key.



4. Press the **Left** or **Right** key to choose the **Connectivity** option.



Bluetooth

5. Press the **Up** or **Down** key to highlight the **Bluetooth** option.

Select

6. Press the **Select** soft key.

Enabling and disabling Bluetooth wireless technology connectivity

To enable and disable Bluetooth wireless technology connectivity, perform the following steps:

Bluetooth

1. Open the **Bluetooth** configuration menu using the steps in “[Accessing the Bluetooth wireless technology configuration menu](#)” (page 229).
2. If the first menu option is **Disabled**, press the **Select** soft key, and then press the **Yes** soft key to enable Bluetooth wireless technology.

OR

If the first menu option is **Enabled**, press the **Select** soft key, and then press the **Yes** soft key to disable Bluetooth wireless technology.



3. Press the **Clr** key one or more times to return to the idle display.

Adding a Bluetooth wireless technology headset

To add a Bluetooth wireless technology headset, perform the following steps:

Bluetooth

1. Open the **Bluetooth** configuration menu using the steps in “[Accessing the Bluetooth wireless technology configuration menu](#)” (page 229).
2. If Bluetooth wireless technology is disabled, enable it using the steps in “[Enabling and disabling Bluetooth wireless technology connectivity](#)” (page 231).
3. Start pairing mode on your Bluetooth wireless technology headset (see the headset documentation).



Search for devices

4. Press the **Up** or **Down** key to highlight the **Search for devices** option.

Attention: If the search process is successful, proceed to step 5. If the search is unsuccessful, repeat steps 3 to 4.

Pair

5. Press the **Pair** soft key and add the headset.



6. Use the **Dialpad** to enter the PIN code of your Bluetooth wireless technology headset (see the headset documentation).

Connect

7. Press the **Connect** soft key to connect the device.
8. Press the **Clr** key one or more times to return to the idle display.

 
Connecting and disconnecting a paired Bluetooth wireless technology headset

Once you have added a Bluetooth wireless technology headset, the headset automatically connects to the DECT Handset when the two devices are active, and are in range of each other. The DECT Handset disconnects the Bluetooth wireless technology headset if the handset is inactive or out-of-range.

To manually connect or disconnect a Bluetooth wireless technology headset, perform the following steps:

Bluetooth

1. Open the **Bluetooth** configuration menu using the steps in [“Accessing the Bluetooth wireless technology configuration menu”](#) (page 229).




2. Press the **Up** or **Down** key to highlight the **Paired devices** option.

Paired devices

Select

 3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the required device.

Connect

5. Press the **Connect** or **Discon.** soft key to connect or disconnect the headset.

Discon.



6. Press the **Clr** key one or more times to return to the idle display.

Deleting a Bluetooth wireless technology headset

To delete a Bluetooth wireless technology headset, perform the following steps:

Bluetooth

1. Open the **Bluetooth** configuration menu using the steps in “[Accessing the Bluetooth wireless technology configuration menu](#)” (page 229).



2. Press the **Up** or **Down** key to highlight the **Paired devices** option.

Paired devices

Select

3. Press the **Select** soft key.



4. Press the **Up** or **Down** key to highlight the required device.

More

5. Press the **More** soft key.



Delete

6. Press the **Up** or **Down** key to highlight the **Delete** option.

Yes

7. Press the **Yes** soft key to confirm the deletion.



8. Press the **Clr** key one or more times to return to the idle display.

Terms you should know

Nortel Communication Server 1000 (CS 1000)

Your office Private Branch Exchange system.

DECT

Digital Enhanced Cordless Telecommunications

Directory Number (DN)

A number that consists of one to seven digits for a telephone. Also known as an extension number.

Flexible Feature Code (FFC)

Specialised codes entered using the dialpad that enable features (for example, Ring Again).

Key lock

A feature used to disable key input and prevent accidental operation.

Long Press

Press and hold a key for 2 seconds and then release it.

MEM card

A removable memory card (storage device) for contacts, messages, call logs, and subscriptions.

SIP DECT

Nortel VoIP DECT system that uses the SIP protocol to establish calls.

Soft keys

Two keys located below the display, that have different functions and labels depending on the current operational mode of the handset

System or Switch

Your office communication system.

Traditional DECT

Nortel DECT system based on DMC cards.

Voice mail

A system that allows you to exchange spoken messages with other users.

Index

A

accessing additional features
using FFC or SPRE codes 211

accessing general settings menu
150

accessing the caller filter menu
192

accessories 212

alerts

accessing the sounds and
alerts menu 167

configuring alert volume 173

configuring Cadence Mode
179

configuring ring volume 167

defining ring external melody
168

defining ring internal melody
169

defining tone melody 173

enabling charger warning 178

enabling confirmation sound
176

enabling coverage warning
177

enabling increasing alert 174

enabling increasing ring 172

enabling key sound 175

enabling vibrator 175

normal message melody 170

ring emergency melody 172

ring unknown call melody 170

urgent message melody 171

all calls list 70

accessing 70

deleting all entries 75

deleting an entry 74

dialling a number 71

transferring a number to the
caller filter list 73

transferring a number to your
contacts list 72

viewing information about a
call 71

answer mode

any key 190

autoanswer 190

normal 191

answer mode configuration 189

answered calls list 75

accessing 76

deleting all entries 80

deleting an entry 79

dialling a number 77

transferring a number to the
caller filter list 78

transferring a number to your
contacts list 77

viewing information about a
call 76

answering calls 60

Auto-answering mode 61

muting the ringer 61

Normal mode 61

rejecting a call 62

with any key 61

appointments

adding 130

copying 134

deleting 136

editing 133

selecting a date 130

viewing 132

audio settings 166
 automatic dialpad lock 160
 Automatic key lock feature 160

B

batteries 22

- charge display 25
- charging and operating times 24
- charging guidelines 23
- important information 22
- installing the battery pack 18

 battery charge display 25

battery pack

- charging (4075 only) 220
- installing or removing (4075 only) 218

 belt clip 214

- installing 214
- uninstalling 217

 Bluetooth wireless module

- installing 18

 Bluetooth wireless technology

- accessing the configuration menu 229
- adding a headset 231
- connecting and disconnecting a headset 232
- deleting a headset 233
- enabling and disabling a headset 231
- headset installation 229
- module installation 225

 Bluetooth wireless technology headset

- Installing the module on 4070 Handset 226

 Bluetooth wireless technology module

removing the module 227

C

calculator 137
 calculator icons 139
 calculator, stopwatch, and alarms 137
 calendar 128

- accessing 129
- changing the format 129

 call and message statistics 188
 call mode 29, 38
 call settings 187
 call settings menu 188
 Caller filter

- activating 196
- deactivating 197

 Caller filter configuration 191
 Caller filter list

- adding an entry 193
- deleting all entries 195
- deleting an entry 194
- editing an entry 194

 Caller list icons 69
 calling features 53
 Calls 53
 calls list 68
 Charge display 25
 charge display 25
 charger

- installing 20

 charging the batteries 22
 CLID (Calling Line Identification) 68
 configuring shortcuts 157
 connectivity settings 208

- contacts 93
 - accessing the contacts menu 94
 - adding a contact name 98
 - adding a contact number 95
 - adding a contact ringtone 99
 - adding a new contact 94
 - deleting a contact 100
 - deleting a contact number 97
 - editing a contact number 96
- controls 35
 - key functions in call mode 38
 - key functions in dialogue mode 40
 - key functions in edit mode 41
 - key functions in idle mode 36
 - key functions in menu mode 40
 - locking or unlocking the dial-pad 45
- D**
- daily alarm
 - creating 142
 - editing 143
 - turning off 144
- date
 - configuring 155
- DECT 4027 and 4070 Handsets configuration 46
- DECT 4027/4070 Handset installation 46
- DECT system configuration 46
- DECT system name 47
- dialled calls list 81
 - accessing 81
 - deleting all entries 85
 - deleting an entry 85
 - dialling a number 82
 - transferring a number to the caller filter list 84
 - transferring a number to your contacts list 82
 - viewing information about a call 81
- dialogue mode 31, 40
- directory number 235
- display 26
 - dialogue area 29
 - icon line 27
 - LED 33
 - soft key line 33
- Display areas 26
- display settings 180
- display settings menu
 - accessing 181
- DN 235
- during a call 62
 - adjusting the headset or loud-speaker volume 62
 - using mute 63
- E**
- edit mode 32, 41
- emergency call 198
 - creating a text message 199
 - number configuration 198
- F**
- feature overview 13
- FFC codes 210
- first value 187
- Flexible Feature Code (FFC) 235
- G**
- general settings 149

getting started 18

H

handset

 resetting to factory defaults
 164

handset accessories 212

handset controls 35

handset information 165

handset name

 defining 163

headset

 installing 218

I

icon line 27

idle mode 29, 36

inbox 112

installing the charger 20

K

Key functions in Idle mode 36

L

language 156

LED indicator 33

 configuring 158

lock/unlocking the dialpad 45

locking your phone 160

M

making calls 53

 dial using the Central Directory
 57

 dial using the telephone book
 56

 dialling 54

 loudspeaker 55

 predialling 54

 SOS 59

 speed dial 55

Mandown

 activating or deactivating 201

Mandown call

 auto answer 204

 delay 205

 number 202

 prealarm time 206

 text message 203

Mandown configuration 200

Manually selecting the DECT
system 49

MEM card

 extracting from the frame 223

 installation and removal 222

 installing 18, 223

 removing 224

 resetting 164

menu mode 31, 40

message limitations 107

message list full 127

Message settings 123

message settings 123

messages 106

 accessing the message set-
 tings menu 124

 accessing the Messaging In-
 box 113

 accessing the messaging
 menu 107

 accessing the sent messaging
 menu 120

 deleting a draft 111

 deleting a sent message 122

 deleting all drafts 112

- deleting all incoming messages 118
- deleting all sent messages 123
- deleting an incoming message 117
- forwarding a sent message 121
- forwarding an incoming message 115
- inbox 112
- new messages and drafts 107
- normal and urgent 126
- overwrite 124
- reading a sent message 120
- reading an incoming message 113
- replying to an incoming message 114
- saving a new message or editing a draft 108
- saving sender's number to contacts 117
- sending a message 109
- sent message option 125
- sent messages 120
- messaging 106
- missed calls list 86
 - accessing 87
 - deleting all entries 92
 - deleting an entry 91
 - dialling a number 89
 - transferring a number to the caller filter 90
 - transferring a number to your contacts list 89
 - viewing information about a call 88
- mute
 - during a call 63
 - muting the ringer 61

N

- normal answer mode configuration 191

O

- on/off switch 26

P

- PARK code 47
- phone lock 160
- power save options 186
- profile
 - editing 152
- profiles 150

R

- recurrent alarm
 - creating 145
 - editing 146
 - turning off 147
- regulatory and safety Information 14
- regulatory and safety information 14
- resetting the handset 164
- resetting the MEM card 164
- Ring external melody 168
- Ring unknown call melody 170

S

- safety precautions 16
- second value 187
- Security options 158
- security options 159
- silent charging

- activating 207
- soft key line 33
- SOS calls
 - making 59
- speed dial 101
 - assigning a speed dial number 101
 - clearing the speed dial number 103
 - reassigning the speed dial number 102
- SPRE codes 210
- startup image 184
 - clearing 186
 - selecting by theme 184
 - selecting from outside the current theme 185
- stopwatch 139
- switching the handset on or off 26
- system configuration
 - accessing the connectivity menu 46
 - derogistering the handset 51
 - editing the system name and phone number 51
 - enabling automatic DECT system selection 50
 - manually selecting the DECT system 49
 - subscribing the handset to a DECT System 47

T

- telephone settings 149
- theme
 - selecting 183
- time
 - configuring 154

- time and date 153
- transfer a call 63
- transferring a call 63
- Transferring phone numbers to the caller filter list 198
- transferring phone numbers to the caller filter list 104
- transferring phone numbers to the contacts 103

V

- Voice mail 64
- voice mail 64
 - accessing 65
 - defining a voice mail number 66

W

- wallpaper 181
 - clearing 183
 - selecting by theme 181
 - selecting from outside the theme 182

Nortel Communication Server 1000

DECT 4027, 4070, and 4075 Handsets

User Guide

Copyright © 2008-2009, Nortel Networks.
All Rights Reserved.

LEGAL NOTICE

While the information in this document is believed to be accurate and reliable, except as otherwise expressly agreed to in writing NORTEL PROVIDES THIS DOCUMENT "AS IS" WITHOUT WARRANTY OR CONDITION OF ANY KIND, EITHER EXPRESS OR IMPLIED. The information and/or products described in this document are subject to change without notice.

Nortel, Nortel (Logo), the Globemark, SL-1, Meridian 1, and Succession are trademarks of Nortel Networks.

Bluetooth is a trademark of Bluetooth SIG, Inc.

All other trademarks are the property of their respective owners.

Publication Number: NN43120-122

Document Release: 01.10

Date: May 2009

To provide feedback or report a problem in this document, go to
www.nortel.com/documentfeedback.



www.nortel.com