



**Oricom BB200  
DECT Cordless Telephone**

**User Guide**

**Keep this user guide for future reference**

# CONTENTS

 
Getting Started.....	3
Handset and base unit.....	3
Handset Display Guide.....	4
Safety Information.....	5
Installation.....	6
Power supply.....	6
Fitting batteries.....	6
Recharging your cordless phone.....	6
Replacing batteries.....	6
Basic Operation.....	7
To answer a call.....	7
Making a call.....	7
Using the Hands-free speakerphone.....	7
Pre-dialling.....	8
Last number redial.....	8
Call duration timer.....	8
Adjusting the earpiece volume.....	8
To page the handset.....	8
Handset ringer volume.....	9
Handset ringer melody.....	9
To mute the mouthpiece.....	9
To lock the keypad.....	9
Using your cordless on a PBX.....	10
Turning off the handset ringer.....	10
Message waiting indication.....	10
Take 2 different calls at the same time.....	10
Phonebook Memories and Caller ID.....	11
To store a number in the phonebook.....	11
To dial a number from the phonebook.....	11
To delete a number from the phonebook.....	11
Caller ID.....	12
Check caller ID records.....	12
To return a call.....	13
To delete a caller ID record.....	13
To store a caller ID record.....	13
Troubleshooting.....	14
Notes for Operation in New Zealand.....	15
Warranty.....	16

## Unpacking your Oricom BB200

Retain all packing materials in a safe place, in case you later need to transport it or return it for servicing.

In the box, you will find: - 1 cordless handset, 1 Base Unit , 2 AAA rechargeable 600mAh batteries, 1 AC adaptor, telephone line cord and adaptor plug, warranty card and this user manual.

### Handset and Base unit

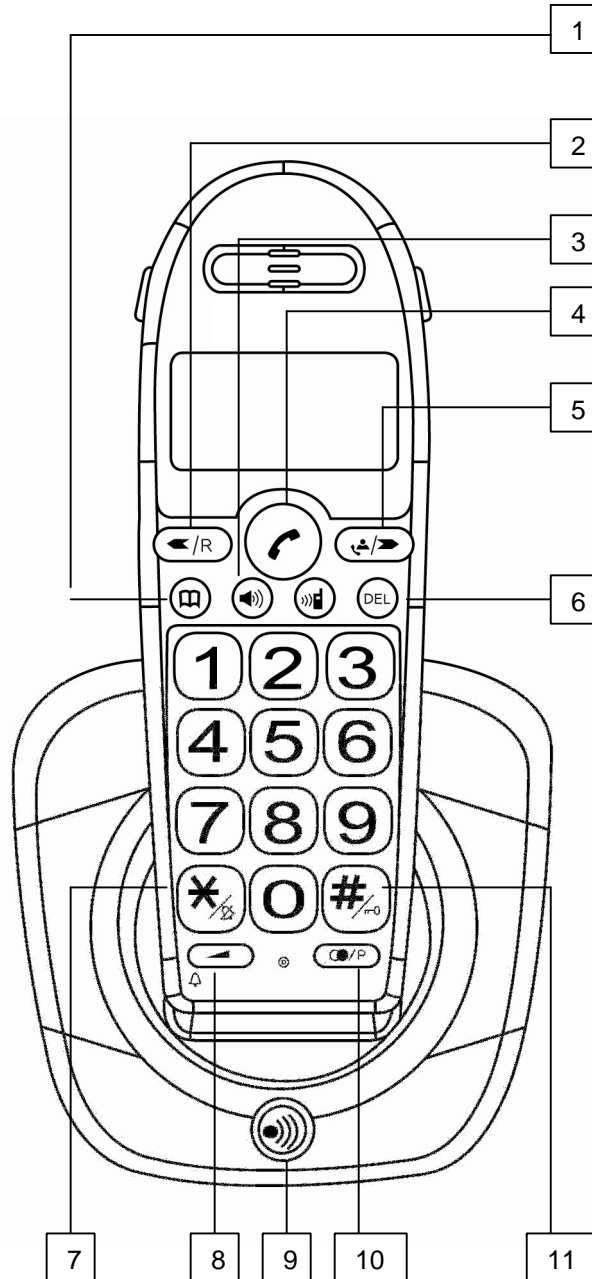















1. Memory button
2. Back and Recall button
3. Speakerphone button
4. Talk button
5. Caller ID and Forward button

6. Mute/Delete button
7. Ringer on/off button
8. Ringer volume button
9. Handset Locator button
10. Last Number Redial/Pause button
11. # and Keypad Lock button

# HANDSET DISPLAY GUIDE

## Legend

	Memory/Store (to store a number in memory or to make a call to a stored number)
	Battery level
	Battery level (Battery low)
	Handset Ringer "ON"
	Handset Ringer "OFF"
	Speakerphone "ON"
	Keypad locked
	<i>On steady:</i> telephone line is busy. <i>Flashing:</i> incoming call
	The "X" appears when the microphone is muted
	<i>On steadily:</i> all new Caller ID records have been listened to but not yet deleted <i>Flashing:</i> new Caller ID records present
	<i>On steadily:</i> handset within range of the base unit <i>Flashing:</i> handset out of range
	Indicates new message received
	Intercom operating: during calls to another handset
	More digits to view to the right or to the left of the display

## SAFETY INFORMATION

- Avoid exposure of this telephone to moisture or liquid.
- To prevent electric shock, do not open the handset or base cabinet.
- Avoid metallic contact (e.g. metal clips, keys) between the battery contacts and charging conductors.
- Do not use the handset in an explosive hazard area such as where there is gas leaking.
- There is a chance that the telephone could be damaged by an electrical storm. It is recommended that users unplug the phone from the mains supply and telephone socket during a storm.
- Follow the local regulations regarding the disposal of your packing materials, exhausted batteries and used phone. Wherever possible, recycle those materials.
- We advise that this phone should not be used near intensive care medical equipment or by persons with pacemakers.
- Clean with a dry, soft, lint-free cloth. Never use cleaning agents, particularly aggressive solvents.
- Because the phone works by sending radio signals between base station and handset, wearers of hearing aids may experience interference in the form of a humming noise.
- Your phone can interfere with electrical equipment such as answering machines, TV and radio sets, clock radios and computers if placed too close. It is recommended that you position the base unit at least one metre from such appliances.
- This telephone complies with applicable safety requirements for exposure to radio waves (EMR). The main power of this telephone does not exceed 20mW limit at which point testing is required.
- The earpiece of the handset may attract small metal objects such as staples and pins. Care should be taken when placing the handset near these items.

### CAUTION

**This telephone is not designed for making emergency telephone calls when the mains power fails. Always have a corded phone available to be able to make and receive calls to emergency services if the mains power fails.**

**Do not use your telephone during an electrical thunderstorm as it is possible to get an electric shock. Refer to information contained in the White pages directory.**

### CAUTION

**Only use only the mains adaptor supplied with this phone. Incorrect adaptor polarity or voltage can seriously damage the unit.**

**Adaptor**

**Model #: S060020D22**

**Approval #: Q031027**

**Input: 240 Vac / 50Hz**

**Output: 6VDC /200MA 1.2VA**

## INSTALLATION

---

### POWER SUPPLY

---

#### **IMPORTANT!**

The mains power adaptor must be installed near the equipment and must be easily accessible. Power must be turned on at all times for the phone to work

1. Connect the output plug of the mains adaptor to the adaptor socket on the back of the base unit and the mains adaptor to the wall mains supply.
2. Connect the telephone lead to the phone cord socket on the back of the base unit and to the wall phone socket.

---

### FITTING BATTERIES

---

**IMPORTANT:** Only use the rechargeable batteries provided with this phone.

1. Place your handset with the keypad facing downwards.
2. Remove the battery compartment cover by pushing on the indent and sliding it in your direction.
3. Insert the two batteries (AAA) into the battery compartment, observing the correct polarity.
4. Slide the battery compartment cover gently back into place, it will click when it is in the correct position.


#### **IMPORTANT!**

**PLACE THE HANDSET IN THE BASE UNIT AND LEAVE FOR 15 HOURS TO CHARGE THE BATTERIES FULLY BEFORE FIRST USE.**

---

### RECHARGING YOUR CORDLESS PHONE

---

When your handset battery becomes low the Low Battery symbol  appears on the display. To recharge it, just replace the handset on the base unit.

**Tip! It is good practice to put the handset on the base unit to charge when it is not in use or every evening to ensure the handset is always fully charged**

---

### REPLACING BATTERIES

---

#### **CAUTION**

**THERE IS A RISK OF EXPLOSION IF THE BATTERY IS REPLACED BY AN INCORRECT TYPE. Never use non-rechargeable batteries; use only type supplied with this telephone. Ni-MH batteries must be disposed of in accordance with the applicable waste disposal regulations.** When the handset needs to be charged more frequently, even when batteries are correctly recharged, it is time to replace the batteries: follow the instruction above "*Fitting Batteries*".

## BASIC OPERATION





### Introduction

When the phone is in standby mode, the LCD displays the handset name. The battery icon reflects the current battery level and the signal icon indicates the handset is linked to the base.

---

### TO ANSWER A CALL




---

- When you receive a call, both handset and base will ring, the  symbol appears on the display, and both the red led on the handset locator button and the big red led on the phone base will start flashing. If your cordless is directly connected to the telephone line (not via PABX) and the Caller Details Service has been activated by your server, the caller's telephone number (if available) appears on the display.
- Press the  button to answer the call, the symbol  will come up steadily on the display and the base red led with flash.
- To end a call, press again the  button, or alternatively replace the handset back in the base. The display symbol and the base red led disappear.

---

### MAKING A CALL

---



- Press  button.
- The symbol  appears steadily on the display and the base red led starts flashing.
- Check that the dial tone is present then key in the number.
- The dialled number appears on the display.
- To end the call, press again the  button or alternatively replace the handset back in the base.





---

### USING THE HANDS-FREE SPEAKERPHONE

---




The Hands-free function provides the convenience of talking to the caller without holding onto the phone and allows others in the room to be involved in the conversation.

To activate the speakerphone, press the  button when the handset is in standby mode or after having pressed the  button to make or pick up a call.

The speakerphone is active if you can hear the callers voice coming from the speaker and can see the  and the  symbols on the display  (hold repeatedly the Volume button to adjust the speaker volume). To switch back to normal mode from a speakerphone call, briefly press the  button.

## PRE-DAILLING

Pre-dial allows you to enter a telephone number and verify it on the screen before you place the call. The screen displays the last 12 digits dialed but you can enter up to 2 digits.

- In standby mode enter the phone number you wish to dial.
- To enter a pause, press the /P button and a dash “-“will appear in the display.
- If you make a mistake, press **DEL** to erase one digit at a time. Or you can press and hold the **DEL** button to clear the entire number and return the phone to standby.
- Press  to dial out the number.
- To end the call, press the  button again, or replace the handset back in the base.

**Note:**If you have connected this phone to an office phone system (PBX) you may need to enter a pause for a few seconds between dialling the line access code and the actual phone number.



To pause, press the /P button and a dash “ - “will appear in the display.

---

## LAST NUMBER REDIAL

---

You can review and call back the last 3 numbers you have dialed as your cordless stores them in the redial memory.

- In the standby mode press the /P button to scroll through the last 3 numbers you dialed.
- Select the number you want to redial and press , to dial the number.

---

## CALL DURATION TIIMER


---

When you make or answer a call the display shows the call duration in time minutes and seconds.

---

## ADJUSTING THE EARPIECE VOLUME

---

During a call, to adjust the volume in the handset's earpiece or speakerphone press the volume button repeatedly .

The display shows the current volume level: the more “0's” the highest the volume (“0” to “00000”).

---

## TO PAGE THE HANDSET

---

This function is useful if you can't find your handset.






- On the base unit press and release the  button. The handset rings with a special tone.
- To stop the handset ringing, on the handset press any button or numbered key.



---

## HANDSET RINGER VOLUME

---





- While the handset is in the standby mode  press the volume button.
- Press the /R to decrease the volume level and  to increase the volume level. The display shows the current volume level: the less “0’s” is the lowest level and more “00000” is the highest level.);  
the  symbol indicates the ringer is turned off.
- Press the  button again to confirm, otherwise wait a few seconds for the new setting to be automatically confirmed and the display to get back to standby mode.

---

## HANDSET RINGER MELODY

---


You have a choice of 9 ringing melodies.

- While the handset is idling (not busy on a call) press the  button and hold it for about 3 seconds, the display shows “d--d” followed by the number (1-9) current ringer melody.
- Press the /R or  button briefly to hear the different ringing melodies.
- When you reach the melody you prefer press the  button again to confirm, otherwise wait a few seconds for the new setting to be automatically confirmed and the display to get back to standby mode.

---

## TO MUTE THE MOUTHPIECE

---


To put the call on hold, so that the person on the other end cannot hear you, press the **DEL** button briefly. While the mouthpiece is muted  is shown on the display. To return to the call press the **DEL** button again.


---

## TO LOCK THE KEYPAD

---

To lock the handset’s keypad so that no buttons can be pressed.

To block the handset keypad, while handset is idle press **#/-0** and hold it for a few seconds; until you hear a confirmation beep and  appears on the display.

 
To unlock the keypad, press **#/-0** again and hold it until  disappears from the display.

---

## USING YOUR CORDLESS ON A OFFICE PHONE SYSTEM (PBX)

---





### PAUSE FUNCTION


If you have connected this phone to an office phone system (PBX) you may need to enter a pause for a few seconds between dialling the line access code and the actual phone number. To enter a 3 second pause, press the  button and a dash “ - “ will appear in the display.

---

## TURNING OFF THE HANDSET RINGER

---

- When the handset is in the standby mode press and hold for a few seconds the \* button, the symbol  will appear on the display.
- To turn the ringer back on, press and hold again the button \*, the symbol  will disappear from the display.



**IMPORTANT:** with this function active only the base will ring and the call symbol  will flash on the display.

---

## MESSAGE WAITING INDICATION

---


You have to subscribe to a voice message service (eg Telstra Message Bank) from your local service provider to use this feature. (Subscription and other charges may apply).



When you receive a voice message the  icon will appear on the display. When you retrieve your messages the message  will turn off. You can also turn it off by pressing **DEL** for 2 seconds in the standby mode.

---



## HOW TO TAKE 2 DIFFERENT CALLS AT THE SAME TIME

---

You can use the /R (Recall) button to answer a second call while you are on the phone. However this service will need to be turned on. For example to turn on Telstra's Call Waiting service:

1. Press  wait for dial tone then Press **\*43#**
2. You will hear a service tone then Press .

During a call, you will hear two loud beeps periodically to notify you of another incoming call. If you wish to answer this call:-

1. When the handset receives a second call, the number of the caller appears on the display.. Press /R (Recall) **when you hear dial tone Press 2** to put the current call on hold and talk with the second caller.
2. Subsequent presses of /R **listen for dial tone then Press 2** will toggle you between these 2 callers.

Caller information of this second call will be stored in the call log.



**NOTE:** If you have subscribed to your telephone network operators Call Waiting Caller ID service, your phone will also display the number of the second incoming call for around 10 seconds while you are talking on the phone or until you press a key on the phone.

 


## MEMORIES

You can store up to 10 numbers in the phonebook memory. Each stored number can be up to 25 digits.

### TO STORE A NUMBER IN THE PHONEBOOK

Make sure the handset is in the standby mode.




Press the  button and hold it until the symbol  flashes on the display.

1. Key in the number you want to store (max 25 digits).
2. If you need to correct a number whilst entering use the /R and  buttons to move the cursor from a digit to another, and the **DEL** button to delete a wrong digit to the left of the cursor.
3. Briefly press the  button, again, (the telephone number moves to the right on the display and the cursor flashes on the left). Key in a memory location number (0 to 9).
4. The display goes back to standby mode.




To store another number, start again from step 1.

**Tip: You can delete a record by simply storing a new number in the same location.**

### TO DIAL A NUMBER FROM THE PHONEBOOK MEMORY

1. When the handset is idle press briefly the  button to enter the Phone Book.
2. Key in the memory location number, if the wrong number appears on the display, key in another memory location number (0 to 9) to view the other stored records.
3. Press the  button or the  button to call the desired number.

### TO DELETE A NUMBER FROM THE PHONEBOOK MEMORY

1. Press the  button and hold it until the symbol  flashes on the display.
2. Briefly press the  button, again, a dash “-“ will appear on the display.
3. Key in the memory location number (0 to 9).
4. You hear a confirmation tone and the display goes back to standby mode.


---

## CALLER ID

---

If you subscribe to your network providers Caller ID service (charges may apply) your phone automatically stores the numbers of the last 20 incoming calls.


When the phone rings and caller information is received, the display will show the last 14 digits of the callers number.

 
When in the standby mode and there are calls you haven't answered, the symbol  flashes on the display.

When you review these calls the  symbol will remain constant on the display.

Refer to the following page to learn how to access the list.


### TO CHECK CALLER ID RECORDS

With handset idle, press the Caller  ID button, you'll see the most recent record on the display.

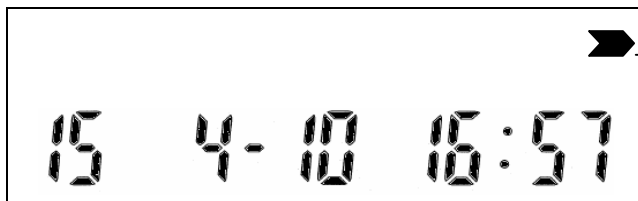



Number of received call      Day-Month of received call      Time of received call


Details of the telephone number of the related call to be viewed

Wait a few seconds for the display to automatically show you the telephone number related to the call, otherwise press  the button again to check the caller's number.








Details of the date and time of the related call to be viewed.

Now, just press the  button to go back and view the date and time of the last call. Press the Caller ID button again  repeatedly to view the next records (less recent ones).

Press repeatedly the  button to view the phone number of the related call first, and then the date and time of the following calls (more recent ones).




Once you've reached the beginning of the end of the list, scroll it again backwards.

## TO RETURN A CALL

 - In standby mode, press the Phone  button to enter the list.
- Use the /R and  buttons to select the number you want to call back.
  - To call back a number when the call details (date and time or telephone number) are displayed, just press three  or the  button.







## TO DELETE A CALLER ID RECORD

A simple operation allows you to delete a record from the list:

- In standby mode, press the  button to enter the list.
- Use the /R and the  buttons to select the record you want to delete.
  - When the record is shown on the display, press and hold the **DEL** button until the display moves to the next Caller ID records.

If there are no more Caller ID records, the display shows NO CLIP

## TO STORE A CALLER ID RECORD (10 MEMORIES AVAILABLE)

- In standby mode, press the  button to enter the list.
- Use the /R and  buttons to select the number you want to store.
- When the number appears on the display, press and hold the  button (for about 2 seconds) until the  symbol flashes on the display.
- Key in a memory location number (0 to 9).
- Press the button  briefly again, you'll hear a beep to confirm.

## TROUBLESHOOTING

Are you having trouble with your phone? Here are some answers to common questions.

<b>Problems</b>	<b>Solutions</b>
The phone does not work at all	<ul style="list-style-type: none"> <li>• Make sure that adaptor and phone cord are connected properly.</li> <li>• Check that the batteries are fully charged and installed properly.</li> <li>• This phone does not work during power failure.</li> </ul>
The phone does not ring	<ul style="list-style-type: none"> <li>• Make sure the adaptor and the phone cord are connected properly.</li> <li>• Move the handset closer to the base unit.</li> <li>• Make sure the handset (or base) ringer is turned on.</li> </ul>
There is no dial tone	<ul style="list-style-type: none"> <li>• Check that the phone cord is connected properly.</li> <li>• Check the handset is fully charged.</li> <li>• Move the handset closer to the base unit.</li> </ul>
CID does not work properly	<ul style="list-style-type: none"> <li>• Check with your local phone company that the CID service is subscribed to.</li> <li>• Let the phone ring at least once before answering.</li> </ul>
The CIDCW call cannot be answered	<ul style="list-style-type: none"> <li>• Check with your local phone company and select the correct recall duration</li> </ul>
The empty battery icon appears soon after the batteries are charged	<ul style="list-style-type: none"> <li>• Replace the Rechargeable batteries with new ones. Contact Oricom for Replacement batteries.</li> </ul>

## **Notes for operation in New Zealand**

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with the minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services. This device may be subject to ringing or bell tinkle when certain other devices are connected to the same line. If this occurs, the problem should not be referred to the Telecom Faults service.

This equipment shall not be set to make automatic calls to the Telecom "111" Emergency Service. This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

### **REN (RN for New Zealand)**

The REN (Ringer Equivalence Number) or (RN) is of significance only if you wish to connect more than 1 telephone to your telephone line. A standard telephone line has a maximum REN capacity of 3 (RN of 5). It is possible to connect 3(5) devices with a REN of 1 (RN of 1) with no degradation to the product's performance. Exceeding this limit may cause the volume of the ringer in any phone to decrease or not ring at all.

### **Caller ID**

Customers using non Telecom toll services should not use the dial back feature for local calls as this will incur a charge only the 7 digit number should be dialled. Some of the CID services listed may not be available in New Zealand. This telephone is not designed for making emergency telephone calls when the power fails. Make alternative arrangements for access to emergency services.

## WARRANTY

This product is covered by a 12 month warranty against defective workmanship or parts. The warranty does not extend to damage caused by misuse, negligence, water ingress, excessive voltage, telephone line faults or lightning. This guarantee in no way affects your statutory rights. Full details of the warranty are contained in the enclosed warranty card.

If you feel this product is not working correctly please consult the user guide and ensure that you are using the product in accordance with the instructions. Remove all extra telephone equipment and connect only this telephone directly to the telephone socket.

If the fault is still present, connect another telephone (if available) to the telephone socket. The results will show you whether the fault lies with this unit or with the telephone line.

If the product is working correctly the fault is on the telephone line. Please contact your network operator for assistance.

To order replacement batteries and in case of any technical issues you may have with this product please consult our website for further information or send us an email for a prompt response to your enquiry.

In the unlikely event of a fault developing, please contact us for assistance. If the product is then found to be faulty you will be asked to return it directly to us with a copy of the purchase receipt.

### **Australia**

Oricom International Pty Ltd  
Locked Bag 568  
South Windsor, NSW 2756

### **Customer support**

Email: [support@oricom.com.au](mailto:support@oricom.com.au)  
Web: [www.oricom.com.au](http://www.oricom.com.au)  
Fax: (02) 4574 8898  
Ph: 1300 889 785

### **New Zealand**

Atlas Gentech (NZ) Limited  
Private Bag 14927,  
Panmure, Auckland

### **Customer support**

Email: [support@atlasgentech.co.nz](mailto:support@atlasgentech.co.nz)  
Web: [www.atlasgentech.co.nz](http://www.atlasgentech.co.nz)  
Fax: (09) 574 2722  
Ph: 0900 50 025 (Toll Call)