


## Oricom M5200 Series Cordless phone with integrated answering system

# USER GUIDE

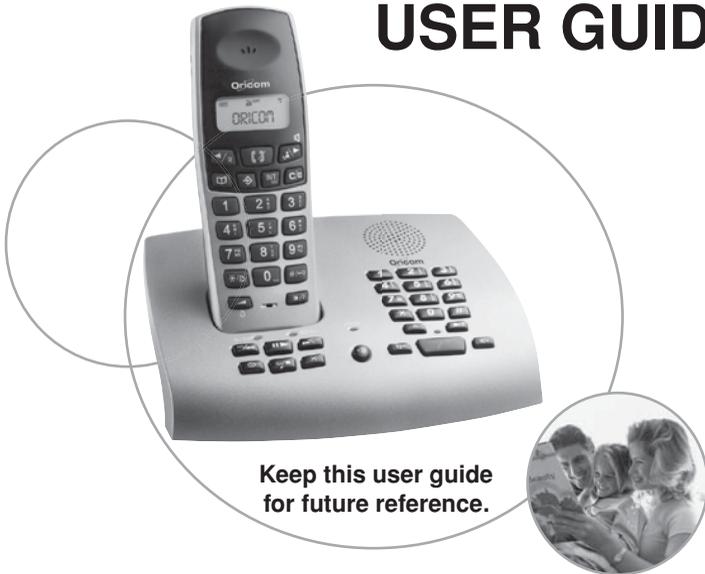

Keep this user guide  
for future reference.



### WARNING

DO NOT USE STANDARD/ALKALINE BATTERIES IN THIS PRODUCT, AS THERE IS A RISK OF EXPLOSION AND/OR INJURY. USE ONLY Ni-MH RECHARGEABLE BATTERIES AS SPECIFIED IN THIS USER GUIDE. CONTACT ORICOM FOR REPLACEMENT BATTERIES.

## Customer Support

If you feel this product is not working correctly please consult the user guide and ensure that you are using the product in accordance with the instructions. Remove all extra telephone equipment and connect only this telephone directly to the telephone socket. If the fault is still present, connect another telephone (if available) to the telephone socket. The results will show you whether the fault lies with this unit or with the telephone line.

If the product is working correctly the fault is on the telephone line. Please contact your network operator for assistance.

To order spare parts additional handsets, replacement batteries and in case of any technical issues you may have with product please consult our website for further information or send us an email for a prompt response to your enquiry.

In the unlikely event of a fault developing, please contact us for assistance. If the product is then found to be faulty you will be asked to return it directly to us with a copy of the purchase receipt.

# CONTENTS

<b>WARNINGS AND SAFETY INFORMATION .....</b>	<b>4</b>
<b>Getting Started .....</b>	<b>5</b>
<b>Installation and Charger .....</b>	<b>5</b>
<b>Pack contents .....</b>	<b>6</b>
<b>Purchasing additional handsets .....</b>	<b>6</b>
<b>Your cordless handset .....</b>	<b>7</b>
<b>Understanding the cordless handset display .....</b>	<b>8</b>
<b>Your M5200 base unit.....</b>	<b>9</b>
<b>Bottom .....</b>	<b>10</b>
<b>Basic Operation .....</b>	<b>11</b>
<b>During standby .....</b>	<b>11</b>
<i>Cordless handset's LCD display.....</i>	<i>11</i>
<i>Take two different calls at the same time .....</i>	<i>13</i>
<b>Answering an incoming call.....</b>	<b>11</b>
<i>With cordless handset .....</i>	<i>11</i>
<i>With base unit .....</i>	<i>11</i>
<b>Making an external call .....</b>	<b>12</b>
<i>With cordless handset .....</i>	<i>12</i>
<i>With base unit .....</i>	<i>12</i>
<b>Mute feature .....</b>	<b>12</b>
<b>Recall feature .....</b>	<b>13</b>
<i>Call waiting.....</i>	<i>13</i>
<b>Pause feature when using on a PABX</b>	<b>14</b>
<b>Handsfree mode .....</b>	<b>14</b>
<i>Recall function when connected to a PABX .....</i>	<i>14</i>
<b>Volume adjustment (with base unit)</b>	<b>15</b>
<i>Speaker volume control .....</i>	<i>15</i>
<i>Ringer volume control .....</i>	<i>15</i>
<b>Volume adjustment (with handset)...</b>	<b>15</b>
<i>Handset volume control .....</i>	<i>15</i>

<b>Caller ID Operation</b> .....	<b>16</b>		
Review Caller ID records .....	16	Delete one or all CID record(s) .....	17
Store a CID number .....	16		
<b>LNR Function (Last Number Redial)</b> .....	<b>18</b>		
Redial the last number .....	18	Delete last number dialled .....	19
Store the last number dialled .....	19		
<b>Phonebook</b> .....	<b>20</b>		
Add new records .....	20	Delete one record .....	21
Review / Edit / Dial stored Phonebook records .....	20		
<b>Cordless Handset Operation</b> .....	<b>22</b>		
<b>Handset ringer adjustment</b> .....	<b>22</b>	<i>Conference calls</i> .....	24
<i>Handset ringer melody</i> .....	22	<b>Cordless handset keypad lock</b> .....	25
<i>Handset ringer volume</i> .....	22	<b>Registration</b> .....	25
<i>Handset ringer On / Off</i> .....	22	<i>Register new handsets on the M5200</i> <i>base</i> .....	25
<b>Multi-handset Operation</b> .....	<b>23</b>	<i>Remove handsets</i> .....	26
<i>Intercom function</i> .....	23	<b>Language setting</b> .....	26
<i>Call transfer between cordless</i> <i>handsets</i> .....	24	<b>Handset name</b> .....	27
<i>Transfer a speakerphone call from the</i> <i>base unit to the cordless handset</i> .....	24	<b>Reset</b> .....	27

<b>Answering Machine Operation .....</b>	<b>28</b>		
<b>Answering machine On / Off .....</b>	<b>28</b>	<b>ICM (Incoming Messages) .....</b>	<b>32</b>
<b>Day/Time setting .....</b>	<b>28</b>	<i>Record ICM .....</i>	<i>32</i>
<b>Answering machine Ring delay Setting .....</b>	<b>29</b>	<i>Play ICM .....</i>	<i>32</i>
<b>Answering machine PIN number Setting .....</b>	<b>29</b>	<b>Memo .....</b>	<b>33</b>
<b>OGM (Outgoing Messages) .....</b>	<b>30</b>	<i>Record memo .....</i>	<i>33</i>
<i>OGM setting .....</i>	<i>30</i>	<i>Play memo .....</i>	<i>33</i>
<i>Record OGM .....</i>	<i>30</i>	<b>Delete messages .....</b>	<b>33</b>
<i>Play OGM .....</i>	<i>31</i>	<i>Delete one message.....</i>	<i>33</i>
<i>Delete OGM .....</i>	<i>31</i>	<i>Delete all messages .....</i>	<i>34</i>
<i>OGM play to line .....</i>	<i>31</i>	<b>Memory full .....</b>	<b>34</b>
<b>Advanced Answering System.....</b>	<b>35</b>		
<b>Remote control .....</b>	<b>35</b>	<b>Call screening .....</b>	<b>36</b>
<i>Access the answering machine</i>		<b>Cordless handset detection .....</b>	<b>36</b>
<i>remotely .....</i>	<i>35</i>	<b>Toll saver .....</b>	<b>37</b>
<i>Remote operation keys .....</i>	<i>36</i>	<b>Remote turn-on .....</b>	<b>37</b>
<b>Appendix .....</b>	<b>38</b>		
<b>Troubleshooting .....</b>	<b>38</b>	<b>Warranty Information .....</b>	<b>41</b>
<b>Product Specifications .....</b>	<b>40</b>		

## WARNINGS AND SAFETY INFORMATION

- Avoid exposure of this telephone to moisture or liquid.
- To prevent electric shock, do not open the handset or base cabinet.
- Avoid metallic contact (e.g. metal clips, keys) between the battery contacts and charging conductors.
- There is a slight chance that the telephone could be damaged by an electrical storm. It is recommended that users unplug the phone from the mains supply and telephone socket during a storm.
- Do not use the handset in an explosive hazard area such as where there is gas leaking.
- Follow the local regulations regarding the disposal of your packing materials, exhausted batteries and used phone. Wherever possible, recycle those materials.
- We advise that this phone should not be used near intensive care medical equipment or by persons with pacemakers.
- Clean with a dry, soft, lint-free cloth. Never use cleaning agents, particularly aggressive solvents.
- Because the phone works by sending radio signals between base station and handset, wearers of hearing aids may experience interference in the form of a humming noise.
- Your phone can interfere with electrical equipment such as answering machines, TV and radio sets, clock radios and computers if placed too close. It is recommended that you position the base unit at least one metre from such appliances.
- This telephone complies with applicable safety requirements for exposure to radio waves (EMR). The mean power of this telephone does not exceed 20mW limit at which point testing is required.
- The earpiece of the handset may attract small metal objects such as staples and pins. Care should be taken when placing the handset near these items.
- This telephone is not designed for making emergency telephone calls when the mains power fails.
- Always have a corded phone available to be able to make and receive calls to emergency services if the mains power fails.
- Do not use your telephone during an electrical storm thunderstorm as it is possible to get an electric shock.
- Refer to information contained in White pages directory.



### CAUTION

---

Use only the mains adaptors supplied with this product. Incorrect adaptor polarity or voltage can seriously damage the unit.

**Adaptor for base:**

Input: 240 VAC 50 Hz Output: 6 VDC 400 mA

**Adaptor for Charger:**


Input: 240 VAC 50 Hz Output: 7.5 VDC 100 mA

# Getting Started

## Installation and Charger

1. Connect the mains adaptor (supplied) to the socket on the back of the base unit and to the wall mains supply.

 AC110-240V



2. Connect the telephone cord to the phone socket on the back of the base unit and into the wall phone socket.



3. Insert 2 rechargeable Ni-MH AAA batteries (included), observing the correct polarity, into the battery compartment on the handset. Slide the battery door firmly into place.
4. Place the handset on the charging cradle and charge the batteries for a full **15 hours** before using it for the first time.



**Note:** It may take some time for the cordless handset to power up, and it may get warm during initial charge. This is normal.

### Tip!

It is good practice to put the cordless handset on the charging cradle when it is not in use to ensure that the handset is always fully charged.

### Important: DO YOU HAVE BROADBAND/ADSL?

If you do, you must connect an in line filter (not supplied) between the telephone socket and your M5200 base to ensure that your broadband and M5200 will work properly. If you do not install the filter you will experience interference on the M5200 and your Broadband may suffer dropouts. Please refer to the user guide of the in line filter for installation.

## Pack contents

Depending on the model you have purchased this pack should contain the following items:

If any of these are missing, please contact Oricom directly.

	M5200-1	M5200-2	M5200-3	M5200-4
Base units	1	1	1	1
Cordless handsets	1	2	3	4
Charger adaptors	1	2	3	4
Power adaptors	1	2	3	4
Line cord and modular adaptor plug	1	1	1	1
User guide and Warranty card	1	1	1	1
Handset Rechargeable AAA Ni-MH Batteries (1.2V 600mAh)	2	4	6	8

## Purchasing additional handsets

You may expand your M5200 by adding more handsets (M5250TI). These can be purchased separately from the retailer where you purchased the product, or directly from Oricom (Australia). The M5200 can accommodate a total of 4 cordless handsets.




### WARNING

---

DO NOT USE STANDARD/ALKALINE BATTERIES IN THIS PRODUCT, AS THERE IS A RISK OF EXPLOSION AND/OR INJURY.


USE ONLY NI-MH RECHARGEABLE BATTERIES AS SPECIFIED IN THIS USER GUIDE. CONTACT ORICOM FOR REPLACEMENT RECHARGEABLE BATTERIES.

## Your cordless handset

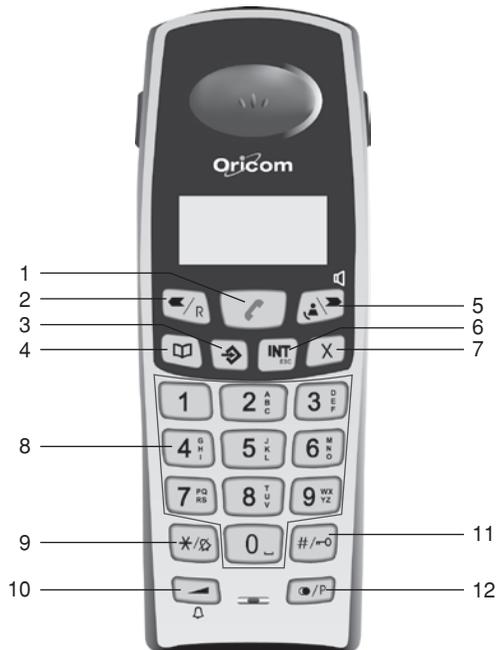

- |  |   |
|--|---|
| 1. Talk                                | 8. Numeric keys   |
| 2. Left / Recall                       | 9. * / Ringer Off (On)                                    |
| 3. Menu                                | 10. Ringer Melody / Ringer Volume / Receiver Volume       |
| 4. Phonebook                           | 11. # / Keypad lock                                       |
| 5. Right / CID (Caller ID) / Handsfree | 12. LNR (Last Number Redial) / Pause / Long (Short) flash |
| 6. Intercom                            |   |
| 7. Delete / Mute                       |   |

## Understanding the cordless handset display

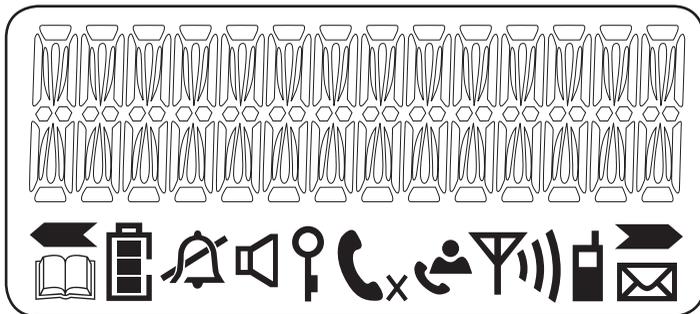

**Left Arrow / Phonebook records are being reviewed**



**Battery level (3 bars fully charged)**



**Ringer is turned off**



**Speakerphone on**



**Keypad lock**



**Connected to telephone line.**

Flashes when there is an incoming call



X appears: microphone muted



**Caller display**



**Antenna in range / out of range**




**Intercom call to another handset**



**Right Arrow / Message waiting**

## Your M5200 base unit

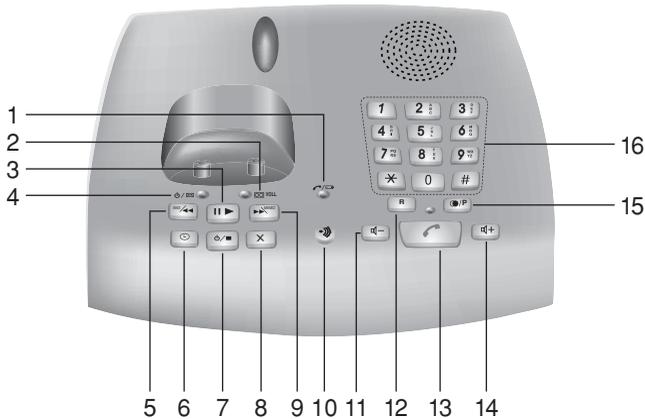

### 1. Battery charge/Call Light

### 2. Message Full Light

### 3. Play/Pause

Play MEMO/ICM Message; Pause playback.

### 4. Message/Power Light

### 5. Rewind/OGM(ANS)

Recording/Play OGM, Repeat Message, Press twice for Skip to previous Message

### 6. Time

Set Day, Hour, Minute

### 7. Stop / On/Off / ESC

Stop action; Activating/Deactivating the

answering machine; Exit the current operation mode

### 8. Delete

### 9. Forward/MEMO

Recording MEMO, Skip to next Message

### 10. Page

Base page handset and call transfer

### 11. Speaker Volume Down

### 12. Recall

### 13. Speakerphone key

### 14. Speaker Volume Up

### 15. Last Number Redial (LNR)/Pause

### 16. Numeric keys & , # keys

## Bottom



**2-9/GS (Answering Machine Rings)**

**CODE (Answering Machine PIN)**

## Basic Operation

### During standby

**Note:** If the power is not connected to the base unit.  
The cordless handset **CANNOT** operate.

### Cordless handset's LCD display

HANDSET 1 : Handset number

 : Current battery level

 : A constant signal icon indicates the cordless handset is linked to the base unit. When signal icon is flashing the handset needs to be re-registered (*see page 25*).



### Answering an incoming call

#### With cordless handset

When there is an incoming call, the phone rings and  flashes on the display. If a CID record is received,  flashes and the caller information is displayed. The auto answer function allows you to answer a call by simply lifting the handset from the base when it is ringing.

1. Press  key to answer the call if handset is off the base.
2. Press  key again to end the call.

#### With base unit

When there is an incoming call,

1. Press  key to answer the call.
2. Press  key again to end the call.

## Making an external call

### *With cordless handset*

---

#### Normal dialling

1. Press **[📞]** key.
2. Enter a telephone number. If you enter more than 14 digits, you only see the last 14 digits on the display.
3. Press **[📞]** key to end the call.

#### Pre-dialling

1. Enter a telephone number.
2. When necessary, press **[X]** to erase the digit individually.
3. Press **[📞]** key to dial.
4. Press **[📞]** key to end the call.

### *With base unit*

---

1. Press **[📞]** key.
2. Enter a telephone number.
3. Press **[📞]** key again or hang up the handset to end the call.

## Mute feature

Place a call on hold so that caller will NOT be able to hear you but you can still hear the caller.

During talking mode,

1. Press **[X]** key on the handset to mute the call, **📞x** is shown on the display.
2. Press **[X]** key again to resume the call.

## Recall feature

Recall feature can be used when you are using some services provided by your network operators such as “call waiting”, etc. A subscription may apply for these services, contact your network operator for more information.

While you are talking on the phone, press **[ R ]** key on the base unit or **[  / R ]** key on the cordless handset to send a Recall.

### *Call waiting*

---

You can use the recall function to answer a second call while you are on the phone. However this service needs to be turned on. For example, to turn on Telstra's Call Waiting service:

1. Press **[  ]** on the base unit or on the cordless handset to wait for dial tone then press **[\*][4][3][#]**.
2. You will hear a service tone then press **[  ]** mentioned above.

### *Take two different calls at the same time*

---

During a call, you will hear two loud beeps periodically to notify you of another incoming call. If you wish to answer this call,

1. Press **[ R ]** key. You will hear a dial tone.
2. Press **[ 2 ]** to put the current call on hold and talk with the second caller.
3. Repeat steps 1-2 to swap between the two callers.

Recall settings are: **Australia** (100ms, SHORT).

If this feature does not work correctly, check the country option. To change the Recall settings, press and hold **[  / P ]** key on the cordless handset to switch between “LONG” and “SHORT” on the display.

### **Recall function when connected to a PABX**

---

If you have connected your telephone to a PABX, you can use all the facilities such as call transfer, automatic recall, etc. The **【 R 】** key provides access to these facilities.

### **Pause feature when using on a PABX**

**Note:** The pause function described in this section is only necessary when the M5200 is used on older PABX's.

With some PABX's, there is a short pause between the code for the outside line (usually 0 or 9) and obtaining dial tone. A pause needs to be entered manually and stored in the phone book so that the numbers are not dialled too quickly.

When storing numbers in memory, you can include the outside line access digit (e.g. '9' or '0') with each phone number. LNR function or memory dial may not work when using your telephone on a PABX. Insert a pause between the **OUTSIDE LINE DIGIT** & the **TELEPHONE NUMBER**.

1. Press the numeric keys to enter the **OUTSIDE LINE DIGIT**.
2. Press **【 ●/P 】** key to insert a pause.
3. Press the numeric keys to enter the **TELEPHONE NUMBER**.

### **Handsfree mode**

During talking mode,

1. Press **【 🔊➡️ 】** key to switch to speakerphone mode.
2. Press **【 🔊➡️ 】** key again to cancel this feature.

Or

During standby mode,

1. Press and hold **【 🔊➡️ 】** key to switch to speakerphone mode.
2. Press **【 🔊➡️ 】** key again to cancel this feature.

## Volume adjustment (with base unit)

### *Speaker volume control*

---

During speakerphone mode,

1. Press **【+】** or **【-】** key to adjust the Speaker volume level: Step 1 (lowest) to Step 8 (highest).
2. The unit automatically returns to the previous talking mode 2 seconds after pressing the last key.

### *Ringer volume control*

---

During incoming call,

1. Press **【+】** or **【-】** to adjust the ringer volume level: 5 steps.
2. The unit automatically returns to the previous mode 2 seconds after pressing the last key.

## Volume adjustment (with handset)

### *Handset volume control*

---

During handset talking mode,

1. Press **【】** key.
2. Press **【/R】** or **【】** key to adjust the handset volume level: Volume 1 to Volume 5.
3. The unit automatically returns to the previous talking mode 2 seconds after pressing the last key.

## Caller ID Operation

If you subscribe to your telephone operators service (charges may apply), numbers of the incoming calls will be displayed on the screen and stored in the call log (please consult your telephone service provider for details).

The M5200 series can store the last **30** calls including: the **record number**, **date/time**, and **phone number** (up to **23** digits for the cordless handset).

When you have new/unanswered calls, /  icon flashes on the base and  flashes on the cordless handset. If a call has been answered, then the call is set to old call.

This function is only available for handset.

### Review Caller ID records

During standby mode,

1. Press  key to display the latest call name.
2. Press  key to view the call number.
3. Press  key again to see the Date/Time when the call was received.

### Store a CID number

You can save a CID record into the **Phonebook/Direct memory** provided that it contains a valid phone number and the Phonebook/Direct memory is not full.

While you are viewing the CID record that you wish to save,

1. Press  key. The display on the right is shown.
2. Press the numeric keys to edit the Name.
3. Press  key to complete editing the Name and proceed to edit the Number.



4. Press the numeric keys to edit the Phone number.

5. Press **【↵】** key to confirm.

The record is now saved into the phonebook. Then it goes back to the call log.

## **Delete one or all CID record(s)**

Delete one CID record

While you are viewing the CID record that you wish to delete,

1. Press **【X】** key.

2. Press **【↵】** key to confirm. The display shows previous CID record.

### **Delete all viewed CID records**

While you are viewing any CID record,

1. Press and hold **【X】** key.

2. Press **【↵】** key to confirm. The display shows unviewed CID records.

**Note:** If there are no more CID records, a message “**EMPTY**” is displayed.

## LNR Function (Last Number Redial)

This function is only available for handset.

### Redial the last number

Your cordless handset stores the last 3 external numbers dialed, up to 25 digits per number. If the number exceeds 25 digits, the first 25 digits will be stored to memory.

During standby mode,

1. Press **【●/P】** key.
2. When necessary, press **【●/P】** key again until you have selected your desired number.
3. Press **【↵】** key to dial.

 
Or

1. Press **【↵】** key.
2. Press **【●/P】** key to redial the last number.

## Store the last number dialled

While you are viewing a previously dialled number that you wish to save,

1. Press **【📖】** key. The display on the right is shown.
2. Press the numeric keys to enter the Name. If you made a mistake, press **【X】** key to edit it.
3. Press **【↔】** key to complete editing the Name and proceed to edit the Number.
4. Press the numeric keys to edit the Phone number when necessary.
5. Press **【↔】** key to confirm.




The record is now saved into the phonebook. Then it goes back to standby mode.

## Delete last number dialled

 While you are viewing a previously dialled number that you wish to delete,

1. Press **【X】** key. The display on the right is shown.
2. Press **【↔】** key to confirm. The display will show the previous **LNR** record.



**Note:** If there are no more LNR records, a message “EMPTY” is displayed.

## Phonebook

This function is only available for handset.

### Add new records

You can store up to **50** phonebook records in each handset. Each record can contain up to 25 digits per number and 14 characters per name.

During standby mode,

1. Press and hold **[📖]** key. The display on the right is shown.
2. Press the numeric keys to enter the Name. If you made a mistake, press **[X]** key to edit it. Press and hold **[X]** key to delete the entire name.
3. Press **[↵]** key to complete editing the Name and proceed to edit the Number.
4. Press the numeric keys to edit the Number. Press **[X]** key for further editing when necessary.
5. Press **[↵]** key to confirm.



The record is now saved into the Phonebook. Then it goes back to standby mode. Repeat step 1 to 5 to add another record.

 
### Review / Edit / Dial stored Phonebook records

During standby mode,

1. Press **[📖]** key.
2. Press **[←/R]** or **[↵/▶]** to browse stored records.
3. Press **[📞]** key to dial the number.

While you are viewing the record that you wish to edit,

1. Press and hold **[📖]** key. The display on the right is shown.
2. Press **[X]** key to erase the last character, or press and hold **[X]** key to erase the entire characters.
3. Press **[↔]** key to complete editing the Name and proceed to edit the Number.
4. Press **[X]** key to erase the last digit, or press and hold **[X]** key to erase the entire digits.
5. Press **[↔]** key to confirm. Then it goes back to standby mode.



## Delete one record

While you are viewing the record that you wish to delete,

1. Press **[X]** key. A confirmation message “DELETE?” is displayed.
2. Press **[↔]** key to confirm and show the previous record.

## Cordless Handset Operation

 
### Handset ringer adjustment

#### Handset ringer melody

During standby mode,

1. Press and hold **[▲]** key.

 flashes and the current melody option appears.




2. Press **[◀/R]** or **[▶/L]** key to select the melody option (**1 to 9 for adjustment**).
3. Press **[▲]** key to confirm.

#### Handset ringer volume

 During standby mode,

1. Press **[▲]** key. Display shows the current volume level.



2. Press **[◀/R]** or **[▶/L]** key to select the volume level.

There are 6 levels for adjustment: **1(lowest) to 5 (highest) and "ringer off"**.

3. Press **[▲]** key again to confirm.

#### Handset ringer On / Off

During standby mode, **press and hold** **[\*]** key to switch between ringer On/Off.

 appears whenever the ringer is Off.



## Multi-handset Operation

Your M5200 series phone can have up to 4 handsets registered to the base unit. Each handset has its own number HS-1, HS-2, HS-3 and HS-4 shown on the left-hand side of the display. With 2 or more handsets you can:

- Make intercom calls while on an external call
- Switch between an external call and intercom call
- Transfer an external call from one handset to another
- Set a 3-way conference call between yourself, an external call and intercom call

### Note:

- A maximum of 1x external call and 2x intercom calls can take place at the same time.
- If you make an external call + another handset is on line = result in a busy tone.
- You can make an intercom call when the other handset is in progress.

### Intercom function

To make an intercom call,

1. Press **[INT]** key, during standby mode.  
The display on the right is shown.
2. Key the handset number (1, 2, 3, or 4) you wish to call.



When there is an intercom call, the display on the right is shown.

1. Press **[hook]** or **[INT]** key to answer the intercom call.
2. Press **[hook]** or **[INT]** key again to end the call.



Depicts Handset-2 calling

### **Call transfer between cordless handsets**

---

When there is an incoming external call,

1. Press **[INT]** key. The display on the right is shown.
2. Key the handset number (1, 2, 3, or 4) you wish to transfer.
3. Press **[ ]** key to exit Intercom mode and return to standby mode.



### **Transfer a speakerphone call from the base unit to the cordless handset**

---

If there is an incoming external call,

1. Press **[•>>>]** key on the base unit.
2. Press **[ ]** on the cordless handset to pick up the call.
3. Press **[•>>>]** key again to cancel the call transfer.

### **Conference calls**

---

**This function allows 3 parties (yourself + external call + intercom call) to be connected at the same time.**

When there is an incoming external call,

1. Press **[INT]** key. The display on the right is shown.
2. Key the handset number (1, 2, 3, or 4) you wish to invite to the conference.
3. Press **[ ]** key to pick up the call.
4. Press and hold **[INT]** key to go into the 3-way conference mode.
5. Press **[INT]** key to go back to Intercom mode.
6. Press **[ ]** key to exit Intercom mode and return to standby mode.



## Cordless handset keypad lock

During standby mode,

1. Press and hold **【 #/∞0 】** key to lock the keypad.
2. To release keypad lock, press and hold **【 #/∞0 】** key for 3 seconds.



**Note:** When the keypad is locked, **【 🔑 】** key and **【 INT 】** key can be used to answer an external or intercom call.

## Registration

### Register new handsets on the M5200 base

 
The handsets which come in the same pack are already registered to the base. If you buy new handsets. You need to register them before use.

1. Charge the batteries (for 15 hours).
2. Register the handset (to the base unit).

Each handset can register to four base at a time. Each base can register up to 4 handsets.

During standby mode,

1. Press **【 ↻ 】** key.
2. Press **【 ←/R 】** or **【 .,A → 】** key to select "REGISTER" from the display.
3. Press **【 ↻ 】** key. The display on the right is shown.
4. Press 1 on the handset to verify base station.
5. Press **【 ↻ 】** key to confirm.
6. Press and hold **【 •))) 】** key. The base is now in the registration mode.
7. Press the numeric keys to enter the default PIN (0000).



8. Press **【↔】** key to confirm and return to standby mode.
9. LCD screen will display HS 1,2,3 or 4 and antenna icon will not flash.


**Note:** If the base is full and cannot add any more handsets, you will hear a tone.  
See the next section to remove a handset.

### Remove handsets

 ---

During standby mode,

1. Press **【↔】** key.
2. Press **【←/R】** or **【↵\▶】** key to select “**REMOVE HS**” from the display.
3. Press **【↔】** key to confirm. The display on the right is shown.
4. Enter the default value 0000.
5. Press **【↔】** key to confirm and the display on the right is shown.
6. Press the numeric keys (1-4) to enter the handset number.
7. Press **【↔】** key to confirm and return to standby mode.



### Language setting

To select the display language,

 
1. Press **【↔】** key during standby mode.
2. Press **【←/R】** or **【↵\▶】** key to select “**LANGUAGE**” from the display.
3. Press **【↔】** key to enter the mode.
4. Press **【←/R】** or **【↵\▶】** key to select Language options on the display.
5. Press **【↔】** key to confirm and return to standby mode.



## Handset name

During standby mode,

1. Press **【↔】** key.
2. Press **【←/R】** or **【←/P】** key to select “NAME” from the display.
3. Press **【↔】** key to enter the mode.
4. Press and hold **【X】** key to erase the existing handset name.
5. Press the numeric keys to enter the new handset name.
6. Press **【↔】** key to confirm.



## Reset

During standby mode,

1. Press **【↔】** key.
2. Press **【←/R】** or **【←/P】** key to select “RESET” from the display.
3. Press **【↔】** key to enter the mode. The display on the right is shown.
4. Press the numeric keys to enter the PIN.
5. Press **【↔】** key to confirm.



## Answering Machine Operation

### Answering machine On / Off

During standby mode,

1. Press and hold **【☎/■】** key to switch the answering machine off.  
“**Answering off**” will be heard followed by two short beeps.

**Note:** During Off mode, the answering machine is set to **Announcement Two** mode automatically. It will answer the call after 12 rings, and then switch to remote control mode. This feature can not be turned off.

During Off mode,

1. Press and hold **【☎/■】** key to switch the answering machine on.  
“**Answering on, Announcement One**” will be heard followed by a short beep.

### Day/Time setting

Default day and time – Sunday, 12:30

1. Press and hold **【☎】** key for 2 seconds. The voice prompt “**Set day**” will be heard.
2. Press **【ANS/◀◀】** or **【▶▶/MEMO】** key to select day. Voice prompt at each selection will be heard.
3. Press **【☎】** key to confirm and go to next setting. The voice prompt “**Set hour**” will be heard.
4. Press **【ANS/◀◀】** or **【▶▶/MEMO】** key to select hours. Voice prompt at each selection will be heard.
5. Press **【☎】** key to confirm and go to next setting. The voice prompt “**Set minute**” will be heard.
6. Press **【ANS/◀◀】** or **【▶▶/MEMO】** key to select minutes. Voice prompt at each selection will be heard.
7. Press **【☎】** key to confirm setting and go back to standby or off mode.

## Answering machine Ring delay Setting

This setting is used to set the ring times.

Default number of ring -3

1. Press and hold **【 2-9/GS 】** key (bottom of base) for 2 seconds.  
“**Set rings**” will be heard followed by a short beep, after a pause then prompt current rings.
2. Press **【 <sup>ANS</sup>↙↙ 】** or **【 <sup>MEMO</sup>➞➞ 】** key to select item. Voice prompt at each selection will be heard. There are 2-9 and TS mode (Toll saver) for you to select.
3. Press **【 2-9/GS 】** key to confirm setting and go back to standby or off mode.

## Answering machine PIN number Setting

Default code - 000

1. Press and hold **【 CODE 】** key (bottom of base) for 2 seconds. “**Set security code**” can be heard followed by a short beep, after a pause then prompt the first code.
2. Press **【 <sup>ANS</sup>↙↙ 】** or **【 <sup>MEMO</sup>➞➞ 】** key to select the first digit. Voice prompt at each selection will be heard.
3. Press **【 CODE 】** key located on the bottom of the base (*see page 10*) to confirm setting and go to next setting. The voice prompt will be heard.
4. Press **【 <sup>ANS</sup>↙↙ 】** or **【 <sup>MEMO</sup>➞➞ 】** key to select the second digit. Voice prompt at each selection will be heard.
5. Press **【 CODE 】** key to confirm setting and go to next setting. The voice prompt will be heard.
6. Press **【 <sup>ANS</sup>↙↙ 】** or **【 <sup>MEMO</sup>➞➞ 】** key to select the third digit. Voice prompt at each selection will be heard.
7. Press **【 CODE 】** key to confirm setting and go back to standby or off mode.

**Note:** Press **【 ⏻/■ 】** key any time or 5 seconds without any operation will quit setting mode and will go back to standby or off mode. All settings are unchanged.

## OGM (Outgoing Messages)

M5200 has two OGM message modes:

**OGM1 (Announcement One)** mode:

Callers can hear a pre-recorded message “**Please leave a message after the beep**” and the unit records the caller’s message.

**OGM2 (Announcement Two)** mode:

Callers can hear the other pre-recorded message “**Please call later**”. Under this mode, the caller will NOT have the opportunity to leave a message.

You can also record your own personalized greeting (from 3 seconds to 120 seconds).

**Note:** The default setting is **OGM1 (Announcement One)**.

### **OGM setting**

---

Press **【☐/■】** key to switch between OGM1 and OGM2.

### **Record OGM**

---

1. Press **【☐/■】** key to select OGM1 mode or OGM2 mode.
2. Press and hold **【ANS/←←】** key until you hear a long beep and see **【☐/☒】** light flash.
3. Speak into the microphone (15cm from the base unit’s microphone).
4. Press **【☐/■】** key to stop recording, the machine will play back recording for review.

**Note:** If the OGM is less than 3 seconds, it is not valid. The machine will stop automatically after 2 minutes.

**Play OGM**

---

During standby mode,

1. Press **【<sup>ANS</sup>◀◀】** key to play the OGM.
2. Press **【◻/■】** key to stop playing and return to standby mode.

**Delete OGM**

---

During OGM playing mode,

1. Press **【X】** key to delete the OGM.
2. The machine will return to standby mode after 5 seconds.

**OGM play to line**

---

If an incoming call ring exceeds the number of rings set (**Refer to “Answering machine Ring delay Setting” on P29**), the answering machine will pick up the call and play the OGM message.

## ICM (Incoming Messages)

### **Record ICM**

---

During OGM 1 mode, the machine can record callers' messages.

During recording mode, the ☎/✉ light will flash.

The machine will stop automatically after recording 2 minutes.

Or you can stop recording by pressing 【☎/■】 key.

**Note:** The CID number is displayed if you have subscribed to that service.  
The Message recording time is from 3 seconds to 120 seconds.

### **Play ICM**

---

Incoming messages are played back in the sequence they were recorded. Day and time of the recording is announced before each message.

When there are new messages, only new messages are played back. Old messages can be played back only when all new messages have been played back.

Answer / Message light flashes when new messages are waiting. To play messages:

1. Press 【||▶】 key.
2. To pause, press 【||▶】 key.
3. Press 【||▶】 key to resume.
4. To replay the current message, press 【<sup>ANS</sup>◀◀】 key during message playing.
5. To replay the previous message, press 【<sup>ANS</sup>◀◀】 key twice.
6. To skip to next message, press 【▶▶<sup>MEMO</sup>】 key.
7. Press 【☎/■】 key to stop playing.

**Note:** No announcement will be played back, if the day/time is not set properly.

## Memo

### *Record memo*

---

You can record memos for other users of the unit to hear. The maximum recording time is 2 minutes.

During standby mode,

1. Press and hold **【▶▶<sup>MEMO</sup>】** key until you hear a long beep.
2. Speak into the microphone after the beep.
3. Press **【⏏/■】** key to stop recording or recording will stop after 2 minutes. The recorded memo will playback automatically for review.

### *Play memo*

---

The memo is played back together with the incoming messages (ICM).

1. Press **【||▶】** key during standby mode.
2. Press **【⏏/■】** key to stop playback or it will stop when the memo is finished.

For “**Pause/Skip forward/backward**” during playing, refer to the operation of “**Play ICM**” on P32.

## Delete messages

### *Delete one message*

---

While you are listening to a message,

1. Press **【X】** key. The voice prompt, “**Message deleted**” can be heard followed by a long beep.
2. Press **【⏏/■】** key to cancel the action.

### ***Delete all messages***

---

While you are listening to a message,

1. Press and hold **【 X 】** key. The voice prompt, “**all message deleted**” can be heard followed by a long beep.
2. Press **【 ⏪ / ■ 】** key to cancel the action.

#### ***Remember to delete messages!***

To avoid exceeding the memory storage capacity, always delete messages after listening.

**Note:** The unit will NOT delete the messages you have NOT listened to.

### **Memory full**

Memory will be full in the following 2 cases:

1. During Memo/OGM/ICM recording, the unit becomes full.
2. The memory has been full and somebody is trying to record new Memo/OGM/ICM message.

In both of the above situations, the unit will prompt “**Answering Machine Full**”.

OGM mode will change to **OGM 2** automatically after Memory full.

## Advanced Answering System

### Remote control

You can access your answering machine when you are away by using any touch tone phone. You have to enter the Security PIN to access the answering machine. The default PIN is 321 (*Refer to “Answering machine PIN Number Setting” on P29*).

#### *Access the answering machine remotely*

---

1. Place a call to your answering machine.  
When the answering machine answers the call, it will play the OGM.
2. To skip the OGM, press **[\*]** key.
3. Enter the 3-digit Security PIN after you hear a beep.
4. Press a numeric key to carry out the desired function. For example, press the numeric key **[2]** to check your message remotely.

#### **Note:**

- You have three attempts to enter the correct PIN or the answering machine will drop the line.
- The connection will be cut off after 10 seconds if no numeric key is pressed.
- The message is paused and lasts for 30 seconds. Press **[2]** key to resume playback. Otherwise, the connection will be cut off automatically after 30 seconds.
- During remote playback, the machine will stop for 10 seconds every 168 seconds and wait for users to respond. If no response received, the machine will stop operation and drop the line.

### Remote operation keys

Keys on remote phone keypad	Operation
1	Replay the current message
1(1)	Skip back to the previous message
2	Play new messages /Pause during playing messages
3	Skip forward to the next message
4	Playback OGM
5	Record a new OGM
6	Stop playback or recording
7	Delete the current message
8	Switch the machine off
9	Switch the machine on / Switch between OGM1 or OGM2
0	Delete all old messages
*	Skip announcement during playback
#	Recording MEMO

### Call screening

Call screening function allows you to hear the caller before you pick up the call whilst the M5200 is recording incoming messages.

You can screen incoming calls by waiting for the caller to begin leaving their message, then pick up the handset, and press  key to talk to the caller. The answering machine automatically stops recording when you activate the handset or pick up an extension phone. This function cannot be turned off. If you do not want to hear the caller you can turn down the base speaker volume (*see page 15*). To listen to your messages you will need to turn up the volume again.

### Cordless handset detection

The answering machine can detect the cordless handset while recording messages. It automatically stops recording when you pick up the call using the cordless handset.

**Note:** The message recorded before you pick up the call will be deleted.

## Toll saver

Toll saver option is useful when using the remote access feature. You can see whether there are new messages or not in your answering machine from a remote location.

- If your answering machine rings **5 times** before answering your call, it means there are NO new messages.
- If your answering machine rings **2 times** before answering your call, it means there are new messages.

You can set the number of times the answering machine would ring before it answers the call. (**Refer to “Answering machine Ring delay Setting” on P29**)

This only applies when the answering machine is turned on.

## Remote turn-on

Remote wake-up function allows you to turn on your answering machine remotely,

**1.** Place a call to your answering machine.

If the answering machine is off, it will answer your call after 12 rings.

**2.** To skip the OGM, press **【\*】** key.

**3.** Enter the 3-digit Security PIN after you hear a beep.

**4.** Press Numeric key **【9】** to switch your machine on.

# Appendix

## Troubleshooting

Problem	Possible cause(s)	Solution(s)
<b>No dial tone on the cordless handset.</b>	<ol style="list-style-type: none"> <li>1. The base unit is not properly connected.</li> <li>2. Too far from the base unit.</li> <li>3. Battery charge is low.</li> <li>4. Incorrect battery polarity.</li> <li>5. Re-register handset (see Page 25).</li> </ol>	<ol style="list-style-type: none"> <li>1. Check CONNECTION to power and telephone line.</li> <li>2. Move handset CLOSER to base unit.</li> <li>3. CHARGE battery.</li> <li>4. RE-INSERT batteries and check + and -.</li> <li>5. Handset not registered.</li> </ol>
<b>Antenna symbol is flashing.</b>	<ol style="list-style-type: none"> <li>1. The handset is not registered. If the handset is unregistered, it displays UNREGISTERED.</li> <li>2. The handset is out of range.</li> </ol>	<ol style="list-style-type: none"> <li>1. REGISTER the handset.</li> <li>2. Move CLOSER to the base unit.</li> </ol>
<b>No beep</b> when the cordless handset is placed on the charger.	<ol style="list-style-type: none"> <li>1. The handset is not placed properly on the charger.</li> <li>2. Charging contacts are dirty.</li> <li>3. The handset tone is turned off.</li> <li>4. The handset's power is turned off.</li> </ol>	<ol style="list-style-type: none"> <li>1. Lift handset off the charger and carefully REPOSITION correctly.</li> <li>2. CLEAN charging contacts with a clean and dry cloth.</li> <li>3. Turn ON the handset tone from the Sounds Menu.</li> <li>4. CHECK batteries.</li> </ol>
Handset charged for 24 hours but <b>Battery icon remains empty.</b>	<ol style="list-style-type: none"> <li>1. Handset battery is defective or faulty.</li> <li>2. Handset is not placed properly on the charger.</li> <li>3. Battery installed incorrectly.</li> </ol>	<ol style="list-style-type: none"> <li>1. REPLACE with new AAA rechargeable Ni-MH batteries.</li> <li>2. CHECK to make sure the battery icon is scrolling.</li> <li>3. RE-INSERT batteries and check + and -.</li> </ol>
<b>No symbol</b> on the display.	<ol style="list-style-type: none"> <li>1. Battery is empty.</li> <li>2. The product is not properly connected.</li> </ol>	<ol style="list-style-type: none"> <li>1. CHARGE battery.</li> <li>2. Make sure your product is properly PLUGGED-IN.</li> </ol>
<b>Bad audio quality</b> (crackles,echo, etc.).	<ol style="list-style-type: none"> <li>1. Interference from nearby electrical appliance.</li> <li>2. Base unit is installed in a room with thick walls.</li> <li>3. The handset is too far from the base unit.</li> <li>4. If you have Broadband/ADSL you need a in line filter (not supplied).</li> </ol>	<ol style="list-style-type: none"> <li>1. Try a different connection point, one that is away from other electrical appliances.</li> <li>2. Install the base unit in a DIFFERENT room OR use EXTENSION leads.</li> <li>3. Move CLOSER to the base unit.</li> <li>4. Ensure a in-line ADSL filter is installed on all phone sockets between wall plate and your phone.</li> </ol>
<b>Caller ID does not work.</b>	Service not activated.	Check your SUBSCRIPTION with the SERVICE provider.

Problem	Possible cause(s)	Solution(s)
<b>Phone does not ring</b> when a call comes in.	<ol style="list-style-type: none"> <li>1. The ringer is off.</li> <li>2. Too many phones are sharing the same phone line.</li> <li>3. Base unit not plugged in.</li> </ol>	<ol style="list-style-type: none"> <li>1. Turn ON the ringer.</li> <li>2. REMOVE some of the phones from the phone line.</li> <li>3. Check base unit CONNECTIONS.</li> </ol>
<b>Keypad does not work.</b>	Keypad may be locked.	UNLOCK the keypad.
<b>No dial tone on handset/base.</b>	<ol style="list-style-type: none"> <li>1. Chip in handset has frozen.</li> <li>2. Chip in base unit has frozen.</li> </ol>	<ol style="list-style-type: none"> <li>1. Use base unit for calls or RESET as described below.</li> <li>2. RESET phone by disconnecting main power and remove batteries. Reconnect after 1 minute.</li> </ol>
<b>Busy tone + in use light on.</b>	<ol style="list-style-type: none"> <li>1. Other handset may still be connected.</li> <li>2. Check power supply connection.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check ALL handsets and END all calls.</li> <li>2. Check CONNECTIONS to wall and base.</li> </ol>
<b>Can't transfer a call.</b>	<ol style="list-style-type: none"> <li>1. Handset is busy.</li> <li>2. Handset is out of range.</li> <li>3. Wrong handset number.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check ALL handsets and END all calls.</li> <li>2. Move handset CLOSER to base unit.</li> <li>3. Check HANDSET NUMBER.</li> </ol>
<b>Answering machine won't record.</b>	<ol style="list-style-type: none"> <li>1. Message limit exceeded.</li> <li>2. Machine not switched on.</li> <li>3. OGM2 selected.</li> </ol>	<ol style="list-style-type: none"> <li>1. DELETE old messages.</li> <li>2. SWITCH-ON the answering machine.</li> <li>3. Can only record with OGM1, CHANGE to OGM1.</li> </ol>
<b>Remote operation doesn't work.</b>	<ol style="list-style-type: none"> <li>1. Incorrect security PIN.</li> <li>2. Some cordless and mobile handsets do not generate continuous tones.</li> <li>3. Pausing too long between key press.</li> </ol>	<ol style="list-style-type: none"> <li>1. CHECK security PIN.</li> <li>2. Need to use a TONE-DIALLING phone.</li> <li>3. Key in the digits within the 10 seconds limit.</li> </ol>

## Product Specifications

Phone – Oricom M5200	Specifications
Frequency range	1.88-1.897 GHz (bandwidth=20MHz)
Channel bandwidth	1.728 MH
Operating range	Up to 300m outdoors, up to 50m indoors
Standby time	Up to 100 hours
Talk time	Up to 11 hours
Temperature time	Operating 0°C to 40°C
	Storage -20°C to 60°C
Compatibility	Only GAP compatible DECT phones
Multiple handset capability	Up to 4 handsets per base
Multiple bases	Up to 4 bases per handset
Ringer melodies	5 music and 4 monotone
<b>Included Accessories</b>	
Battery charge time	15 hours
Rechargeable batteries	AAA Ni-MH 1.2V 600mAh
Mains power supply for base unit	Input: 230V, 50Hz 60mA, Output:6V,400mA
Mains power supply for charger	Input: 230V, 50Hz 60mA, Output:7.5V,100mA
<b>Answering Machine</b>	
Memory	Up to 50 phone numbers (Up to 24 digits per Number and 16 characters per Name)
Redial memory	Max 5 phone numbers
Recording time	At least 11 minutes

## Warranty Information

### (a) **Warranty.**

Oricom warrants that the product is free from defects in materials and workmanship for a period of 12 months effective from the date of purchase. This warranty in no way affects your statutory warranty under the Trade Practices Act 1974 or any other similar legislation. It is important that you read the Warranty Card as it contains full and additional details of the warranty, limitation of warranty and conditions for receiving the warranty services during the warranty period. The Warranty Card is located in the package. If you cannot locate the Warranty Card, please contact our Customer Support Service on 1300 889 785.

### (b) **Exclusion and limitation of liability.**

Oricom will not be in breach of a warranty or condition expressly stated in this User Guide or the Warranty Card or implied by the Trade Practices Act and excludes any liability arising under any statutory or common law for damages or any other remedy if the damage occurs as a result of:

- (i) failure by you to follow the instructions in the User Guide for the installation and proper functioning of the product;
- (ii) negligence on your part or misuse by you of the product;
- (iii) any un-controlled external cause to the phone not functioning including but not limited to electricity failure, lighting, over voltage;
- (iv) non adherence by you to the warnings in the User Guide and the User Guide generally;
- (v) modification to the product or services carried out to the product by anyone other than Oricom or on Oricom's behalf.

Oricom will not be liable for consequential losses including loss of profits arising from a cause of action in contract, tort or any other statutory or common law (except where a statute or any law prohibits this exclusion). The warranty does not extend to damage caused by misuse, negligence, excessive voltage, faults on the telephone line or lightning. This warranty in no way affects your statutory rights. Full details of the warranty are contained in the enclosed warranty card.

## Customer Support

### Customer Support Australia

Email: [support@oricom.com.au](mailto:support@oricom.com.au)

Web: [www.oricom.com.au](http://www.oricom.com.au)

Fax: (02) 4574 8888

Ph: 1300 889 785

To view the full Oricom range, please visit the Oricom website:

***[www.oricom.com.au](http://www.oricom.com.au)***



#### Postal Address

Oricom International Pty Ltd  
Locked Bag 658,  
South Windsor NSW 2756,  
Australia