

### View the phonebook

- 1 Press .
- 2 Select a contact and view the available information.

### Call from the phonebook

- 1 Press  to access the phonebook.
- 2 Select a contact in the phonebook list.
- 3 Press  to make the call.

### Listen to messages recorded on the answering machine (for SE565 only)

- Switch on/off the answering machine: Press .
- Start/Stop listening to the recorded messages: Press .
- Adjust the volume: Press  / .
- Skip backward:  
When you listen to the messages, press  to listen to the message from the beginning.  
During the first second of the current message, press  to listen to the previous message.
- Skip forward: Press  to skip to the next message.
- Delete the current message: Press .

#### Note

- For more information, see the Telephone answering machine section in the user manual.

### ECO mode

The **ECO** mode reduces the transmission power of the handset and base station.

- 1 Press **menu**.
- 2 Select **[ADVANCED SET] > [ECO]**, then press **[SELECT]** to confirm.
- 3 Select the new setting, then press **[OK]** to confirm.
  - ↳ The setting is saved.
  - ↳ **ECO** is displayed instead of  in standby mode

#### Note

- When the **ECO** mode is activated, the connection range between the handset and the base station can be reduced.

## Troubleshooting

#### No dialing tone

- Check your phone connections.  
The handset is out of range. Move it closer to the base station.

#### The signal icon flashes.

- The handset is out of range. Move it closer to the base station.  
If the handset displays **[UNREGISTERED]**, register the handset.

#### The caller ID does not display.

- The service is not activated. Check with your service provider.  
The caller's information is withheld or unavailable.  
For more information, see the User Manual.

## Welcome to Philips

Register your product at [www.philips.com/welcome](http://www.philips.com/welcome)

## Need help?

#### User Manual

Refer to the User Manual that came with your new phone.

#### Online help

[www.philips.com/support](http://www.philips.com/support)

© 2010 Koninklijke Philips Electronics N.V. All rights reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.



Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

SE565



## Quick Start Guide


- 1 Connect
- 2 Install
- 3 Enjoy



SE565\_EN\_QSG\_V2.1  
wk10452

# PHILIPS

# What's in the box

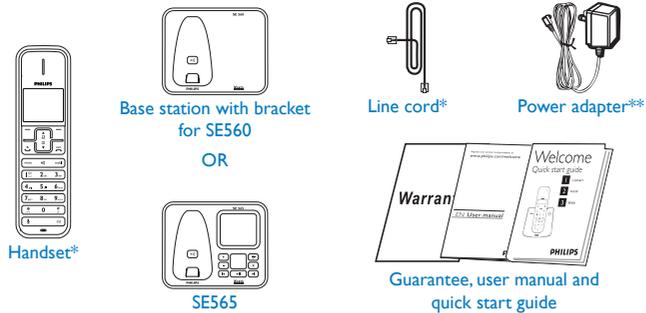

## Note


- \* In multi-handset packs, there are additional handsets, chargers and power adapters.
- \*\*In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

## Caution

- Use only the supplied batteries and power adapter.

# 1 Connect


## Connect the base station

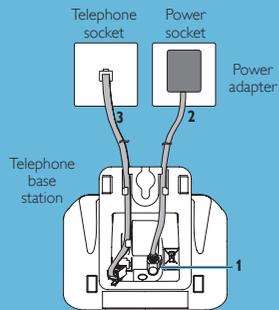

- 1 Connect the output plug of the power socket to the bottom of the base station:
- 2 Connect the power socket to a standard wall outlet.
- 3 Connect the telephone line cord to the phone socket at the bottom of the base station and the wall phone socket

# 2 Install

## Install the handset

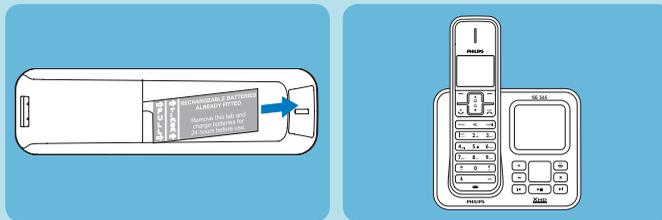


- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- 2 Place the handset on the base station to power up.

**Note:** Charge the batteries for 16 hours before first use.

For more information on the battery icon status, see the User Manual.

## Check the battery level

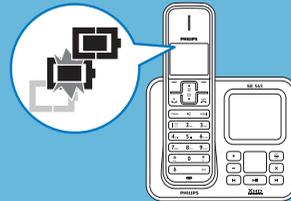

When the handset is off the base station/charger, the icon indicates the battery level:

- Full (steady on)
- Medium (flashing)
- Low (empty)

When you see the empty battery icon and hear an alert tone from the handset, the battery level is low and needs recharging.

- When the handset is on the base station/charger, the battery icon keeps flashing until charging completes.
- When the charging completes, the battery icon keeps steady on.

## Configure your phone (if necessary)

- 1 When you see the welcome message, press **[OK]**, select your country, press **[SELECT]** to confirm.
  - ↳ The country setting is saved.
- 2 Set the date and time.
  - ↳ The phone is now ready to use.

# 3 Enjoy

## Make a call

- 1 Press **[CALL]** and dial the phone number; or
- 2 Dial the phone number and press **[CALL]** to dial out the call.

## Answer a call

When the phone rings, press **[CALL]** or **[END CALL]** to answer the call.

## End a call

Press **[END CALL]**

## Adjust the earpiece volume

Press **[UP]** or **[DOWN]** to adjust the volume during a call.

- ↳ The adjusted volume level is shown on the screen.

## Set the handset's ringtone

- 1 Press menu.
- 2 Select **[PERSONAL SET]** > **[HANDSET TONES]** > **[RING TONES]**, then press **[SELECT]** to confirm.
- 3 Select a ringtone, then press **[SELECT]** to confirm.
  - ↳ The setting is saved.

## Add a record

- 1 Press menu.
- 2 Select **[PHONEBOOK]** > **[NEW ENTRY]**, then press **[SELECT]** to confirm.
- 3 Enter the name then press **[OK]** to confirm.
- 4 Enter the number; then press **[SAVE]** to confirm.