



# Wireless Telephone Quick Reference Guide

Panasonic DBS

VB-44223

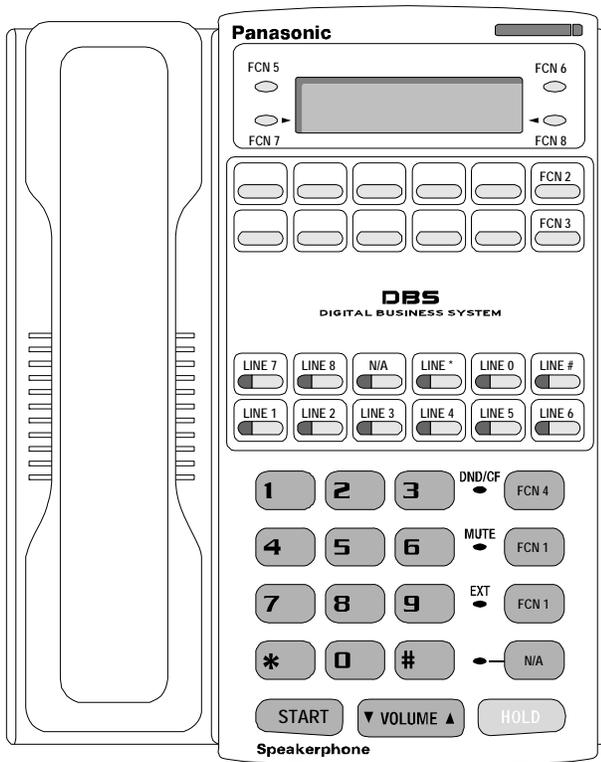

**VB-44223**

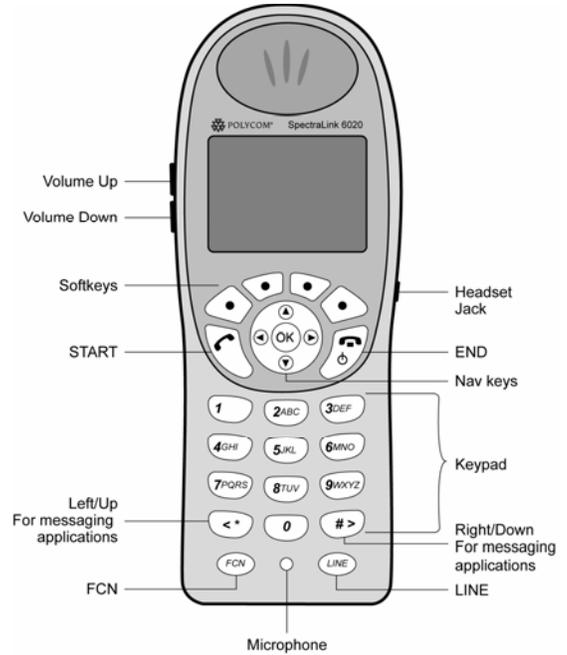

**SpectraLink 6020 Wireless Telephone**

The figure above shows the mapping of the VB-44223 display set to the SpectraLink Wireless Telephone

**FCN** followed by a digit (2-8) on the Wireless Telephone is equivalent to pressing one of the feature keys on the VB-44223 desk set. **FCN** followed by **9** allows you to exit the Wireless Telephone function menu.

Pressing **LINE** followed by a digit (0-9, \*, #) on the Wireless Telephone is equivalent to pressing one of the Flexible Feature keys on the VB-44223 as shown above.

Function Key Strokes	Default settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	PROG	
FCN + 3	CONF	
FCN + 4	REDIAL	
FCN + 5	MODE	
FCN + 6	END	
FCN + 7	→	
FCN + 8	←	
FCN + 9	EXIT FCN MENU	
FCN + #		
FCN + *	AUTO	

**On/Off** Press and hold **END**. Two chirps on, one chirp off

**Make a call** Press **START** to get dial tone.

**Hang up** Press **END**. Be sure to do this at the end of each call.

**Answer call** Press **START**. Line indicator comes on steady when the call is answered.

**Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.

**Hold** Press **HOLD**

**Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.

**Mute On/Off** Press the **MUTE** softkey.

**Function** Pressing **FCN** while off hook allows you to scroll through menu screens.

**User Options** Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

