



Issued by  
Information and Communication mobile  
Haidenauplatz 1  
D-81667 Munich


© Siemens AG 2004  
All rights reserved. Subject to availability.  
Rights of modification reserved.

 


Siemens Aktiengesellschaft  
[www.siemens-mobile.com](http://www.siemens-mobile.com)

**Gigaset C34**

**Gigaset**
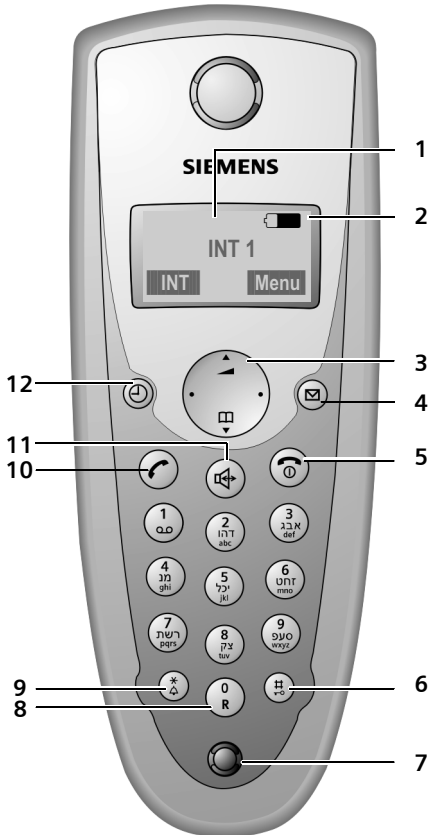
# Handset at a glance



- 1 **Display** in idle status
- 2 **Battery charge condition**  
 (empty to full)  
 flashes: battery nearly empty  
 flashes: battery charging
- 3 **Control key** (page 6)
- 4 **Message key**  
 Opens calls and messages lists.  
 Flashes: New message or new call.
- 5 **End call key, On/Off key**  
 End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**  
 Keypad lock on/off (press and hold, page 6)
- 7 **Microphone**
- 8 **Recall key**  
 Enter recall (press and hold)
- 9 **Star key**  
 Rings on/off (press and hold in idle status), Enter dial pause (press and hold when dialling),  
 Switch between upper/lower case letters and digits for text entry (page 17)
- 10 **Talk key**  
 Answer a call, open last number redial list (press briefly), start dialling (press and hold)
- 11 **Handsfree Key**  
 Switch between earpiece and handsfree mode;  
 Lights up: handsfree activated;  
 Flashes: incoming call
- 12 **Timer key** (page 15)  
 Start and end timer

# Contents

<b>Handset at a glance</b> .....	<b>1</b>
<b>Safety precautions</b> .....	<b>3</b>
<b>Gigaset C34 – More than just a telephone</b> .....	<b>4</b>
<b>Setting up the telephone for use</b> .....	<b>4</b>
Activating/deactivating the handset ..	6
Activating/deactivating the keypad lock	6
Setting the date and time .....	6
<b>Operating the phone</b> .....	<b>6</b>
Control key .....	6
Return to idle status .....	7
Menu management .....	7
Correcting wrong inputs .....	7
<b>Operating information</b> .....	<b>7</b>
Symbols .....	7
Step-by-step instructions .....	8
<b>Making calls</b> .....	<b>8</b>
Making an external call .....	8
End call .....	8
Answering a call .....	8
Handsfree talking .....	9
Muting .....	9
Making internal calls .....	9
<b>Using the directory and lists</b> ....	<b>9</b>
Directory .....	9
Last number redial list .....	11
Opening lists with the message key .	11
Using a handset as a room monitor ..	11
<b>Handset settings</b> .....	<b>12</b>
Changing the display language .....	12
Setting/changing the screen picture .	13
Activating/deactivating Auto talk ....	13
Adjusting the loudspeaker volume ..	13
Changing ringer tones .....	13
Activating/deactivating advisory tones .....	14
Using the timer .....	15
Restoring the handset default settings	15
<b>Appendix</b> .....	<b>15</b>
Care .....	15
Contact with liquid .....	15
Questions and answers .....	16
Service (Customer Care) .....	16
Specifications .....	17
Writing and editing text .....	17
<b>Index</b> .....	<b>19</b>

## Safety precautions

### Caution:

Read the safety precautions and the operating instructions before use.

Explain their contents to your children, and the potential hazards associated with using the telephone.



Only use the mains adapter supplied, as indicated on the underside of the charger.



Fit only the **recommended rechargeable batteries (page 17)** of the same type! Do not use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury.



Insert rechargeable batteries as indicated by their polarity symbols, and use them according to these instructions (polarity symbols can be seen in the handset's battery compartments).



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



The handset may cause an unpleasant humming noise in hearing aids.



Do not install the charging cradle in bathrooms or showers. The handset and base are not waterproof (page 15).



Switch off your phone when onboard an aircraft. Ensure that it cannot be switched on again accidentally.



Do not use your phone in environments with a potential explosion hazard, e.g. auto paint shops.



If you give your Gigaset to someone else, make sure you also give them the operating manual.



Dispose of the batteries and phone in accordance with environmental regulations.

### Note:

Not all of the functions described in this manual are available in all countries.

## Gigaset C34 – More than just a telephone

---

Your phone not only lets you store up to 100 telephone numbers (page 9) – your Gigaset C34 can do much, much more:

- ◆ You can programme the keys of your phone with important numbers so you can dial at the touch of a button (page 10).
- ◆ You can designate important people as VIPs so you can tell important calls from the ring tone (page 10).
- ◆ You can store birthdays (page 11) in your phone and it will remind you of them in advance.

Have fun using your new Gigaset C34!

## Setting up the telephone for use

---

The pack contains:

- ◆ one Gigaset C34 handset,
- ◆ one charging cradle (incl. mains unit),
- ◆ two batteries
- ◆ one battery cover
- ◆ one set of operating instructions.


### Inserting the batteries

---

#### Caution:

Use only the rechargeable batteries recommended by Siemens on page 17! Under no circumstances should you use a conventional (non rechargeable) battery or other battery types as this could cause significant damage to health and property, e.g. the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.


- ▶ Fit the batteries with the **correct** polarity.

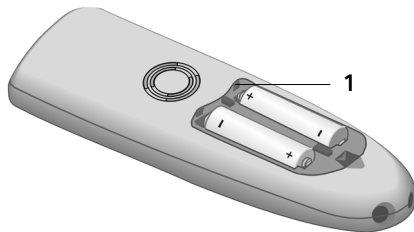

- ▶ Position the battery cover against the edge **1** and push down until it snaps in.

### Opening the battery cover

- ▶ Push the catch **2** towards the loudspeaker **1** and lift the cover up.

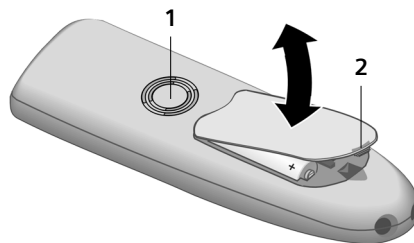

Connecting the charging cradle and mounting it on the wall (if required) is described at the end of these instructions.

### Registering your phone

---

Before you can use your Gigaset C34 you must register it to a base unit. The actual registration procedure will depend on the type of base unit.

### Automatic registration Gigaset C34 to Gigaset C340/C345

---

**Important:** The handset must not already be registered to any base unit.

The handset registers automatically to the Gigaset C340/345 base station.

- ▶ Place the handset in the base with its **display facing forward**.

The handset registers automatically. Registration takes around 1 minute. While this

is happening, **Registering** appears in the display and the name of the base, **Base 1**, flashes.

When the handset has registered, its screen displays its internal number, e.g. **INT 2** for internal number 2. The handset is assigned the lowest available internal number (1-6). If all internal numbers 1–6 have been assigned, number 6 is overwritten if the handset with internal number 6 is in idle status.

#### Note:

- Automatic registration is not possible when the base on which you wish to register the handset is being used to make a call.
- A key press cancels automatic registration.
- If automatic registration does not work the handset will have to be registered manually (page 5).

## Manual registration Gigaset C34

If the handset does not activate automatically when the batteries are fitted, you must first charge the batteries.

You must activate manual registration of the handset at both the handset and the base station.

After it has registered, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 2**. Otherwise repeat the procedure.

### 1. On the handset

**Menu** → **Handset** → **Handset** → **Register Handset**





 
Enter the system PIN of the base (the default is 0000) and press **OK**. You will see, e.g. **Registering Base 1** flashing in the display.

### 2. On the base

- ▶ Initiate registration on the base station within 60 seconds as described in the base unit's instructions.

## Charging batteries

- ▶ Plug the mains unit of the charging cradle into a mains power socket.
- ▶ Place the handset in the cradle with its display facing forward.

Battery charging is indicated in the top right of the display by a flashing battery icon ,  or . During handset operation, the battery icon indicates the charge status of the batteries (page 1).

### First battery charge and discharge

The correct charge status can only be displayed when the batteries are first fully charged **and** discharged through use.

- ▶ To do this, leave the handset in the charging cradle **without interruption** until the battery icon stops flashing in the display (approx. 6h). Your handset need not be switched on for it to charge.
- ▶ Once the batteries are fully charged, remove the handset from the cradle and do not put it back again until the batteries are fully discharged.

#### Note:

- The handset should only be placed in a base or charging cradle that is designed for it.
- When the handset is in the cradle, it charges even if it is switched off.
- If the handset has switched itself off because the batteries are flat and if it is then placed in the cradle, it will switch itself on automatically.
- After the first battery charge **and** discharge you may replace your handset in the charging cradle after every call.

## Operating the phone

### Please note:

 
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and insert them in again.
- ◆ The batteries may warm up as they are charging. This is not dangerous.
- ◆ After a while the charge capacity of the batteries will decrease for technical reasons.

## Activating/deactivating the handset

- ☎ Press the end call key and hold (confirmation beep).


## Activating/deactivating the keypad lock

- ☎ Press the hash key **and hold**.

You hear the confirmation beep. The icon  appears in the display when the keypad lock is activated.



The keypad lock deactivates automatically when you receive a call and activates again after the call.


 




### Note:

The handset displays an advisory message if you press a key by accident while the keypad lock is on. To deactivate the keypad lock, press the hash key  and hold.

## Setting the date and time


**Menu** → **Settings** → **Date/Time**

-  Enter the day, month and year with 6 digits and press **OK**. Use  to move between the fields.

 
-  Enter hours and minutes with 4 digits (e.g.     for 07:15) and press **OK**. Use  to move between the fields.

## Operating the phone

### Control key

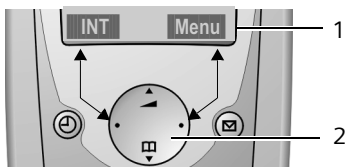



- 1 Display functions
- 2 Control key



In these instructions, the side of the control key that you must press in the given operating situation is shown in black (top, bottom, right, left). Example:  for "press the top of the control key".

The control key has a number of different functions:

### When the handset is in the idle state

-  Open the directory.
-  Adjust the ringer melody volume of the handset (page 13).



### In lists

-  /  Scroll up/down line by line.



### In menus

-  /  Scroll up/down line by line.

### In an input field



-  /  Move the cursor **left** or **right**.


### During an external call

-  Open the directory.
-  Adjust loudspeaker volume for earpiece and handsfree mode.

### Using display functions


The current display functions are shown reverse highlighted in the bottom display line.

-  /  Launch left / right display function.

You can use the display icon  to delete text in input fields one character at a time, moving from right to left.

## Return to idle status

You wish to return to idle status from anywhere in the menu:

- ▶ Press and hold end call key .

Or:

- ▶ Press no key: After 2 minutes the display will return **automatically** to its idle status.

Changes which you have not confirmed/ stored by pressing **OK** will be rejected.

An example of the display in the idle status is shown on page 1.

## Menu management

Your telephone's functions are accessed in a menu that has a number of levels.

### Main menu (first menu level)

- ▶ To open the main menu, press **Menu** with the handset in idle status.

### Accessing a function


- ▶ Scroll to the required function with the control key and press **OK**.


The corresponding submenu (the next menu level) is opened.

### Submenus



The functions in the submenus are displayed as lists.

Accessing a function:

- ▶ Scroll to the function with the control key  and press **OK**.

Press end call key  briefly to return to the previous menu level or to cancel the operation.

## Correcting wrong inputs

- ◆ Navigate to the wrong input with the control key if  is displayed.
- ◆ Press  to delete the character to the left of the cursor.
- ◆ Insert characters to the left of the cursor
- ◆ When entering the time and date etc., edit the (flashing) character.

## Operating information

This section explains the meaning of certain symbols and typographical conventions that are used in these operating instructions.

### Symbols



Enter digits or letters.



The display functions currently in the bottom display line are shown in reverse highlights. Press the corresponding side of the control key to launch the function.



Press the top or bottom of the control key, e.g. when scrolling.



Press the matching key on the handset.

### External Calls / Internal Calls (example)



Select one of the menu functions (**External Calls** or **Internal Calls**) from the list.



### Step-by-step instructions


This manual uses symbols to guide you through the setting of your phone. The example below shows you how to read the symbols and gives you explanations in the text boxes.

**Menu** → **Audio Settings** → **Ringer Melody**

- ▶ With the handset in idle status, press on the right of the control key to open the main menu.
- ▶ With the control key, select  **Audio Settings** and press on the right of the control key to confirm your selection with **OK**.
- ▶ With the control key, select  **Ringer Melody** and press on the right of the control key to confirm your selection with **OK**.

Select **External Calls / Internal Calls** and press **OK**.

- ▶ Press the bottom of the control key repeatedly until **External Calls** or **Internal Calls** is selected.
- ▶ Press **OK** (control key right) to confirm your selection.

 Select melody (✓ = on) and press **OK**.

- ▶ Press the top or bottom of the control key to select a melody.
- ▶ Press **OK** (control key right) to confirm your selection.

The selected melody is indicated by a ✓.


 Press **and hold** (idle status).

- ▶ Press the end call key and hold until the handset returns to idle status.



## Making calls


### Making an external call

External calls are calls using the public telephone network.

 Enter the number and press the talk key.

Or:


 Press the talk key  **long** and then enter the number.

You can cancel the dialling operation with the end call key .


#### Note:

- Dialling with the directory (page 9) or last number redial list (page 11) saves repeated keying of phone numbers.
- You can assign a number from the directory to a key for speed dialling (page 10).



### End call

 Press the end call key.

### Answering a call

The handset indicates an incoming call in three ways: it rings, there is a display on the screen and the handsfree key  flashes.

You can take the call in the following ways:

- ▶ Press the talk key .
- ▶ Press the handsfree key .

If the handset is in the charging cradle and the **Auto Answer** function is activated (page 13), the handset will take a call automatically when you lift it out of the cradle.

## Handsfree talking



---

With handsfree talking, instead of holding the handset to your ear you can put it down, e.g. on the table in front of you, to allow others to listen and speak to the caller.




## Activating/deactivating handsfree

---

### Activating while dialling

-   Enter the number and press the handsfree key.
  - ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

### Switching between earpiece and handsfree mode

-  Press the handsfree key.
- Switch handsfree on and off during a call.
- If you wish to place the handset in the charging cradle during a call:
- ▶ Press the handsfree key  and hold it while placing the handset in the base. If handsfree key  does not light up, press the key again.

To find out how to adjust the volume, see page 13.

## Muting


---

You can deactivate the microphone in your handset during an external call.

### Muting the handset

- INT** Press the control key.

### Cancelling muting



-  Briefly press the end call key.

## Making internal calls



---

Internal calls to other handsets registered on the same base are free.


## Calling a specific handset

- INT** Open list of internal users. Your own handset is indicated by <.
-   Select a handset and press the talk key.


Or:

-  Enter the number of the handset, e.g. .

## Calling all handsets ("group call")

- INT** Open list of internal users.
-  Press the star key. All handsets are called.

## End call

-  Press the end call key.

## Using the directory and lists

---

 
You can store up to 100 entries in the directory (the actual number depends on the size of the individual entries).

You create a personalised directory for your own individual handset. However, you can send the list or individual entries to other handsets (page 10).

## Directory

---

In the **directory** you store numbers and matching names.

- ▶ With the handset in idle status, open the directory by pressing .

### Length of an entry

Number: max. 32 digits  
Name: max. 16 characters

#### Note:

You can assign a number from the directory to a key for speed dialling (page 10).

## Using the directory and lists

### Storing a number in the directory

---



→ **Menu** → **New Entry**



Enter the number and press **OK**.



Enter the name and press **OK**.

### Selecting a directory entry

---



Open the directory.

You have the following options:

- ◆ Use to scroll to the entry until the required name is selected.
- ◆ Enter the first character of the name, or scroll to the entry with .

### Dialling with the directory

---



→ (select entry; page 10)



Press the talk key. The number is dialled.

### Managing directory entries

---

You have selected an entry (page 10).

#### Editing an entry



**Menu** → **Edit Entry**



Edit the number if required, and press **OK**.



Edit the name if required, and press **OK**.

### Using other functions



→ (select entry; page 10)

→ **Menu**

The following functions can be selected with .

#### Use Number

Edit or add a stored number. Then dial or use other functions with **Menu**.

#### Birthday

Add, view, edit or delete a birthday for an existing entry.

#### Delete Entry

Delete a selected entry.

### VIP Entry

Mark a directory entry as **VIP** (Very Important Person) and assign it a particular ringer melody. You will now be able to tell VIP calls from the ringer melody.

**This feature requires caller display (CLI).**

#### Send Entry

Send a single entry to another handset (page 10).

#### Delete List

Delete **all** directory entries.

#### Send List

Send the complete list to another handset (page 10).

#### Shortcut

Assign the current entry to a key.

### Using speed dial keys

---

- ▶ Press the required speed dial key **and hold**.

### Sending the directory to another handset

---

**Requirements for this:** The sending and receiving handsets must both be registered to the same base station. The other handset must be able to send and receive directory entries.



→ (select entry; page 10)

→ **Menu** → **Send Entry / Send List**



Enter the internal number of the receiver handset and press **OK**.



A successful transfer is confirmed by a message and the confirmation tone at the receiver handset.

#### Please note:


- ◆ Entries with identical numbers are not overwritten in the receiver handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.


## Storing a birthday in the directory


You can store a birthday for every number in the directory, and specify a time when you will receive a reminder call on the birthday.


 →  (select an entry; page 10)

→ **Menu** → **Birthday**



 Enter the date and press **OK**.

 Enter the time and press **OK**.

 **Visual** or select the melody that will be used for the reminder on the birthday, and press **OK**.

The entry will now have the icon  next to it in the directory.

## Editing or deleting a birthday

 →  (select an entry; page 10)

→ **Menu** → **Birthday**

If you have stored a birthday for the entry, you can call the following functions with

**Menu**:

**Edit Birthday**

▶ Edit settings.

**Delete Birthday**

## Reminder call on a birthday

A birthday reminder call is signalled on the handset with the selected ring tone.




**OK** Press the control key to end the reminder call or acknowledge a missed birthday.

The corresponding directory entry is displayed.


## Last number redial list

The last number redial list shows the last ten numbers dialled on the handset (max. 32 digits). If one of the numbers is in the directory, then the corresponding name will be displayed.

## Manual last number redial


-  Press the key **briefly**.
-  Select an entry.
-  Press the talk key again. The number is dialled.

## Managing entries in the last number redial list

 Press the key **briefly**.

 Select an entry.

**Menu** Press the control key.

The following functions can be selected with :

**Use Number** (as in the directory page 10)


**Copy to Directory**

Copy an entry to the directory.

**Delete Entry** (as in the directory page 10)

**Delete List** (as in the directory page 10)

## Opening lists with the message key

In idle status, the handset screen displays an icon for new calls or messages. The number of new entries is shown beneath the corresponding icon. An advisory tone sounds as soon as a **new message** arrives on a list. The message key  flashes.

Use the message key  to open the lists that contain new entries.

## Using a handset as a room monitor

With this function, a previously stored internal or external number is called when a set noise level in the room is reached.

The room monitor call to an external number stops after approx. 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base).

## Handset settings

During the call, all keys are locked except the end call key. The room monitor function **remains active** after you end the call. It must be activated again if the handset has been switched off.

When the function is activated, incoming calls are signalled on the handset **without a ring tone** and only appear on the display. The display and keys are not illuminated and advisory tones are also turned off.

### Caution!

- The connection to which the room monitor is diverted must not be blocked by an activated answering machine.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- **You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.**
- The active room monitor function considerably reduces the operating time of the handset. Place the handset in the charging cradle if necessary. This ensures that the battery does not discharge.

## Activating the room monitor and entering the number to be called

**Menu** → **Additional Features** → **Room Monitor** → **Call Internal**



Depending on the base, select **internal** handset or **Call All** (if several handsets are registered and you want all of them to be called) and press **OK** or enter the handset's number manually and press **OK**.

The function is now activated. An **internal** handset will be called.

Or:

**Menu** → **Additional Features** → **Room Monitor** → **Call External**



Enter the number of an **external** phone and press **OK**.

The function is now activated. An **external** number will be called.

## Setting the sensitivity

**Menu** → **Additional Features** → **Room Monitor** → **Level**



Choose between **Low** and **High** and press **OK**.

## Deactivating the room monitor

**Menu** Press the control key.



Select **Room Monitor off** and press **OK**.

The function is deactivated.

## Deactivating the room monitor remotely

**Important:** The telephone must support touch tone dialling.

- ▶ Take the call from the room monitor and press keys **9** **#**.

The room monitor function will deactivate after the call ends. There will be no further room monitor calls.

## Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

## Changing the display language

You can view the display texts in different languages.

**Menu** → **Settings** → **Handset** → **Language**

The current language is indicated by ✓.



Select a language and press **OK**.



Press **and hold** (idle status).

If you accidentally choose a language you do not understand:

**Menu**   

Press keys one after the other.



Select the correct language and press **OK**.

## Setting/changing the screen picture

You can display a screen picture when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The picture is not displayed in certain situations, e.g. during a call or when the handset is de-registered.

**Menu** → **Settings** → **Screen Picture**

The current setting is indicated by ✓.

You have the following options:

### No Screen Picture

No picture is displayed.


### Standard Picture

The default picture is displayed.

### Download Picture

Any downloaded picture is displayed.

## Activating/deactivating Auto talk

When this function is activated, when a call arrives you can simply lift the handset out of the charging cradle without having to press the talk key .

**Menu** → **Settings** → **Handset**

Select **Auto Answer** and press **OK** (✓ = on).



Press **and hold** (idle status).

## Adjusting the loudspeaker volume

You can set the loudspeaker volume for handsfree speaking to five different levels and the earpiece volume to three different levels. You can only make these adjustments during a call.

The handsfree volume can only be adjusted when this function is set.


You are conducting an external call.



Press the control key.



Adjust the volume and press **OK**.

If  is assigned a different function, e.g. toggling:

**Menu** **Volume**



Select **Volume** and press **OK**.



Adjust the volume and press **OK**.

## Changing ringer tones

### ◆ Volume:

You can choose between five volumes (1–5; e.g. volume 2 = ) and the "crescendo" ring (6; volume increases with each ring = .

### ◆ Melody:

You can select a melody from the list of pre-installed ringer melodies or install a melody that you have downloaded. The first three melodies are the "classical" ring tones.

You can also set different melodies for the following functions:

### ◆ External Calls: For external calls


### ◆ Internal Calls: For internal calls

## Handset settings



### Setting ringer volume

---

The ringer volume is the same for all types of ring tones.

With the handset in idle status, open the menu **Ringer Volume** by pressing  briefly.

**Menu** → **Audio Settings** → **Ringer Volume**

-  Adjust the volume and press **OK**.
-  Press **and hold** (idle status).



### Setting ringer melody

---

Set different ringer melodies for external and internal calls.

**Menu** → **Audio Settings** → **Ringer Melody**

Select **External Calls / Internal Calls** and press **OK**.


-  Select a melody and press **OK**.
-  Press **and hold** (idle status).

### Activating/deactivating the ringer


---

You can turn off the ringer on your handset before you take a call or while the phone is in the idle state. The ringer cannot be re-activated while an external call is in progress.

#### Deactivating the ringer

-  Press the star key and hold until you can no longer hear the ringer tone.

#### Re-activating the ringer

-  Press the star key **and hold**.

### Activating/deactivating advisory tones

---

Your handset uses 'advisory tones' to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

- ◆ **Key beep**: Each key press is acknowledged.
- ◆ **Acknowledge tones**:
  - **Confirmation beep** (a rising tone sequence): at the end of the entry/setting, when the handset is placed in the charging cradle and when a new entry arrives on the calls list.
  - **Error beep** (descending tone sequence): when you make an incorrect entry.
  - **Menu end tone**: when scrolling at the end of a menu.
- ◆ **Battery low beep**: the battery needs to be charged.

### Activating/deactivating key beep/acknowledge tones

---

**Menu** → **Audio Settings** → **Advisory Tones**  
Select **Key Tones / Confirmation Tone** and press **OK** (✓ = on).

### Setting the battery low beep

---

**Menu** → **Audio Settings** → **Advisory Tones**  
→ **Battery Low**

**On / Off / During Call**

Select **On / Off / During Call** and press **OK** (✓ = on). The battery low beep is activated/deactivated/sounds during a call.

## Using the timer

You can use your handset as a timer (short-term alarm clock). The maximum time that can be set is 23 hours, 59 minutes and 59 seconds.

The timer continues to run during a call. The timer cannot be started if the room monitor (page 11) is activated.

### Starting the timer

- ▶ Press the timer key.



Enter the time in hours, minutes and seconds, then press **OK**.

The timer starts. You can see the remaining time in the display. At the end of the time you see **Countdown finished**. You hear an advisory tone if the timer finishes while a phone call is in progress.

- OK** Press the control key to return to idle status.

### Canceling the timer

The timer is running.

- ▶ Press the timer key.

- OK** Press the control key to confirm.

## Restoring the handset default settings

You can reset individual settings and changes you have made. This will not affect entries in the directory or the calls list, or the handset's registration to the base.

**Menu** → **Settings** → **Handset** → **Reset Handset**

- OK** Press the control key to confirm.

Press **and hold** (idle status).  
Cancel the reset with .

## Default settings of the handset

Function	Default setting	Page
Battery tone/Key click/Confirmation tone	on	page 14
Auto answer	on	page 13
Room monitor	off	page 12
Room monitor: sensitivity/number	high/no number	page 12
Display language	country-specific	page 12
Volume: handsfree/earpiece/ringer	3/1/5	page 13
Logo	on	page 13
EATONI predictive text	on	page 18
Character set	standard	page 18

## Appendix

### Care

- ▶ Wipe the charging cradle and the handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never** use a dry cloth as this can cause static.

### Contact with liquid

If the handset has come into contact with liquid:

1. **Switch the handset off and remove the batteries immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).



### 4. Do not activate the handset again until it is dry.


When it has fully dried out you will normally be able to use it again.

## Questions and answers

---


If you have any queries about the use of your phone, you can contact us any time at [www.siemens.com/qigasetcustomer-care](http://www.siemens.com/qigasetcustomer-care). The table below contains a list of common problems and possible solutions.

#### The display is blank.

1. The handset is not switched on.
  - ▶ Press the 'end call' key  and hold.
2. The battery is flat.
  - ▶ Charge the battery or replace it (page 5).

#### The handset does not respond to a key press.

The keypad lock is activated.

- ▶ Press the hash key  and hold (page 6).

#### "Base x" flashes in the display.


1. The handset is outside the range of the base.
  - ▶ Move the handset closer to the base.
2. The handset has been de-registered.
  - ▶ Register the handset (page 5).
3. The base is not switched on.
  - ▶ Check the base's mains adapter (page 4).

#### Handset does not ring.

The ringer is switched off.

- ▶ Activate the ringer (page 14).

#### The other party cannot hear you.

You have pressed the   key. The handset is "muted".

- ▶ Switch on the microphone again (page 9).

**You hear an error tone when keying an input** (a descending sequence of tones).

Action has failed/invalid input.

- ▶ Repeat the operation.
  - ▶ Watch the display and refer to the operating instructions if necessary.

## Service (Customer Care)

---

We offer you support that is fast and tailored to your specific needs!

Our Online Support on the Internet:

[www.siemens.com/qigasetcustomer-care](http://www.siemens.com/qigasetcustomer-care)

This site can be accessed at any time wherever you are. It will give you 24/7 support for all our products. It also provides interactive troubleshooting, a list of FAQs and answers plus user guides for you to download. You will also find frequently asked questions and answers in the **Questions and Answers** section of this user guide in the appendix.

If you need to examine the phone, require assistance operating it or wish to make claims under the warranty, please call NewPan on 1 700700 727.

If you did not purchase the phone from an authorized dealer, we will not entertain any claims made under the warranty.

### Authorisation

This product is designed for world-wide operation, depending on national approval outside the European Economic Area (except Switzerland). Country-specific conditions have been taken into account. The CE mark attests to the phone's compliance with the essential requirements of the R&TTE directive.

**Excerpt from the original declaration:**

"We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH in compliance with ANNEX V of the R&TTE-Directive 99/5/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/5/EC is ensured."

Senior Approvals Manager"

The Declaration of Conformity (DoC) has been signed. In case of need, a copy of the original DoC can be made available via the company hotline.

CE 0682

**Specifications****Recommended batteries**

(Valid at the time of going to press)

Nickel-metal-hydride (NiMH):

- ◆ Sanyo Twicell 700
- ◆ Sanyo Twicell 650
- ◆ Sanyo NiMH 800
- ◆ Panasonic 700 mAh "for DECT"
- ◆ GP 700mAh
- ◆ GP 850mAh
- ◆ Yuasa Technology AAA Phone 700
- ◆ Yuasa Technology AAA 800
- ◆ VARTA Phone Power AAA 700 mAh

The handset is supplied with two recommended batteries.

**Handset operating times/charging times**

Capacity	700 mAh
Standby time	approx. 170 hours (7 days)
Calling time	approx. 15 hours
Charging time	approx. 6 hours






The operating and charging times apply only when using the recommended batteries.

**General specifications**

Dimensions, handset	158 x 59 x 32 mm (L x W x H)
Weight of handset with battery	128 g

**Writing and editing text**

The following rules apply when writing a text:

- ◆ The cursor is controlled with  .
- ◆ Characters are added to the left of the cursor.
- ◆ Press the star key  **briefly** to switch from the "Abc" mode to "123", from "123" to "abc" and from "abc" back to "Abc" (upper case: 1st letter upper case, all others lower case). Press the star key  before entering the letter.
- ◆ Press the star key  **and hold**: Shows the selection line of the characters assigned to the star key.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

**Editing text (without predictive text)**



When you press a key **and hold it**, the characters of that key appear in the bottom display line and are highlighted one after the other. When you release the key the highlighted character is inserted into the input field.

 
The display briefly shows whether upper or lower case letters or digits is selected when you switch from one mode to the next: The bottom text line displays "abc -> Abc", "Abc -> 123" or "123 -> abc".

## Writing SMS (with predictive text)


Your base station **must** support SMS for this.


EATONI predictive text helps you when you are writing text messages.

Each key between  and  is assigned several letters and characters (see the character set tables, page 18). These appear in a selection line immediately under the text panel (over the display functions) as soon as you press a key. The letter you are most likely looking for is reverse highlighted and is at the beginning of the selection line. It is copied into the text panel.



 
- 1 Text of the message
- 2 Selection line

If this letter is the one you want, confirm it by pressing the next key. If it is not the one you want, **briefly** press the hash key  repeatedly until the required letter is reverse highlighted on the display line and copied into the text panel.


If you press the hash key  **and hold**, you will see the selection line of characters that are assigned to the hash key.

## Deactivating/activating predictive text

**Requirement:** You are writing a text message.


 Press the control key.

### Predictive Text

Select and press  (✓ = on).

## Order of directory entries

The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The **sort order** is as follows:





1. Space (shown here as )
2. Digits (0–9)
3. Letters (alphabetical)

## 4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will now move to the beginning of the directory. Names which you have preceded with an asterisk will move to the end of the directory.

## Entering special characters

### Standard characters

				
	*)	**)		
1x	Space	Space	.	Abc->123 #
2x	1	←	,	123 -> abc @
3x	£	1	?	* \ 
4x	\$	€	!	/ &
5x	¥	£	0	( §
6x	□	\$	+	)
7x		¥	-	<
8x		□	:	=
9x			¿	>
10x			i	%
11x			"	
12x			'	
13x			;	
14x			_	

\*) Directory and other lists

\*\*\*) When writing a text message

# Index

---

## A

- Acknowledge tones . . . . . 14
- Activate
  - advisory tones . . . . . 14
  - auto answer . . . . . 13
  - handset . . . . . 6
  - keypad lock . . . . . 6
  - room monitor . . . . . 12
- Add birthday to directory . . . . . 10, 11
- Advisory tones . . . . . 14
- Auto answer . . . . . 8, 13

## B

- Battery
  - charging . . . . . 5
  - icon . . . . . 5
  - inserting . . . . . 4
  - low beep . . . . . 14
  - recommended batteries . . . . . 17

## C

- Call
  - answer . . . . . 8
  - end . . . . . 8
  - external . . . . . 8
  - internal . . . . . 9
- Call all . . . . . 9
- Calls list . . . . . 11
- Cancel (operation) . . . . . 7
- Care, phone . . . . . 15
- Change
  - display language . . . . . 12
  - loudspeaker volume . . . . . 13
  - ringers . . . . . 13
- Character set table, see
  - Special characters
- Charge status display . . . . . 5
- Confirmation beep . . . . . 14
- Control key . . . . . 1
- Correcting wrong inputs . . . . . 7
- Customer Care . . . . . 16

## D

- Deactivate
  - advisory tones . . . . . 14
  - auto answer . . . . . 13
  - handset . . . . . 6

- keypad lock . . . . . 6
- room monitor . . . . . 12
- Default settings (handset) . . . . . 15
- Delete
  - birthday . . . . . 11
  - entry . . . . . 10
  - list . . . . . 10
- Deleting
  - characters . . . . . 7
- Directory . . . . . 9
  - birthday . . . . . 10, 11
  - open . . . . . 6
  - order of entries . . . . . 18
  - send entry/list to handset . . . . . 10

## Display

- change display language . . . . . 12
- in idle status . . . . . 7
- screen picture . . . . . 13
- wrong language . . . . . 13

## E

- Earpiece mode . . . . . 9
- Earpiece volume . . . . . 13
- EATONI (predictive text) . . . . . 18
- End call key . . . . . 1, 8
- End, call . . . . . 8
- Entering special characters . . . . . 18
- Error beep . . . . . 14
- Escape key . . . . . 7

## H

### Handset

- activate/deactivate . . . . . 6
- advisory tones . . . . . 14
- contact with liquid . . . . . 15
- display language . . . . . 12
- idle status, return to . . . . . 7
- loudspeaker volume . . . . . 13
- operating and charging times . . . . . 17
- restore default settings . . . . . 15
- screen picture . . . . . 13
- using room monitor . . . . . 11
- handset
  - muting . . . . . 9
- Handset charging times . . . . . 17
- Handset operating time
  - in room monitor mode . . . . . 12
- Handsfree
  - key . . . . . 1
  - volume . . . . . 13

## Index

Handsfree talking . . . . . 9  
Hash key . . . . . 1, 6  
Hearing aids . . . . . 3

## I

Idle status (display) . . . . . 7

## K

Keypad lock . . . . . 6

## Keys

cancel key . . . . . 7  
control key . . . . . 1  
end call key . . . . . 1, 8  
escape key . . . . . 7  
handsfree key . . . . . 1  
hash key . . . . . 1, 6  
keypad lock . . . . . 6  
message key . . . . . 1  
On/Off key . . . . . 1  
recall key . . . . . 1  
star key . . . . . 1, 14  
talk key . . . . . 1, 8  
timer key . . . . . 1

## L

Language, Display . . . . . 13

Last number redial . . . . . 11

Liquid . . . . . 15

## List

calls . . . . . 11  
delete . . . . . 10

Lock (keypad) . . . . . 6

## Loudspeaker

handsfree . . . . . 13

Loudspeaker volume . . . . . 13

## M

Mains unit . . . . . 3

## Making calls

answer call . . . . . 8  
external . . . . . 8  
internal . . . . . 9

Making internal calls . . . . . 9

Medical appliances . . . . . 3

Melody (ringer) . . . . . 14

## Menu

back one menu level . . . . . 7

end tone . . . . . 14

entry . . . . . 6

menu guidance . . . . . 7

## Message key

open lists . . . . . 11

## Messages

key . . . . . 1

Muting handset . . . . . 9

## O

On/Off key . . . . . 1

Operating time for handset . . . . . 17

Operation (preparing to use  
the phone) . . . . . 4

Order of entries in directory . . . . . 18

## P

Pack contents . . . . . 4

Power consumption . . . . . 17

Predictive text . . . . . 18

Preparing for use (phone) . . . . . 4

Preparing to use the phone . . . . . 4

## Q

Questions and answers . . . . . 16

## R

## Recall

entering . . . . . 1

Recall key . . . . . 1

Reminder call . . . . . 11

Ring delay . . . . . 13

## Ringer

adjust volume . . . . . 6

changing . . . . . 13

set melody . . . . . 14

set volume . . . . . 13

Room monitor . . . . . 11

## S

Safety precautions . . . . . 3

Screen picture . . . . . 13

Search in directory . . . . . 10

Select entry (menu) . . . . . 6

Service . . . . . 16

Set date . . . . . 6

Set time . . . . . 6

Signal beep, see Advisory tones  
Special characters . . . . . 18  
Specifications . . . . . 17  
Speed dialling list . . . . . 9  
Star key . . . . . 1, 14  
Step by step . . . . . 8  
Storing a number in the directory. . . . . 10

## T

Talk key . . . . . 1, 8  
Timer . . . . . 15  
Timer key . . . . . 1  
Troubleshooting . . . . . 16

## V

VIP (directory entry) . . . . . 10  
Volume  
    earpiece . . . . . 13  
    handset loudspeaker . . . . . 13  
    loudspeaker . . . . . 13  
    ringer . . . . . 13  
    setting . . . . . 14

## W

Warning beep, see Advisory tones  
Wrong inputs (correcting) . . . . . 7

