

# SIEMENS

Be inspired

Gigaset  
CL100

DECT



# Brief overview

Internal number of the handset

Time

Caller list

Access to

- ◆ Answering machine/mail box
- ◆ Caller list

Redial

Internal list

Directory key

Talk key


- ◆ Answer a call
- ◆ Initiate dialling

Recall key

- ◆ Enquiry (flash)
- ◆ Enter dialling pause

Star key

- ◆ Ringer on/off

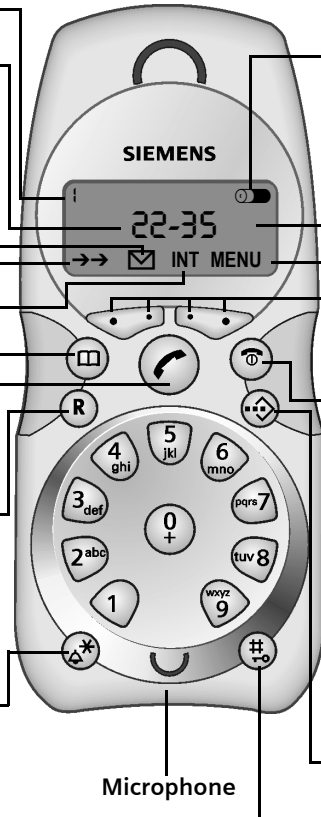

Battery charging status  
 ○○○ flat    ● fully charged  
 flashing: battery almost flat

Display (display screen)

Menu

Display keys

Activate current functions in display

End call and On/Off key

- ◆ End call
- ◆ Cancel function
- ◆ One menu level back (short press)
- ◆ Return to idle state (hold down)
- ◆ Handset on/off

Speed dial key  
 Open the speed dial list

Microphone

Hash key

Keypad lock on/off

The various **display symbols** have the following meanings:

Display	Meaning when pressed
→→	Last number redial opens a list of the last 5 numbers dialled (page 16).
✉	Mailbox symbol open caller list and network mailbox (page 16).
INT	Internal: Opens the list of internal phones.
MENU	Menu: Activates the main menu when in standby mode. Opens a status-dependent menu while making a call.
↑ or ↓	Scrolls up or down.
← or →	Moves cursor to the left or right.
←	Delete key: Delete input from right to left one character at a time. Deletes character by character, from the right to the left.
OK	Confirms menu function or confirms an input and store.

# Contents

<b>Brief overview</b> .....	<b>2</b>
<b>Safety precautions</b> .....	<b>5</b>
<b>Service making handset ready for service</b> .....	<b>6</b>
Installing the base .....	6
Connecting the base station .....	6
Making the handset ready for service .....	7
Registering the handset with the base station and charging the batteries .....	8
Switching the handset on and off .....	8
Activating/deactivating the keypad lock .....	8
<b>Operating the telephone, menu guidance</b> .....	<b>9</b>
Display keys .....	9
Display in idle status .....	9
Main menu .....	9
<b>Date and Time</b> .....	<b>10</b>
Setting the date and the time .....	10
<b>Making calls</b> .....	<b>10</b>
Making external calls and ending a call .....	10
Answering a call .....	10
Calling Line Identification .....	11
Muting the handset .....	11
<b>Network mailbox features</b> .....	<b>11</b>
Function that is set for the next call .....	12
Functions that are set for all subsequent calls .....	12
Functions during a call .....	12
Function that is set after the next call .....	13
<b>Using the network mailbox</b> .....	<b>13</b>
Configuring the network mailbox for fast access .....	13
Viewing a message from the network mailbox .....	13
<b>Using the directory and other lists</b> .....	<b>14</b>
Directory and speed dial list .....	14
Last number redial list .....	16
Caller list .....	16

- Registering and de-registering handsets . . . . . 17**
  - Manual registration: Handset Gigaset CL 1 to Gigaset CL 100 . . . . . 17
  - Registering other handsets . . . . . 17
  - De-registering handsets . . . . . 17
- Operating more than one handset . . . . . 18**
  - Internal calls, ending a call . . . . . 18
  - Forwarding a call to another handset . . . . . 18
  - Internal enquiry calls . . . . . 18
  - Accepting/rejecting a waiting call during an internal call . . . . . 18
  - Barging in on an external call . . . . . 18
  - Paging . . . . . 19
- Handset settings . . . . . 20**
  - Changing display language . . . . . 20
  - Activating/deactivating Auto Answer . . . . . 20
  - Changing the volume and melody . . . . . 20
  - Activating/deactivating the ringer . . . . . 20
  - Activating/deactivating the battery warning tone . . . . . 20
  - Restoring the handset factory settings . . . . . 21
- Base station settings . . . . . 21**
  - Changing the system PIN . . . . . 21
  - Restoring base station to factory (default) settings . . . . . 21
- Appendix . . . . . 22**
  - Questions and Answers . . . . . 22
  - Care . . . . . 23
  - Contact with liquid . . . . . 23
  - Operation with a PABX . . . . . 23
  - Other settings . . . . . 24
  - Specifications . . . . . 25
  - Service (Customer Care) . . . . . 27
- Index . . . . . 29**

# Safety precautions



Use **only the power unit supplied**, as indicated on the underside of the base station.



Insert only **approved rechargeable batteries of the same type** (page 25)! Never use ordinary (non-rechargeable) batteries as they may pose a health hazard or cause injury.



Make sure you insert rechargeable batteries the right way round and use the battery type specified in this operating manual (as indicated in the handset battery compartment).



The phone may affect medical equipment. Be aware of the technical conditions within the particular environment (e.g. doctor's practice).



The handset may cause an intrusive "hum" in hearing aids. Do not hold the handset against your ear while it is ringing (incoming call).



Do not install the phone in a bathroom or shower. The handset and base station are not splash proof (page 23).



Do not operate the phone in places where there is a risk of explosion (such as paint workshops).



If you give your Gigaset to someone else, make sure you also give them the operating manual.



Dispose of the batteries and phone in accordance with environmental regulations.

*i*


- ◆ Do not pollute the environment. Emergency numbers cannot be dialled if the keypad lock (page 8) is activated!
- ◆ Not all of the functions described in these instructions are available in all countries.

# Service making handset ready for service

## Installing the base

### Hints on installing

The base is designed to be operated in enclosed, dry areas at temperatures ranging from +5 °C to +45 °C. Install the base at a central location in your home, e.g., in the hall.


	<ul style="list-style-type: none"><li>◆ Never expose the telephone to the following: heat sources, direct sunlight or other electrical appliances.</li><li>◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.</li></ul>
---	---

### Range

The range is dependent on the nature of the building and other local conditions. Outdoors it is approx. 300 m. Indoors the range is up to 50 m.

### Connecting the base station

First connect your base station to the mains supply and the telephone socket. Power supply unit

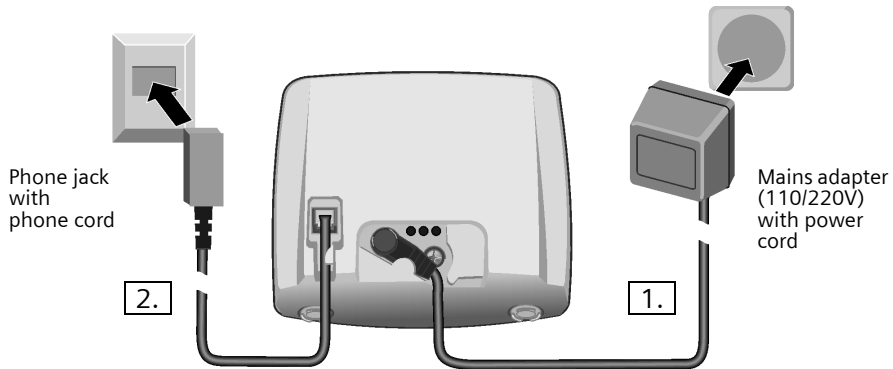

Underneath the base station


1. \_\_\_\_\_

- ◆ Small power cable plug into the socket under the base station.
- ◆ Lay the cable correctly in the cable channel.
- ◆ Plug the power supply unit into your power outlet.

2. \_\_\_\_\_

- ◆ Small coloured plug on the telephone cable into the socket (clicks in).
- ◆ Lay the cable correctly in the cable channel.
- ◆ Plug the phone into the phone socket.

Pin assignment:

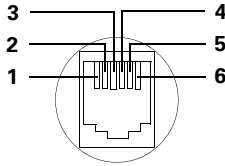

	<b>BRD</b>	<b>OES</b>
1	unassigned	unassigned
2	unassigned	a2
3	a	a
4	b	b
5	unassigned	b2
6	unassigned	unassigned

*i*


- ◆ Use only the power supply unit supplied.
- ◆ If you buy another phone cable, ensure that it has the right connector assignment for your country.
- ◆ Keep the power supply unit **plugged in at all times** to ensure your phone is ready for use whenever you need it.

## Making the handset ready for service

### Remove the protective film

The display is protected by a plastic film. **Please remove the protective film!**

### Inserting the batteries

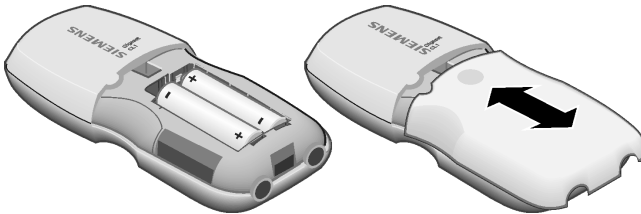

- ◆ Insert the batteries the **right way round** – see illustration left.
- ◆ Place the cover on the battery compartment **about 3 mm down from the latch** and push it **up** until it clicks into position.

**To open** the cover, press on the depression and push cover **downwards**.




- ◆ Insert only approved, rechargeable **batteries of the same type** (page 25)! Never use normal batteries, since these could lead to a health hazard or cause injury.
- ◆ Do not use a non-Siemens charging unit as this could damage the batteries.

### Registering the handset with the base station and charging the batteries

Place your handset in the base station with the **display visible at the front**. The handset will then register itself with the base station automatically, all symbols will flash in the display. The process takes about a minute. Once this is completed, the confirmation tone rings (rising sequence of tones) and "1" will appear in the top left-hand corner of the display. This indicates that the handset has been allocated the first internal number.



◆ To register **additional handsets**, see page 17 onwards.


Leave the handset in the base station for the batteries to charge – the batteries are supplied uncharged. The battery charging process is indicated on the handset by a flashing battery symbol .

Once the batteries have been charged, your phone is ready for service. You need to set the date and time to ensure that the time of incoming calls can be noted correctly (page 10).



- ◆ We recommend initially charging the batteries without interruption for the amount of time listed in the table (page 25) – irrespective of the charging status icon! After a while the charge capacity of the batteries will decrease for technical reasons.
- ◆ Once the first charging cycle is completed you can put your handset back in the base station after each call. Charging is controlled electronically. This ensures optimum battery charging without overloading.


The batteries heat up during charging. This is normal and not dangerous.

### Switching the handset on and off

To deactivate or activate the handset, press the end call key . The confirmation tone then rings. If you place a handset that is activated in the base station or a charging unit, it will automatically be activated.

### Activating/deactivating the keypad lock

**Activating keypad lock:** Press and hold down the hash key  (confirmation tone). The  symbol appears in the display.


**Deactivating keypad lock:** Press and hold down the hash key  (confirmation tone). The key lock switches itself off automatically if you receive a call. It reactivates when the call is finished.




# Operating the telephone, menu guidance

## Display keys

Display keys are the long keys directly below the display. Your handset has **two display keys**. Each of these is operated as a rocker key, it can be pushed down on the left-hand and the right-hand side. Depending on the current operating status and which side of the key you press, you will call up a particular function. This function is shown directly above the display key.

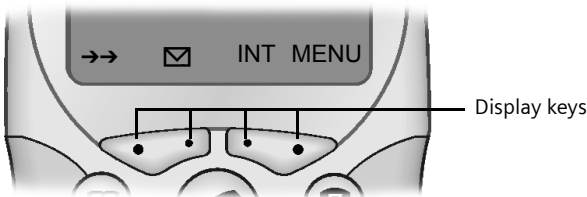

## Display in idle status

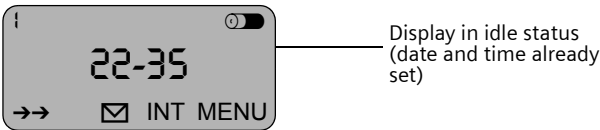

### Reverting to idle status from anywhere in the menu

- ◆ Hold down call end key for approx. 1 sec. or
  - ◆ Press no key: After 60 secs. the display will **automatically** return to idle status.
- Changes that you have not confirmed by pressing OK will be rejected. If you press the call end key **briefly** and just once, you will return to the previous menu level.

## Main menu

To open the main menu, press the display key in idle status **MENU** and use the key to scroll to the desired entry.

1	SEL SERVICES	
2	AUDIO SET	The available menu entries are dependent on your base station.
3	BASE SET	
4	MAILBOX	
5	REGISTER HS	




# Date and Time


## Setting the date and the time

Settings for date and time are needed to ensure that these are shown correctly for incoming calls. You can choose between a 12-hour and 24-hour display (default setting) to display the time.

### Date

**MENU → BASE SET → DATE/TIME → DATE SET**

→ (enter day/month/year (example: **Press keys**    for "20.05.2003") → **OK**


Press  and hold (return to idle status).

### Time

**MENU → BASE SET → DATE/TIME → CLOCK SET**


→ Enter hours/minutes (example: **Press keys**    for "19.05") → **OK**

If the 12-hour display is set: → Select a.m. or p.m. → **OK**

Press  and hold (return to idle status).

### set 12 or 24 hour display



**MENU → BASE SET → DATE/TIME → CLOCK MODE → 12 H or select 24 H → OK**


Press  and hold (return to idle status).


 
# Making calls

## Making external calls and ending a call

External calls are calls using the public telephone network.


 (enter the number), press  (talk key).

To **end the call**: Press  (end call key).

You can also **first** press the talk key  (you hear a dial tone) and then enter the phone number. You can use the end call key  to cancel the dialling operation.

## Answering a call

Your handset rings, and the call appears in the display.

Press the talk key .

If the **Auto Answer** function is activated (page 20) you just need to lift the handset out of the base station to take the call.

## Calling Line Identification

When you get a call, you will see the caller's number and/or name displayed on the screen.


### Preconditions:

1. You have requested that your network provider enable display of the caller's number (CLIP) or name (CNIP) on your handset screen.
2. The caller has asked the network provider for his number to be identified (CLI).


<i>i</i>	You may have to pay a charge to use calling line identification. Please ask your network provider for details.
----------	--

**CLIP/CLI:** When you receive a call from a phone number for which you have stored an entry in your handset directory (see page 14), the name in the directory will be shown instead of the phone number, e. g. "Tom".

### Screen display with CLIP/CLI

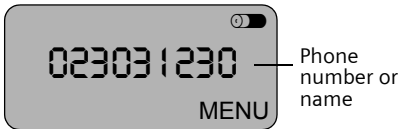

### Screen display with CNIP

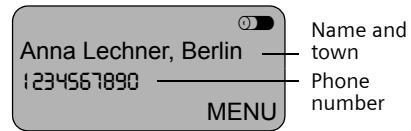

If a phone number is not transferred, "<< >>" will be displayed instead of the phone number.

If the caller has not requested or has withdrawn phone number transfer, "WITHHELD" will be shown instead of the phone number.

## Muting the handset

Press **INT**. The call is "held" (wait melody).

To end the call: **MENU → GO BACK → OK**.

## Network mailbox features


Network mailbox features are functions which your network provider offers. You can only use these features if you have **requested them from your network provider**.

<i>i</i>	For more information on these functions, consult your network provider, e.g. Deutsche Telekom ( <a href="http://www.telekom.de">www.telekom.de</a> ). Your network provider will assist you in questions about fees or any other problems that arise.
----------	---

# Network mailbox features


## Function that is set for the next call

Before you carry out the procedure described below, press: **MENU** (open menu);  
↓ **SEL SERVICES OK**. When the procedure is complete, a code will be sent which is displayed on your handset's screen.


<b>Withhold Calling Line Identification once (CLIR):</b>	WITHHOLD NO <b>OK</b>
	 (enter number) <b>OK</b>

## Functions that are set for all subsequent calls

Before you carry out any of the procedures described below, press: **MENU** (open menu); ↓ **SEL SERVICES OK**. When a procedure is complete, a code will be sent which is displayed on your handset's screen.


You can exit the procedure in question by pressing the end call key  after the confirmation from the phone network.

<b>Activate/deactivate call waiting</b> (in external call only):	↓ <b>CALL WAITING OK</b>
	ON <b>OK</b> or ↓ <b>OFF OK</b>

<b>Activate/deactivate and set general call diversion:</b>	CALL DIVERT <b>OK</b>
	AUTOMATIC <b>OK</b> or ↓ <b>NO ANSWER OK</b> or ↓ <b>IF BUSY OK</b>
	ON <b>OK</b> ;  (enter number) <b>OK</b> or ↓ <b>OFF OK</b>

## Functions during a call

<b>Initiate callback:</b>	You hear the busy tone: <b>MENU</b> ; ↓ <b>RINGBACK OK</b>
---------------------------	--

<b>Initiate enquiry call</b>	<b>MENU</b> ; ↓ <b>EXTN CALL OK</b>
<b>End enquiry call:</b>	 (enter number of user) <b>OK</b>
	<b>MENU</b> ; ↓ <b>END CALL OK</b>

<b>Toggling:</b>	↓ ↑ (switching between two users)
<b>End toggling:</b>	<b>MENU</b> ; ↓ <b>END CALL OK</b>

<b>Initiate conference call:</b>	You toggle with two callers:
	<b>MENU</b> ; ↓ <b>CONFERENCE OK</b>
<b>End conference call:</b>	

With one caller:	<b>MENU; ↓ END CONF OK</b>
	<b>↓</b> (switch to caller if necessary)
	<b>MENU; ↓ END CALL OK</b>
With both callers:	<b>Ⓢ</b>

Accept waiting call:	<b>MENU; ACCEPT OK</b>
Reject call waiting:	<b>MENU; ↓ REJECT OK</b>

### Function that is set after the next call

Before you carry out the procedure, press: **MENU; ↓ SEL SERVICES OK.**

Cancel callback:	<b>↓ RINGBACK OFF OK</b>
------------------	--------------------------

## Using the network mailbox

The "T-NetBox" network mailbox is the answering machine in the network operated by Deutsche Telekom ("T-Net").

You cannot use the network mailbox unless you have **applied** to Deutsche Telekom.

### Configuring the network mailbox for fast access

You have the option of calling the network mailbox by pressing **Ⓢ** (speed dial). To do this, you must first enter the phone number of the network mailbox.

**MENU → MAILBOX → SET KEY 1 →** Enter the phone number of the network mailbox  
**→ OK**

Press **Ⓢ** and hold (return to idle status).

### Calling the network mailbox



Press **Ⓢ** and hold. This connects you directly to the network mailbox.


### Viewing a message from the network mailbox

When a message arrives for you, you will receive a call from the network mailbox. If you have requested Calling Line Identification, the display shows the number 0800 330 2424. If you accept the call, the new messages are played back. If you do not accept the call, the number of the network- mailbox will be stored in the list of missed calls and the letter symbol flashes (page 16).

# Using the directory and other lists

## Directory and speed dial list






Both lists are used in the same way, except that the  key is pressed to open the directory and the  key to open the speed dial list.

You can save up to 20 phone numbers and names in the **directory** . This makes dialling easier.

The **speed dial list** is a special directory in which you can store up to 10 particularly important numbers, e.g. the prefixes of network providers ("call-by-call numbers").



 


## Saving phone numbers in the directory/speed dial list

 or  → MENU → NEW ENTRY

 	Enter and confirm phone number (directory max. 22 digits, speed dial list max. 12 digits).
 	Enter a name (up to 12 characters) (text entry page 25) and confirm.
	<b>Long press</b> (back to idle status).


<i>i</i>	If your phone is connected to a PABX that requires a prefix (e.g. "0") for an outside line, then you must save this prefix number as the first digit in all your directory entries.
----------	---





## Dialling with the directory

	Open the directory.
	Enter the first letter of the name. <b>Example:</b> with the name Emma (first letter "E") press the  key twice. The first name with "E" is displayed.
	If there is more than one entry starting with "E", select the name you want.
	Press the talk key. The number is dialled.

## Dialling with the speed dial list (call-by-call)

This function can be used to put a network provider's prefix in front of the telephone number ("linking").

 → MENU → EDIT ENTRY




either ...	Key in phone number:
	Enter the telephone number.
or ...	Select a number from the directory:
	Open the directory.
 OK	Select phone number and confirm.
... then	
	Press the talk key. The number is dialled.

## Saving speed dial numbers for fast access





You can save eight numbers (2-9) in the speed dial list for fast access.

First enter the digits for fast access, and then the names.



 → MENU → SHOW ENTRY


OK	Confirm.
	Move the cursor to the first position in the name field.
	Enter speed dialling number, e.g.  (press 4 times)
OK	Confirm.

## In order to use speed dialling:

	Hold <b>down</b> the speed dial number e.g.  : the saved speed dial number is displayed.
	Enter phone number to be "linked".
	Press the talk key.


## Viewing and editing an entry in the directory/speed dial list

 or  → Select entry → MENU → SHOW ENTRY → Change phone number → OK  
→ Change name → OK

Press  and hold (return to idle status).

## Delete single entry from directory/speed dial list

 or  → Select entry → MENU → DELETE ? → OK

Press  and hold (return to idle status).





# Registering and de-registering handsets

You can register up to six handsets with your base station.

A Gigaset CL 1 handset that has not yet been registered with a base station is registered **automatically** (see page 8). Handsets in the 1000 to 4000 Gigaset families, Gigaset handsets A 2, C 1, C 2 and S 1, and handsets from other manufacturers must be **registered manually**.

## Manual registration: Handset Gigaset CL 1 to Gigaset CL 100

You must activate manual registration of the handset at both the handset and the base station.

### 1. On the handset

**MENU → REGISTER HS → OK →** Enter the system PIN for the base station (default: 0000) **→ OK**

During the following registration process, all symbols will flash in the display.

### 2. On the base

Within **60 secs.** after the system PIN is entered:



Press the registration/paging key on the front of the base station for approx. 3 secs.

The registration process then starts.

When registration is successful, the handset is automatically assigned the lowest unassigned number.

## Registering other handsets

Handsets in the 1000 to 4000 Gigaset families, Gigaset handsets A 2, C 1, C 2 and S 1, and other GAP capable handsets can be registered.

The base station is prepared as described above, please refer to the operating instructions for the device to register the handsets.

## De-registering handsets

You can de-register a different handset from any registered Gigaset CL 1 handset.

**INT →** Select handset **→ MENU → DE-REG H/SET → OK →** Enter system PIN for the base station (default: 0000) **→ OK → DE-REGISTER? → OK**




The internal number disappears from the de-registered handset. Handsets that have not been de-registered retain their internal numbers.

# Operating more than one handset



## Internal calls, ending a call

Internal calls between handsets on the same base station are free of charge.



## Calling a specific handset

**INT** → Select handset → Press talk  key **or: INT**  (example)  
To **end the call**: Press the end call key .

## Calling all handsets (group call)


Press **INT** and . To **end the call**: Press the end call key .

## Forwarding a call to another handset

**INT** → Select handset → Press talk key   
The internal user answers: Press end call key .

## Internal enquiry calls

You can make an **internal** call while an **external** call is in progress.

**INT** → Select handset → Press talk key   
To **end the call**: **MENU** → **GO BACK** → **OK** (back to the outside caller)

## Accepting/rejecting a waiting call during an internal call

If you get an external call while conducting an **internal** call, you will hear the call waiting tone (short tone).

To **accept the call**: **MENU** → **ACCEPT** → **OK**  
(you speak to the outside caller).

To **reject the call**: **MENU** → **REJECT** → **OK**  
(you speak to the internal caller).

The rejected call waiting tone can still be heard on other handsets.

## Barging in on an external call

The **BARGE IN** function must be activated (default: deactivated).


An internal user conducts an external call. You can join this call uninvited and speak. The barge-in is signalled to all participants in the call by a signal tone.

## Activating/deactivating barge in

**MENU** → **BASE SET** → **ADD FEATURES** → **BARGE IN** → **OK** (✓ = On).  
Press  and hold (return to idle status).

## Barging in


**LINE IN USE** is shown on your handset display. Press the talk key . All parties hear a signal tone. Your handset display shows **BARGE IN**.

**End barge in**: Press end call key  (signal tone).

### Paging

---

Press the registration/paging key (page 17) on the front of the base station for no more than 2 secs. All handsets will then ring at the same time ("Paging").

**End paging:** Press the registration/paging key again or talk key  on the handset.







 
If you press the registration/paging key for more than 2 seconds, the base station will go into registration mode. The handsets will not ring.

# Handset settings

Your handset has default settings. You can change these settings individually.

## Changing display language


You can view the display texts in different languages.

	Press display key to open menu.
	Using the keys   call up the procedure.
	Press keys   for German (default status).

Other languages: see page 25.

<i>i</i>	If you set the wrong language in error, use the above mentioned procedure to set the correct one!
----------	---

## Activating/deactivating Auto Answer

For an incoming call simply take the handset off the base station; you do not need to press the talk key  (default setting: On).

**Deactivate Auto Answer:**


MENU →   

**Activate automatic call acceptance:**

MENU →   



## Changing the volume and melody


You can adjust the handset volume to 3 levels, the ringer volume to 6 levels (6 is increasing volume) and select from 10 ringer melodies.

**MENU → AUDIO SET → H/SET VOL or RINGER or MELODY → Select setting → OK**  
Press  and hold (return to idle status).

## Activating/deactivating the ringer

All handsets ring to indicate an incoming outside call.

**Cancelling the ringer permanently:** Press the star key  and hold, the display will show .

To **activate:** Press the star key  and hold.

To cancel the ringer for the **current call**, press the **MENU** display key and confirm **SILENT** with **OK**.

## Activating/deactivating the battery warning tone

Warning tone for low battery (default: activated).


**Deactivating the low battery warning tone:** MENU →   

**Activating the low battery warning tone:** MENU →   

## Restoring the handset factory settings

You can restore individual settings and changes to the original factory (default) settings (for an overview of the handset default settings see page 24). Entries in the directory, the caller list, the last number redial list, and the speed dial list as well as registration of the handset with the base are retained.

**MENU** →   → **RESET ?** → **OK**

Press  and hold (return to idle status).

## Base station settings

All base station settings are made via a registered Gigaset CL 1 handset.

### Changing the system PIN


To protect the system settings from unauthorised access you should change the system PIN (factory setting: 0000) to a PIN that only you know.

**MENU** → **BASE SET** → **SYSTEM PIN**

→ Enter the currently valid 4-digit system PIN and press → **OK**.

→ Enter the new 4-digit system PIN and press → **OK**.

→ Enter the new 4-digit system PIN again → **OK**.

Press  and hold (return to idle status).

### Restoring base station to factory (default) settings

A reset does not alter the system PIN; handsets remain registered (for an overview of base station default settings see page 24).

**MENU** → **BASE SET** → **BASE RESET** → Enter system PIN → **OK**

→ **RESET ?** → **OK**

# Appendix

## Questions and Answers

If you have questions on the use of your telephone, you can contact us round the clock at

[www.my-siemens.com/customercare](http://www.my-siemens.com/customercare). You will also find the most frequently asked questions and answers below.

What happens if ...	Possible cause	Possible solution
... the display is blank?	The handset is not switched on. The batteries are flat.	Press the end call key  for <b>approx. 5 secs.</b> Charge or replace the batteries (page 8).
... the handset fails to respond to a key press?	The keypad lock is activated.	Press the hash key  for <b>approx. 2 seconds</b> to deactivate the lock (page 8).
... all the icons are flashing in the display and there is no connection with the base station?	The handset is outside the range of the base. The handset is not registered. The base is not switched on. The cable has not been placed correctly in the bottom of the base station.	Move the handset nearer to the base.  Register the handset (page 17).  Check the power connector at the base (page 6). Check cable placement (page 6)
... (where multiple handsets are in use) the handset in the base station is not charging?	Charging in the base station only takes place when a phone call is not being made at the same time.	Use additional charger unit.
... the handset does not ring?	The ringer is switched off. The ringer volume has been set to "0". Call divert has been set to AUTOMATIC.	Activate the ringer (page 20). Increase ringer volume (page 20). Deactivate call divert (page 12).
... the caller can't hear me?	You've pressed the INT key. As a result the handset has been "muted".	Activate the microphone again with MENU, BACK, OK (page 11).
... the incoming call number is not displayed even though CLIP is set?	Sending the phone number (CLI) has not been enabled.	The <b>caller</b> should request the network operator to enable the transfer of his or her phone number.
... entries in the caller list don't show time or date?	Date and time have not been set.	Set date and time (page 10)
... I can't hear the ringer or dialling tone?	You have changed the phone cable on your Gigaset.	When purchasing a new cord ensure that it has the correct pin connections (page 26).
... I can hear an error tone (descending tone sequence) when keying in?	The function has not worked or the entry is incorrect.	Repeat the process; watch the display when doing so and if necessary check the operating manual.

## Care

Wipe the base station and handset with a **damp** cloth or with an antistatic wipe. **Never** use a dry cloth. This can cause static.

## Contact with liquid

If the handset should come into contact with liquid, **on no account switch the device on. Remove all batteries immediately.**

Allow the liquid to drain out of the device, and then pat all parts of the device dry.


Keep the handset with the batteries removed in a warm, dry place for at least 72 hours. In many cases, you will then be able to use it again.

## Operation with a PABX

The following settings are only necessary if your PABX requires them, **please refer to the operating instructions for your PABX.**

### Changing the dialling procedure

You can set the dialling mode to tone dialling (DTMF) or pulse dialling (IWW).

**MENU → BASE SET → ADD FEATURES → DIAL MODE →** Select dialling mode → **OK**  
Press  and hold (return to idle status).


### Temporary switch to tone dialling (DTMF):

If your PABX works with pulse dialling but you need tone dialling for a call (e.g. to listen to an external mail box), you must switch to pulse dialling **during** the call.


**MENU → TEMP TONE**





### Setting the flash time

**MENU → BASE SET → ADD FEATURES → TBR →** Select flash time (80 ms, 100 ms, 120 ms, 180 ms, 250 ms, 300 ms or 600 ms) → **OK**

Press  and hold (return to idle status).





### Changing pause after line seizure

Setting the length of the pause between pressing the talk key  and sending the phone number (1 = 1 sec.; 2 = 3 secs.; 3 = 7 secs.; 4 = 2.5 secs., factory setting: 3 secs.).

 
**MENU →**     → Display symbol: 916 SET, the number for the current pause length flashes → enter a new number → **OK**

### Changing pause after recall key (dialling pause)

Setting the length of the dialling pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms, see operating instructions for the PABX).

**MENU →**     → Display symbol: 912 SET, the number for the current pause length flashes → enter a new number → **OK**

*i*


To insert a dialling pause press the  key for 2 seconds after you have entered the prefix. A "P" appears in the display. Then enter the phone number.

## Other settings

### Factory settings of the handset

	Default settings	Status after reset	Description
Loudspeaker volume	1	1	page 20
Ringer volume	5	5	page 20
Ringer melody	1	1	page 20
Directory	empty	unaffected	page 14
Last number redial list	empty	unaffected	page 16
Caller list	empty	unaffected	page 16
Speed dial list	empty	unaffected	page 14
Auto answer	activated	activated	page 20
Battery warning tone	activated	activated	page 20
Display language	country specific	country specific	page 20, page 25

### Factory settings of base station

	Default settings	Status after reset	Description
System PIN	0000	unaffected	page 21
Barge in	deactivated	deactivated	page 18
Pause after R key	800 ms	800 ms	page 23
Pause after line seizure	3 s	3 s	page 23
Dialling mode	MFV	MFV	page 23
Fast access 	Network mailbox without phone number	Network mailbox without phone number	page 13



## Character map and text entry

Either press the relevant key several times, or hold down.

	1 x	2 x	3 x	4 x	5 x	6 x
	Space	1				
	A	B	C	2		
	D	E	F	3		
	G	H	I	4		
	J	K	L	5		
	M	N	O	6		
	P	Q	R	S	7	
	T	U	V	8		
	W	X	Y	Z	9	
	+	0	-		?	_
	*	/	(	)	,	

## Setting the display language.

To set the display language see page 20. Other languages:

		for English,			for French,			for Italian,
		for Spanish,			for Portuguese,			for Dutch,
		for Danish,			for Norwegian,			for Swedish,
		for Finnish,			for Czech,			for Polish,
		for Turkish,			for Russian,			for Croatian.

## Specifications

### Recommended batteries

Nickel-metal-hydride (NiMH) – Type AAA	
Sanyo Twicell 700 (700 mAh)	GP 700 mAh (700 mAh)
Sanyo Twicell 650 (650 mAh)	Varta Phone Power AAA (700 mAh)
Panasonic 700 mAh "for Dect" (700 mAh)	YDT AAA SUPER 700 (700 mAh)

### Handset operating times/charging times

Capacity (mAh)	Standby time (hours)	Calling time (hours)	Charging time (hours)
700	up to 200 (approx. 8 days)	approx. 16	approx. 5

## Appendix

### Power consumption

---

- ◆ In standby mode (without charging) approx. 1.9 watts.
- ◆ In standby mode while charging approx. 4.6 watts.
- ◆ During a call approx. 2.1 watts.

### General technical data

---

Feature	Value
DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880 – 1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Power supply	Base station 220/230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/DP (dial pulsing)
Flash time	250 ms
Dimensions/Base station	115 x 102 x 105 mm (W x L x H)
Dimensions/Handset	55 x 152 x 30 mm (W x L x H)
Weight	Base station 138 g; handset with batteries 117 g

## Service (Customer Care)

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

**[www.my-siemens.com/customercare](http://www.my-siemens.com/customercare)**

or by referring to the section entitled **Questions and answers** in this manual (page 22).

If the device needs to be repaired, please contact one of our Customer Care Centers:

Abu Dhabi . . . . .	0 26 42 38 00	Luxembourg . . . . .	43 84 33 99
Argentina . . . . .	0 80 08 88 98 78	Macedonia . . . . .	02 13 14 84
Australia . . . . .	18 00 62 24 14	Malaysia . . . . .	03 21 63 11 18
Austria . . . . .	05 17 07 50 04	Malta . . . . .	00 35 32 14 94 06 32
Bahrain . . . . .	40 42 34	Mauritius . . . . .	2 11 62 13
Bangladesh . . . . .	0 17 52 74 47	Mexico . . . . .	01 80 07 11 00 03
Belgium . . . . .	0 78 15 22 21	Morocco . . . . .	22 66 92 09
Bosnia Herzegovina . . . . .	0 33 27 66 49	Netherlands . . . . .	0900-3333102
Brazil . . . . .	0 80 07 07 12 48	New Zealand . . . . .	08 00 27 43 63
Brunei . . . . .	02 43 08 01	Norway . . . . .	22 70 84 00
Bulgaria . . . . .	02 73 94 88	Oman . . . . .	79 10 12
Cambodia . . . . .	12 80 05 00	Pakistan . . . . .	02 15 66 22 00
Canada . . . . .	1 88 87 77 02 11	Philippines . . . . .	0 27 57 11 18
China . . . . .	0 21 50 31 81 49	Poland . . . . .	08 01 30 00 30
Croatia . . . . .	0 16 10 53 81	Portugal . . . . .	8 00 85 32 04
Czech Republic . . . . .	02 33 03 27 27	Qatar . . . . .	04 32 20 10
Denmark . . . . .	35 25 86 00	Romania . . . . .	02 12 04 60 00
Dubai . . . . .	0 43 96 64 33	Russia . . . . .	(800) 200 10 10
Egypt . . . . .	0 23 33 41 11	Saudi Arabia . . . . .	0 22 26 00 43
Estonia . . . . .	06 30 47 97	Serbia . . . . .	01 13 22 84 85
Finland . . . . .	09 22 94 37 00	Singapore . . . . .	62 27 11 18
France . . . . .	01 56 38 42 00	Slovak Republic . . . . .	02 59 68 22 66
Germany . . . . .	01805 333 222	Slovenia . . . . .	0 14 74 63 36
Greece . . . . .	0 80 11 11 11 16	South Africa . . . . .	08 60 10 11 57
Hong Kong . . . . .	28 61 11 18	Spain . . . . .	9 02 11 50 61
Hungary . . . . .	06 14 71 24 44	Sweden . . . . .	0 87 50 99 11
Iceland . . . . .	5 11 30 00	Switzerland . . . . .	08 48 21 20 00
India . . . . .	01 13 73 85 89 - 98	Taiwan . . . . .	02 25 18 65 04
Indonesia . . . . .	0 21 46 82 60 81	Thailand . . . . .	0 22 68 11 18
Ireland . . . . .	18 50 77 72 77	Tunisia . . . . .	0 71 86 19 02
Italy . . . . .	02 66 76 44 00	Turkey . . . . .	0 21 65 79 71 00
Ivory Coast . . . . .	80 00 03 33	Ukraine . . . . .	8 80 05 01 00 00
Jordan . . . . .	0 64 39 86 42	United Arab Emirates . . . . .	0 43 31 95 78
Kenya . . . . .	2 72 37 17	United Kingdom . . . . .	0 87 05 33 44 11
Kuwait . . . . .	2 45 41 78	USA . . . . .	1 88 87 77 02 11
Latvia . . . . .	7 50 11 14	Vietnam . . . . .	45 63 22 44
Lebanon . . . . .	01 44 30 43		
Libya . . . . .	02 13 50 28 82		
Lithuania . . . . .	8 22 74 20 10		

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

## Appendix

Your Gigaset is intended for operation in your country, as shown on the underside of the base station. Country-specific features have been taken into account.

The CE mark certifies conformity of the device with the essential requirements of the R&TTE directive.

### **Excerpt from the original declaration**

"We, Siemens AG, declare that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH in compliance with ANNEX V of the R&TTE Directive 99/05/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/5/EC is ensured"

Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. In case of need, a copy of the original DoC can be made available via the company hotline.

**CE 0682**

# Index

- A
  - Access protection . . . . . 21
  - Answering machine see
    - Network mailbox . . . . . 13
  - Auto answer . . . . . 20
- B
  - Base
    - preparing to use . . . . . 6
    - restoring factory settings . . . . . 21
  - Batteries
    - charging . . . . . 8
    - inserting . . . . . 7
    - recommended . . . . . 25
  - Battery warning tone . . . . . 20
- C
  - Call
    - ending . . . . . 10
    - transfer . . . . . 18
  - Call diversion . . . . . 12
  - Callback . . . . . 12, 13
  - Call-by-Call . . . . . 15
  - Caller list . . . . . 2, 16
  - Calling . . . . . 10
  - Care of the telephone . . . . . 23
  - Changing the display language . . . . . 20
  - Character map . . . . . 25
  - Charging status display . . . . . 8
  - Conference call . . . . . 12
  - Confirmation tone . . . . . 8
  - Connect . . . . . 18
  - Customer Care (Service) . . . . . 27
  - Customer service . . . . . 27
- D
  - Date and time . . . . . 10
  - Date setting . . . . . 10
  - Default settings . . . . . 21, 24
  - Delete
    - directory . . . . . 16
    - last number redial list . . . . . 16
    - speed dial list . . . . . 16
  - Dialling
    - with directory . . . . . 14
    - with the speed dial list . . . . . 15
  - Dialling mode . . . . . 23
  - Dialling pause . . . . . 23
  - Directory . . . . . 14
    - delete single entry/all entries . . . . . 16
    - saving phone number/entry . . . . . 14
    - view and change entry . . . . . 15
  - Display
    - changing display language . . . . . 20
    - in idle status . . . . . 9
- E
  - Enquiry call (external) . . . . . 12
  - Enquiry call (internal) . . . . . 18
  - Entry (directory)
    - clear . . . . . 15
    - display and edit . . . . . 15
    - displaying and editing . . . . . 15
- F
  - Fast access
    - (network mail box) . . . . . 13
    - speed dial number . . . . . 15
  - Features . . . . . 11
  - Flash time . . . . . 23
- G
  - Group call . . . . . 18
- H
  - Handset
    - activate/deactivate . . . . . 8
    - de-registering . . . . . 17
    - locating . . . . . 19
    - muting . . . . . 11
    - operating and charging times . . . . . 25
    - preparing to use . . . . . 7
    - reset . . . . . 21
  - Handset access protection . . . . . 21
  - Handset charging times . . . . . 25
  - Hearing aids . . . . . 5
- I
  - Idle status (display) . . . . . 9
  - Internal

# Index

link up . . . . .	18
telephone number . . . . .	2
Internal consultation calls . . . . .	18
Internal dialling . . . . .	18
IWV (impulse dialling procedure) . . . . .	23

## K

Keys . . . . .	10
display keys . . . . .	9
lock . . . . .	8
of the handset . . . . .	9

## L

Last number redial . . . . .	16
Logging off handsets . . . . .	17

## M

Mains adapter . . . . .	5, 6
Making calls . . . . .	18
answering a call . . . . .	11
external . . . . .	10
Menu . . . . .	9
symbol . . . . .	2
Microphone . . . . .	2

## N

Network mailbox . . . . .	13
Network mailbox features . . . . .	11
Number see Telephone number . . . . .	14

## P

PABX . . . . .	23
setting dialling procedure . . . . .	23
Paging . . . . .	19
Pause	
after R key . . . . .	23
changing after obtaining line . . . . .	23
Phone cord . . . . .	6
Phone jack . . . . .	6
Power cord . . . . .	6

## Q

Questions and answers . . . . .	22
---------------------------------	----

## R

Range . . . . .	6
Registration of handsets . . . . .	17
Ringer	

activate/deactivate . . . . .	20
-------------------------------	----

## S

 
Safety precautions . . . . .	5
Service . . . . .	27
Set time by . . . . .	10
Specifications . . . . .	25
Speed dial list . . . . .	14
System PIN . . . . .	21

## T

Telephone number	
copying from the caller list . . . . .	16
displaying caller's (CLIP) . . . . .	11
enter number of network mailbox . . . . .	13
saving . . . . .	14
withhold display (CLIR) . . . . .	12
Text entry . . . . .	25
Toggleing . . . . .	12

## W

Wait melody . . . . .	11
-----------------------	----



A31008- A221- H100- 1- 7619

Issued by  
Information and Communication Mobile  
Schlavenhorst 88  
D-46395 Bocholt

© Siemens AG 2003  
All rights reserved. Subject to availability.  
Right of modification reserved.  
Printed in Germany .

Siemens Aktiengesellschaft  
<http://www.my-siemens.com>

Order No.: A31008-A221-H100-1-7619