

SIEMENS

Hicom
cordless EM

Gigaset active

Operating
instructions

Warning!

Read the safety notes
on pages 2
and 5 before putting
the equipment
into service.

Safety notes

Notes on mobile unit use

- Research has shown that **electronic devices**, such as medical equipment, can be **affected** by the mobile unit. Local **safety regulations must therefore be observed!**
- The mobile unit is not suitable for people with **hearing aids** since the radio signals interfere with hearing aids, producing a very unpleasant humming sound if the volume is turned up too high.
Recommendation: Gigaset 2000H headset, see page 63.

 
Notes on battery use

- Only use **approved batteries**, see pages 5 and 17.
- Never use **other batteries or normal (non-rechargeable) batteries**. These batteries can cause short-circuit and may be subject to damage (dangerous). Read the labels in the mobile unit and charging unit battery compartments.

Meaning of symbols:



Warning! please read safety note in the instructions.



Use **rechargeable batteries** only and observe **polarity**.

- Avoid contact with **water** and **fire**.
- Do not use **non-Siemens charging devices**. This could damage the batteries.
- Please also read the **notes on page 5 and 8 through 13**.
- The mobile phone, batteries and charging unit should only be disposed of in accordance with the environmental specifications.



Operating elements, unit parts

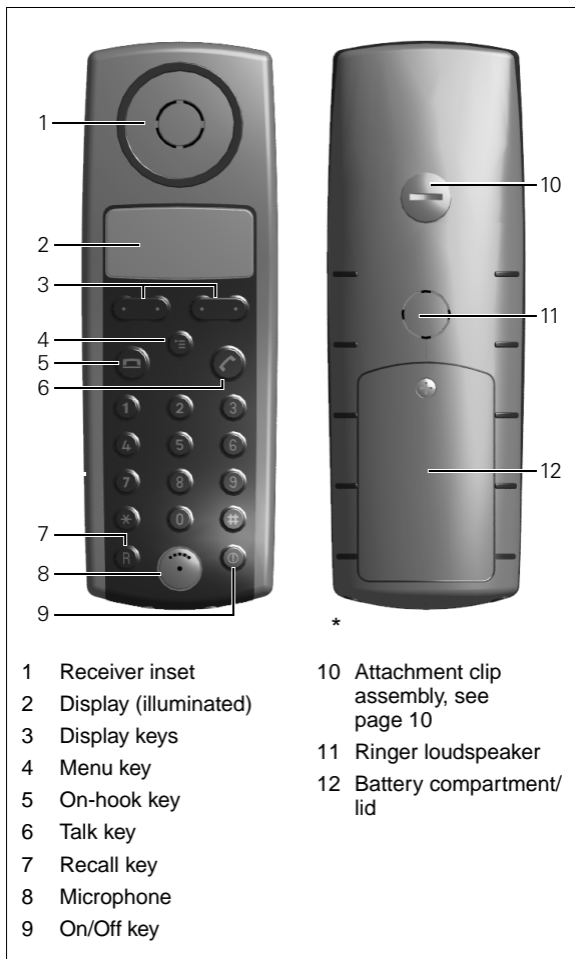


Figure 1: Operating elements, unit parts

* Shows variant without Ex-protection indication

Features of the DECT* mobile unit

- **Illuminated graphical display** with battery charge display
- **Status-dependent functions**
- **Number redial** for the last five numbers dialled
- **Telephone book** in the mobile unit for 100 entries
- **Enhanced user guidance** with displays in German, English, French, Italian, Spanish, Portuguese or Dutch
For information on **setting the language**, see page 57
- **Block dial** with correction option
- **Automatic call acceptance**** with removal from charging unit
- **Protection** against inadvertent key activation
- Enhanced convenience through **short cuts**
- **Long-life NiCd batteries before recharging:**
 - batteries last for up to **7 hours** when phone is in use
 - batteries last for up to **70 hours** in standby mode
- **NiMH batteries** can be used for significantly higher operating times***
- Each mobile unit can log on to and be used by up to **6 DECT systems**

Features of the Hicom cordless EM

- **Internal and external calls** in the entire Hicom cordless EM radio network
- Roaming (the user can roam throughout the entire radio network and still receive all internal and external calls at **one call number**)
- **Automatic call transfer** from base station to base station when moving in the radio network (handover)
- **Automatic callback** for internal calls
- **Call transfer** to internal users
- **Consultation** during a call
- **Use of all important Hicom functions** that do not require a system-specific telephone

* DECT = Digital Enhanced Cordless Telecommunications

** Activated by default

*** Not in the Ex version

Additional safety notes for the standard version

Notes on mobile unit use

- Do not charge and use the mobile unit in environments where there is danger of explosion.

Notes on battery use

- Only use approved nickel-cadmium batteries (NiCd batteries) or nickel-metal-hydride batteries (NiMH), see page 17.



Additional safety notes for the Ex version

This device comes with "Intrinsic safety" protection in accordance with **EN 50014** and **EN 50020** for operation in Ex protection zone 1.

As soon as it is suspected that a device is in danger (e.g. in the case of external damage, incorrect storage or transport damage), the device must be taken out of service and action must be taken to prevent inadvertent recommissioning.

Authorization for operating in environments where there is danger of explosion is revoked in the event of mobile unit manipulation.

Notes on mobile unit use

- Standard safety guidelines must be observed when using Ex-protected cordless mobile units in order to prevent malfunctions at the device.
- Do not charge or open the mobile unit in environments where there is danger of explosion.



- Install the charging station outside the Ex zone. Only the mobile unit may be used in Ex zones.
- Do not use the 2000H headset in Ex zones.

Notes on battery use

- Only use factory-supplied Ex batteries, see page 17.
- Never use other batteries. These batteries annul the Ex protection and are a safety risk.

Table of contents

General	2
Operating elements, unit parts	3
Features	4
Hicom cordless EM	8
Environmental conditions	8
General operating instructions	8
Radio range	9
Leaving the radio network	10
Fitting the attachment clip	10
Cleaning the mobile unit	10
Lending/disposing	10
Explanation of the display	11
Display keys	12
User guidance, selecting functions	13
Putting the mobile unit into service	15
Inserting batteries in the mobile unit	15
Charging and using the batteries	16
Logging mobile units onto a telephone system	19
Activating/deactivating mobile units	21
Activating/deactivating the keypad lock	21
Telephone functions	22
Internal dialling	22
External dialling	23
Answering calls	23
Block dialling for internal/external dialling	24
Number redial – last five numbers	25
Switching functions	26
Automatic callback	27
Forwarding calls	27
Consultation during a call	28
Shuttle – switching between two users	28
Conference	29
Overview - code functions	30

General

Telephone directory	34
Entering letters/characters and digits	34
Overview – directory submenu	36
Storing numbers	36
Dialling a number from the telephone directory	38
Editing/deleting/displaying an entry	39
Deleting the telephone directory	40
Available memory	40
Main menu – functions	41
Overview – main menu	41
Activating/deactivating the handset lock	41
Short cuts	43
Setting the base	45
Settings	47
Overview – settings	47
Settings – handset, ringer...	48
Base settings	49
Overview – handset settings	51
Overview – beeps	52
Beeps – keys, battery, range...	53
Select services	54
Changing the mobile unit PIN	56
Setting the language	57
Resetting the mobile unit to the default state	58
Appendix	60
Troubleshooting	60
Approval	61
Technical data	61
Acoustic signals	62
Accessories	63
Index	64
Permitted batteries: Gigaset active Ex	67
Additional standards: Gigaset active Ex	67

General

Hicom cordless EM

The Hicom[®] cordless EM DECT* telephone system comprises

- the **radio exchange** for the Hicom 150 E system,
- up to 16 **base stations** (transmitter/receiver),
- up to **64 2000C mobile units** (cordless telephone),
- and the **Gigaset 2000L charging shell**.



Environmental conditions

- Please read the **safety notes on pages 2 and 5**.
- Make sure that the mobile unit is **at least one meter** away from medical equipment, fire alarm equipment and other radio equipment, e.g. radio telephones or radio pagers, as otherwise its performance may be impaired, e.g. by interference.
- The mobile unit and charging shell should not be placed near electronic devices, such as other telephones, HiFi, office or microwave devices, as this may adversely affect the operation of your telephone and/or the electronic equipment.
- Do not expose the mobile unit or charging shell to direct sunlight or other sources of heat.
- Use the Gigaset active at temperatures between -10°C and +40°C.
- Do not expose the mobile unit or charging shell to damp environments.
- Avoid using the mobile unit and charging shell in rooms where there is a lot of dust.

General operating instructions

- The devices offer a **high level of privacy**. No protection can be guaranteed against illegal bugging using other radio receivers.
- When operating the mobile unit, a basic distinction is made between
 - **telephone/switching functions**, e.g. when a call is in progress, and
 - **local functions**, display when mobile unit is on.

General

- Local functions can also be performed in the charging shell.
- Before saving, **local functions** can be **cancelled** with the menu key  or the **on-hook key** .
- Your telephone directory entries, all settings and your PIN are **not lost**, even if you **remove the batteries**.
- **Call charges are displayed** on the mobile unit in the same way as call charges are displayed on optiset E telephones.
- A Gigaset base station is operated in accordance with the Gigaset operating instructions.

Radio range

- Depending on the environment, the range **in the open** is up to 300 m.
- **In buildings**, the range extends up to 50 m (depending on the room and building layout and construction).
- If you leave the **radio range of one of the base stations in the system** during a call, the range warning tone* is signalled and the range warning symbol **I>>>>** is displayed. The quality of the voice connection drops, especially if you move. For a better voice connection, move back into the base station range!
- The radio connection is lost if you **exceed the range**. This is identified by the flashing of Base 1, for example.
- Please consult your system administrator in the case of **on-going range problems!**

* Deactivated by default; To activate/deactivate see page 53

General

Leaving the radio network

- **Integrated power saving function:** If you leave the base station radio range when the **mobile unit is switched on**, the interval between synchronisation attempts gradually increases – this increases the battery life in standby mode.
To ensure that the mobile unit can be used as soon as you return to the radio network, you should immediately register it again:
Press the On/Off key **until the display is blank**, press the On/Off key again **until the mobile unit is on**.
- If you intend to leave the radio network and take your mobile unit with you, we recommend that you turn the mobile unit off in order to save the batteries.

Fitting the attachment clip

An attachment clip is supplied with your mobile unit and can be attached to facilitate portability.

To use this clip, remove the plug on the rear of the mobile unit by inserting a coin and turning it clockwise through 90°. Insert the pivot supplied into the opening left by the plug and screw it clockwise through 90° until it locks into place.

The mobile unit can now be attached via this pivot to the belt clip.

Cleaning the mobile unit

To clean the mobile unit and the charging shell, simply wipe them with a damp or antistatic cloth. Never use a dry cloth (since this can generate electrostatic charges and discharges) and **never use abrasive cleaning agents**.

Lending/disposing

- If you lend your mobile unit to someone else, please make sure that you include the operating instructions with it.
- Please dispose of defective batteries, mobile units and charging shells in accordance with legal requirements.


General

Explanation of the display


The mobile unit features a 4-line display with 16 characters per line. Depending on the situation, the display shows:

- **digits**, e.g. dialled numbers,
- **text**, e.g. the current base (system),
- **symbols**, e.g. ringing or battery symbol,
- and in the last line the **current functions** of the two display keys.

Display when the mobile unit is on (example)

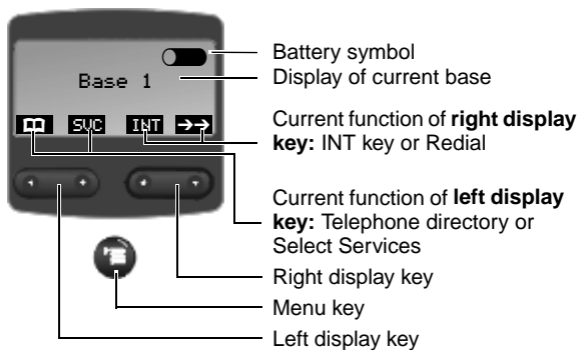

Display when call is in progress (example)

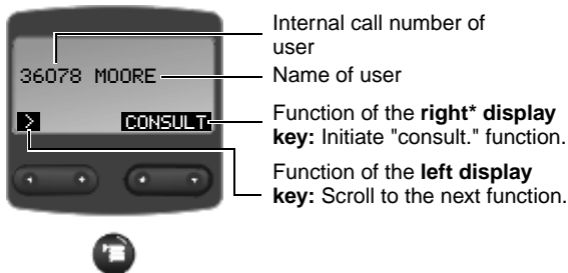






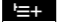






* System-dependent arrangement!

General

Display keys

The two display keys are located directly under the display. The current functions of the display keys are **status-dependent** and are displayed in the lower display line. Each display key can be used to display **one** or **two functions**. In the case of **two functions**, you must press **either** on the **left** or the **right side** of the corresponding display key.

Meaning of the display keys

	Call up the directory
	Select Services (not relevant for cordless EM, see page 54)
	Inactive with cordless EM
	Redial
	Cancel process/ Back to next menu level up
	Call up submenu menu/short cut list
	Select menu item or entry
	
	Move to the left or right
	
	Delete character
	Confirm function/entry


User guidance, selecting functions

The **user-friendly display** system guides the user quickly and effectively through the entire range of features available with this telephone system.

For information on **setting the language**, see page 57.

Different functions can be selected **depending on the status** of the mobile unit, e.g. "on" or if a call is in progress. Only functions applicable to the relevant status are displayed.

Function selection via menus (local functions)

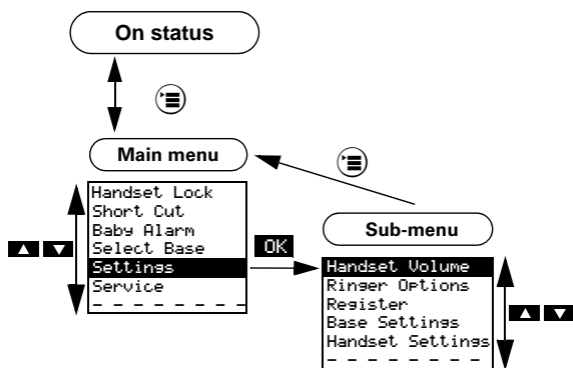

Press menu key to:

- Call the main menu (local functions)
- Move back in the menu hierarchy until you reach the "on" status
- Cancel functions



Display keys for paging forward/back within the individual menu.

These operating instructions only describe the **"fastest scrolling mode"** appropriate for the individual operating sequences.



Display key for confirming the marked function.



Display key for calling up additional menus.



Display key for cancelling functions/ returning to the next menu level up.



On-hook key for ending calls or for cancelling functions and **returning to the "on" status** immediately.

The **currently selected (highlighted)** function is displayed on a **dark background**.

A **dotted line** indicates the **end of the menu**. If you scroll further, the first function in the menu is selected again. When the **"line"** is **selected**, press the **GO BACK** display key to jump back to the higher-level menu or to the "on" status display.

Function selection via codes (switching functions)

Most switching functions, for example, the callback or shuttle functions, can be executed using codes.

You will find an overview of all executable functions on page 30.

Putting the mobile unit into service

Inserting batteries in the mobile unit

Note:

- Read the **safety notes on page 2 and 5 first!**
- Only use **supplied or permitted batteries**, do not use normal batteries (non-rechargeable) – see page 17.
- Only open the battery compartment in dust-free environments.

- Hold the mobile unit with the **dialling keypad facing downwards** (see **Figure 2**). A battery compartment for **2 batteries** is located in the lower part of the mobile unit.
- To open the battery compartment, undo the screw on the lid and remove the lid (see **Figure 2**).
- Insert the two **batteries supplied** in the battery compartment **as shown in Figure 2**. Ensure that the batteries are inserted correctly (polarity illustrated on the **label in the battery compartment**). The battery compartment cannot be closed if **batteries are inserted incorrectly**.
- Screw the **lid** securely back into place. Ensure that the lower end of the lid is locked into place.

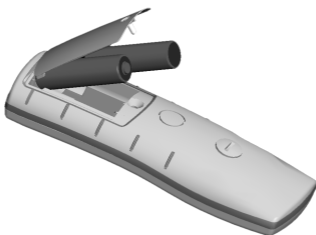


Fig. 2: Rear of mobile unit, battery compartment open

 



Fig. 3: Ex version battery





Putting the mobile unit into service

Charging and using the batteries


The batteries supplied (NiCd) are **not charged**.

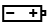To charge the batteries, insert the mobile unit in the Gigaset 2000L charging shell. The mobile unit can be inserted with the display facing upwards or downwards.

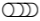The LED  on the charging shell lights up while the batteries are charging. In addition, the battery symbol in the mobile unit display indicates the charging status:

-  Batteries empty.
-  Batteries charged 33%.
-  Batteries charged 66%.
-  Batteries charged 100%.

Note:

- New batteries should be initially **charged** for a minimum period of **16 hours** without interruption – **irrespective of the battery symbol displayed**.
- In order to maintain **max. battery storage capacity** for **as long as possible**, the mobile unit should only ever be inserted in the charging shell when the **batteries are almost empty** .
- The batteries warm up during charging.
- Old, defective batteries must be disposed of in accordance with legal requirements, not in the normal waste disposal system.

Battery charging times:

Capacity	Charging time in mobile unit (hours)	Charging time in reserve battery compartment (hours)
600 mAh	4 to 5	24
1100 mAh	8 to 9	40

Putting the mobile unit into service

Mobile unit battery life:

These times are only achieved **after several charging and discharging cycles.**

Capacity	Standby mode (hours)	When phone in use (hours)
700 mAh	up to 100	up to 10
1100 mAh	up to 160	up to 15
1500 mAh	up to 220	up to 20


Permitted batteries for the standard version (industrial mobile unit):

Nickel-Cadmium	Nickel-Metal-Hydride
Saft RC6	Sanyo HR-3 U (1300 mAh)
Panasonic P-60 AA/1P	GP GP60 AA HC
Philips R6 NC-P	GP GP120 AA HC
UCAR RC6	Varta VH 1101 AA
Energizer Eveready XC 6	Panasonic HHR-110AA
DAIMON ACCU 1000	Emmerich CE R 6
Sanyo N-3U	
Varta battery Plus Ni-Cd 1.2V No. 5006	

Permitted batteries for the Ex version:

Permitted batteries for Gigaset active Ex are listed on page page 67.

Note on using NiMH batteries:

After you have inserted the NiMH batteries, we recommend that the mobile unit be fully charged and then discharged until the battery warning beep is heard, i.e. without replacing the batteries in the charging shell. This ensures that the **charge status display**  of the mobile unit is adapted to the increased operating life of the NiMH batteries.

Thereafter, you can place your mobile unit in the charging shell each time it is used. Charging is **electronically controlled**, so that the batteries are charged optimally.

Putting the mobile unit into service

Logging mobile units onto a telephone system

For information on setting the language, see page 57.

Your system administrator supplies you with mobile units that have already been logged on when you are installing the system for the first time. You must log on any new mobile units as described below if you extend the system.

- Please call Siemens Service if you purchased the mobile unit **directly** from Siemens. Please call your **retailer** if you did not purchase your mobile unit directly from Siemens. Please ask Siemens Service or your retailer to provide you with the call number and the system code (eight-digit) of every mobile unit and to open the "logon window" (e.g. 10 minutes).
- **Logging a mobile unit onto Hicom 150 E:**



Switch the mobile unit on with the On/Off key - *Register?* appears in the display with the first logon procedure. Base 1*, for example, flashes with the second logon procedure.



 
Press the menu key – the main menu is displayed.



Scroll with the left display key until *Settings* is selected (in the top display line) and confirm the selection with the right display key.

 


Scroll with the left display key until *Register* is selected and confirm.



Confirm Base 1*, for example, to log on as system 1.

If necessary, select another base/system with the display key.



Enter base code: is displayed.

* See note "Base/system" on page 20

Putting the mobile unit into service

e.g.
123...




OK

Base 1

◀◀◀◀◀▶▶▶▶▶

Base 1

Enter the mobile unit system code (eight-digit) and confirm the entry with the display key – * symbols are displayed instead of digits.

if necessary, press the display keys   and  to correct an entry.

Base 1*, for example, is displayed.

The mobile unit is successfully logged on (registered) if the ring symbol flashes (this can take up to 30 seconds).

The mobile unit ready to receive or transmit calls if this display is retained.

Note:

- **Base/system:** cordless EM mobile units are not logged onto bases (base stations), but rather onto the Hicom 150 E telephone system. In this case, Base always means **DECT** system**.
- **No ring symbol** is displayed if the logon procedure was unsuccessful.

* See note "Base/system"

** DECT = Digital Enhanced Cordless Telecommunications

Putting the mobile unit into service

Activating/deactivating mobile units

- **Off status:** display clear – **calls are not received!**
- **On status:** e.g. Base 1 is displayed – prerequisite for all telephone functions, **normal operating status!**

Activating the mobile unit:



Press the On/Off key – *you hear the confirmation beep.*

Display when telephone is in the "on" status, see page 11.

Deactivating the mobile unit:



Press the On/Off key until the display is clear – *you hear the confirmation beep.*

Activating/deactivating the keypad lock

This allows you to protect your mobile unit **against inadvertent key activation**, e.g. when carrying it in your bag. **Calls are signalled** even if the keypad is locked and can be answered in the same way as when the telephone is on.

Prerequisite: Mobile unit is activated!

Activating the keypad lock:



Press the On/Off key for **less than 1 second.**

Keypad locked

Display when keypad is locked.

Deactivating the keypad lock:

 


Press the On-Off key **briefly.**
Display when telephone is "on", see page 11.

Note:


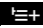


The mobile unit switches off completely if you press the On/Off key for too long.

Telephone functions



This **display when the mobile is on** is a prerequisite and initial status for all telephone functions (see also "Radio range" page 9). **Base 2, 3, 4, 5, 6** or an other name may be displayed (see page 49) depending on the current base (system).

Note:

- You can use the menu key  or the display key  to call up the short cut list and start your short cuts when a connection is set up (while a call is in progress).
- All functions **concluded with the on-hook key**  can also be concluded by **inserting the mobile unit into the charging shell**.
- All functions can be **cancelled** with the **on-hook key** .

Internal dialling



Press the talk key - *the user's own mobile phone number appears in the display.*



Enter the internal number when the you hear the dial tone – *the entered digits are displayed.*

See also **Note!**

Call

Conduct the call – *the name or the number of the user is displayed.*

Ending a call



Press the on-hook key **or** place the mobile unit into the charging shelf.

Note:

The dialled number is automatically stored for number redial, see page 25.

Telephone functions

External dialling



Press the talk key - *the user's own mobile unit number appears in the display.*

External code

e.g. 0



Enter the external code, e.g. "0", when you hear the dial tone.

Dial the external number - *the entered digits are displayed.*

See also **Note!**

Call

Conduct the call.

Ending a call



Press the on-hook key **or** place the mobile unit in the charging shell.

Note:

The dialled number is automatically stored for number redial.

Answering calls

The mobile unit's **ringing tone is audible**. The caller's name is displayed if the caller is an internal user. The number or the name is displayed if the caller is an external user (as for optiset telephones)!

- The mobile unit **is in the charging shell:**



Simply remove the mobile unit from the charging shell*.

or

- The mobile unit **is not in the charging shell:**



Press the talk key.

Ending a call



Press the on-hook key **or** place the mobile unit in the charging shell.

* Only if Auto Talk is activated – see also page 51!




Telephone functions

Block dialling for internal/external dialling

Block dialling means that you enter the number first (up to 32 digits), if necessary correct it and then press the talk key to dial.



Enter the internal number **or** "external code", e.g. "0" and the external number.

If necessary, use the   and  display keys to correct the entries.



Press the talk key (within 30 seconds) – *the entered number is dialled.*

Ending a call



Press the on-hook key **or** place the mobile unit in the charging shell.

Note:

Refer also to the notes under "Internal/External dialling", see page 22 and 23.

Telephone functions

Number redial – last five numbers

You have dialled a **number**, but the other party is busy or does not answer: press the **on-hook key**. The last **five numbers** dialled (up to 32 digits) are always **stored automatically**.

Dialling a stored number



Press the display key - *the first three stored numbers are displayed.*



If necessary, press the display keys to scroll to the required number.



Press the talk key – *the selected number is dialled.*

Copying a number to the telephone directory



Press the display key.



Scroll to the desired number.



Press the display key.



Scroll until **COPY Number** is displayed and confirm.

COPY Number



Names

Enter names (max. 16 characters).
(see page 34).



Press the display key.

Save Entry

Confirm **Save Entry**.



Entry
stored

Entry stored
is displayed for approx. two seconds.

Switching functions

Editing a number



Press the display key.
Scroll to the desired number.



Edit Number

OK

Press the display key.
Scroll to Edit Number
and confirm.



Edit number.



Save Entry

OK

Press the display key.
Confirm Save Entry –
Entry modified is displayed
for approx. two seconds.

Deleting a number



Press the display key.
Scroll to the desired number.



Delete Number

OK

Press the display key.
Scroll to Delete Number and
confirm – Entry has been deleted
is displayed for approx. two seconds.

Displaying a number

All the digits of a number (to a max. of 32) are displayed.



Press the display key.
Scroll to the desired number.



Display Number

OK

Press the display key.
Scroll to Display Number
and confirm.

Press the display key **GO BACK** to
return to the redial function.

Switching functions

Prerequisite: The required function is set up!

Automatic callback

If a dialled **internal user** is busy or if your call is not answered, you can program an automatic callback request.

Storing a callback request:

Ⓡ Press the recall key.

*58 Enter the code.

Deleting stored callback requests:


#58 Enter the code.


Note:

- The **system calls you back** when the user
 - becomes free or
 - makes another call
- **Up to 5 callback requests can be stored.**
No further callback requests can be stored if five callback requests have already been stored for the called party.

Forwarding calls

You answered an external call and would like to forward it to another user:

Ⓡ  Press the recall key and **immediately** dial the number of the user.

 Wait until the user answers the call or press the on-hook key immediately

Return forwarded call:

Ⓡ Press the recall key.

Note:

If the forwarded call was not answered, the system performs an automatic "recall".

Switching functions

Consultation during a call

You are conducting an internal or external call and would like to obtain some information from an internal or external user:



Press the recall key, immediately dial the number of the subscriber and conduct the consultation call.

Ending a consultation:



Press the recall key.

Shuttle – switching between two users

You can shuttle between the two users during a consultation call:

*2

Enter the code.

You can shuttle between the users as often as you like by entering the code *2 again.

Note:

- The shuttle function cannot be performed with a **voice mail system info box**.
- Pressing the on-hook key cancels the shuttle function. The system performs an automatic recall if a user is still waiting on the line.

Switching functions

Conference

This function allows you to set up a telephone conference **with up to five users**.

You are conducting a call and wish to set up a telephone conference with a further user:



Press the recall key and **immediately** dial the number of the subscriber.



Press the recall key.

*3

Enter the code for "conference" – *the current number of users is displayed, e.g. "3"; all three users are now connected.*

You can now

- **add other users:** Repeat the procedure.
- **end the conference:** Press #3.

Switching functions

Overview - code functions

Like other Hicom telephones, the mobile unit allows you to perform the following functions by entering codes. The codes in your system may deviate from the standard codes specified here. Consult your system administrator if you have any queries about the codes in your system.

The **confirmation tone** indicates a **successfully completed** function. The error tone is audible in the event of a malfunction, see also page 62.

You can **store frequently used functions** as short cuts (see page 43) **or** as Select Service functions (see page 54). This depends on the status of the mobile unit when the function is started. The functions in this overview are, therefore, marked with **(Short cut)** or **S-S** to indicate how they are stored.

Functions*	Standard code	System-specific code**
Accept call waiting (Short cut) Answer call from a (second) waiting party (second call). Anklopfen verhindern erlauben	(R)*55 #490 *490	
Do not disturb on off S-S Prevent incoming calls.	*97 #97	
Call forwarding on all calls external calls only internal calls only S-S Call forwarding off Forward calls to an other telephone.	*11+ph. no. *12+ph.no. *13+ph.no. #1	
Call distribution (ACD) S-S Register (beginning of work period) De-register (end of work period) Temporary de-registration Acknowledge after de-registration Request wrap-up time Acknowledge wrap-up time ACD night service on off Distribute call in a team.	*401 #401 *402 #402 *403 #403 *404 #404	
Associated service S-S Activate or deactivate functions for other telephones.	*83+ partner+ services procedure...	

Switching functions

Functions*	Standard code	System-specific code**
Associated dialling S-S Set up connections for other telephones.	*67+ Partner+ ph. no.	
Override (Short cut) Override and speak in a busy connection.	Ⓜ*62	
Baby alarm, Room monitoring (system) S-S For the acoustic monitoring of a specific room.	*88	
Reset services for own base S-S Reset activated functions.	#0	
Voice calling S-S Communication with telephone partner via partner's loudspeaker in the telephone.	*80+ph.no.	
Call trace S-S Identify an external caller via the network provider. The feature must be requested separately from Telecom.	*84	
Message text send T-D delete (sent/received message texts) delete (sent message texts) delete (received message texts) call sender Send predefined texts (only to optiset E with display).	*68+ph. no. +text no. #680 #681 #682 #683	
Conference (up to 6 users) (Short cut) start end Add further telephone partner to conversation.	Ⓜ*3 #3	
Speed dialling S-S Dial centrally stored speed dialling destinations	*7+speed dial. no.	
Release line S-S Release busy external lines (active calls on this line are disconnected).	*43	
Shuttle (Short cut) Switch between two connections.	*2	

Switching functions

Functions*		Standard code	System-specific code**
Switch actuation, on off	S-S	*90 #90	
To switch on/off certain devices (e.g. relay).			
Recall to network (flash)	S-S	*51	
To allows features to be used in analogue lines, a signal must be transmitted through the line before the number is dialled.			
Phone lock (system) unlock	S-S	*66 #66	
Define lock code		*93	
Protect the telephone against unauthorized use.			
Telephone data service	S-S	*42	
Control with the telephone computer.			
Date enter delete	S-S	*46 #46	
Enter a unique date for the next 24 hours via the telephone.			
Door opener via DTMF enable lock	S-S	*89+ph, no.+ code #89+ph. no.+ code	
Enable the door opener feature to be activated by means of a code.			
Door opener via adapter box(Short cut)		*61+ph. no.	
Activate the door opener feature from the telephone.			
Call pickup, directed	S-S	*59+ph. no.	
Answer calls for an other phone on your own phone.			
Call pickup, group	S-S	*57	
Answer calls for telephones within a call pickup group on your own phone.			
Retrieve an external call from common hold	S-S	*63+line code	
Transfer a call on hold to the assigned line.			

* If activated (consult your system administrator if necessary).

** You can enter the codes that are valid for your system in this column.

Telephone directory

Your mobile unit has a telephone directory for storing up to 100 numbers, see also Note on page 44. The stored numbers can be simply dialled, modified or deleted at any time. Access to the telephone directory is locked if the mobile unit is locked.

Note:

Numbers from the number redial memory can also be transferred to the telephone directory, see page 25.

Entering letters/characters and digits

Three of four letters/characters are assigned to each digit key. **Blanks, full stops** and **hyphens** are assigned to the "0" key.

For information about other special characters see "Overview – key layout" page 35.

When saving an entry, specify the **name in the 1st line** and **the telephone number in the 2nd and 3rd lines**.

- **Enter the names** (1st line, up to 16 characters)

Enter letters

Press the key the appropriate number of times **in quick succession** depending on the **position** of the letter on the key – **1st, 2nd, 3rd or 4th position** – or hold the key down see also "Overview – key layout" page 35.

Press the * key to switch from **lower case to upper case** for a particular character.

Enter digits

You can also enter digits when entering the name.





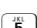
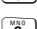
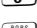
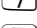
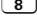
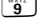
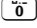

Press the appropriate digit keys **4 or 5 times in quick succession** depending on the number of letters on the digit key.

Enter special characters

In accordance with the key layout overview, press the key the appropriate number of times (up to 8 times) to enter the special character.

Telephone directory

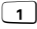



Overview – key layout

Key	1st keystroke	2nd keystroke	3rd keystroke	4th keystroke	5th keystroke	6th keystroke	7th keystroke	8th keystroke
	ä	ö	ü	ß	1	,		
	a	b	c	2	ä	à	â	ç
	d	e	f	3	ë	é	è	ê
	g	h	i	4	ï	î		
	j	k	l	5				
	m	n	o	6	ö	ñ	ó	ô
	p	q	r	s	7	ß		
	t	u	v	8	ü	ú	ù	û
	w	x	y	z	9			
	µ*)	.	-	0	+	:	?	!
	a → A	*	/	()	=	&	@
	#							

*) Blank is inserted

Note:

Telephone directory entries are automatically sorted in alphabetical order. "Names" that begin with "*" or "#" precede entries starting with "A".

- **Enter the telephone number** (2nd and 3rd line)
- When you have entered the name, press the display key  and enter the telephone number (up to 32 digits) using the digit keys.
- **Correcting/deleting entries** (1st, 2nd and 3rd line)
The cursor is **moved** from character to character in wrap-around mode using the display keys  and .
A character is always **inserted** to the left of the cursor.
The character to the left of the cursor is **deleted** when you press the display key .

Telephone directory

Overview – directory submenu

Submenu	Explanation/note
Dial Number	see page 38
New Entry	see page 36
– Save Entry	see page 39
– Insert Function	see page 37
– Show Function	see page 37
– Check Duplicate	see page 37
– Cancel	to cancel a function.
Edit Entry	see page 39
Delete Entry	see page 39
Display Entry	see page 39
Send entry	not relevant for cordless EM.
Delete directory	see page 40
Copy directory	not relevant for cordless EM.
Available Memory	see page 40

Storing numbers



Press the display key – *the directory is displayed.*



Press the display key.



Press the display keys to scroll to

New entry

New Entry and confirm.

OK

Name

Enter the name (1st line only, max. 16 characters).

Enter letters/digits and correct if necessary, see page 34 and 35.



Switch to number entry.

Telephone number

Enter the associated telephone number (2nd and 3rd lines, max. 32 digits)

– Enter the "external code", e.g. "0" before external numbers.

– Check the entry, see page 37.



Press the display key.

Save Entry

Confirm Save Entry

OK





Return to the higher-level display.

Telephone directory



Inserting a function:

You can enter a pause, e.g. following an international prefix, when you are entering the telephone numbers.

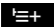	Press the display key.
	Scroll until <code>Insert Function</code> is selected and confirm the selection.
<code>Insert Function</code>	
<code>OK</code>	
<code>Pause</code>	Press <code>Pause</code> – a "P" is inserted into the phone number.
<code>OK</code>	

Displaying a function:



You can display the meaning of the selected character when you are entering or editing telephone numbers.

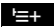	Press the display key.
	Scroll until <code>Show Function</code> is selected and confirm the selection – the explanatory text
<code>Show Function</code>	<code>Digit "P": Pause</code>
<code>OK</code>	is displayed

Checking an entry:

To avoid duplicate entries of a telephone number in the directory, you can execute the Check Duplicate function before an entry is saved.

Prerequisite: The new entry is listed in the directory.

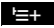	Press the display key.
	Scroll until <code>Check Duplicate</code> is selected and confirm the selection – the check is initiated.
<code>Check Duplicate</code>	
<code>OK</code>	

e.g.

No identical entry found

No identical entry found or the name of an identical number is displayed.

<code>Back</code>	Press the display key – the checked entry is displayed again. Edit or save the entry as described on page 36.
-------------------	---

Telephone directory

Dialling a number from the telephone directory

Prerequisite: Number is stored and **mobile unit is "on"** – no connection is set up (idle).



Press the display key – *the first names (alphabetical order) in the telephone directory are displayed, the name in the first line is selected (dimmed).*




or
e.g. 6

Scroll to the desired name **or** enter the initial letters, see page 34.



Press the talk key – *the relevant number is displayed and dialled.*


Note:

You can also call up the "Directory" function and dial a number using the submenu  "Dial Number".

Telephone directory




Editing/deleting/displaying an entry

The stored entries – numbers and/or names – can be edited, deleted or displayed.

 Press the display key – *the first names are displayed.*

 Scroll to the desired entry.

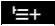● Editing an entry:

 Press the display key.
 Scroll to **Edit Entry**
 and confirm.

 OK

e.g.

Name flashes.


Change the **name**, for example.



Switch to **number** and edit.






Press the display key.



Confirm **Save Entry**.




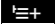

● Deleting an entry:

 Press the display key.
 Scroll to **Delete Entry**
 and confirm.

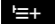

● Displaying an entry:

 Press the display key.
 Scroll to **Display Entry**
 and confirm.


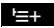





Press **GO BACK** to jump to the higher-level menu.

Telephone directory


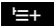



Deleting the telephone directory

You can also delete all of the entries in the **entire telephone directory** in one go, e.g. if you are lending the mobile unit to another user. This function is also protected by the mobile unit PIN.

-  Press the display key.
-  Press the display key.
-  Scroll to **Delete Directory** and confirm.
- Delete Directory**
- OK**
- PIN**
- OK** Enter the **mobile unit PIN** and confirm.
- Delete all entries?**
- To cancel:
Press display key **NO**.
- YES** Press the display key –
All entries deleted is displayed for approx. 2 seconds.
-  or  Return to the higher-level display.

Available memory

The amount of available memory space can be displayed as a percentage.

-  Press the display key.
-  Press the display key.
-  Scroll to **Available Memory** and confirm.
- Available Memory**
- OK**
- e.g. **Memory: 85% available**
- E.g. Memory: 85% available is displayed for approx. 2 seconds.*
-  or  Return to the higher-level display.

Main menu – functions

Overview – main menu

Main menu	Explanation/notes
Handset Lock	see page 41
Short Cut	see page 43
Baby Alarm	Not available, see, however, the code functions on page 30
Base Selection	see page 45
Settings	see page 47
Service	not relevant for cordless EM

Activating/deactivating the handset lock

Incoming calls are signalled and can be accepted or, for example, forwarded to another telephone.

The following are **blocked** when the handset is locked:

- Dialling internal and external numbers
- Access to the telephone directory
- Block dialling
- Function menu call up (except for "Cancel Handset Lock")



Press the menu key.

Handset Lock

Confirm Handset Lock.

OK

PIN, e.g.

Enter the **mobile unit PIN** and confirm.

0000

The **default** PIN is "0000".

OK

Lock On/Off

Confirm Lock On/Off.

OK

ON

Press the appropriate display key.

or

OFF




OK

Confirm setting (save).





DSS number for locked mobile unit

You can store **one** external DSS number (direct station selection number) which can be dialled if the mobile unit is locked. The DSS number can be, for example, a number at which you can be reached if you are absent from the mobile.

Displaying or storing a DSS number

-  Press the menu key.
- Handset Lock** Confirm Handset Lock.
- OK**
- PIN**, e.g. Enter the **PIN** and confirm.
0000 The **default** PIN is "0000"!
- OK**
-  or  Scroll until DSS number is selected and confirm.
- DSS number**
- OK**
- DSS number** Enter the DSS number
- Enter the "external code", e.g., "0", in front of external numbers
 - You can store the entry and insert functions by means of the submenu (see page 36 and 37).
- OK** Confirm the setting.

Deleting a DSS number

-  Press the menu key.
- Handset Lock** Confirm Handset Lock.
- OK**
- PIN**, e.g. Enter the **PIN** and confirm.
0000 Enter the **PIN** and confirm.
The **default** PIN is "0000"!
- OK**
-  or  Scroll until DSS number is selected and confirm.
- DSS number**
- OK**
-  Delete the DSS number (input function, see page 34).
- ≡+** Press the display key.
- Save Entry** Confirm Save Entry.
- OK**

Main menu – functions

Short cuts

Short cuts make it easier to perform "longer" operating sequences, e.g. automatic callback or other code functions. Store a function (operating sequence) under a name of your choice. The name of the function is included in the list of short cuts. You can execute the function quickly by confirming the name – see "Starting a short cut" page 44.

Short cut submenu

The following functions are available:

Start

New Entry

Edit Entry

Delete Entry

Display Entry

Copy Entry (cannot be used with cordless E)

Delete Memory

Copy Memory (cannot be used with cordless E)

DefaultShortCuts (cannot be used with cordless E)

Available Memory

Saving a short cut – new entry

When saving a short cut, an area is available for "name" and "short cut contents". First assign a name to this short cut.

For information on entering letters/characters and digits, see page 34.

Example: Automatic callback



Press the menu key.



Makro

Scroll to Short Cut and confirm.

OK



Press the display key.



New Entry




Scroll to New Entry and confirm.

OK

Name

Enter names (max. 16 characters), e.g. "Autom. Callback".

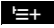


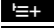
Main menu – functions

	Switch to entering the short cut contents.
	Press the recall key.
*58	Enter the code "*58".
	Press the display key.
Save Entry	Confirm Save Entry
OK	

Starting a short cut

The start procedure is specific to the mobile unit status:

Starting from the "on" status

	Press the menu key.
	Scroll until <code>Short Cut</code> is selected and confirm – <i>the first names (in alphabetical order) in the short cut list are displayed.</i>
Short Cut	
OK	
	Scroll to the desired name.
	Press the display key.
Start	Confirm <code>Start</code> – <i>the active status is indicated in the display until the short cut has been completed.</i>
OK	

Starting during connection set-up or during a call

Call up the short cut list with the  display key. Continue as described for the "on" status of the mobile unit.

Note:

- The **other short cut functions** "Delete Entry", "Edit Entry", "Display Entry", "Delete Memory" (deletes all short cuts) and "Available Memory" are all executed in the same way as described for the telephone directory, see page 39.
- A **shared memory** with up to 100 entries is available for **telephone directory entries, short cut entries and select services**, see also "Deleting default select services" page 54.
- The `Insert Function` short cut **cannot be used** with cordless EM.

Main menu – functions

Setting the base

If your mobile unit is logged onto more than one base (DECT systems*), you can set it to a particular **base** or **"best base"** (automatic base changeover).

Setting the base



Press the menu key.



Select Base

Scroll to **Select Base** and confirm.

OK



e.g.

Base 3

If necessary, scroll to the required base.



Press the display key.



OK

Scroll to **Priority Select.** or **Fixed Selection** and confirm.



or



Return to the higher-level display.

Note:

- If you set **Best Base**, the mobile unit is always automatically linked to the base with the best reception.
- If you are located between two systems and the mobile unit switches continuously, you should set it to a particular system.

Activating priority selection

If you have set the mobile unit permanently to a base, you can also activate **Priority Select.**

When **Priority Select.** is activated - indicated by *, e.g. *Base 1 – the mobile unit searches for the default base for 30 seconds after switching it on or leaving the radio range. If this base is not found, the mobile unit automatically searches for another base.

* see also Note on page 20

Main menu – functions

Prerequisite:


You have selected a specific base as described above and have called up the submenu **☰+**. *The display shows:*






To activate, press the display key **OK**.

Settings

Overview – settings

Setting	Explanation/notes	Level	Default
Handset Volume	Call volume; Level 1 is not shown in the display!	3	1
Ringer Options	Volume and tone (call signal, bell)		
– volume	Low to high or ringer off 	6 0	6
– tone	Set tone frequency	10	2
Register	see page 19	–	–
Base Settings	see page 49	–	–
Handset Settings	see page 51	–	–

Note:

- Before it is saved, each setting can be cancelled using  or  and you can return to the higher-level display.
- **On-hook key**  for terminating/cancelling functions and **returning to the "on" status** immediately.

Settings

Settings – handset, ringer...



Press the menu key.



Settings

Scroll to **Settings** and confirm.

OK

Handset Volume
Ringer Options
Register
Base Settings
Handset Settings

For an explanation of the individual settings, see the section entitled "Overview – settings", page 47.

Example: Setting the ringer volume



Press the menu key.



Settings

Scroll to **Settings** and confirm.

OK



Ringer Options

Scroll to **Ringer Options** and confirm.

OK

Handset Volume

Confirm the ringer volume – the ringer volume audible is specific to the current setting (default: level 6), see the display.

OK



Symbol for ringer

Dark bars indicate the current setting – level 3 in this case

Confirm current setting (save)

Change the setting



Press the display keys to set the required volume and confirm.

OK

Note:

- See page 62 for information about **acoustic signals!**
- Calls received at ringer volume settings 5 and 6 are also signalled by a vibration alarm.

Settings

Base settings

You can rename the preset base names "Base 1" through "Base 6". Within a company, for example, base 1 could be changed to "Plant 1" and base 2 changed to "Plant 2".

Changing the base name



Press the menu key.



Settings

Scroll to **Settings** and confirm.

OK



Base Settings

Scroll to **Base Settings** and confirm.

OK



e.g.

Base 3

Scroll to the desired base.



Change Base Name

Press the display key.

Confirm **Change Base Name**.

OK

Name of Base 3:
Base 3

Base 3 flashes.

Name

Enter a new name for base 1 (max. 16 characters).

Enter letters/characters and correct if necessary, see page 34 and 35.



Save Entry

Press the display key.

Confirm **Save Entry**.

OK

ISDN configuration

Not relevant for cordless EM.

De-registering a base

The mobile unit should **not be de-registered!**



Attention!

If the mobile unit is de-registered, it must be re-registered again as when putting it into service, before it can be used again (see page 19)!

Settings

Overview – handset settings

Setting	Explanation/notes	Level	Default
Beeps	see page 52	–	–
Auto Backlight	The backlight is switched on when the first key is pressed. The backlight is automatically switched off to save the batteries if the telephone is not used for 15 seconds.	On/Off	On
Auto Talk	You can define whether the talk key must be pressed when the mobile unit is removed from the charging shell to accept a call.	On/Off	On
Select Services	see page 54	–	On*
Change PIN	see page 56	–	–
Language	Local mobile unit display texts in German, English, French, Italian, Spanish, Dutch or Portuguese	7 languages	German*
BabyAlarm-Level	Not relevant for cordless EM.	–	–
Initialization	<ul style="list-style-type: none">● The resetting of the mobile unit to the initialization state (defaults) is protected by the mobile unit PIN.● Resetting the mobile deletes the redial number. The registration (login) and the mobile PIN are retained!	–	–

* for international mobile unit variants: English language; Select Services off

Settings

Overview – beeps

Beep type	Explanation, note	Default
Key Beeps	Audible each time a key is pressed.	On
Batt. Low Beep	Audible approx. 5 minutes before the battery runs out.	On
Range Warning	Audible when you leave the radio range.	Off
Confirm Beep	Audible if a local function/setting was successfully performed.	On
Error Beep	Audible if a function/setting was not successfully performed. Also in the case of erroneous/unauthorised entries.	On
In Range Beep	The in range beep is audible if the mobile unit is reconnected to a base station (resynchronised with base).	Off

See page 62 for information about **acoustic signals!**

Settings

Beeps – keys, battery, range...



Press the menu key.



Settings

Scroll to **Settings** and confirm.

OK



Handset Settings

Scroll to **Handset Settings** and confirm.

OK

Beeps

Confirm **Beeps**.

OK

Key Beeps
Batt. Low Beep
Range Warning
Confirm Beep
Error Beep
In Range Beep

For an explanation of the individual beeps, see "Overview – Beeps", page 52.

Example: Activating/deactivating the range warning



Range Warning

Scroll to **Range Warning** and confirm.

OK



Type of beep

Range warning symbol

Confirm current setting.

ON or **OFF** is displayed depending on the current setting

ON

Press the relevant display key.

or

OFF

OK

Confirm the setting (save).

Settings

Select services

The stored **default select services** – operating sequences for Telecom services – **cannot** be used with cordless EM.

Saving functions under **S-S**

Frequently used functions (operating sequences) that are **started** when the mobile is in the **"on" status** can be stored "under" the **S-S** display key. This will simplify operations. Example: Call forwarding to a specific user, in accordance with "Overview - code functions" on page 30.

S-S Press the display key.

☰+ Press the display key.

The remaining operating steps are performed in a similar way to those described under "Saving a short cut – new entry", see page 43.

Starting saved functions

S-S Press the display key.

▼ Scroll to the desired function.

☰+ Press the display key.

Start Confirm **Start**.

OK

Deleting default select services

The default select services are already loaded when the unit is delivered*.

In order to make more space (approx. 10%) for the telephone directory / short cuts, you can delete the default select services.

S-S Press the display key.

☰+ Press the display key.

▲ Scroll to **Delete Memory** and confirm.

OK

* **Not loaded** with international mobile unit variants!

Settings

PIN Enter the **mobile unit PIN** and confirm.

OK

Delete all entries ?

YES

Press the display key –
All entries deleted is displayed for approx. 2 seconds.



or



Return to the higher-level display.

Note:

You can also save the default select services again as required using , and Load Select Serv.

Deactivating the **S-S** display

If you have not saved any other operating sequences under **S-S** , it is advisable to **deactivate the select services** – the display key **S-S** is then **no longer displayed**:



Press the menu key.



Settings

Scroll to Settings and confirm.

OK



Handset Settings

Scroll to Handset Settings and confirm.

OK



Select Services

Scroll to Select Services and confirm.

OK

OFF

Press the display key.

OK

Confirm the setting.

Note:

You can use this function to **switch on** Select Services again at any time.

Changing the mobile unit PIN

You can use this function to change your personal mobile unit PIN. The **default** PIN is "0000".

The mobile unit PIN is required for the following functions:

- changing the mobile unit PIN
- deleting the telephone directory
- resetting the mobile unit to the default state

Important:

- If you forget your **mobile unit PIN**, a **service engineer** will have to access the device. Forgetting a PIN is just as serious as losing a key. In this case, please consult your system administrator!
- **Incorrect PIN** is displayed if an **incorrect mobile unit PIN** is entered.
- **The functions can be cancelled/terminated** with the **menu key** before settings are saved/deleted.



Press the menu key.



Scroll to **Settings** and confirm.

Settings

OK



Scroll to **Handset Settings** and confirm.

Handset Settings

OK



Scroll to **Change PIN** and confirm.

Change PIN

OK

PIN, e.g.

0000

Enter the "**old**" **PIN** and confirm. The **default** PIN is "**0000**"!

OK

New PIN, e.g.

4321

Enter the "**new**" **PIN** (max. 8 digits) and confirm.

OK

New PIN

4321

Enter the "**new**" **PIN** again **carefully** and confirm – **New PIN stored!** *is displayed for approx. 2 seconds.*

OK

Settings

Setting the language

Prerequisite: The mobile unit is on (German default state*!)



Press the menu key.



Settings

Scroll to **Settings** and confirm.

OK



Handset Settings

Scroll to **Handset Settings** and confirm.

OK



Language

Scroll to **Language** and confirm.

OK



e.g.

English

Scroll to desired language and confirm.

OK

The following overview will help you to set the desired language as described above when the unit is delivered or if the language is changed inadvertently:

Displays for language settings

Deutsch	Einstellungen	Lokale Einst.	Sprache
English	Settings	Handset Settings	Language
Français	Réglages	Réglages combiné	Langue
Italiano	Impostazioni	Impostaz. Telef.	Lingua
Español	Ajustes	Ajuste local	Idioma
Português	Programações	Program. local	Língua
Nederlands	Instellingen	Lokale instell.	Taal

Note:

The language you set only applies to the mobile unit display texts stored in the mobile unit.

* For international mobile unit variants: English – see table for display texts

Resetting the mobile unit to the default state

You can use this function to reset your mobile unit to the defined default state, e.g. if you are handing over your mobile unit to another user.

Note:

- Resetting the mobile unit to the default state **deletes the redial numbers**.
- The **mobile unit PIN and system registration** (logon) are, however, **not deleted**.
- See the next page for **settings in the default state!**



Press the menu key.



Settings

Scroll to Settings and confirm.

OK



Handset Settings

Scroll to Handset Settings and confirm.

OK



Initialization

Scroll to Initialization and confirm.

OK

PIN

Enter the **mobile unit PIN** and confirm.

OK

Settings

Settings after the mobile unit has been reset:

Telephone directory:	Retained
Short cuts:	Retained
Redial:	Deleted
Mobile unit PIN:	As per last save
System registration:	Retained
Language:	German*
Automatic call acceptance:	On
Automatic backlight:	On
Select Services menu:	Active*
Ringer tone:	1
Ringer volume:	6
Handset volume:	1
Different beeps:	See overview page 52

* For international mobile unit variant: English language; S-S menu inactive

Appendix

Troubleshooting

Before contacting the Service department, you should attempt to rectify any errors yourself:



Caution:

The battery compartment must not be opened under any circumstances in an Ex zone.

Error	Possible cause	Remedy
No display.	Mobile unit not switched on. Battery empty.	Press the On/Off key. Recharge the battery or replace it with a spare battery.
Connect. Release is displayed as soon as you press the talk key. No dial tone; no calls can be made.	cordless EM is fully utilised by other users.	Try again later.
No radio connection possible to base station, Base 1 flashes.	The mobile unit is outside the radio range of the base stations; radio signal too weak. The mobile unit is not registered. Excessive delay between synchronisation attempts.	Move into radio range, change location. Register mobile unit. Switch off mobile unit and switch it back on again.
Base 1 is displayed, for example, but no incoming or outgoing calls are possible. Activation/deactivation not possible.	The mobile unit is blocked.	Remove the battery compartment lid, remove and then reinsert the batteries, close the battery compartment lid.

Appendix

Approval

The **mobile units** have been approved by the German Federal Office of Telecommunication Approval (BZT). They comply with the conditions of approval passed by the Federal Ministry for Post and Telecommunications (BMPT) for connection to the **Hicom cordless EM telephone system**. They can also be registered and operated on the **10xx and 20xx Gigaset base stations**.

Technical data

Standards	DECT in accordance with ETSI, CTR 6, CTR 10, GAP Ex protection in accordance with EN 50014 and EN 50020	
No. of channels	120 duplex channels	
Frequencies	1.88 GHz to 1.90 GHz	
Duplex operation	Time duplex with 10 ms frame length each	
Channel configuration	1728 kHz	
Bit rate	1152 kbit / s	
Modulation	GFSK	
Voice encoding	32 kBit/s (ADPCM)	
Transmit power	10 mW medium power; 250 mW peak power	
Range	outdoors	approx.300 m
	indoors	approx.50 m

Convenience mobile unit

Battery life	see "Charging and using the batteries" page 16	
Permitted environmental conditions for operation*	-10 °C to +40 °C 100% relative air humidity as well as water splashes and jets (IP 65)	
Weight incl. batteries	approx. 165 g	
Dimensions (L x B x H)	approx. 160 x 55 x 25 mm	

* In non-protected environments

Appendix

Acoustic signals

Internal dial tone



0.2 s/0.3 s beep/pause, sequence repeated after 0.5-s pause

External dial tone

Steady tone

Ring tone



Busy tone



0.5 s beep/pause ...

Confirmation tone



 
0,8 s

Error beep/range warning



4 x 0.1 s beep/pause

Call waiting tone



Accessories

- **Gigaset 2000H headset**

Comprising an adapter and headset.

Note: high-performance nickel-metal-hydride batteries are recommended for use in conjunction with the headset.

- **Gigaset 2000L charging unit**

For charging the mobile unit batteries and 2 spare batteries.



Caution:

The charging unit and headset must not be operated in environments where there is danger of explosion.

Further information available on request.

Please contact your nearest Siemens Sales office.

Index

- A**
- Accessories 63
 - Acoustic signals 62
 - Activating/deactivating
 - the mobile unit 21
 - Actuate switch 33
 - Answer 32
 - Answer group 32
 - Answering a call 23
 - Approval 61
 - Assign phone number 32
 - Associated dialling 31
 - Associated services 30
 - Attachment clip 10
 - Automatic
 - base changeover 45
 - callback 27
 - Automatic backlight 51
 - Automatic talk 51
- B**
- Baby alarm 31
 - Backlight, automatic 51
 - Base changeover 45
 - Base display 20
 - Base settings 49
 - Batteries
 - battery low beep 52
 - charging 16
 - inserting in the mobile unit 15
 - types 17
 - using 2, 5, 16
 - Battery life, mobile unit 61
 - Beeps
 - overview 52
 - representation 62
 - setting 53
 - Block dialling 24
 - Busy tone 62
- C**
- Call
 - ending 22
 - forwarding 27
 - Call charge display 9
 - Call charges 9
 - Call distribution 30
 - Call forwarding 30
 - Call pickup
 - directed 33
 - group 33
 - Call trace 31
 - Call waiting 30
 - Call waiting tone 62
 - Callback 32
 - Callback, automatic 27
 - Calling up, short cut 44
 - Cancelling functions 13, 14
 - Character set 35
 - Charging shell 63
 - Charging the batteries 16
 - Charging times 17
 - Cleaning
 - loading shell 10
 - mobile unit 10
 - Code functions 26, 30
 - Conference 29, 31
 - Confirm beep 52
 - Confirmation tone 62
 - Consultation during a call 28
 - Correcting entries 24
 - Correction key 24, 35
- D**
- Date 33
 - Deactivating S-S display 55
 - Deactivating/activating
 - the mobile unit 21
 - Default state 58
 - Deleting
 - entry 39
 - Select Services 54
 - the telephone directory 40
 - Dial tone 62
 - Dialling
 - block dial 24
 - external 23
 - internal 22
 - number from
 - telephone directory 38
 - redialling 25
 - Dialling in block 24
 - Digits 34
 - Display
 - backlight 51
 - keys 12
 - Displaying
 - entry 39
 - Displaying a function 37
 - Disposing/lending 10
 - Do not disturb 30
 - Door opener 33

Index

- DSS number
 - deleting 42
 - displaying 42
 - storing 42
- DTMF dialling 32
- Duplicate entry 37
- E**
- Editing
 - entry 39
- Editing an entry 39
- Ending a call 22
- Entering names 36
- Entry
 - check 37
 - deleting 39
 - displaying 39
 - editing 39
- Environmental conditions 8
- Error beep 52
- Error correction 60
- Error tone 62
- Ex protection 5, 17
- External code 23
- F**
- Fault correction 60
- Features
 - Hicom cordless E 4
 - mobile unit 4
- Fitting the attachment clip 10
- Forwarding calls 27
- Function selection
 - telephone/switching
 - functions 14
 - via menus 13
- Functions, cancelling 13, 14
- G**
- General operating instructions 8
- Group call 32
- H**
- Handset lock 41
- Handset settings
 - default state 58
 - overview 51
 - Select Services 54
- Handset volume 47
- Headset 63
- Hearing aids 2
- Hicom functions 26, 30
- Hunt group 32
- I**
- In range beep 52
- Initialization 51
- Input function
 - character set 35
 - digits 34
 - special characters 34
- Inserting a function 37
- Inserting the batteries 15
- Intrinsic safety 5
- K**
- Key beep 52
- Keypad lock 21
- Keys 3, 11
- L**
- Lending 10
- Lending/disposing 10
- Letters/characters
 - entering 34
- Lock code 33
- Locking the keypad 21
- Logging
 - mobile unit onto
 - telephone system 19
- M**
- Main menu
 - overview 41
- Menus 13
- Mobile unit
 - activating/deactivating 21
 - cleaning 10
 - logging onto telephone
 - system 19
 - storing/changing PIN 56
- N**
- Night service 32
- Number
 - copying
 - number redial 25
 - dialling from directory 38
 - editing/deleting/displaying 39
 - storing 36
- Number redial 25

Index

- O**
- On status 11, 22
 - Operating elements 3
 - Operating status 21
 - Override 31
 - Overview
 - beeps 52
 - handset settings 51
 - main menu 41
 - settings 47
 - submenu
 - telephone directory 36
- P**
- Page 32
 - Park 32
 - Pause display 37
 - PIN 56
 - Power saving function 10
 - Priority selection
 - on/off 45
 - Privacy 8
 - Project code 32
 - Putting mobile unit into service 16
- Q**
- Quality of the connection 9
- R**
- Radio network
 - leaving 10
 - power saving function 10
 - Range 9, 61
 - Range warning 52, 53
 - Range warning tone 9
 - Recall to network 33
 - Release line 31
 - Reset services 31
 - Retrieve
 - external call 33
 - Ring tone 62
 - Ringer 47, 48
 - Room monitoring 31
- S**
- Safety notes 2, 5
 - Saving operating sequences 54
 - Select Services 54
 - Selecting the base 45
 - Send/delete message text 31
 - Service 41
 - Setting the base 45
 - Setting the language 57
 - Settings
 - base 49
 - beeps 53
 - handset, ringer 48
 - language 57
 - overview 47
 - Short cut
 - new entry 43
 - starting 44
 - Short cuts
 - menu 43
 - Shuttle 28, 31
 - Signals 62
 - Spare batteries 17
 - Special characters 34
 - Speed dialling 31
 - Standards ex-version 67
 - Starting, short cut 44
 - Storing numbers 34
 - Submenu, telephone directory
 - overview 36
 - Suppress phone number 32
 - Switching between two users 28
 - Switching functions 26, 30
 - Symbols in the battery
 - compartment 2
 - System code 20
- T**
- Talk, automatic 51
 - Technical data 61
 - Telephone conference 29
 - Telephone data service 33
 - Telephone directory
 - duplicate entry 37
 - Telephone functions 20, 21
 - Telephone lock/unlock 33
 - Transmit power 61
 - Troubleshooting 60
- U**
- Unit parts 3
 - Using the batteries 16
- V**
- Vibration alarm 48
 - Voice calling 31
 - Volume
 - handset 47
 - ringer 48

Permitted batteries: Gigaset active Ex

Only the original battery packs C39165-A7019-B110 and C39165-A7019-B112 may be used with Gigaset active Ex.

Capacity	Standby mode (hours)	When the phone is in use (hours)
600 mAh	up to 70	up to 7

If other batteries are used, operation in environments where there is danger of explosion is no longer permitted.

Additional standards: Gigaset active Ex

Gigaset active Ex also complies with the requirements of the following european standards:



EN 50014

EN 50020



1P A31003-M1522-B799-2-7619

When passing on the device
enter the following telephone numbers:

In the event of an error:

For sales queries:

Printed on recycled paper –
doing more for the environment!



This device complies with the requirements of the EU guidelines:

89/336/EEC "Electromagnetic Compatibility"
73/23/EEC "Electric Operating Resources for Use within
Specific Voltage Parameters".

and thus bears the CE mark.



Ex version:

In addition to the above, this device complies with the requirements
of the European standards

EN 50014
EN 50020

Published by the
Private Communication Systems Group
Hofmannstraße 51, D-81359 Munich

© Siemens AG 2001
All rights reserved.
Delivery subject to availability;
right of technical modifications
reserved.

Siemens Aktiengesellschaft

Order no.:
A31003-M1522-B799-2-7619
Printed in Germany.
BA299 0.5