

# ALCATEL

Versatis F200 / F200 Duo / F200 Trio /  
Versatis F250 / F250 Duo / F250 Trio


In keeping with our environmental preservation and compliance commitment, we include mini-guides in our packaging. More complete instructions and online assistance are available on our website:

www.atlinks.com



## 1. GETTING TO KNOW YOUR PHONE

### 1.1. Handset Overview (Versatis F200 Only)

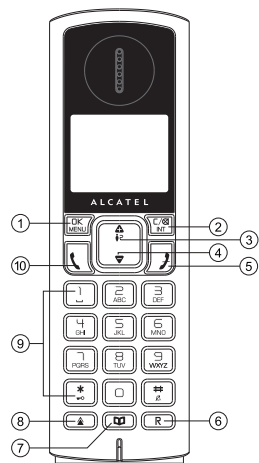


- 1. [M] (Main Menu)**  
In idle mode: Press to access the main menu  
In sub-menu mode: Press to confirm the selection  
During a call: Press to access Intercom/Phonebook/Redial List/Call List
- 2. [C] (Call)**  
In main menu mode: Press to go back to idle screen  
In sub-menu mode: Press to go back to previous level  
In sub-menu mode: Press and hold to go back to idle screen  
In editing/predialing mode: Press to clear a character/digit  
In editing/predialing mode: Press and hold to delete all the characters/digits  
During a call: Press to mute/unmute the microphone  
In idle mode: Press to intercom another handset  
In ringing: Press to suppress handset ringer

- 3. [A] (Call List)**  
In idle mode: Press to access the call list  
In menu mode: Press to scroll up the menu items  
In Phonebook list/Redial list/Call List: Press to scroll up the list  
During a call: Press to increase the volume  
In ringing: Press to increase the ringer volume
- 4. [V] (Volume)**  
In idle mode: Press to access the redial list  
In menu mode: Press to scroll down the menu items  
In Phonebook list/Redial list/Call list: Press to scroll down the list  
During a call: Press to decrease the volume  
In ringing: Press to decrease the ringer volume
- 5. [E] (End Call)**  
During a call: Press to end a call and go back to idle screen  
In menu/editing mode: Press to go back to previous menu  
In menu/editing mode: Press and hold to go back to idle screen  
In idle mode: Press and hold to power off the handset  
In idle mode: Press and hold to power on/off the handset
- 6. [R] (Flash)**  
In idle/predialing mode: Press to insert a flash  
During a call: Press to dial a flash
- 7. [P] (Phonebook)**  
In idle mode: Press to access the phonebook list
- 8. [A] (Redial List)**  
In idle mode: Press to access the redial list
- 9. ALPHANUMERIC KEYPAD, [\*], [#]**  
\* key in idle mode: Press and hold to enable or disable the keypad lock  
# key in idle mode: Press and hold to turn on/off the ringer  
# key in call list mode: Press to review caller's number if applicable  
0 key in predialing/number editing mode: Press and hold to insert a pause  
1, 2, 3 key in idle/off hook mode, press and hold to dial the stored direct memory number

- 10. [C] (Call List)**  
In idle/predialing mode: Press to make a call  
In Redial list/Call List/Phonebook entry: Press to make a call to the selected entry in the list  
During ringing: Press to answer a call

### 1.2. Handset Overview (Versatis F250 only)

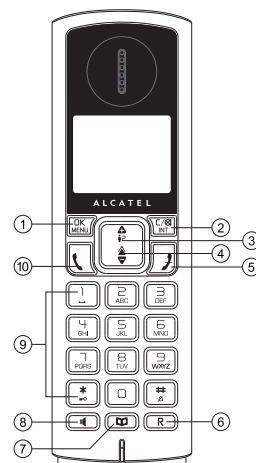


- 1. [M] (Main Menu)**  
In idle mode: Press to access the main menu  
In sub-menu mode: Press to confirm the selection  
During a call: Press to access Intercom/Phonebook/Redial List/Call List

- 2. [C] (Call)**  
In main menu mode: Press to go back to idle screen  
In sub-menu mode: Press to go back to previous level  
In sub-menu mode: Press and hold to go back to idle screen  
In editing/predialing mode: Press to clear a character/digit  
In editing/predialing mode: Press and hold to delete all the characters/digits  
During a call: Press to mute/unmute the microphone  
In idle mode: Press to intercom another handset  
In ringing: Press to suppress handset ringer
- 3. [A] (Call List)**  
In idle mode: Press to access the call list  
In menu mode: Press to scroll up the menu items  
In Phonebook list/Redial list/Call List: Press to scroll up the list  
During a call: Press to increase the volume  
In ringing: Press to increase the ringer volume
- 4. [V] (Volume)**  
In idle mode: Press to access the redial list  
In menu mode: Press to scroll down the menu items  
In Phonebook list/Redial list/Call List: Press to scroll down the list  
During a call: Press to decrease the volume  
In ringing: Press to decrease the ringer volume
- 5. [E] (End Call)**  
During a call: Press to end a call and go back to idle screen  
In menu/editing mode: Press to go back to previous menu  
In menu/editing mode: Press and hold to go back to idle screen  
In idle mode: Press and hold to power off the handset  
In idle mode: Press and hold to power on/off the handset
- 6. [R] (Flash)**  
In idle/predialing mode: Press to insert a flash  
During a call: Press to dial a flash
- 7. [P] (Phonebook)**  
In idle mode: Press to access the phonebook list

- 8. [A] (Redial List)**  
During a call: Press to turn on/off the speakerphone  
In Idle mode/Predialing mode/Redial list/Call List/Phonebook entry: Press to make a call with speakerphone  
During ringing: Press to answer a call with speakerphone
- 9. ALPHANUMERIC KEYPAD, [\*], [#]**  
\* key in idle mode: Press and hold to enable or disable the keypad lock  
# key in idle mode: Press and hold to turn on/off the ringer  
# key in call list mode: Press to review caller's number if applicable  
0 key in predialing/number editing mode: Press and hold to insert a pause  
1, 2, 3 key in idle/off hook mode, press and hold to dial the stored direct memory number
- 10. [C] (Call List)**  
In idle/predialing mode: Press to make a call  
In Redial list/Call List/Phonebook entry: Press to make a call to the selected entry in the list  
During ringing: Press to answer a call


### 1.3. Base Station Overview

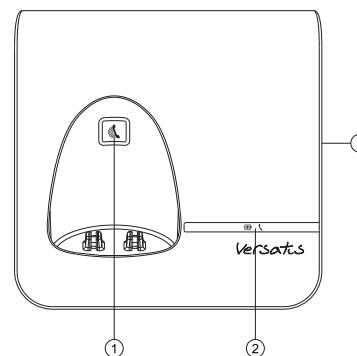

- 1. [M] (Main Menu)**  
Press [M] on the base station to page your handset. It will ring for approximately 60 seconds.  
Press and hold [M] on the base station for about five seconds, the base station is entered into registration mode and allows handset registration.
- 2. [I/O] (LED I/O Switch)**  
Steadily on while the handset is charging or in use. (Applicable only when the LED I/O switch is slid to "I")  
Flash when receiving an incoming call. (Applicable only when the LED I/O switch is slid to "I")
- 3. LED I/O SWITCH (Bottom of the Base)**  
Slide the switch to "O" position to turn off the base LED  
Slide the switch to "I" position to turn on the base LED when the handset is charging on the base or in use

### 1.4. Display Icons and Symbols

The LCD display gives you information on the current status of the telephone.

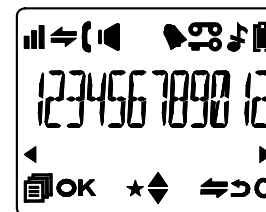

- [Signal Strength]** Steadily on when the handset is in range of the base. Flash when out of range of the base or not registered to the base.
- [Intercom]** Steadily on when an intercom is in progress. Flash when there is an incoming internal call.
- [Call in Progress]** Indicate a call is in progress.
- [Handfree]** (Versatis F250 only) Indicate that handsfree is being used.
- [Alarm]** Steadily on when an alarm is set. Flash when the alarm time set before reaches.
- [Keypad Locked]** Indicate that the keypad is locked.
- [Voice Message]** Indicate when there are received new Voice Message Waiting (VMWI) not yet read. Disappear when all the voice messages have been read. (Network service dependent)
- [Ringer Off]** Indicate that the ringer is switched off.

- [Battery Full]** Indicate when the battery is fully charged. Whole icon flashes when the battery performs initial charging. Internal block icon flashes when the battery is in final charging stage.
- [Battery Low]** Indicate when the battery needs charging. Flash when low battery power level is detected.
- [Text Preceding]** Indicate when more characters are existed before the text currently displayed.
- [Text Following]** Indicate when more characters are existed after the text currently displayed.
- [New Call]** Indicate when new call is received. Turn off when new call has been read.
- [Menu Scroll]** Scroll up/down the menu items/Phonebook list/Redial list/Call List.

## 2. PRECAUTIONS

The signal quality will depend on the location and environment of the base and handset.  
Position your **Versatis F200/Versatis F250** away from sources of excessive heat (radiators, direct sunlight, etc.) and protect it from vibrations and dust. Never allow your telephone to come into contact with water or other liquids, or with aerosols. To reduce the risk of interference and optimize reception, take particular care not to install the base in the immediate vicinity of windows, large metal objects, reinforced concrete, televisions, music centres, VCR or DVD players, halogen lamps or heating devices, fluorescent lighting, burglar alarms, microwave ovens, computers, etc.  
This telephone requires an electrical power supply in order to function.  
To clean your **Versatis F200/Versatis F250**, use an antistatic cloth lightly moistened with water.  
NB: Your **Versatis F200/Versatis F250** is a DECT™\* standard appliance designed to receive and transmit telephone calls. It is designed for connection to the public telecommunications network.


## 3. INSTALLING YOUR PHONE

### 3.1. Installing and Charging the Batteries

- Slide down to open the battery compartment cover.
- Place the 2 supplied AAA rechargeable batteries as indicated. Pay extra attention to direction of polarity.
- Slide the battery compartment cover back.
- Put the handset on the base and charge for 15 hours before using the handset for the first time. The handset will give a beep when it is properly placed on the base or charger.

#### Notes:


- Use only the supplied NiMH rechargeable batteries.
- If the handset will not be used for a long time, disconnect and remove the batteries to prevent possible leakage.

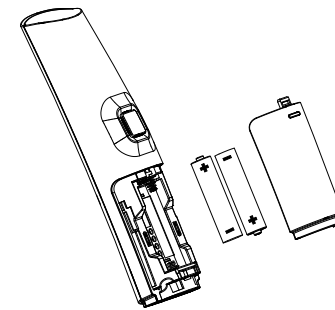

### 3.2. Connecting the Base Station

- Plug one end of the telephone line cord into the telephone jack on base bottom.
- Plug the small end of power adapter into a power jack on base bottom.
- Connect the power supply plug to the base jack horizontally, and route the power supply cord through the slot.**
- Plug the large end of power adapter into a wall power outlet.

- Plug the other end of the telephone line cord in to the telephone jack or micro-filter.
- Always use the cables provided in the box.

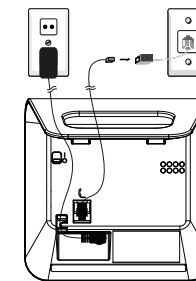

If you have broadband service, a micro-filter (not included) is required.

### 3.3. Connecting the Charger(s) (for Duo/Trio models)

Plug the power adapter into mains socket.

#### If you have a Broadband line

If you connect your telephone to a line with a broadband connection, you will need to insert a micro-filter between the telephone and the telephone line, otherwise you may get interference between the telephone and the broadband, which could cause problems.  
In a home with broadband, every telephone must have a micro-filter connected, not just the one at the telephone point that your modem is connected to. If you need more broadband micro-filters, contact your broadband supplier.



www.atlinks.com

ATLINKS Europe  
22 quai Gallieni  
92150 Suresnes- France




© ATLINKS 2011 - Reproduction prohibited.  
The Manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations.  
ALCATEL and ATLINKS are registered trademarks.  
The Alcatel logo and Alcatel name are trademarks of Alcatel and used under licence by ATLINKS.

F200/F200 Duo/Trio  
F250/F250 Duo/Trio  
A/W No.: 10000259 Rev.1 (EN)  
Printed in China



## 4. USING YOUR PHONE

### 4.1. Make a Call




#### 4.1.1. Preparatory Dialing

Enter the phone number and press  or  (Versatis F250 Only) to dial the number. Press  to clear the entry.






#### 4.1.2. Direct Dialing

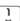Press  or  (Versatis F250 Only) to take the line and enter the phone number.


#### 4.1.3. Dial from Direct Memory Keys

In idle or off hook mode, press and hold , ,  to dial the direct memory number. You have to store number to the related key first. See section 7.4 for reference.
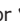
#### 4.1.4. Call from the Redial List

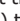Press  (Versatis F200 Only) or  (Versatis F250 Only) to access the redial list and press  to select the desired redial number. Press  or  (Versatis F250 Only) to dial out to the selected redial number.

## 4.2. Handset Speakerphone (Versatis F250 Only)











During a call, you can press  to alternate between handsfree and normal handset use.

## 5. PRIVATE PHONEBOOK

Your phone can store up to 50 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. Phonebook entries are stored alphabetically by name.

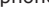




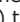
### 5.1. Add a New Phonebook Entry

In idle:

- Press  to access the phonebook.  
OR  
Press  and  to select **PHONEBOOK** main menu item and then press  to access the phonebook.
- Press  to select **ADD**.
- Press  to enter the name.
- Press  to enter the number.
- Press  and  to select the desired ringtone for your phonebook entry.
- Press  to store the phonebook entry.

### 5.2. Call from the Phonebook

In idle:

- Press  to access the phonebook.  
OR  
Press  and  to select **PHONEBOOK** main menu item and then press  to access the phonebook.
- Press  or  (Versatis F250 Only) to dial out to the selected phonebook entry.

## 6. CALLER DISPLAY (NETWORK DEPENDENT)






This feature is available if you have subscribed the Caller Line Identification service with your telephone service provider. Your phone can store up to 20 received calls with date/time information in the Call List. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternatively with the number. The handset will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, "**WITHHELD**" will display.

If the caller number is not provided, "**OUT OF AREA**" will display. In standby, if three unanswered calls are received, "**3 NEW CALLS**" will be displayed.



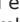


### 6.1. View the Call List

All received calls are saved in Call List with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with a **★** at the centre of the bottom line of the display.

- Press  to access the call list.  
OR  
Press  and  to select **CALL LIST**.
- Press  to select the desired entry.
- Press  to view the caller's number if applicable.





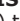


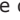
### 6.2. Call from the Call List

In idle:

- Press  to access the call list.  
OR  
Press  and  to select **CALL LIST**.
- Press  or  (Versatis F250 Only) to dial out to the selected phonebook entry.

## 7. PHONE SETTINGS









### 7.1. Set the Ringer Melody for Internal/External Calls

- Press  and  to select **HS SETTINGS**.
- Press  and  to select **RING SETUP**.
- Press  and  to select **INT RING** or **EXT RING**.
- Press  and  to select the desired ringer melody from the melody list.


**Note:** The respective ringer melody will be played while browsing the melody list.

- Press  to confirm.

### 7.2. Set the Ringer Volume

- Press  and  to select **HS SETTINGS**.
- Press  and  to select **RING SETUP**.
- Press  and  to select **RING VOLUME**.
- Press  and  to select the desired ringer volume (a total of 6 ringer volume levels including **VOLUME OFF**).

**Note:** The respective ringer volume will be played during your selection.


If **VOLUME OFF** is selected,  icon will display.

- Press  to confirm.

### 7.3. Adjust Earpiece and Handsfree (Versatis F250 Only) Volume

There are 5 levels (**VOLUME 1** to **VOLUME 5**) to choose from for each of earpiece and handsfree (Versatis F250 Only) volume.









During a call:




Press  to select volume 1-5. The current setting is shown.

When you end the call, the setting will remain at the last selected level.


### 7.4. Store Direct Memory Access Number






You can store three direct access numbers into digit KEY 1, KEY 2 and KEY 3, which will be convenient for you to dial to these numbers directly.



- Press  and  to select **HS SETTINGS**.
- Press  and  to select **DIRECT MEM**.
- Press  and  to select any one from **KEY 1**, **KEY 2** and **KEY 3**.
- Press  and then enter the number you would like to store, or edit the number existed before.
- Press  to confirm.

**Note:** Press and hold ,  or  to call the stored number.

## 8. REGISTRATION

Your handset and base station is pre-registered. Up to five handsets can be registered to a single base station. If for some reason, the handset is not registered to the base station ( flashes even when the handset is near the base station), register your handset according to the following procedure.

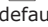- Press and hold  on the base station for about five seconds, the base station is entered into registration mode.
- Press  and  to select **REGISTRATION**.
- Press  and you are requested to enter the 4-digit system PIN (default PIN is 0000).
- Enter the 4-digit system PIN.
- Press  to confirm.

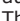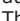If the handset registration is successful, you will hear a confirmation tone and the  will stop flashing. The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the  will still flash.

## 9. TECHNICAL DETAILS

Free Field Range	Up to 300 metres*
Indoor Range	Up to 50 metres*
Handset Battery Life (average values)	10 hours talk time** 100 hours standby**
Number of Handsets	Up to 5
Intercom Mode	Yes
Three-Way Conference (1 outside correspondent + 2 internal correspondents)	Yes
Electrical Connection/Base Mains Adaptor/Charger	Base main adaptor: Model No.: S004LV0600030 Input: 100-240 V/50-60 Hz/0.15 A Output: 6 V DC/300 mA  Charger adaptor: Model No.: S004LV0600030 Input: 100-240 V/50-60 Hz/0.15 A Output: 6 V DC/300 mA  Only use the adaptors supplied with the telephone Single-phase AC, excluding IT installations defined by the EN60950 standard. Caution: The network voltage is classified as a hazard by the criteria of this standard.
Telephone Connection	Appliance designed for connection to a TNV3 class (telecommunications network voltage) analogue telephone line as defined by the EN60950 standard.
Batteries	AAA – 1.2 V – 400 mA Only use the batteries supplied with the telephone. Use any other type of battery presents a risk of explosion. Used batteries must be disposed of in compliance with current environmental protection regulations.
Operating Temperature	From 5°C to 40°C


\* Values may vary according to environment.

\*\* Depending on initial battery charge.

## 10. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

As a general rule, if a problem occurs, remove the batteries from all the handsets in your installation for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries.

Problem	Cause	Solutions
No dialing tone when pressing  key	a. The connection cord of the base station is not plugged in.  b. The adapter cord is not plugged in correctly in the base station. c. The line is busy, as another handset is used. d. Wrong connection cord.	a. Check the connections. Unplug and plug back in the mains. Check that the telephone line cord has been plugged into the base station and the phone socket. b. Check the base station plug and the 220V plug (remove and plug-in). c. Wait until the line is unoccupied. d. Use the original connection cord.
" <b>OUT OF RANGE</b> " is displayed.	a. Base station out of range. b. Base station not connected to mains.	a. Reduce the range. b. Connect base station to mains.
The call does not work.	Service not activated or wrong operator.	Check your Subscription with network.
No display.	Empty battery.	Recharge battery.

The store where you bought your telephone can also provide you with information and after-sales support.

## 11. SAFETY

In the event of an electrical hazard, the mains adapter acts as 230V power isolating device. It should therefore, as a precaution, be installed close to the appliance and be easily accessible. To disconnect the device from the primary power source, the mains adapter must be removed from the 230V AC/50 Hz socket.

If the mains adapter fails, it must be replaced by an identical model.

If not connected to the mains power or if there is a mains power failure, telephones that use cordless handsets will not work.

You will then be unable to make or receive calls in the event of an emergency.

This is why we recommend that you also keep a conventional telephone – one that doesn't require a power supply – as a backup.

***! Do not use your telephone to notify a gas leak when standing in the vicinity of the leak.***


It is recommended that you avoid using this device during electrical storms.  
Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, nose and mouth. In the event of contact, rinse the affected part for about twenty minutes with running water and seek urgent medical attention. Clean the product with absorbent paper or a dry cloth and contact your reseller for replacement batteries.

ATLINKS hereby declares that the following models conform to the essential requirements and other applicable provisions of European directive 1999/5/EC.

**Versatis F200/Versatis F200 Duo/Trio**  
**Versatis F250/Versatis F250 Duo/Trio**



## 12. ENVIRONMENT

 This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused. Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.

- If you are a professional user, please follow your supplier's instructions.
- If the appliance is rented to you or left in your care, please contact your service provider.

Keen to preserve the environment, ATLINKS has equipped this appliance with a switching power supply, offering better energy efficiency. The advantages include not only very low electricity consumption, but also a more compact format than the conventional power supply units used by the previous range.

The used batteries from your telephone (if it has batteries) must be disposed of in compliance with current environmental protection regulations. Comply with your local regulations. Return your batteries to your reseller or dispose of them at an approved recycling centre.

***Help us protect the environment in which we live!***



R&TTE DECLARATION OF CONFORMITY (DOC)

We,

**ATLINKS EUROPE**  
22, Quai Gallieni  
FRANCE-93800  
FRANCE

Declare under our sole responsibility that the products Alcatel Versatis F200, Versatis F200 Duo, Versatis F200 Trio, Versatis F250, Versatis F250 Duo and Versatis F250 Trio comply:

With the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC) based on the following standards and other normative documents  
EN 60950-1 (2006) + A11 (2009)  
EN 301406 V2.1.1 (2009)  
EN 301489-01 V1.8.1:2009 / EN 301489-06 V1.3.1:2008

With Commission regulation (EC) N° 728/2009 of April 6, 2009 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to ecodesign requirements for no-load condition electric power consumption and average active efficiency of external power supplies

With Commission regulation (EC) no. 1275/2008 of December 17, 2008 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to ecodesign requirements for standby and off mode electric power consumption of electrical and electronic household and office equipment.

This conformity is understood as being effective if the product for which it is given is installed and used according to the instructions provided in the user's guide.

Suresnes, April 20th, 2011  
Didier GOULARD  
CEO ATLINKS EUROPE