



User's Manual for Cordless Telephone Answering System 9050



Part 2

Please read Part 1 — Important Product Information, included in your package.



© 1998 Philips Consumer Communications L.P. All rights reserved.
Printed in China. 848232518 Issue 1AT&T






CONTENTS

INSTALLATION	3	ANSWERING SYSTEM OPERATION	
Table/Desk Installation	3	At the Base	17
Wall Installation	4	Answering Calls	18
Belt Clip	5	Call Screening/Intercept	18
OPERATION	6	Listening to Your Messages	18
Making a Call	8	Saving Messages	19
Answering a Call	8	Deleting Messages	19
Ending a Call	8	Recording a Memo	19
Redial	8	ANSWERING SYSTEM OPERATION	
Handset Ringer Selection and		From a Remote Touch Tone Phone ..	20
Ringer OFF	8	Connect with the Answering System ..	20
Handset Ringer Volume	9	Voice Help Menu	20
Temporary Tone	9	Remote Access Commands	20
Special Telephone Services	9	Remote ON/OFF	21
Page/Handset Locator	9	BATTERIES	22
Headset Jack	10	Charging the Handset Battery Pack	22
OPERATING RANGE	11	Charging the Spare Battery Pack	22
TELEPHONE MEMORY	12	Replacing the Handset Battery Pack ...	23
Storing Memory Numbers	12	IN CASE OF DIFFICULTY	24
Replacing Stored Memory Numbers ...	12		
Storing a Pause in a			
Memory Number	12		
Dialing Memory Numbers	12		
Memory Guard	12		
ANSWERING SYSTEM SETUP	13		
Turning the System ON/OFF	13		
Volume	13		
Setting the Clock	13		
Announcement Options	13		
Selecting Your Announcement	14		
Recording Your Announcement	14		
Ring Select and Toll Saver	15		
Audible Message Alert	15		
Remote Access Code	16		
Base Ringer Setting	16		



INSTALLATION

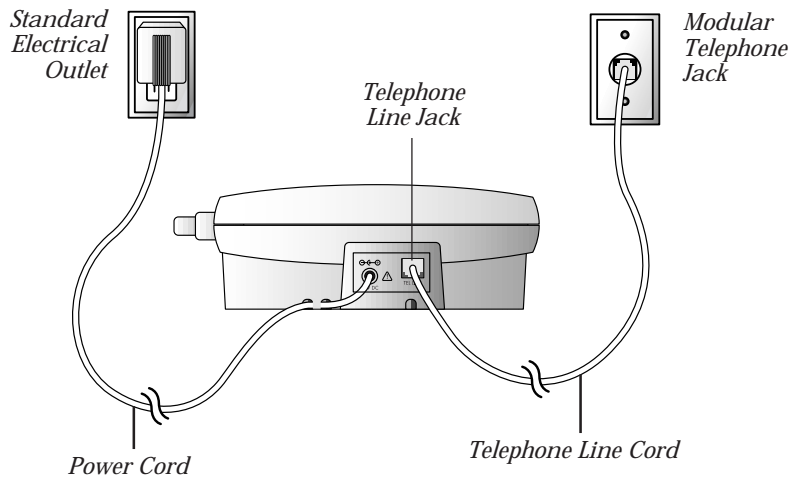

Table/Desk Installation

1 Choose a spot near an electrical outlet and a telephone jack.

This phone requires a modular telephone jack and a standard electrical outlet (110v AC). The outlet should not be controlled by a wall switch.


2 Install the handset battery.

(For an illustration of battery installation, see BATTERIES in this manual.)

- Remove the battery cover by pressing on the indentation and sliding downward.
- Install the battery pack so that the metal contacts on the bottom of the battery are aligned with the charging contacts in the battery compartment.
- Replace the battery cover by sliding it on its track up over the battery compartment until it snaps firmly in place.

3 Set the dial mode.

If you have touch tone service, set the switch on the bottom of the base to **TONE**. If you have dial pulse (rotary) service, set the switch to **PULSE**. Even if you have dial pulse service, you can still use telephone services requiring tone signals. See "Temporary Tone" in the OPERATION section of this manual.

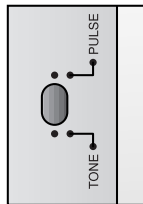



INSTALLATION

4 Connect the telephone line cord.

Plug one end of the telephone line cord into the jack on the back of the base. Plug the other end of the line cord into a modular jack. Make sure the plugs snap firmly in place.

5 Connect the power cord.

Plug the power adapter into the jack labeled **11V DC** on the back of the base. Plug the AC adapter on the power cord into an electrical outlet not controlled by a wall switch. The Message Window flashes -- as the set initializes.


6 Charge the handset batteries for 16 hours.

Place the handset face down in the base. The **CHARGING** light on the base goes on to show the handset is in the right position to charge the batteries.

7 Check for dial tone.

After the batteries are charged, pick up the handset and extend the base antenna. Check for dial tone by pressing **PHONE**; the **PHONE** light should go on and you should hear a dial tone.

Wall Installation

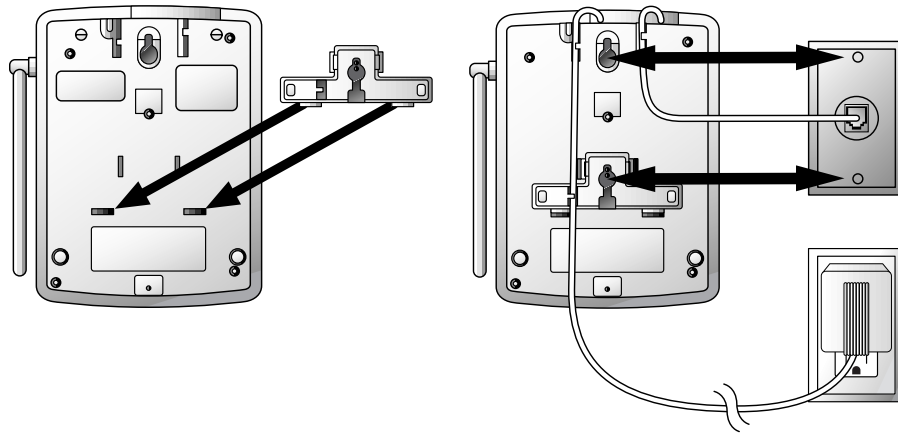

1 Follow Steps 1-3 under Table/Desk Installation.

2 Turn the base unit over, and attach the wall mounting base to the lower half of the base unit. Gently press down until it snaps firmly into place.

INSTALLATION

3 Connect the power cord.

- Plug the power adapter into the jack labeled **11V DC** on the back of the base.
- Run the cord under the tab on the bottom of the base unit and under the tab on the wall mounting base.
- Plug the AC adapter into an electrical outlet not controlled by a wall switch. The MessageWindow flashes -- as the set initializes.

4 Connect the telephone line cord.

- Using the short telephone line cord supplied, insert one end of the telephone line cord into the telephone jack on the back of the telephone base.
- Feed the excess line cord under the tab on the bottom of the telephone base.
- Plug the line cord into the standard wall jack.

5 Mount the telephone on the wall.

Position the telephone base so the mounting studs on the wall jack fit into the base of the telephone. Slide the telephone down on the mounting studs until the phone locks into place.


6 Follow Steps 6 and 7 under Table/Desk Installation.



CAUTION: Use only the AC power adapter supplied with this telephone, Power Supply for 9050. Input: AC 117V, 60Hz, 12W Output: DC 11V, 500mA.


Belt Clip

If you wish, you can attach the belt clip to the cordless handset, following the illustrations below.

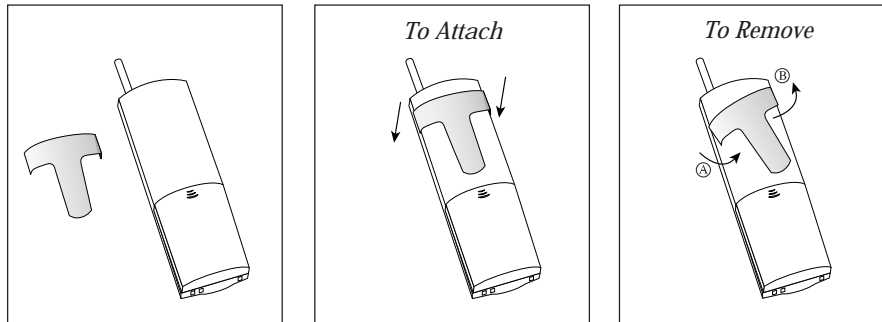




OPERATION

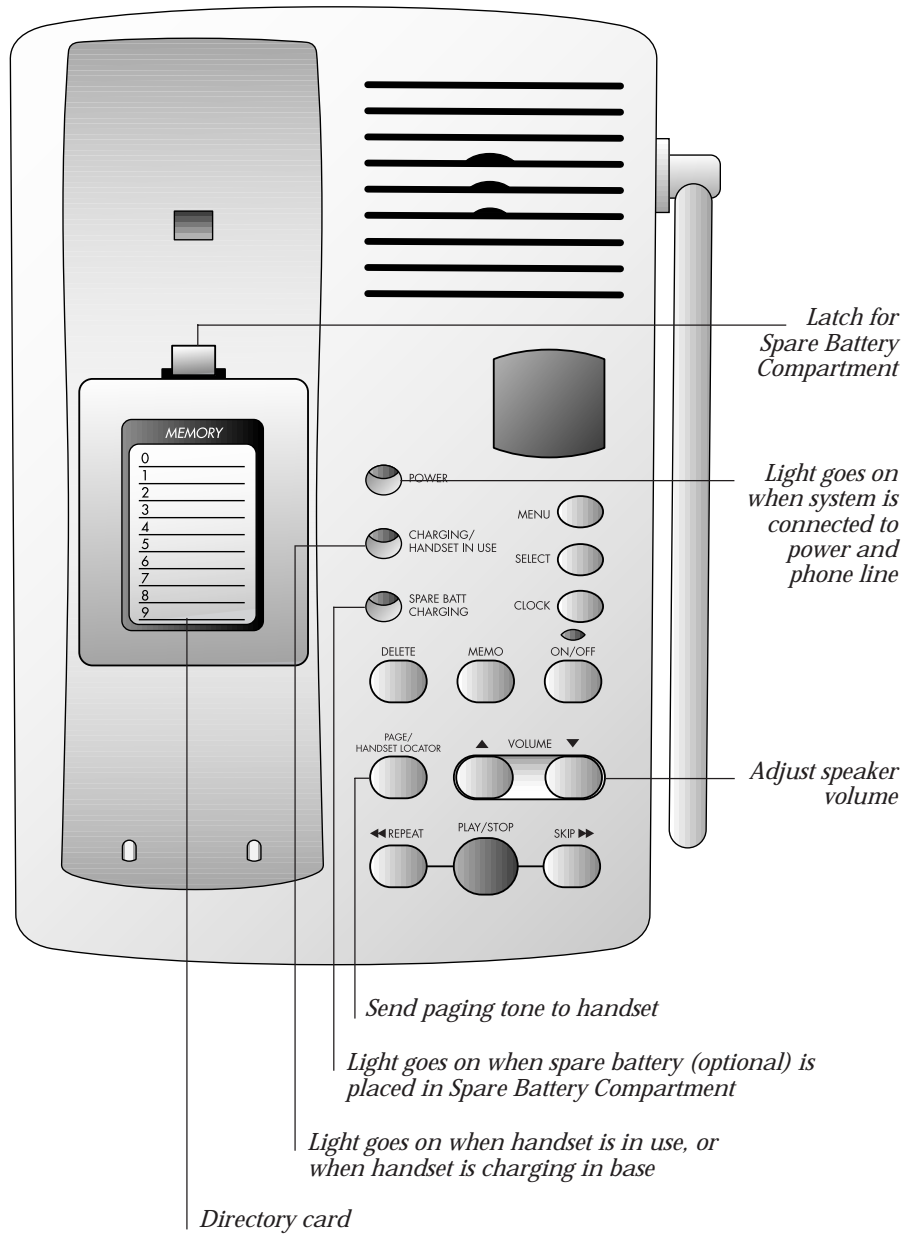



OPERATION

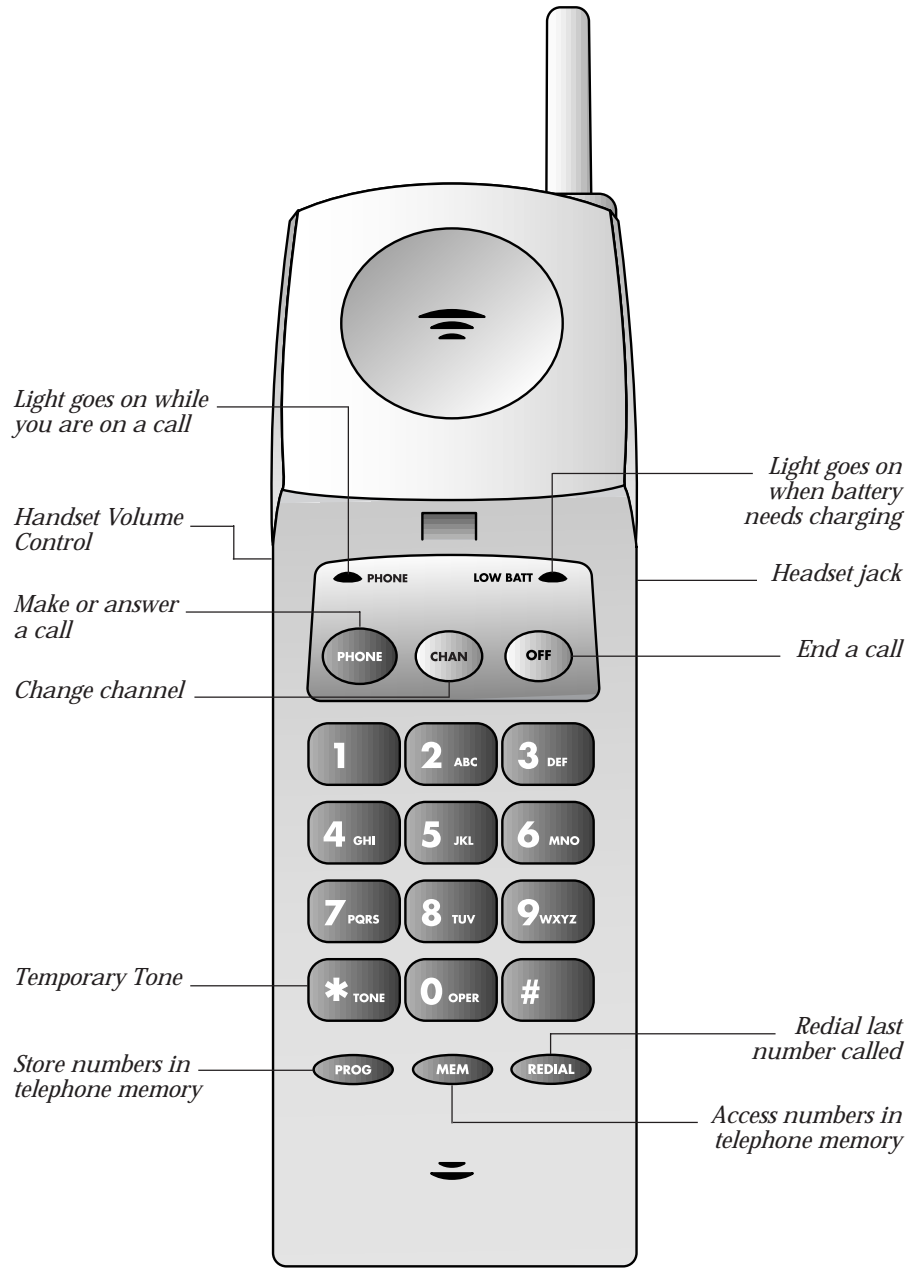



OPERATION

Making a Call

- 1 Press and release **[PHONE]**, and wait for dial tone.
- 2 When you hear a dial tone, dial the number.

Answering a Call

Press **[PHONE]**. The **[PHONE]** light goes on, and the call is connected.

Ending a Call

Press **[OFF]** on the handset.

Redial

The last number dialed on this phone (up to 16 digits) is stored in redial memory until you dial another number.

- 1 Press **[PHONE]**.
- 2 When you hear a dial tone, press **[REDIAL]**.

Handset Ringer Selection and Ringer OFF

You can select from four different handset ringer styles for each line. You can also turn off the ringer.

- 1 Press **[PROG]**, **[#]**.
- 2 Press **[1]**, **[2]**, **[3]** or **[4]** to select your ringer style. You will hear a sample of the ringer style
— **OR** —
Press **[5]** to turn the ringer off.
- 3 Press **[OFF]**.

Checking Handset Ringer Selection

- 1 Press **[PROG]**, **[#]**.
- 2 Press **[0]**. You will hear the current ringer style selection.
- 3 Press **[OFF]**.



OPERATION

Handset Volume

Adjust the handset volume to high (**H**) or low (**L**) using the switch on the side of the handset.

Temporary Tone

***NOTE:** If you have touch tone service, you do not need to use the Temporary Tone feature.*

If you have dial pulse (rotary) service, this feature allows you to enter codes or tones needed to operate answering machines, or use electronic banking services, calling cards, and other special services. This feature will operate most special services; however, some services may actually require a touch tone line. To be sure, ask the company that provides the special service.

- 1 Dial the call, then press **[X]**. Any buttons pressed after this send tone signals.
- 2 After you hang up, the phone automatically returns to dial pulse (rotary) dialing.

Special Telephone Services

If you subscribe to special local telephone company services like Call Waiting or Call Forwarding, you can access them by pressing **[PHONE]** whenever you would press the switchhook on a corded phone. This is like the Flash feature on some other phones.

Page/Handset Locator

The Page feature allows you to signal someone at the handset from the base. You can also use this feature to help you locate the handset.

Press **[PAGE/HANDSET LOCATOR]** on the base. The handset will ring four times before ending automatically. Press **[OFF]** on the handset or **[PAGE/HANDSET LOCATOR]** on the base to cancel the page.




OPERATION

Headset Jack

You can use this telephone hands-free when you install an optional headset and use the belt clip provided.

- 1 Attach the belt clip (see “Belt Clip” in the INSTALLATION section of this manual).
- 2 Plug the headset (purchased separately) into the jack located on the right side of the handset. (For best results, use only an accessory headset with 2.5 mm plug.) Do not force the connection, but make sure the plug fits securely.
- 3 Follow instructions under “Making a Call” or “Answering a Call.”

NOTE: The earpiece and microphone on the handset are disabled when the headset is plugged in.

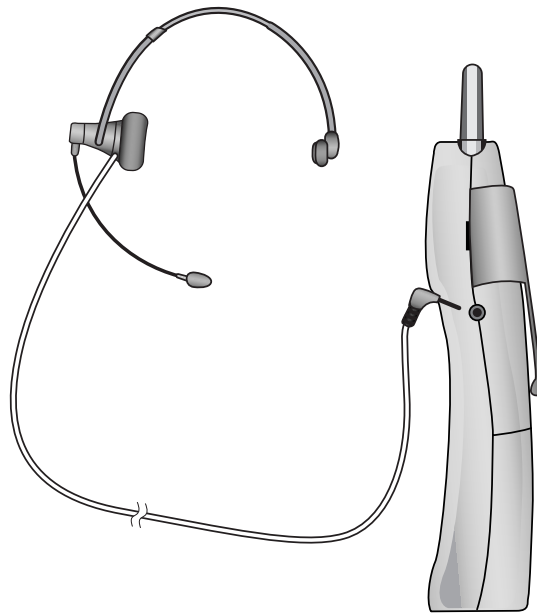



OPERATING RANGE

This cordless telephone operates at the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and base can communicate over only a certain distance — which can vary with the locations of the base and handset, the weather, and the construction of your home or office. For best performance, keep the base antenna fully extended.

If you receive a call while you are out of range, the handset might not ring — or if it does ring, the call might not connect when you press **PHONE**. Move closer to the base, then press **PHONE** to answer the call.

If you move out of range during a phone conversation, you will hear noise or interference. To improve reception, move closer to the base.

If you move out of range without pressing **OFF**, your phone will be left “off the hook.” To hang up properly, walk back into range, periodically pressing **OFF**.

This cordless telephone has 10 channels available for maximum performance.

If you notice noise or interference while using the handset:

- 1 Press **CHAN**.
- 2 If the interference doesn't clear, continue to press **CHAN** until you find a clear channel
— **OR** —
Move closer to the base and press **CHAN**.



TELEPHONE MEMORY

This cordless phone can store 10 telephone numbers that you can dial just by pressing **MEM** and a number button.

Storing Memory Numbers

- 1 Make sure the handset is off.
- 2 Press **PROG** (the PHONE light blinks).
- 3 Press a number key (0 to 9) to select a memory location.
- 4 Enter the number you want to store (up to 16 digits)
— **OR** —
Press **REDIAL** to store the last number dialed.
- 5 Press **MEM**. You will hear a confirmation tone.

Replacing Stored Memory Numbers

You can replace a stored number by storing a new number in its place.

Storing a Pause in a Memory Number

While storing a number in memory, press and hold down the number button that comes before the pause until you hear the second beep. This inserts a two-second pause after that digit. If you hold the button down longer, you will hear more beeps as additional pauses are stored.

For example, to store 9, PAUSE, 555-0123 in memory location 3: Press **PROG**, **3**, then hold down **9** until you hear the second beep. Then press **5 5 5 0 1 2 3**, **MEM**.

Dialing Memory Numbers

- 1 Press **PHONE**.
- 2 Press **MEM**.
- 3 Press the number button (0-9) for the memory location of the number you're calling.

Memory Guard

The phone numbers you store in memory are protected from loss when you change the handset battery, or in the event of a power failure.



ANSWERING SYSTEM SETUP

Turning the System ON/OFF

Press **ON/OFF** to turn the answering system on or off. The ON/OFF light is on when the system is on.

Volume

Press **VOLUME▲** to increase volume when listening to messages. Press **VOLUME▼** to decrease volume.

Setting the Clock

You'll need to set the clock so it can record the day and time that each message is received.

- 1 Press and release **MENU** until you hear "Set day and time."
- 2 Press and release **SELECT** until you hear the correct day of the week.
- 3 Press **CLOCK** to confirm your selection. The system announces the hour.
- 4 Press and release **SELECT** until you hear the correct hour.
- 5 Press and release **CLOCK** to confirm your selection. The system announces the minutes.
- 6 Press and release **SELECT** until you hear the correct minutes.
- 7 Press and release **CLOCK** to confirm your selection. The system announces the current day and time.
- 8 Press and release **MENU** to set up another feature
— OR —
Press and release **PLAY/STOP** to exit.

Announcement Options

Normal Announce Mode

Before using this answering system, you should record an announcement (up to 90 seconds long) that callers will hear when the system answers a call. For example:

"Hello. You've reached Meadowlark Nursery. We are unable to answer your call at this time. Please leave a message after the tone."

If you choose not to record an announcement, the system answers with a prerecorded announcement: *"Hello. I'm unable to answer your call right now. Please leave your name, number and a message after the tone."*



ANSWERING SYSTEM SETUP

Announce Only Mode

You can choose whether the answering system will signal callers and record their message (Normal Announce mode, described above) or play an announcement for callers and then hang up (Announce Only mode). The system lets you record up to two different announcements, one for Normal Announce mode, and one for Announce Only mode. For example:

“You’ve reached the Meadowlark Nursery. We’re sorry we cannot take your call. Please call back tomorrow between 9 AM and 5 PM.”

If you choose not to record an announcement for Announce Only, the system answers with the prerecorded announcement: *“Hello. I’m unable to answer your call right now. Please call again. Thank you.”*

NOTE: *In the Announce Only mode, callers will hear the outgoing announcement twice.*

Selecting Your Announcement

- 1 Press and release **MENU** five times, until you hear “Set Announce Only.”
- 2 Press and release **SELECT**. The system prompts with “On” or “Off.” Press and release **SELECT** until you hear your choice. Select Off if you want callers to be able to leave a message.
- 3 Press and release **CLOCK** to confirm your selection.
- 4 Press and release **MENU** to set up another feature
— **OR** —
Press and release **PLAY/STOP** to exit.

Recording Your Announcement

- 1 Select your announcement (see above).
- 2 Press and release **MENU** until you hear “Set outgoing message.”
- 3 Press and release **MEMO**. The system prompts “Now recording.”
- 4 Begin recording your announcement, up to 90 seconds long. The Message Window shows the elapsed time of your announcement as you record. Record your announcement in a quiet location, away from any background noise.
- 5 Press and release **PLAY/STOP**. The system plays back your announcement.



ANSWERING SYSTEM SETUP

To return to the prerecorded announcement

- 1 Press and release **MENU** until you hear “Set outgoing message.”
- 2 Press and release **PLAY/STOP**. The system plays the current announcement.
- 3 Press and release **DELETE** while the announcement is playing. The system prompts “Outgoing message has been erased.”
- 4 Press and release **MENU** to set up another feature
— **OR** —
Press and release **PLAY/STOP** to exit.

Ring Select and Toll Saver

Use Ring Select to select how many times the phone will ring before the system answers a call. Set for 2, 4 or 6 rings, or set to Toll Saver. When you set the system to Toll Saver, the system answers after 4 rings when you have no new messages, and after 2 rings when you have new messages.

- 1 Press and release **MENU** until you hear “Set number of rings.”
- 2 Press and release **SELECT** until you hear your desired setting (2, 4, 6 or Toll Saver).
- 3 Press and release **CLOCK** to confirm your selection. The system announces your ring selection.
- 4 Press and release **MENU** to set up another feature
— **OR** —
Press and release **PLAY/STOP** to exit.

Audible Message Alert

If you want the base to beep once every 10 seconds to notify you that new messages have been received, set the Message Alert to ON. (The Message Window displays **OH** for on, and **OF** for off.)

- 1 Press and release **MENU** until you hear “Set audible message alert.”
- 2 Press and release **SELECT**. The system announces the current setting.
- 3 Press and release **SELECT** until the system announces your selection (on or off).
- 4 Press and release **CLOCK** to confirm your selection. The system announces your selection.
- 5 Press and release **MENU** to set up another feature
— **OR** —
Press and release **PLAY/STOP** to exit.



ANSWERING SYSTEM SETUP

NOTE: You may stop the Audible Message Alert beep by pressing any button (except **PAGE/HANDSET LOCATOR**) on the base. When new messages are received, the Audible Message Alert is activated again.

Remote Access Code

The Remote Access Code allows you to access features and functions of the answering system from a touch tone phone. The Remote Access Code is preset to 19, but you can change it to any two-digit number following the steps below.

- 1 Press and release **MENU** until you hear “Set security code.”
- 2 Press and release **SELECT** to hear the current Remote Access Code.
- 3 Press and release **SELECT** to increase the code by one
— **OR** —
Press and hold **SELECT** to increase the code by ten. The Message Window displays the Remote Access Code as you change it.
- 4 Press and release **CLOCK** to confirm your selection. The system announces your new Remote Access Code.
- 5 Press and release **MENU** to set up another feature
— **OR** —
Press and release **PLAY/STOP** to exit.


Base Ringer Setting

- 1 Press and release **MENU** until you hear “Set base ringer.”
- 2 Press and release **SELECT**. The Message Window briefly displays the current setting.
- 3 Press and release **SELECT** until the Message Window displays your selection — **ON** (on) or **OFF** (off).
- 4 Press and release **CLOCK** to confirm your selection. The system announces your selection.
- 5 Press and release **MENU** to set up another feature
— **OR** —
Press and release **PLAY/STOP** to exit.

NOTE: The Base Ringer Setting does not affect the handset ringer.



ANSWERING SYSTEM OPERATION AT THE BASE

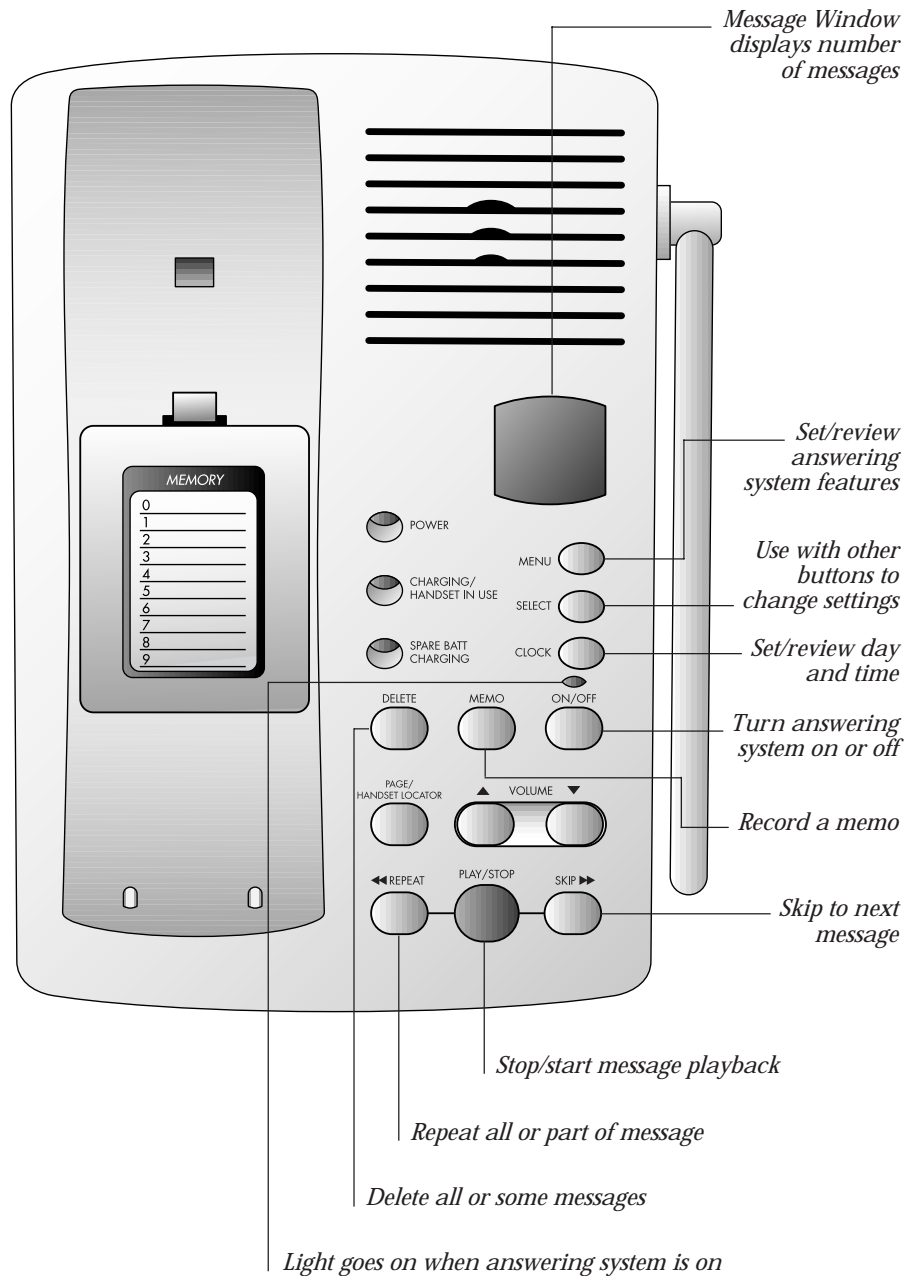



ANSWERING SYSTEM OPERATION AT THE BASE

Answering Calls

When the system is on and you've selected the Normal Announce mode, the caller hears the announcement, followed by a beep. A caller can leave a message up to 4 minutes long. If the message is longer than 4 minutes or shorter than 2 seconds, or if the caller is silent for more than 6 seconds, or if the system runs out of memory, the system beeps once and hangs up.

If you've selected Announce Only, callers hear your announcement twice, but cannot leave a message.

Call Screening/Intercept

Set the volume control so you can hear the caller's message. If you decide to take the call, press **PHONE** on the handset, or lift the handset of an extension phone. (If you pick up the handset or an extension phone during the announcement and the announcement does not stop right away, press **⊗** **0** on the handset or extension phone, or press **PLAY/STOP** on the base.)

Listening to Your Messages

As the system plays back messages, the Message Window displays the number of the message playing. After playing each message, the system announces the day and time the message was received. After playing the last message, the system announces "End of messages."

Play all messages

Press and release **PLAY/STOP**. The system announces the total number of new and old messages, then plays the new messages. If there are no new messages, the system plays the old messages.

Repeat entire message

Press and release **REPEAT** after hearing the first 2 seconds.

Back up to earlier message

Press and release **REPEAT** until the Message Window displays the number of the message you want.

Skip to next message

Press and release **SKIP**.

Skip ahead to later message

Press and release **SKIP** until the Message Window displays the number of the message you want.

Stop message playback

Press and release **PLAY/STOP**.





ANSWERING SYSTEM OPERATION

AT THE BASE

Saving Messages

The system saves your messages automatically until you delete them, and can store approximately 15 minutes of messages, memos and announcements (up to a maximum of 99 messages). When memory is full, or the maximum number of messages is recorded, the Message Window flashes F (for Full) and the number of messages. You'll need to delete messages to make room for new ones. (Messages are saved even if the power adapter is unplugged, or in the event of a power failure.)

NOTE: When full, the system automatically turns off. The system answers calls after 10 rings and prompts "Memory full. Please enter your security code." You can now access your system remotely, even though it's set to off. (See ANSWERING SYSTEM OPERATION – FROM A REMOTE TOUCH TONE PHONE.)

Deleting Messages

Delete all messages

Press and hold **DELETE** to delete all old messages. The system will not delete messages that have not been played.

Delete selected messages

Press and release **DELETE** while the message you want to delete is playing. The system continues with the next message.

Recording a Memo

You can record a memo to be stored as an incoming message. The memo can be up to 4 minutes long, and will be played back with other messages.

- 1 Press and release **MEMO**. The system prompts "Now recording," followed by a beep.
- 2 After the beep, speak toward the microphone.
- 3 To stop recording, press and release **PLAY/STOP**.



ANSWERING SYSTEM OPERATION FROM A REMOTE TOUCH TONE PHONE

This cordless telephone answering system allows you to retrieve messages and access other features using a remote touch tone phone, even when you are away from your home or office.

Connect with the Answering System

- 1 Dial your telephone number.
- 2 When the outgoing announcement begins to play, press and release **#**, then immediately enter your Remote Access Code (see "Remote Access Code" in ANSWERING SYSTEM SETUP).
- 3 The system beeps once, announces the number of new messages, and plays back any new messages.

Voice Help Menu

About 10 seconds after messages have been played, the system gives you a list of remote commands:

- Press **# 2** to play all messages
- Press **# 5** to stop
- Press **# 4** to repeat the message
- Press **# 6** to skip the message
- Press **# 9** to erase the message
- Press **# 7** for other functions.

If you press **# 7** for other functions, the system gives you a new list of selections:

- Press **# 7** to review the outgoing message
- Press *** 7** to record an outgoing message
- Press *** 8** to record a memo
- Press **# 4** twice to repeat the previous message
- Press **# 0** to turn the system on or off
- Press **# 7** for other functions (returns you to first list of selections)
- Press *** 0** to exit remote operation mode.

Remote Access Commands

Playing Messages

- 1 **Connect with the answering system.**
- 2 Listen to new messages.
- 3 To play all messages, press **# 2**.
To repeat a message, press **# 4**.
To return to the previous message, press **# 4 # 4**.
To skip a message, press **# 6**.
To stop message playback, press **# 5**.
To save messages, hang up.

20





ANSWERING SYSTEM OPERATION

FROM A REMOTE TOUCH TONE PHONE

Deleting Messages

- 1 **Connect with the answering system, and begin playing messages.**
- 2 While the message is playing, press **# 9**.

Recording Outgoing Announcement

- 1 **Connect with the answering system.**
- 2 Press *** 7**, and begin recording your announcement.
- 3 When you're finished recording, hang up.

Reviewing Outgoing Announcement

- 1 **Connect with the answering system.**
- 2 Press **# 7**.

Recording a Memo

- 1 **Connect with the answering system.**
- 2 Press *** 8**, and begin recording your memo.
- 3 When you're finished recording, hang up.

Remote ON/OFF

Turning System Off

- 1 **Connect with the answering system.**
- 2 Press **# 0**. The system announces the new on/off status. (Pressing **# 0** again changes the status again.)

Turning System On

- 1 When the system is off, or if memory is full, the system answers after 10 rings, and prompts you to enter your Remote Access Code.
- 2 Press **#** and enter your Remote Access Code.
- 3 Press **# 0** to turn the system on.



BATTERIES



CAUTION: To reduce the risk of fire or injury to persons or damage to the telephone, read and follow these instructions carefully.

- Use only Replacement Battery 3470.
- Do not dispose of the battery in a fire. The cell might explode. Check with local codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- Exercise care in handling batteries in order not to short the battery pack with conducting materials such as rings, bracelets, and keys. The battery pack or conductor may overheat and cause harm.
- Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
- Make sure the battery is inserted properly so the metal contacts on the battery are aligned with the charging contacts in the battery compartment.

Charging the Handset Battery Pack

The batteries need charging when:

- The LOW BATT light on the handset is on.
- The phone does not respond when you press **PHONE**, and no lights go on.

Place the handset in the base so the CHARGING light goes on. The batteries will be fully charged in 10 hours (16 hours for first charge).

NOTE: For optimum battery performance, do not place the handset in the base until the LOW BATT indicator lights.

Charging the Spare Battery Pack

The spare battery charging compartment is located in the base cradle. You can use the spare battery pack to replace the current handset battery pack right away if it becomes depleted. The spare handset battery pack is optional, and must be purchased separately.






BATTERIES

- 1 Open the battery door on top of the base cradle by lifting the latch on top.
- 2 Insert the battery. The SPARE BATT CHARGING light goes on.
- 3 Replace the battery door. The spare battery will be charged in about 24 hours.



Replacing the Handset Battery Pack

- 1 Remove the battery cover by pressing on the indentation and sliding downward.
- 2 Lift out the old battery pack.
- 3 Install the new battery pack so that the metal contacts on the bottom of the battery are aligned with the charging contacts in the battery compartment.
- 4 Replace the battery cover by sliding it on its track up over the battery compartment until it snaps firmly in place.
- 5 The new battery pack must be charged before using this telephone. Place the handset in the base and allow it to charge for 16 hours. Your telephone might operate before that, but for best performance, let the handset battery pack charge fully.

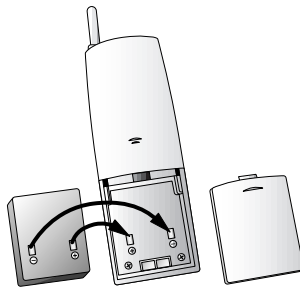



IN CASE OF DIFFICULTY

If you have difficulty operating this phone, try the suggestions below. If you still have trouble, call 1 800 722-9125.

If the phone doesn't work at all, check these items first:

- Make sure the AC adapter is plugged in.
- Make sure the telephone line cord is plugged firmly into the base unit and the modular jack.
- Make sure the antenna is fully extended.
- If the LOW BATT light is on, the battery pack needs recharging. If the battery pack will not charge, replace it with replacement battery 3470.
- Make sure the battery pack is installed correctly.
- If you have dial pulse (rotary) service on your phone line, make sure the dial mode switch is set to **PULSE**.

If the above suggestions don't solve the problem, try re-initializing the handset and base:

- 1 Disconnect the power to the base.
- 2 Remove the handset battery pack.
- 3 Wait a few minutes.
- 4 Connect the power to the base.
- 5 Insert the handset battery pack.
- 6 Put the handset in the base to re-initialize.

If you hear noise or interference when using the phone:

- Make sure the base antenna is fully upright.
- You may be out of range. Move closer to the base.
- Press and release **CHAN** to change to another of the 10 channels available. If the noise is exceptionally loud, move closer to the base before changing channels.
- Household appliances plugged into the same circuit as the base can sometimes cause interference. Try moving the appliance or the base to another outlet.
- The layout of your home or office might be limiting the operating range. Try moving the base to another location, preferably on an upper floor.





IN CASE OF DIFFICULTY

If the phone does not ring when you receive a call:

- Make sure the handset ringer is on.
- Make sure the telephone line cord is connected firmly to the base and the telephone jack.
- Make sure the AC adapter is plugged firmly into an outlet not controlled by a wall switch.
- You might be too far from the base; move closer.
- You might have too many extension phones on your telephone line to allow all of them to ring. Try unplugging some of them.
- Press **CHAN** to change to another channel.

If you hear other calls while using your phone:

- Press **CHAN** to change to another channel.
- Disconnect the base from the modular jack and plug in a corded telephone. If you still hear other calls, the problem is probably in your wiring or local service. Call your local telephone service company.

If messages are incomplete:

- If a caller leaves a very long message, part of it may be lost when the system disconnects the call after 4 minutes.
- If the caller pauses for more than 6 seconds, the system stops recording and disconnects the call.
- If the system's memory becomes full during a message, the system stops recording and disconnects the call.

If you have difficulty hearing messages:

Check the volume setting on the base.

If the system does not answer after the correct number of rings:

- Make sure the ON/OFF light is on. If it is not, press **ON/OFF** on the base.
- If Toll Saver is on, the number of rings changes to two when you have new messages waiting.
- In some cases, the system may be affected by the ringing system used by the local telephone company.
- If the memory is full or the system is off, the system answers after 10 rings.

If **CL** appears in the Message Window:

You need to reset the clock.



IN CASE OF DIFFICULTY

If the system does not respond to remote commands from a touch tone phone:

- Make sure you are calling from a touch tone phone. When you dial a number, you should hear tones. If you hear clicks instead, the phone is not a touch tone telephone.
- The answering system may not detect the Remote Access Code while your announcement is playing. Try waiting until the announcement is over before entering the code.
- Be sure to press **#**, then enter your Remote Access Code within two seconds. Make sure you enter your Remote Access Code correctly.
- There may be noise or interference on the phone line you are using. Press keys firmly.

If your outgoing announcement isn't clear:

- When you record your announcement, make sure you speak in a normal tone of voice, about nine inches from the base.
- Make sure there is no "background" noise while you are recording.





Cordless Telephone Answering System 9050

Connect with Answering System

- 1 Dial telephone number and wait for system to answer.
- 2 Press and release **#**, then immediately enter Remote Access Code.
- 3 After the system beeps once, new messages are played. Enter a command from the other side of this card.

Your Remote Access Code _____
(The preset code is 19)

© 1998 Philips Consumer Communications L.P.
All rights reserved. Printed in China.
848232542 Issue 1AT&T

Perf. 



Cordless Telephone Answering System 9050

Connect with Answering System

- 1 Dial telephone number and wait for system to answer.
- 2 Press and release **#**, then immediately enter Remote Access Code.
- 3 After the system beeps once, new messages are played. Enter a command from the other side of this card.

Your Remote Access Code _____
(The preset code is 19)

© 1998 Philips Consumer Communications L.P.
All rights reserved. Printed in China.
848232542 Issue 1AT&T





OPTION

Play all messages
 Save messages
 Delete messages
 Repeat a message
 Return to the previous message
 Skip a message
 Stop playback
 Change announcement
 Review announcement
 Record a memo
 Change on/off status
 Turn system on

PRESS

2
 Hang up
 # 9
 # 4
 # 4 # 4
 # 6
 # 5
 * 7, hang up when finished recording
 # 7
 * 8, hang up when finished recording
 # 0
 #, enter Remote Access Code, press # 0 to change on/off status

Perf.

OPTION

Play all messages
 Save messages
 Delete messages
 Repeat a message
 Return to the previous message
 Skip a message
 Stop playback
 Change announcement
 Review announcement
 Record a memo
 Change on/off status
 Turn system on

PRESS

2
 Hang up
 # 9
 # 4
 # 4 # 4
 # 6
 # 5
 * 7, hang up when finished recording
 # 7
 * 8, hang up when finished recording
 # 0
 #, enter Remote Access Code, press # 0 to change on/off status

