

User's manual

E5812B/E5813B/E5814B/ E1812B/E1813B/E1814B 5.8 GHz cordless telephone/ answering system with caller ID/call waiting





# **Congratulations**

on purchasing your new AT&T product.

Before using this AT&T product, please read the **Important safety instructions** on pages 51-53 of this manual.

Please thoroughly read the user's manual for all the feature operations and troubleshooting information necessary to install and operate your new AT&T product. You can also visit our website at www.telephones.att.com

or call 1 (800) 222-3111. In Canada dial 1 (866) 288-4268.

Model #:	E5812B/E5813B/E5814B/E1812B/E1813B/E1814B
Product name:	5.8GHz cordless telephone/answering system
Serial #:	
	(found on the bottom of the telephone base)
Purchase date:	
Place of purchase:	

You must install and charge the battery before using the telephone.



**See page 7** for easy instructions.

For customer service or product information, visit our website at www.telephones.att.com or call 1 (800) 222-3111. In Canada dial 1 (866) 288-4268.

**CAUTION:** To reduce the risk of fire or injury to persons or damage to the telephone, read and follow these instructions carefully:

- Use only the supplied rechargeable battery or replacement battery 2422 (SKU 23402, part number 89-0047-00-00) or equivalent. To order a replacement battery, visit our website at www.telephones.att.com or call 1 (800) 222-3111. In Canada dial 1 (866) 288-4268.
- Do not dispose of the battery in a fire. Like other batteries of this type, it could explode if burned. Check with local codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit. Do not allow conductive materials such as rings, bracelets, or keys to touch the battery. The battery or conductor may overheat and cause harm.
- Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
- · Observe proper polarity orientation between the battery and battery charger.
- Do not disassemble your telephone. There are no user-serviceable parts inside. Refer to qualified service personnel for servicing.

# User's manual

E5812B/E5813B/E5814B/ E1812B/E1813B/E1814B 5.8 GHz cordless telephone/ answering system with caller ID/call waiting

Delete call summary entries...... 31 Add entries to the directory...... 32



# Table of contents

Getting started	Answering system operation
Quick reference guide2	Answering system operation33
Parts checklist4	Day & time announcements34
Telephone base installation5	Outgoing announcements35
Battery installation & charging7	Changing feature options36
Installation options8	Message playback37
Belt clip & optional headset10	Recording & playing memos38
Talambana anavatian	Message counter displays39
Telephone operation	Answering system mode40
Settings11	Remote access41
Basic operation14	
Options while on calls17	Appendix
Call transfer for E5812B/E1812B18	Screen icons, indicator lights
Call transfer for E5813B/E1813B19	& tones42
Call transfer for E5814B/E1814B20	Handset display screen messages43
Directory	Troubleshooting45
Directory21	Important safety instructions51
Speed dial22	FCC Part 68 & ACTA54
New directory entries23	FCC Part 1555
Directory search25	Limited warranty56
To change or dial entries26	Technical specifications59
_	·
Caller ID summary	Index60
Caller ID summary27	Remote access wallet card61
To review the call summary 30	

# Quick reference guide

### **Cordless handset**

### **▼CID/-VOLUME**

While in a menu, press to scoll down. When in idle mode, press to display call summary entries (page 30). While entering names or numbers, press to move the cursor to the left. During a call, press **VCID** to decrease listening volume.

### **\ PHONE/FLASH**

Press to make or answer a call. During a call, press to receive an incoming call if call waiting is activated (page 17).

### **CHAN/DELETE**

When on a call, press CHAN/DELETE to scan for a clearer channel when there is static or interference on the line (page 17). When in caller ID mode, press to delete the displayed caller ID entry (page 31), or press and hold to delete all caller ID entries (page 31).

### **■** SPEAKER

Press to activate handset speakerphone. Press again to resume normal handset use (page 14).

# Feature menu



### → Feature menu

DIRECTORY	Page 21
SPEED DIAL	Page 22
RINGER	Page 12
DATE/TIME	Page 12
DIAL MODE	Page 11
LANGUAGE	Page 11

SPEAKER

### DIR A/VOLUME+

While in a menu, press to scoll up. When in idle mode, press to display directory entries (page 25). While entering names, press to advance the cursor. During a call, press DIR to increase listening volume

### **€**OFF/CLEAR

During a call, press to hang up. While using menus, press to cancel an operation, or exit the menu (page 12).

### MENU/SEL/TRANSFER

Press to display a menu or to confirm a command. During a call, press to transfer a call between handsets (pages 18 - 20).

### MUTE

While on a call, press to mute microphone. Press again to resume (page 17).

### **REDIAL/PAUSE**

While in idle mode, press to display last number called (page 15). While dialing or entering numbers to the directory, press to insert a four-second dialing pause (page 24).

### Using menus

Press  $\nabla$ CID or DIR  $\triangle$  to scroll through menu items.

Press **MENU/SEL** to select or modify a highlighted item.

Press OFF/clear to cancel an operation, or exit the menu display.

# Quick reference guide

# Telephone base

### **CHARGE/IN USE**

- Flashes when one of the handsets is in use.
- Flashes when the answering system is answering an incoming call.
- Flashes quickly while an incoming call is ringing.
- On steady when the handset is properly positioned to charge in the telephone base.



at&t

REPEAT

5.8 GHz

Q PIGITA

### HANDSET LOCATOR

Press to make the handsets beep when there is no handset on the telephone base (page 16).

### **SETUP**

Press to review or change answering system options (page 36).

### MESSAGE COUNTER

Number of messages (or during playback, message number currently playing).

### CLOCK

Press to review or set clock (page 34).

### **X** DELETE

Press to delete message currently playing; <u>press and</u> <u>hold</u> to delete all old messages (page 37).

### **REPEAT**

Press to repeat message; press **twice** to play previous message (page 37).

### ▶/■ PLAY/STOP

Press to start or stop message playback (page 37).

### ANNC.

Press to review or record announcement; press again to quit (page 35).

### **RECORD**

Press to record a memo (page 38) or after pressing **ANNC.** to record an outgoing announcement (page 35).

### ANSWER ON

Press to turn answering system on or off (page 40).

### **♦ VOLUME**

Press to adjust playback volume (page 37).

### **₩**SKIP

Press to skip message (page 37).



### Parts checklist

Save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service.

Check to make sure the telephone package includes the following. The model number of your telephone can be found on the label located on the bottom of the telephone base.



User's manual



Quick start guide




Cordless handset (2 for E1812B/E5812B) (3 for E1813B/E5813B) (4 for E1814B/E5814B)



Telephone base



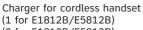

(2 for E1813B/E5813B) (3 for E1814B/E5814B)



Battery for cordless handset (2 for E1812B/E5812B) (3 for E1813B/E5813B)

(4 for E1814B/E5814B)



Battery compartment cover (2 for E1812B/E5812B) (3 for E1813B/E5813B) (4 for E1814B/E5814B)



Power adapter for telephone base



Power adapter for handset charger (1 for E1812B/E5812B) (2 for E1813B/E5813B)

(3 for E1814B/E5814B)



Belt clip for cordless handset

(2 for E1812B/E5812B) (3 for E1813B/E5813B) (4 for E1814B/E5814B)



Telephone line cord


# Telephone base installation

Choose a central location close to a telephone jack and a power outlet not connected to a wall switch. The telephone base can be placed on a flat surface or mounted on a standard wall plate. For optimum range and better reception, place the telephone base in a high and open location.

### Avoid placing the telephone base too close to:

- Communication devices such as: personal computers, computer routers, television sets, VCRs, wireless routers (wireless broadband, wi-fi, or 802.11) or other cordless telephones.
- Excessive heat sources.
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting.
- Excessive dust sources such as a workshop or garage.
- Excessive moisture.
- Extremely low temperature.
- Mechanical vibration or shock such as on top of the washing machine or work bench.

# Telephone base installation

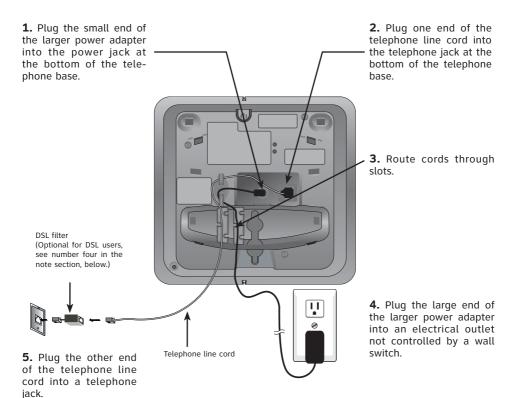



- 1. Use only the power adapter supplied with this product or equivalent. To order a replacement power adapter, visit our website at www.telephones.att.com or call 1 (800) 222-3111. In Canada dial 1 (866) 288-4268.
- 2. Be sure to use an electrical outlet not controlled by a wall switch.
- 3. This power adapter is intended to be correctly oriented in a vertical or floor mount position.
- 4. If you receive high speed internet through your telephone line (commonly referred to as DSL), and you are experiencing interference during telephone conversations and/or your caller ID features are not functioning properly, install a DSL filter to the telephone line between the telephone base and the telephone wall jack. Contact your DSL service provider for a DSL filter.

# Battery installation & charging

After installing the battery, you may be able to make or receive short calls. For best performance, place the handset in the telephone base or charger to charge for 16 hours before use.

You can keep the battery charged by returning the handset to the telephone base or charger after use. When the battery is fully depleted, a recharge takes about 12 hours. The average talk time on a fully charged battery is about five hours, and the standby time is approximately six days. Actual battery life depends on usage conditions and age of battery.

1. Plug the small end of the smaller power adapter into the jack on the underside of the charger, then route the cord through the slot as shown.

2. Plug the large end of the smaller power adapter into an electrical outlet not controlled by a wall switch.





3. Insert the plug as indicated. Be sure to securely insert the plug, making sure that it matches the color-coded label inside the battery compartment.

4. Place the battery and wires inside the compartment.

5. Slide the battery compartment cover up until it clicks.

6. You may be able to make or receive short calls. For best performance, place the handset in the telephone base or charger to charge for at least 16 hours before first use.



NEEDS RECHARGING

To replace the battery, press in and downward on the tab of the battery compartment to open the battery compartment cover. Lift out the old battery and disconnect it from the handset. Follow the instructions on this page to install and charge the new battery.

**Battery low indicator** 

Return the handset to the telephone base or charger to recharge when this symbol flashes and the handset beeps or when the handset screen displays **NEEDS RECHARGING.** 


**NOTE:** Under normal conditions, the battery should last around one year. This may vary depending on usage.


Caution: Use only the supplied rechargeable battery, replacement battery 2422 (SKU 23402, part number 89-0047-00-00) or equivalent. To order a replacement battery, visit our website at www.telephones.att.com or call 1 (800) 222-3111. In Canada dial 1 (866) 288-4268.

# Installation options



NOTE: The mounting bracket must be used for both tabletop use and wall mounting positions.

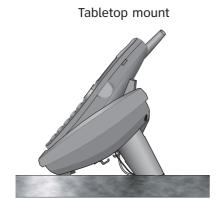

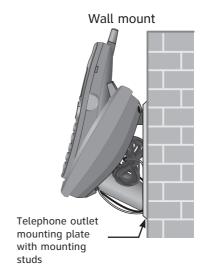

# Wall mounting

The telephone base comes with the bracket mounted for tabletop use. If wall mounting is desired, a telephone outlet wall mounting plate with mounting studs is required. This mounting plate with studs may be available for purchase from many hardware or consumer electronics retailers and may require professional installation.

- 1. To remove the bracket, hold the telephone base in both hands, press the two bracket tabs and lift the bracket away from slots @ and @.
- 2. Connect the telephone line cord and power adapter to the jacks on the bottom of the telephone base. Bundle the telephone cord, and secure it with a twist tie before placing it inside the bracket.








# Installation options

- 3. To attach the bracket for wall mounting, insert the tabs of the bracket into slots (a) and (b) on the telephone base, then press the other bracket tabs into slots (a) and (b) as shown on the right.
- 4. Plug the power adapter into an electrical outlet not controlled by a wall switch. Plug the telephone line cord into a telephone wall jack. To mount the telephone on the wall, position the mounting holes (i) and (j) over the telephone outlet mounting studs. Press and slide the bracket down firmly so the telephone is held securely on the telephone outlet mounting studs.

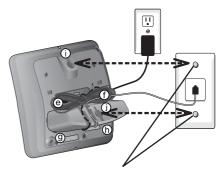


Telephone outlet mounting studs


### **Tabletop mounting**

To return the bracket from the wall mount to tabletop position, follow the directions below.

- Remove the telephone base from the wall. Unplug the cords from the wall jacks. Remove the bracket from the telephone base.
- Insert the bracket tabs into slots © and @ on the telephone base, then press the other bracket tabs into slots @ and b.

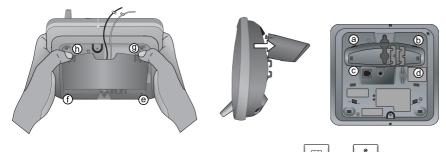


Route cords through slots. Plug the other end of the telephone line cord into a telephone wall jack. Plug the large end of the larger power adapter into an electrical outlet not controlled by a wall switch.

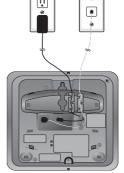


# Belt clip & optional headset

Install belt clip as shown below if desired.

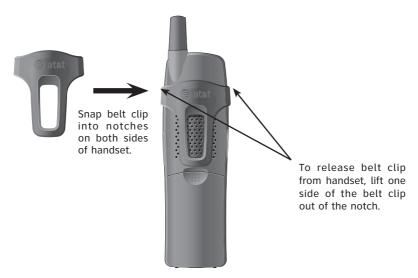

For hands-free telephone conversations, use any industry standard 2.5 mm headset (purchased separately). For best results, use an AT&T 2.5 mm headset. To order an AT&T 2.5 mm headset, visit our website at www.telephones.att.com or call 1 (800) 222-3111. In Canada dial 1 (866) 288-4268.

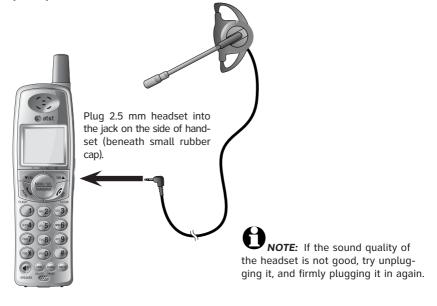

# Settings

Each cordless handset operates individually from the other handsets. The ringer sound, ringer volume, date and time, dial mode and language must be programmed separately for each cordless handset. Follow the steps below to program the cordless handset. To stop at any time, press OFF/CLEAR.

### Language

The default language for the handset screen displays is English. To change the language to Espanol, or Francais:

- 1. Press MENU/SEL.
- 2. Press ▼CID or DIR ▲ until the screen displays LANGUAGE.
- 3. Use **MENU/SEL** to change the current setting.
- Press ▼ciD or DiR ▲ to choose among ENGLISH, FRANCAIS, or ESPANOL.
- 5. Press **MENU/SEL** to confirm your selection and exit.

### Choose dial mode

The dial mode defaults to tone. If you do not have touch tone service, you'll need to change the setting to pulse:

- 1. Press MENU/SEL.
- 2. Press ▼CID or DIR ▲ until the screen displays DIAL MODE: and the current setting.
- 3. Use **MENU/SEL** to change the current setting.
- 4. Press **▼CID** or **DIR** ▲ to display **TONE** or **PULSE**.
- Press MENU/SEL to confirm your selection and exit.

LANGUAGE



DIAL MODE: TONE



# Settings

### Selectalbe ringer melodies

- 1. Press MENU/SEL to begin programming.
- 2. Press ▼CID or DIR ▲ until the screen displays RINGER: and the current setting.
- 3. Use **MENU/SEL** to change the current setting.
- Press ▼CID or DIR ▲ to display 1, 2, 3, 4 or OFF.
   You will hear a sample of each ringer sound.
- Press MENU/SEL to choose displayed ringer sound and exit.

**NOTE:** If you choose **OFF**, the cordless handset ringer will be turned off, and the screen will display **RINGER OFF** and  $\boxtimes$  when the cordless handset is idle (not in use). If there are any un-reviewed calls, the screen will display **XX MISSED CALLS** and  $\boxtimes$  instead of **RINGER OFF** and  $\boxtimes$ .

### Set cordless handset display date and time

- 1. Press MENU/SEL to begin programming.
- Press ▼CID or DIR ▲ until the screen displays DATE/TIME.
- 3. Press MENU/SEL to view or set date and time.
- 4. Press ▼CID or DIR ▲ to change the month in the date and time line at the bottom of the display, then press MENU/SEL.
- Repeat step four to set day, hour, minute, and AM/PM.
- 6. Press MENU/SEL to save selection and exit.







### NOTES:

- L. You can choose to set the time manually, or you can allow it to be set automatically with incoming caller ID information. The time will be set automatically only if you subscribe to caller ID service provided by your local telephone company (page 27). The date and time for the answering machine need to be set separately (page 34).
- Caller ID will not set the year.See page 34 for instructions on how to set the year.

# Settings

### Choose ringer volume setting



- 1. Press and hold ▼CID or DIR ▲ when the cordless handset is idle (not in use). This feature allows you to choose low, med, high ringer volume or turn the ringer off.
- 2. Press ▼CID or DIR ▲ to choose the desired option. You will hear a sample of each ringer volume.
- Press MENU/SEL to choose blinking ringer volume and exit.

**NOTE:** If you choose **OFF**, the cordless handset ringer will be turned off, and the screen will display **RINGER OFF** and  $\boxtimes$  when the cordless handset is idle (not in use). If there are any un-reviewed calls, the screen will display **XX MISSED CALLS** and  $\boxtimes$  instead of **RINGER OFF** and  $\boxtimes$ .



NOTE: Only one cordless handset can be on a call at a time. If another cordless handset attempts to join a call, its screen will display OTHER HANDSET ON and then OR OUT OF RANGE.



# Basic operation

### Making and answering calls

To answer an incoming call, press any keys (except ▼CID, DIR ▲ and OFF/clear). To make a call, press \PHONE/FLASH or \SPEAKER, then dial a number. Press OFF/clear to hang up.

To predial (preview numbers before dialing), enter numbers first, then press **\PHONE/FLASH** or **■ SPEAKER** to dial. Press **▼CID** then **CHAN/DELETE** anytime to make corrections when entering numbers.

The screen displays the elapsed time of the current call (in hours, minutes and seconds).



### NOTES:

- The elapsed time format is in minutes and seconds MM:SS until one hour has elapsed, then it will change to hours, minutes and seconds H:MM:SS.
- 2. Pressing \PHONE/FLASH to access service from your local telephone service provider will not affect the elapsed time. The elapsed time will not be carried over to the other cordless handset on a transferred call.


### Hands-free speakerphone calls

To answer a call, press SPEAKER. To make a call, press SPEAKER, then dial a number. During a call press SPEAKER to switch between hands-free speakerphone and normal handset use. Press OFF/CLEAR to hang up.

**NOTE:** If a headset is plugged into the handset, the handset speakerphone will be disabled.

# Basic operation

### Last number redial

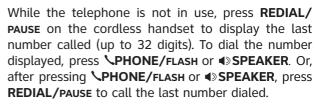

To delete this number, press **REDIAL/PAUSE** twice when the telephone is not in use. This will clear the redial memory and leave it blank.

Press **OFF/CLEAR** to exit.



### Temporary ring silencing

Press **OFF/CLEAR** while the telephone is ringing to silence the ringer temporarily. This will silence the ringer without disconnecting the call. You can answer the call or let the caller leave a message on the answering system. The next incoming call will ring normally.

Telephone operation





# Basic operation

### **Handset locator**

If you misplace the handset(s), press HANDSET LOCATOR on the telephone base. This starts the paging tone at the handset(s) for 60 seconds to help you locate it/them. To stop the paging tone, press OFF/CLEAR on cordless handset, or place cordless handset in the telephone base, the telephone base, or press the HANDSET LOCATOR on the telephone base.



### NOTES:

- Pressing OFF/CLEAR on any cordless handset will cancel the page of that specific handset.
- 2. If one of the cordless handsets is charging in the base, pressing **O'HANDSET LOCATOR** does not generate a paging tone.

# Options while on calls

### Volume control

Press ▼CID/-VOLUME to decrease the volume.

Press DIR ▲/VOLUME+ to increase the volume.

When changing the volume level, the new setting is saved.

### **Call waiting**

If you subscribe to call waiting service with your local telephone company, there will be a beep if there is an incoming call while you are already on a call. Press \PHONE/FLASH to put your current call on hold and take the new call. Press \PHONE/FLASH anytime to switch back and forth between calls. For more information on caller ID, see page 30.

### Mute

Press MUTE to silence the microphone. When mute is on, MICROPHONE MUTED will show on the handset screen. You will be able to hear the caller, but the caller will not be able to hear you until you press MUTE again and resume speaking. When the mute function is turned off, MICROPHONE ON will show temporarily on the handset screen.

### Temporary tone dialing

If dial pulse (rotary) is selected, you can switch to touch tone dialing during a call by pressing **TONE\***. This can be useful if it is necessary to send tone signals for access to answering systems or long-distance services.

After you hang up or press **\PHONE/FLASH** (to receive a call waiting call), the telephone automatically returns to dial pulse (rotary) service.

### **Channel selection**

During a call, if you hear clicks and pops, or if the speech sometimes fades, press **CHAN/DELETE** on the handset to scan for a clearer radio channel between cordless handset and base.





Telephone operation



# Call transfer for E5812B/E1812B

### Call transfer

During a conversation, you can transfer the call to another cordless handset.

- Press MENU/SEL/TRANSFER to transfer the external call to another cordless handset, your cordless handset will display CALL TRANSFERRED and the other handset will begin ringing.
- To answer the call, press \PHONE/FLASH or
   SPEAKER.



- Before the transferred call is answered, the person at the originating handset can press \PHONE/FLASH OT ■> SPEAKER to cancel the transfer and resume the external call.
- 2. If the transferred call is not answered within 30 seconds, the originating handset will start ringing and show TRANSFERRED CALL. If \PHONE/FLASH or ■>SPEAKER is not pressed within another 30 seconds, the external call will end automatically.
- If the destination cordless handset cannot be found, the cordless handset that originated the transfer will generate an error tone and continue the external call automatically.
- 4. This telephone does not have an intercom function. People using the cordless handsets cannot talk to each other.





# Call transfer for E5813B/E1813B

### Call transfer

During a conversation, you can transfer the call to another cordless handset.

- Press MENU/SEL/TRANSFER to transfer the external call to another cordless handset. The handset will display ENTER 1-3. After entering the cordless handset number to which you want to transfer the call, your cordless handset will display CALL TRANSFERRED and the selected handset will begin ringing.
- To answer the call, press \PHONE/FLASH or
   SPEAKER.



- Before the transferred call is answered, the person at the originating handset can press \PHONE/FLASH OT ■> SPEAKER to cancel the transfer and resume the external call.
- 2. If the transferred call is not answered within 30 seconds, the originating handset will start ringing and show TRANSFERRED CALL. If \PHONE/FLASH Or \Speaker is not pressed within another 30 seconds, the external call will end automatically.
- If the destination cordless handset cannot be found, the cordless handset that originated the transfer will generate an error tone and continue the external call automatically.
- 4. This telephone does not have an intercom function. People using the cordless handsets cannot talk to each other.

Telephone operation





# Call transfer for E5814B/E1814B

### Call transfer

During a conversation, you can transfer the call to another cordless handset.

- Press MENU/SEL/TRANSFER to transfer the external call to another cordless handset. You will see ENTER 1-4. After entering the cordless handset number to which you want to transfer the call, your cordless handset will display CALL TRANSFERRED and the selected handset will begin ringing.
- To answer the call, press \PHONE/FLASH or
   SPEAKER.



### NOTES:

- Before the transferred call is answered, the person at the originating handset can press \PHONE/FLASH OT ■>SPEAKER to cancel the transfer and resume the external call.
- If the transferred call is not answered within 30 seconds, the originating handset will start ringing and show TRANSFERRED CALL. If \PHONE/FLASH or ■>SPEAKER is not pressed within another 30 seconds, the external call will end automatically.
- If the destination cordless handset cannot be found, the cordless handset that originated the transfer will generate an error tone and continue the external call automatically.
- 4. This telephone does not have an intercom function. People using the cordless handsets cannot talk to each other.





# Directory

### **Memory capacity**

Each cordless handset has its own directory. Each directory can store up to 30 entries (including nine speed dial locations). Each entry can contain a number up to 24 digits, and a name up to 15 letters long. A convenient search feature can help you find and dial numbers quickly (page 25).

**NOTE:** Each cordless handset has its own directory. Making changes to the directory of one handset will not affect the directories of the other handsets.

### Timeouts and error messages

If you pause for too long while creating an entry, the procedure will time out and you will have to begin again.

If all memory locations are in use, the screen will display **MEMORY FULL**. You will not be able to store a new number until an existing one is deleted.

NOTE: The speed dial feature occupies up to nine of the thirty memory locations in the directory. For example, if there are only five speed dial entries, then up to 25 entries can be stored in the directory. If there are already 30 entries in the directory, no new directory and speed dial entries can be stored in memory until some of the existing ones are deleted.

# 1. MENU/SEL



2. ♥ ▼ cid or dir ▲



3. MENU/SEL





(Pages 23-24).

**NOTE:** You can convert any directory entry into speed dial entry (page 26).

### Directory

# Speed dial

You can enter nine speed dial numbers of up to 24 digits. Each number is stored in a one-digit speed dial location (1-9).

The nine speed dial numbers on the handset will be automatically added to the handset directory.

Press and hold a dial pad key and then press PHONE/FLASH or SPEAKER can easily dial these telephone numbers. You can also make existing directory entries into speed dial entries.

### To enter a speed dial number

- 1. Press MENU/SEL.
- 2. Press ▼CID or DIR ▲ until the screen displays SPEED DIAL.
- 3. Press MENU/SEL.
- 4. Press the dial pad key to choose speed dial location (1-9).
- 5. Enter a name up to 15 characters (page 23), then press **MENU/SEL**.
- 6. Enter a telephone number up to 24 digits (page 24), then press **MENU/SEL**.
- 7. Choose distinctive ringing (yes or no) by pressing ▼CID or DIR ▲. If you choose yes (and if you have caller ID service), a different ringing style will alert you when this person calls.
- 8. Press **MENU/SEL** to store the number. You'll hear a confirmation tone.

### To call a speed dial number

To use speed dialing, <u>press and hold</u> a dial pad button (1-9) to display the number and name stored in that speed dial location, then press **\PHONE/FLASH** or **♦ SPEAKER** to dial.

### To edit or delete a speed dial number

<u>Press and hold</u> a dial pad button (1-9) to display the entry you want. Press **MENU/SEL**, then press  $\nabla$ CID or DIR  $\triangle$  until the option you want is displayed (page 26).

NOTE: If all memory locations are in use, an error tone will sound when you attempt to enter a number. This means the memory is full, and you will not be able to store a new number until you delete an existing one.

# 1. MENU/SEL



### 2. MENU/SEL







# New directory entries

### To enter a name

- Press MENU/SEL twice.
- The screen will show ENTER NAME.
- Enter the name (up to 15 alphanumeric characters) of the person using the table below.
- Use DIR ▲ to advance to the next space to the right, or use VCID then CHAN/DELETE to delete a mistake.
- When finished entering the name, press MENU/SEL.

Each press of a particular key causes characters to be displayed in the following order:

Dial	Characters by number of key presses					
Key	1	2	3	4	5	6
1	1					
2	Α	В	С	2		
3	D	Е	F	3		
4	G	Н	I	4		
5	J	K	L	5		
6	М	N	0	6		
7	Р	Q	R	S	7	
8	Т	U	٧	8		
9	W	Х	Υ	Z	9	
0	0					
*	*					
#	&	ı	,	-		#

### Options while entering names:

- Press DIR ▲ to move the cursor to the right.
   Press DIR ▲ twice to enter a space.
- Press VCID then CHAN/DELETE to erase letters if you make a mistake.
- Press # repeatedly to enter an ampersand (&), apostrophe ('), comma (,) hyphen (-), period (.), or pound sign (#).
- When finished, press MENU/SEL.

# 4. MENU/SEL







# 6. MENU/SEL



### 7. MENU/SEL

# New directory entries

### To enter a number

Use the dial pad to enter up to 24 digits. When the number is complete, press **MENU/SEL**.

### Options while entering numbers:

- Press VCID then CHAN/DELETE to erase digits if you make a mistake.
- Press REDIAL/PAUSE to enter a four-second dialing pause. A P will be inserted.
- When finished entering the telephone number, press MENU/SEL to confirm.

### To assign a distinctive ring

Press ▼CID or DIR▲ to select Y (if you want to assign a distinctive ring tone) or N (for a normal ring pattern). If you choose yes (and if you have caller ID service), a different ringing style will alert you when this person calls.

Press **MENU/SEL** to choose the desired option and store this entry in the directory.

A  $\blacksquare$  appears in the display of each entry that has been assigned a distinctive ring.

# Directory search

Follow the steps on the left to browse through the directory or search to find a specific entry. You can press **/OFF/CLEAR** anytime to exit the directory.

### To browse through the directory

To browse, press  $DIR \triangle$  then press  $\nabla CID$  or  $DIR \triangle$  to scroll through all entries one by one.

A papears in the display of each entry that has been assigned a distinctive ring (page 24).

**NOTE:** When reviewing directory entries, all entries (including those in the directory and in the speed dial) are displayed in alphabetical order. The entries in the speed dial are identified by its speed dial number (01-09) in the lower right corner of the screen.

### To search alphabetically

To shorten your search, press **DIR** ★ then use the telephone dial pad to enter the first letter of a name, then press **DIR** ★ to scroll forward until you find the desired name.

If you have more than one name entry that begin with the same letter, it is necessary to scroll through all the names beginning with that letter before seeing names that begin with the next letter.

Press dial pad buttons once for the first letter, twice for the second, three times for the third, as shown on page 23.

For example, if you have name entries **JENNIFER**, **KEVIN** and **LINDA** in your directory, pressing the dial pad key **5** (JKL) once will show **JENNIFER**, twice **KEVIN**, three times **LINDA**.

**NOTE:** When searching alphabetically and you press a dial pad button, if there are no entries beginning with the letters on that button, the handset will show **NO DATA**.





### 2. ( → DIR ▲



To display first entry





To scroll name by name





To search alphabetically

# To change or dial entries

When any entry is displayed, press MENU/SEL to see options. Press ▼ciD or DiR ▲ to highlight the option you want (blinking text), then press MENU/SEL again to select it.

### To edit an entry

When **EDIT** is blinking, press **MENU/SEL**. You can change the name and number (or distinctive ring setting on the cordless handset) by following the steps described on pages 23-24.

### To delete an entry

Press ▼CID or DIR▲ until ERASE is blinking, then press MENU/SEL to display a confirmation screen of ERASE NO YES.

You can press **▼CID** or **DIR △** to alternate between **NO** and **YES** to determine:

- When the YES blinking, press MENU/SEL to delete the entry.
- When the NO blinking, press MENU/SEL to cancel the procedure.

**NOTE:** Each cordless handset has its own directory. Making changes to the directory of one handset will not affect the directories of the other handsets.

### To make an entry into a speed dial entry

Press ▼CID or DIR ▲ until SPEED is blinking, press MENU/SEL, then dial a memory location (1-9) to transfer this entry to your speed dial directory.

**NOTE:** If you use a memory location that is already assigned to a different entry in the directory, that entry will remain in the directory, but will no longer be a speed dial number.

### To dial a displayed number

When any directory entry is displayed, press **\PHONE/FLASH** or **\PERCESS** SPEAKER to dial the displayed number.



Ĥ



ADRM 5551234

### 3. MENU/SEL

SPEED EDIT ERASE SSS1234

# **C**DIR ▲

SPEED EDIT ERASE SSS1234

# **C** DIR ▲

SPEED EDIT ERASE SSS1234

Press **MENU/SEL** to choose blinking option



# Caller ID summary

### Information about caller ID with call waiting

This product has a caller ID function with call waiting feature which works with service from your local telephone company.

Caller ID with call waiting lets you see the name and telephone number of the caller before answering the telephone, even while on another call.

It may be necessary to change your telephone service to use this feature. Contact your telephone company if:

- You have both caller ID and call waiting, but as separate services (you may need combined service).
- You have only caller ID service, or only call waiting service.
- You do not have any caller ID or call waiting services.

This product can be used with regular caller ID service, or this product's other features can be used without subscribing to either caller ID or combined caller ID with call waiting service.

There are fees for caller ID services. In addition, services may not be available in all areas.

Depending on your service, you may see the caller's number or the caller's name and number. This product can provide information only if both you and the caller are in areas offering caller ID service and if both telephone companies use compatible equipment. The time and date are sent by the telephone company along with the call information.




# O<sub>NOTES:</sub>

- Caller ID features will work only if both you and the caller are in areas offering caller ID service, and if both telephone companies use compatible equipment.
- 2. The number shown by your caller ID will be in the format sent by the telephone company. The telephone company usually delivers 10-digit telephone numbers (area code plus telephone number). If the telephone number of the person calling does not exactly match a number in your directory, the name will appear as delivered by the telephone company. For example if the telephone company includes the area code and the directory number does not, the name will appear as delivered by the telephone company.

# Caller ID summary

### How caller ID works

If you subscribe to caller ID service provided by your local telephone company, information about each caller will be displayed between the first and second ring.

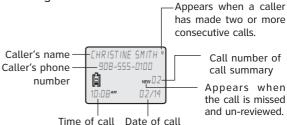

Information about the last 30 incoming calls is stored in the call summary. You can review the call z to find out who has called, return the call, or copy the caller's name and number into directory.

If the caller has made two or more consecutive calls, the repeat tag (\*) will be displayed in the top right corner of the screen.

When the call summary is full, the oldest entry is deleted to make room for new incoming call information.

If you answer a call before the information appears on the screen, it will not be saved in the call summary.

### **About names**

Names of callers will be displayed only if the information is provided by your local telephone company.

If the incoming telephone number exactly matches a telephone number in your directory, the name that appears on the screen will match the corresponding name in your directory.

For example: If Christine Smith calls, her name will appear as **CHRIS** if this is how you entered it into your directory.





# Caller ID summary

There are also occasions when other information or no information is displayed for various reasons:

On-screen message	Reason
PRIVATE NAME	Caller prefers to remain anonymous.
PRIVATE CALLER	Caller name and telephone number not revealed at caller's request.
UNKNOUN NAME	Your local telephone company is unable to determine the caller's name.
UNKNOUN EALLER	Your local telephone company is unable to determine the caller's name and telephone number. Calls from other countries may also generate this message.

### Missed calls

When a handset is in idle mode and has calls that have not been reviewed, its screen will show **XX MISSED CALLS**.

Any entries which have not been reviewed will be counted as **MISSED CALLS** when the telephone is idle. Each time a call summary entry marked **NEW** is reviewed, the number of missed calls decreases by one.

If there are too many missed calls and you don't want to review them one by one, but still want to keep them in the call summary, press and hold OFF/CLEAR for two seconds when the handset is idle. All the entries in the caller ID summary will be considered old (have been reviewed), and the missed calls counter is reset to 0.

### 1. **♥**CID



### C ▼ cid



# 3. PHONE/FLASH



To dial this number

NOTE: Consecutive incoming calls originating from the same telephone number are identified by an asterisk at the top right corner of the screen and will be counted as one call in the caller ID summary.



### -OR-

1. **(** → CID



2. 🗁 #



3. 🗁 #



4. 🕝 #



Caller ID operation

# To review the call summary

The call summary review displays the caller ID in reverse chronological order, with the latest one (the one with the highest number) first.

When the telephone is not in use, press  $\blacktriangledown CID$  to display information about the most recent caller.

### To review your call summary

Press **VciD** to scroll backward (display older calls) or **DIR \( \Lambda \)** to scroll forward (display newer calls). The highest call number is the most recent call received.

Each caller ID entry in the call summary will be designated **NEW** until you have reviewed the call. After a call has been reviewed, it will disappear.

### To return a call

Press \ PHONE/FLASH or \ SPEAKER to call the number currently displayed.

### **Dialing options**

Caller ID numbers may appear with an area code that may not be required for local calls.

If the number displayed is not in the correct format, you can change how it is dialed. Press # repeatedly to see dialing options. With each button press, a new option will be displayed. Press **\PHONE/FLASH** or ◆ **> SPEAKER** to dial when the number appears in the proper format for your area.

The various dialing options are:

908-555-0100 1-908-555-0100 555-0100 1-555-0100 Caller ID operation



# 2. VCID CHRIS WILLIAMS 908-555-1234 NEW D2 10:08^M 02/14

# 3. CHAN/DELETE



# -OR-



### 1. CHAN/DELETE





3. MENU/SEL



Call summary cleared

# Delete call summary entries

### To delete a single call summary entry

Press **VCID** to display the first caller ID listing. Use the **VCID** or **DIR A** keys to find the entry you want to delete, then press **CHAN/DELETE**. When the entry is deleted, the next oldest record is displayed.

### To delete all call summary entries

To clear your call summary completely, <u>press and hold</u> **CHAN/DELETE** while the phone is idle (not in use). This will display a confirmation screen asking if you want to erase all entries in the caller ID summary. If you select yes, the call summary will be cleared and the screen will return to normal standby display, and the missed calls counter is reset to 0.



### NOTES

- Each cordless handset has its own call summary. When you
  delete one or all call summary entries from one cordless
  handset, the information on all other cordless handsets will
  not be affected.
- 2. When there are already 30 entries in the caller ID memory, the next incoming call will automatically cause the oldest entry to be deleted from the caller ID memory of the handset.









3. MENU/SEL

PAT JOHNSON 9085550100	
	NEW []
10:08 <sup>AM</sup>	02/14

Edit name as desired

### 4. MENU/SEL

PAT JOHNSON		
9085550100_		
	NEW [] 3	
10:08 <sup>AM</sup>	02/14	

Edit number as desired

### 5. MENU/SEL



# 6. MENU/SEL



Entry added to phone directory

# Add entries to the directory

When any caller ID screen is displayed, follow the steps on left to enter it into your telephone directory.

Both the caller's name and telephone number will be entered as they appear in the call summary. At steps 3-4, you can make any changes to the name or number by pressing **CHAN/DELETE** to erase characters, then use the dial pad to enter the correct information (see pages 23-24 for instructions).

When the number is stored, the screen returns to the call summary display. The entry copied to your telephone directory remains in the call summary until deleted.



### Message counter

Number of messages (or during playback, message number currently playing)

# Answering system operation

### Message capacity

The answering system can record up to 95 messages depending on the length of each message. Individual messages can be up to four minutes long, and total maximum recording time is 15 minutes. Messages will remain available for replay until you delete them.

### **Voice prompts**

Each time you press any answering system key, the answering system uses voice prompts to guide you.


Press repeatedly to hear setup options (page 36).

Press to review or set clock (page 34).

Press to delete message currently playing; press and hold to delete all old messages (page 37).

Press to repeat message; press twice to play previous message (page 37).

Press to start or stop message playback (page 37).

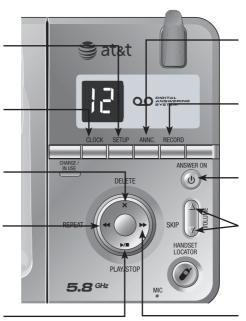

Press to review or record announcement; press again to quit (page 35).

Press to record a memo (page 38) or after pressing **ANNC**. to record an outgoing announcement (page 35).

Press to turn answering system on or off (page 40).

Press to adjust playback volume (page 37).

Press to skip a message (page 37).



# 1. CLOCK

The system will announce the current clock setting, then announces "To set the clock, press **CLOCK**."

# 2. CLOCK.

The system will announce the current day setting, then announces "To change the day, press ▶SKIP or ◀REPEAT, to change the hour, press CLOCK."

#### 

until the system announces the correct day, then press **CLOCK**.

#### 

until the system announces the correct hour, then press **CLOCK**.

# 

until the system announces the correct minute, then press **CLOCK**.

#### 

until the system announces the correct year, then press **CLOCK**. The system announces the current clock setting.

# Day & time announcements

#### To set day and time

Before playing each message, the answering system announces the day and time when the message was received.

Before using the answering system, follow the steps on the left of this page to set the day, time and year, so that messages are dated correctly. If the clock is not set, before new messages are recorded, the system will announce "Time and day not set" before each message is played back.

The system uses voice prompts to guide you. Each time you press **▶SKIP** or **∢REPEAT**, the day, hour, minute or year increases or decreases by one. When you hear the correct setting, press **CLOCK** to move to the next setting.

#### To check day and time

You can press **CLOCK** at any time to hear the current day and time without changing it.



#### NOTES:

- You can <u>press and hold</u> ►SKIP or ◀REPEAT to increase or decrease the minutes or years by ten.
- Caller ID provides the time and date. Set the year so that
  the day of the week can be calculated from the caller ID
  information. After you set the time once, it will thereafter
  be set automatically with incoming caller ID information.
  The time will be set automatically only if you subscribe to
  caller ID service provided by your local telephone company
  (page 27).



Press to stop recording.

# 1. ( ANNC.

"Announcement.
Press **PLAY** or press **RECORD**."

# 2. **( )** ▶/■ PLAY/STOP

(Plays announcement previously recorded).

#### -OR-

#### 1. ( ANNC.

"Announcement.
Press **PLAY** or press **RECORD**."

#### 2. RECORD

"Record after the tone. Press **STOP** when you are done."

3 Speak into microphone.



Microphone

# 4. PLAY/STOP

(Announcement is played back).

# 5. C ANNC.

to exit announcement recording.

# Outgoing announcements

The outgoing announcement is the message callers hear when calls are answered by the answering system.

The telephone is factory set with an announcement. If the telephone is set up to record messages, it answers calls with "Hello. Please leave a message after the tone." You can use this announcement, or replace it with a recording of your own voice.

#### To play your outgoing announcement

Press ANNC., you will hear "Announcement. Press PLAY or press RECORD." Then press PLAY/STOP. You will hear the outgoing announcement. Press ANNC. to exit the announcement menu.

#### To record your outgoing announcement

Press ANNC., then you will hear "Announcement. Press PLAY or press RECORD." Press RECORD and begin speaking after hearing "Record after the tone. Press STOP when you are done." Speak facing the telephone base from about nine inches away. Press PLAY/STOP when you are done. Your recorded announcement will be played back. Press ANNC. to exit the announcement menu.

Elapsed time (in seconds) will be shown in the message window when recording. You can record an announcement up to 90 seconds long. Announcements shorter than two seconds long will not be recorded.

#### To delete your outgoing announcement

Press **ANNC.**, then you will hear "Announcement. Press **PLAY** or press **RECORD**." Then press **▶/■ PLAY/STOP** to begin playback. Press **XDELETE** during playback to delete your announcement. Press **ANNC.** to exit the announcement menu.

When your announcement is deleted, calls will be answered with the the factory set announcement described above.



#### 1. SETUP

until desired feature is heard (see list at right).

until desired selection is heard.

#### 3. FETUP

to set selection and **move** to next menu option.

#### -OR-



to set selection and exit menu.

# O NOTES:

- The message alert tone will beep only if all the conditions below are met:
  - Answering system is on
  - Message alert tone setting is on
  - · Have new messages

# Changing feature options

You can change how the answering system operates. Press **SETUP** repeatedly to hear each feature. When you hear the feature you want to modify press **SKIP** or **«REPEAT** to change the setting. Press **PLAY/STOP** to confirm the setting and exit the menu.

Feature options (Default settings underlined)

System announces:

Feature description:

"Number of rings," current setting, then "To change the setting press SKIP or REPEAT; to continue setup, press SETUP."
Options: 2/4/6/toll saver

Choose number of rings before the system answers a call. When toll saver is active, the system answers after two rings if you have new messages, and after four rings if you have no new messages. When retrieving messages from a long distance call, you may disconnect your call after three rings so that there will be no long distance charge incurred.

"Base ringer," current setting, then "To change the setting, press **SKIP** or **REPEAT**; to continue setup, press **SETUP**." Options: high/**low**/off

Choose the base ringer volume between high and low level, or turn the base ringer off.

"Remote access code," current setting, then "To change the setting press SKIP or REPEAT; to continue setup, press SETUP." Options: (select a two-digit code) 19

Select a two-digit number (10-99) for remote access from another telephone (page 41).

0,

NOTE: Press and hold ▶SKIP

or **∢REPEAT** to increase or decrease the remote access code number by ten.

"Message alert tone," current setting, then "To change the setting, press SKIP or REPEAT; to continue setup, press SETUP." Options: on/off

When on, the telephone beeps every 10 seconds when there are new messages.

Answering system operation

Number of messages (or during playback, message number currently playing).



►/■ PLAY/stop to begin or end message playback.

### 

"You have [xx] new messages and [xx] old messages"

Message playback begins. See options at right.

# 2. PLAY/STOP

to end message playback.

# NOTES:

- If F is flashing in the message window, memory is full. You will have to delete some messages before new ones can be received.
- 2. The maximum record time is 15 minutes.
- 3. If you receive calls when the memory is full, the telephone will ring 10 times, then answer and announce "Memory is full, enter remote access code."
- 4. New (unheard) messages cannot be deleted.

# Message playback

Press PLAY/STOP to listen to messages. The system announces the number of messages, then begins playback.

If you have new messages waiting, you will hear only the new messages (oldest first). If there are no new messages, the system will playback all messages (oldest first).

#### **Announcements**


- When playback begins, you will hear the total number of messages.
- Before each message, you will hear the day and time it was received.
- After the last message, you will hear "End of messages." If the system has less than five minutes of recording time left, you will hear the time remaining.

#### **Options during playback**

- Press **\\$VOLUME** button to adjust the speaker volume.
- Press **SKIP** to skip to next message.
- Press **REPEAT** to repeat the message currently playing. Press twice to hear previous message.
- Press XDELETE to delete the message being played back.
- Press ►/■ PLAY/STOP to stop playback.

#### To delete all messages

To delete all old messages, <u>press and hold</u> **XDELETE** while the telephone is idle (not during a call, or during message playback).

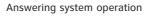



Press to stop recording.

### 1. RECORD

"Record after the tone. Press STOP when you are done."

#### Speak into microphone.



3. PLAY/STOP

"Recorded, beep," the memo has been recorded.

# Recording & playing memos

Memos are messages you record yourself. They are saved, played back and deleted exactly like incoming messages. You can record a memo as a reminder to yourself, or leave a message for someone else if other members of your household are using the answering system.

#### To record a memo

Press **RECORD**. Elapsed time (in seconds) is shown in the message window as you record. You can record a memo up to four minutes long. Memos less than one second long will not be recorded.

Press ▶/■ PLAY/STOP to stop recording.

#### To play back a memo

Press PLAY/stop to hear messages and memos (see page 37 for other options).



Message counter

# Message counter displays

The message counter usually displays the total number of memos and incoming messages. See the list below for explanations of other displays in this counter.

#### Message counter displays

	No messages.
☐ (flashing)	The clock needs to be set (page 34).
1-95	Total number of messages and memos, or message number currently playing.
1-95 (flashing)	Total number of messages and memos. The number flashes when there are new (un-reviewed) messages.
	If the telephone loses power, after power is restored, the number in the message counter will flash to indicate the clock needs to be set.
10-99	Current remote access code while setting (page 36).
1-99 (counting)	Elapsed time while recording a memo (page 38) or announcement up to 90 seconds (page 35).
99 (flashing)	Memo recording time has exceeded the maximum counter capacity of 99 seconds.
F (flashing)	Memory is full. Messages must be deleted before new messages can be received.
	System is answering a call, being accessed remotely, or the clock is being set.
(flashing)	System is being setup or initialized.
□n (or) □F	Displayed for one second when any answering system setting is turned on or off.
02,04,06,£5	Current number of rings while setting (page 36).
1-8	Displayed for two seconds while telephone base speaker volume is being adjusted.
HI, LO, OF	Displayed for two seconds while telephone base ringer volume is being adjusted.

Answering system operation



### 1. O DANSWER ON

until the system announces "Calls will not be answered."

**2.** "Beep"
The system has been turned off.

#### -OR-

#### 1. OANSWER ON

until the system announces "Calls will be answered."

# Answering system mode

The answering system's default factory setting is **ON** in order to answer and record messages. You can turn the answering system off, but if you do so, the answering system will not answer calls or record incoming messages.

#### To turn the answering system off

Press **GANSWER ON** until you hear "Calls will not be answered" and a confirmation beep. The **GANSWER ON** will be turned off.

**NOTE:** If the answering system is off and someone calls, the telephone will ring 10 times then answer and announce "Please enter your remote access code." Enter your remote access code to enter remote access mode (page 41). If you do not enter the correct remote access code, the call will be ended automatically.

#### To turn the answering system on

Press **GANSWER ON** until you hear "Calls will be answered" then a beep to confirm the **ON** setting. The **GANSWER ON** light will be turned on.

#### Call screening

If the answering system is on and the base volume is not off, you will hear the announcement and the incoming message when a call comes in.

#### **Call intercept**

While you are call screening, you can intercept the call by pressing **\PHONE/FLASH** or **■ SPEAKER** on the handset.

- **1.** Dial your telephone number from any touch-tone telephone.
- 2. When the system answers, enter two digit remote access code (19 unless you have changed it).
- **3.** Enter remote commands (see list at right).
- **4.** Hang up to end the call and save all undeleted messages.

NOTE: If you pause for more than four seconds during remote access, you will hear a help menu listing all features and commands. If there is no command entered for another 20 seconds, the call will end automatically.

#### Remote access

A two digit security code is required to access your answering system from any touch-tone telephone. This code is **19** by default, see **Changing feature options** (page 36) to change it.

Play all messages 1	Press to hear all messages.
Play new messages 2	Press to hear new messages.
Delete the message 3 33	Press once during playback to delete current message. Press twice to delete all old messages.
Repeat or go back	Press during the caller's message to repeat the message. Press dur- ing the beginning of the day and time announcement to go back to the previous message.
Stop 5	Press to stop any operation (stop playback, stop recording).
Skip to next message	Press to skip the current message and advance to next message.
<ul><li>Record announcement</li><li>*7 to begin recording</li><li>5 to stop recording</li></ul>	Press * 7, wait for the beep, then begin speaking. Press 5 to stop recording and hear the playback of new announcement.
Help menu *5	Press to hear list of features & commands.
Turn system off	Press to turn off answering system. Incoming calls will no longer be answered.
Turn system on 0	If off, system will answer after 10 rings. Enter your access code, then press <b>0</b> to turn the answering system on.
Exit 8	Press <b>8</b> or hang up to end the remote access call.

# Screen icons, indicator lights & tones

#### Screen icons & alert tones



#### Screen icons

口))

The handset speakerphone is in use.

MUTE

Microphone is muted.

Ringer off.

Battery charging (animated display).

Low battery (flashing); place handset in telephone base or charger to recharge.

NEW

Missed and un-reviewed calls.

#### Handset alert tones

Two short beeps

The volume level is at the maximum or minimum setting.

Double beep every five seconds

Low battery warning.

Five beeps

Out of range or other handset on when on the line.

Confirmation tone Command completed successfully.

#### Telephone base tones

One beep every 10 seconds

Message alert.

A series of beeps

Press **VOLUME** keys while the volume level is already at the highest or lowset.

#### Indicator lights



#### ANSWER ON

On when the answering system is on and ready to receive messages.

#### CHARGE/IN USE

- On when the cordless handset is properly positioned to charge in the telephone base.
- Flashes when one of the handsets is in use, the answering system is answering an incoming call.
- Flashes quickly while an incoming call is ringing.



erphone is in use.

# Handset display screen messages



## Screen display messages

CONNECTING	The cordless handset is waiting for a dial tone.
** RINGING **	There is a call coming in.
** PAGING **	The cordless handset locator has been activated (all cordless handsets beep to help you locate them).
NEEDS RECHARGING	Cordless handset battery is depleted. Place cordless handset in base or charger to charge the battery.
BATTERY LOW	Cordless handset battery is low. Place cordless handset in base or charger to charge the battery.
PHONE ON	The cordless handset is in use.
SCANNING	Cordless handset is scanning for a clear channel to improve sound quality.
OTHER HANDSET ON	Another cordless handset is on
and then	a call.  Or cordless handset cannot com-
OR OUT OF RANGE	municate with base. Check base power, or move closer.
XX MISSED CALLS	There are missed and un-reviewed calls in your call summary.

# Handset display screen messages



## Screen display messages

CALL TRANSFERRED	You are transferring an external call on your cordless handset to another cordless (destination) handset.
TRANSFERRED CALL	The destination cordless handset is receiving a transferred call. Or when the transferred call is not answered within 30 seconds on the destination handset, the originating handset displays this message and starts ringing.
ENTER 1-3 (Only for E5813B/E1813B)	Enter the cordless handset number to which you want to transfer the call.
ENTER 1-4 (Only for E5814B/E1814B)	Enter the cordless handset number to which you want to transfer the call.
RINGER OFF	The cordless handset ringer is turned off.
MEMORY FULL	You are saving to a full directory.
SPERKER	The handset speakerphone is in use.
MICROPHONE MUTED	The call switches from normal call to mute.
MICROPHONE ON	The call switches from mute to normal call.

If you have difficulty with your telephone, please try the suggestions below. For Customer Service, visit our website at www.telephones.att.com or call 1 (800) 222-3111. In Canada dial 1 (866) 288-4268.

My telephone does not work at all

- Make sure the battery is installed and charged correctly (page 7). For optimum daily performance, return the cordless handset to the telephone base after use.
- Make sure the power adapter is securely plugged into an outlet not controlled by a wall switch.
- Make sure the telephone line cord is plugged firmly into the telephone base and the modular wall jack.
- Unplug the telephone's electrical power. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and base to synchronize.
- Charge the battery in the cordless handset for at least 16 hours.
- Remove and re-insert the battery. If that still does not work, it may be necessary to purchase a new battery.
- Disconnect the telephone base from the modular jack and plug in a working telephone. If this telephone does not work, the problem is probably in the wiring or the local service. Call the local telephone company.

#### **BATTERY LOW**

is displayed on screen

- Place the handset in the base or charger for recharging.
- Remove and re-install the battery and use it normally until fully discharged, then recharge the handset on the telephone base or charger for 16 hours.
- If the above measures do not correct the problem, the battery may need to be replaced.

The battery does not charge in the handset or the handset battery does not accept charge

- Make sure the handset is placed in the telephone base or charger correctly. The CHARGE light on the telephone base or charger should be on.
- If the cordless handset is in the charger or in the telephone base but the CHARGE light is not on, refer to The CHARGE light is off in this section.
- It may be necessary to purchase a new battery. Please refer to the batteries section of this user's manual.
- The telephone might be malfunctioning. Please refer to the Limited warranty section of this user's manual for further instruction.

# The **CHARGE** light is off



- Clean the metallic charging contacts on the cordless handsets and telephone base each month using a pencil eraser or a dry non-abrasive fabric.
- Make sure the power adapter and telephone line cords are plugged in correctly and securely.
- Unplug the power adapter. Wait for 15 seconds before plugging it back in. Allow up to one minute for the cordless handset and telephone base to reset.
- The telephone might be malfunctioning. Please refer to the **Limited warranty** section of this user's manual for further instruction.

# There is no dial tone

- First, try all the above suggestions.
- Move the cordless handset closer to the telephone base. It might be out of range.
- The telephone line cord might be malfunctioning. Try installing a new telephone line cord.
- Disconnect the telephone base from the telephone jack and connect a different telephone. If there is no dial tone on the telephone either, the problem is in your wiring or local service. Contact your local telephone company.

#### The telephone does not ring when there is an incoming call

- Make sure the ringer is on (pages 12-13).
- Make sure the telephone line cord and power adapter are plugged in properly (page 6).
- The cordless handset may be too far from the telephone base. Move it closer to the telephone base.
- There may be too many extension telephones on the telephone line to allow all of them to ring simultaneously. Try unplugging some of them.
- If the other telephones in your home are having the same problem, the problem is in the wiring or local service. Contact the local telephone company (charges may apply).
- Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones.

- Test a working telephone at the same telephone jack. If another telephone has the same problem, the problem is in the telephone jack. Contact your local telephone company (charges may apply).
- The telephone line cord might be malfunctioning. Try installing a new telephone line cord.
- Re-install the battery and place the cordless handset in the telephone base.
- Wait for the cordless handset to synchronize with the telephone base. Allow up to one minute for this to take place.

My phone rings but when I try to answer the call the handset screen shows CONNECTING...  The cordless handset may be too far from the telephone base. Move closer to the telephone base and try to answer the call

#### I cannot dial out

- First, try all the above suggestions.
- Make sure there is a dial tone before dialing. It is normal if the cordless handset takes a second or two to synchronize with the telephone before producing a dial tone. Wait an extra second before dialing.
- Make sure the telephone is set to the correct dial mode (pulse dial or tone dial) for the service in your area. Refer to the **Handset settings** section of this user's manual (page 11) to set the dial mode.
- If the other telephones in your home are having the same problem, the problem is in the wiring or local service. Contact your local telephone company (charges may apply).
- Eliminate any background noise. Noise from a television, radio, or other appliances may cause the telephone to not dial out properly. If you cannot eliminate the background noise, first try muting the cordless handset before dialing, or dialing from another room in your home with less background noise.

There is noise or interference during a telephone conversation

• The handset may be out of range. Move it closer to the telephone base.

My calls fade out or cut in and out when I am using the cordless handset

- Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference.
   Try moving the appliance or telephone base to another outlet.
- Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones.
- Microwave ovens operate on the same frequency as your telephone. It is normal to experience static on your telephone while the microwave oven is operating. Do not install this telephone in the same outlet or near a microwave oven.
- If your telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this solves the problem, relocate your telephone or modem farther apart from each other, or use a different surge protector.
- The layout of your home or office might be limiting the operating range. Try moving the base to another location, preferably a higher location for better reception.
- Disconnect the telephone base from the modular jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the wiring or local service. Contact your local service company (charges may apply).
- Select channels four through 10 for your router (refer to the user's manual of your router for more information).
- If the other telephones in your home are having the same problem, the problem is in the wiring or local service.
   Contact the local telephone company (charges may apply).
- Do you have DSL service? If yes, you need to have a DSL filter installed at every telephone jack that has a telephone connected to it. Contact your DSL service provider for filter information.

I hear other calls when using the telephone

- Disconnect the telephone base from the telephone jack.
   Plug in a different telephone. If you still hear other calls, the problem is probably in the wiring or local service.
   Call your local telephone company.
- "Time and day not set" prompts
- You need to set the answering system clock (page 34).

# My caller ID features are not working properly

- Caller ID is a subscription service. You must subscribe to this service from your local telephone company for this feature to work on your telephone.
- The caller may not be calling from an area which supports caller ID.
- Both you and the caller's telephone companies must use equipment which are compatible with caller ID service.
- If you subscribe to DSL service, install a DSL filter to the telephone line between the telephone base and the telephone line jack. Contact your DSL service provider for filter information.

#### The system does not receive caller ID or the system does not display caller ID during call waiting

- Make sure you subscribe to caller ID with call waiting features services provided by the local telephone company.
- The caller may not be calling from an area which supports caller ID.
- Both you and the caller's telephone companies must use equipment which are compatible with caller ID service.
- If you subscribe to DSL service, install a DSL filter to the telephone line between the telephone base and the telephone line jack. Contact your DSL service provider for filter information.

# Common cure for electronic equipment

- If the telephone is not responding normally, try putting the cordless handset in the telephone base or the charger. If it does not seem to respond, try the following (in the order listed):
  - 1. Disconnect the power to the telephone base.
  - 2. Disconnect the battery on the cordless handset.
  - 3. Wait a few minutes before connecting power to the telephone base.
  - 4. Re-install the battery and place the cordless handset into the telephone base or charger.
  - 5. Wait for the cordless handset to synchronize its connection with the telephone base. Allow up to one minute for this to take place.

#### The announcement message is not clear

- When recording the announcement, make sure you speak in a normal tone of voice about nine inches from the telephone base.
- Make sure there is no background noise (television, music, traffic, etc.) when recording.

The answering system does not answer after the correct number of rings

- Make sure the answering system is on. When the answering system is on, the red light on the ANSWER ON key should be lit.
- If toll saver is activated, the number of rings changes to two when there are new messages waiting (page 36).
- If the memory is full or if the answering system is off, the system will answer after ten rings. If the memory is full, you need to delete some old messages in order to make room for new messages.
- In some cases, the answering system may be affected by the ringing system used by the local telephone company.

The answering system does not record message

- Make sure the answering system is on.
- If the memory is full the system will answer after ten rings and announce "Memory full. Enter remote access code."
   You need to delete some old messages in order to make room for new messages.

The messages on the answering system are incomplete

- If a caller reaches the maximum recording time of four minutes, for each message, the system will disconnect and part of the message may be lost.
- If the caller pauses for more than seven seconds, the system stops recording and disconnects the call.
- If the memory on the system becomes full during a message, the system stops recording and disconnects the call.
- If the caller's voice is very soft, the system may stop recording and disconnect the call.

The messages on the system are very difficult to hear  Press **\$VOLUME** on the telephone base to increase the speaker volume.

The answering system does not respond to remote commands

- Make sure your remote access code is correct (page 41).
- Make sure you are calling from a touch-tone telephone.
   When dialing a number, you should hear tones. If you hear clicks, then it is not a touch-tone telephone and cannot activate the answering system.
- The answering system may not detect the remote access code when your announcement is playing. Wait until the announcement is over before entering the code.
- There may be interference on the telephone line you are using. Press the dial pad keys firmly when dialing.

## Important safety instructions

This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

#### Safety information

- Read and understand all instructions in the user's manual. Observe all markings on the product.
- Avoid using a telephone during a thunderstorm. There may be a slight chance of electric shock from lightning.
- Do not use a telephone in the vicinity of a gas leak. If you suspect a gas leak, report it immediately, but use a telephone away from the area where gas is leaking. If this product is a cordless model, make sure the base is also away from the area.
- Do not use this product near water, or when you are wet. For example, do not use it in a wet basement or shower, or next to a swimming pool, bathtub, kitchen sink, or laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquids, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
- **Install this product in a protected location** where no one can trip over any line or power cords. Protect cords from damage or abrasion.
- If this product does not operate normally, read Troubleshooting in this user's manual. If you cannot solve the problem, or if the product is damaged, refer to the limited warranty. Do not open this product except as may be directed in your user's manual. Opening the product or reassembling it incorrectly may expose you to hazardous voltages or other risks.
- If this product has user-replaceable batteries, replace batteries only as described in your user's manual. Do not burn or puncture batteries

   they contain caustic chemicals.
- If this product has a three-prong (grounding) plug or a polarized plug with one wide prong, it may not fit in non-polarized outlets. Do not defeat the purpose of these plugs. If they do not fit in your outlet, the outlet should be replaced by an electrician.

CAUTION: Use only the power adapter provided with this product. To obtain a replacement, visit our website at www.telephones. att.com or call 1 (800) 222-3111. In Canada dial 1 (866) 288-4268.

## Important safety instructions

#### **Especially About Cordless Telephones**

- Privacy: The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and handset by radio waves, so there is a possibility that your cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- Electrical power: The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the handset if the telephone base is unplugged or switched off, or if the electrical power is interrupted.
- **Power adapter:** This power adapter is intended to be plugged into a vertical wall outlet or a floor outlet.
- Potential TV interference: Some cordless telephones operate at frequencies
  that may cause interference to TVs and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on
  top of a TV or VCR. If interference is experienced, moving the cordless telephone
  farther away from the TV or VCR will often reduce or eliminate the interference.
- Rechargeable batteries: This product contains either Nickel-Cadmium or Nickel-Metal Hydride rechargeable batteries. Exercise care in handling batteries in order not to short the battery with conducting material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- **Nickel-cadmium rechargeable batteries:** Must be recycled or disposed of properly. Do not dispose of in household garbage. Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

The RBRC<sup>™</sup> Seal means that the manufacturer is voluntarily participating in an industry program to collect and recycle nickel-cadmium rechargeable batteries when taken out of service within the United States. These batteries may be taken to a participating local retailer of replacement batteries or recycling center. Or you may call 1 (800) 8 BATTERY for locations accepting spent nickel-cadmium Batteries.

#### Important safety instructions

Nickel-metal hydride rechargeable batteries: Dispose of these batteries
in a safe manner. Do not burn or puncture. Like other batteries of this type,
if burned or punctured, they could release caustic material which could
cause injury.

The RBRC<sup>™</sup> Seal means that the manufacturer is voluntarily participating in an industry program to collect and recycle nickel-metal rechargeable batteries when taken out of service within the United States. These batteries may be taken to a participating local retailer of replacement batteries or recycling center. Or you may call 1 (800) 8 BATTERY for locations accepting spent nickel-metal Batteries.

#### Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR had recommended to physicians that:

#### Pacemaker patients

- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

#### **Especially about telephones answering systems**

Two-way recording: This telephone does not sound warning beeps to let the other party know that the call is being recorded. To ensure that you are in compliance with any federal or state regulations regarding recording a telephone call, you should start the recording process and then inform the other party that you are recording the call.

# SAVE THESE INSTRUCTIONS

#### FCC Part 68 & ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US: AAAEQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

- Remain on the line and briefly explain the reason for the call before hanging up.
- Perform such activities in off-peak hours, such as early morning or late evening.

#### FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules.

These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more. If you choose to use a clipping device, please make sure to only use the supplied AT&T belt clip.

# Limited warranty

The AT&T brand is used under license - any repair, replacement or warranty service, and all questions about this product should be directed to: In the United States of America visit our website at www.telephones.att.com or call 1 (800) 222-3111. In Canada dial 1 (866) 288-4268.

1. What does this limited warranty cover?

The manufacturer of this AT&T-branded product warrants to the holder of a valid proof of purchase ("CONSUMER" or "you") that the product and all accessories provided in the sales package ("PRODUCT") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the PRODUCT operating instructions. This limited warranty extends only to the CONSUMER for products purchased and used in the United States of America and Canada.

2. What will be done if the PRODUCT is not free from defects in materials and workmanship during the limited warranty period ("materially defective PRODUCT")?

During the limited warranty period, the manufacturer's authorized service representative will repair or replace at the manufacturer's option, without charge, a materially defective PRODUCT. If the manufacturer repairs the PRODUCT, they may use new or refurbished replacement parts. If the manufacturer chooses to replace the PRODUCT, they may replace it with a new or refurbished PRODUCT of the same or similar design. The manufacturer will retain defective parts, modules, or equipment. Repair or replacement of the PRODUCT, at the manufacturer's option, is your exclusive remedy. The manufacturer will return repaired or replacement products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

3. How long is the limited warranty period?

The limited warranty period for the PRODUCT extends for ONE (1) YEAR from the date of purchase. If the manufacturer repairs or replaces a materially defective PRODUCT under the terms of this limited warranty, this limited warranty also applies to repaired or replacement PRODUCT for a period of either (a) 90 days from the date the repaired or replacement PRODUCT is shipped to you or (b) the time remaining on the original one-year limited warranty; whichever is longer.

# Limited warranty

4. What is not covered by this limited warranty?

This limited warranty does not cover:

- PRODUCT that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water, or other liquid intrusion; or
- PRODUCT that has been damaged due to repair, alteration, or modification by anyone other than an authorized service representative of the manufacturer; or
- PRODUCT to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or
- PRODUCT to the extent that the problem is caused by use with non-AT&T accessories; or
- PRODUCT whose warranty/quality stickers, PRODUCT serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- PRODUCT purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to products used for rental purposes); or
- PRODUCT returned without valid proof of purchase (see item 6 below); or
- Charges for installation or setup, adjustment of customer controls, and installation or repair of systems outside the telephone.

#### 5. How do you get warranty service?

# To obtain warranty service in the United States of America, call 1 (800) 222-3111; In Canada, please dial 1 (866) 288-4268.

NOTE: Before calling for service, please review the user's manual - a check of the PRODUCT controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the PRODUCT(s) to the service location. The manufacturer will return repaired or replaced PRODUCT under this limited warranty to you, transportation, delivery or handling charges prepaid. The manufacturer assumes no risk for damage or loss of the PRODUCT in transit. If the PRODUCT failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, the manufacturer will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of products that are not covered by this limited warranty.

# Limited warranty

- 6. What must you return with the PRODUCT to get warranty service? You must:
  - a. Return the entire original package and contents including the PRODUCT to the service location along with a description of the malfunction or difficulty; and
  - b. Include "valid proof of purchase" (sales receipt) identifying the PRODUCT purchased (PRODUCT model) and the date of purchase or receipt; and
  - c. Provide your name, complete and correct mailing address, and telephone number.

#### 7. Other limitations

This warranty is the complete and exclusive agreement between you and the manufacturer of this AT&T branded PRODUCT. It supersedes all other written or oral communications related to this PRODUCT. The manufacturer provides no other warranties for this PRODUCT. The warranty exclusively describes all of the manufacturer's responsibilities regarding the PRODUCT. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the PRODUCT is fit for ordinary use) are limited to one year from date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall the manufacturer be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the PRODUCT or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this PRODUCT. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

# Please retain your original sales receipt as proof of purchase.

# Technical specifications

5857.2MHz — 5865.9MHz 912.75 MHz — 917.10 MHz 30 FM
30
FM
32°F — 122°F 0°C — 50°C
104 — 129Vrms
DC9V @300mA
DC3.1 — 4.3V 400mAh
DC9V @150mA
3.6V 400mAh

#### Telephone operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, the handset(s) and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset(s), the weather, the layout, and the construction of your home or office.

# Index

A	I
Alert tones, 42 Answering calls, 14 Answering system, 33-41	Incoming call summary, 28 Incoming calls, answering, 14 Indicator lights, 42
В	L
Battery charging, 7 Battery installation, 7 Battery low, 7 Belt clip, 10	Last number redial, 15  M  Making calls, 14
c	Menus, 2
Call waiting, 17 Call transfer, 18-20 Caller ID, 27	Message playback, 37 Missed calls, 29 Mute, 17
add entries to the directory, 32	N
delete entries, 31 dial entries, 30 Channel, 17	Names, enter into directory, 23 search for, 25
Call screening, 40	P
Call intercept, 40	Power adapter, 6
D	Q
Delete call summary entries, 31 Delete redial entries, 15	Quick reference guide, 2-3
Dialing,	R
directory dialing, 26 from a CID record, 30 mode, 11	Receiving calls, 14 Recharging, 7 Redial, 15
Directory, 21	Ring silencing, 15
dial number, 26 edit entries, 26	Ringer sound, 12 Ringer volume, 13
make an entry, 26 search, 25	S
DSL filter, 6	Screen display messages, 43-44 Search for names, 25
<u>E</u>	Speakerphone, 14
Elapsed time, 14	Т
F	Technical specifications, 59
Flash (switchhook flash), 17	Temporary tone dialing, 17 Troubleshooting, 45
<u>H</u>	V
Hands-free use, 14 Handset locator, 16 Headset, 10	Volume control, 17 Voice prompts, 33

#### Remote access wallet card

Use the wallet card below to help you remember commands to control your answering system from any touch tone telephone.

Cut along dotted line.



Call your phone number, then enter your two-digit access code (preset to **19**).

#### 

Fold here.

E5812B/E5813B/E5814B/E1812B/E1813B/E1814B 5.8 GHz cordless telephone/answering system

© 2007 Advanced American Telephones. All rights reserved. AT&T and the AT&T logo are trademarks of AT&T Knowledge Ventures, licensed to Advanced American Telephones. Printed in China.



www.telephones.att.com