



User Guide

BT FREESTYLE 6100



Welcome...

to your BT Freestyle 6100
Digital Cordless Telephone

- Digital call quality with a range of up to 300 metres outdoors and up to 50 metres indoors.
- The 100 name and number directory makes it simple to store and dial your most frequently used numbers.
- Caller Display* lets you see who is calling and keep track of unanswered calls.
- Call Waiting* lets you know, during a call, that another caller is waiting to get through.
- Redial any of the last 20 numbers dialled from the redial list.
- Use up to 5 handsets with your base without the need for additional wiring, creating a complete phone system on a single telephone line.

* Requires subscription to your network provider's Caller Display and Call Waiting services. A quarterly fee is payable.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

This User Guide provides you with all the information you need to get the most from your phone.

Before you make your first call you'll need to set up your phone.

This doesn't take long and is easy to do. Just follow the simple instructions on the next few pages.

■ **Need help?**

If you have any problems setting up or using your BT Freestyle 6100 please contact the Helpline on **0870 605 8047**.

Alternatively, you may find the answer in 'Help' at the back of this guide.

Got everything?

- BT Freestyle 6100 base
- BT Freestyle 6100 handset
- 2 x NiMH AAA rechargeable batteries
- Mains power adaptor (Item code: 872260)
- Telephone line cord

If you have purchased a BT Freestyle 6100 multiple pack you will also receive the following for each additional handset:

- BT Freestyle 6000 handset
- BT Freestyle 6000 charger
- Mains power adaptor for charger (Item code: 021299)
- 2 x NiMH AAA rechargeable batteries

In this guide

Getting started

Location	6
Setting up	6

Getting to know your phone

Handset buttons	8
Handset display icons	9
Navigating the menus	10
Menu map	11
Base	12

Using the phone

Make an external call	13
Preparatory dialling	13
End a call	13
Receiving calls	13
Earpiece volume	14
Amplify your caller's voice	14
Secrecy	14
Switch to handsfree during a call	15
Paging	15
Keypad lock	16
Redial a number from the redial list	16
Save a number from the redial list to the directory	17

Delete a number from the redial list	17
Delete all numbers from the redial list	17

Using the directory

Add a new directory entry	18
Entering names/Character map	19
View and dial a directory entry	20
Edit an entry	20
Delete an entry	21
Assign a ringer melody to a directory entry	21
Copy a directory entry to another handset	22
Copy the entire directory to another handset	23

BT Calling Features & the Calls list

View and dial an entry in the Calls list	24
Save a Calls list entry to the directory	25
Delete a Calls list entry	26
Delete all numbers from the Calls list	26
To use Call Waiting	27

Handset settings

Handset ringer volume	.28
Handset ringer melody	.28
Key beeps	.29
Auto talk	.29
Handset language	.30
Set the time	.30
Set the date	.31
Set the alarm	.31
Switch a set alarm off	.32
Change the time format	.32

Base settings

Base ringer volume	.33
Base ringer melody	.33
Set the dial mode	.34
Change the system PIN	.34
Restore default settings	.35

Additional handsets & bases

Register a handset to a base	.36
Select a base	.37
De-register a handset	.37
Make an internal call	
to another handset	.38
Transferring calls	.38
3-Way conference call	.39

Help	.40
-------------	-----

General information

Safety	.44
Cleaning	.45
Environmental	.45
BT Accessories and replacement items	.46
Guarantee	.47
Returning your phone	.48

Technical information

How many telephones	
can you have?	.49
Connecting to a switchboard	.49
Access code and entering a pause	.50
Recall	.50
R&TTE	.50
Declaration of Conformance	.50

Getting started

WARNING

Do not place your BT Freestyle 6100 in the bathroom or other humid areas.

Handset range

The BT Freestyle 6100 has a range of 300 metres outdoors when there is a clear line of sight between the base and handset. When there is no clear line of sight between the base and handset, e.g. base indoors and handset either indoors or outdoors, the range could be reduced to 50 metres. Thick stone walls will severely affect the range.

Range indicator

The Ψ symbol on your handset display indicates when you are in range of the base. If the symbol flashes and you hear a warning beep, you are out of range and will need to move closer to the base.

IMPORTANT

Do not connect the telephone line until your handset is fully charged. The base must be plugged into the mains power at all times.

Which socket?



Power socket



Telephone line socket

Location


You need to place your BT Freestyle 6100 within 2 metres of a mains power and telephone socket so that the cables will reach.

Make sure it is at least 1 metre away from other electrical appliances to avoid interference.


Your BT Freestyle 6100 works by sending radio signals between the handset and base. The strength of the signal depends on where you site the base. Putting it as high as possible can help to provide the best signal.


Setting up

1. Plug the mains power cable into the base. Then plug the power adaptor into the wall socket and switch the power on. The **Power/In use** indicator on the base lights up.

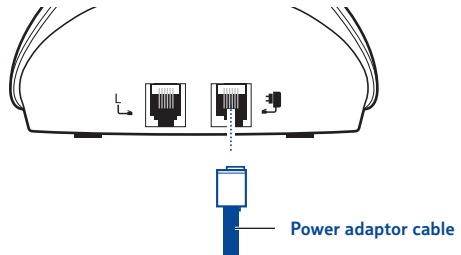

- Remove the battery compartment cover and insert the 2 x AAA NiMH batteries (supplied) into the handset. Slide the battery compartment cover back into place.

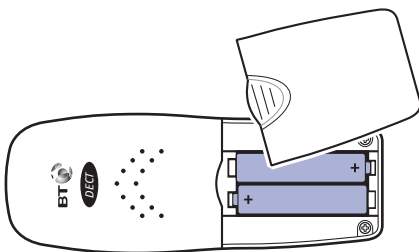

- Charge the handset for at least 16 hours by placing it on the base. The red **Charging** indicator on the base lights up and remains lit while the handset is on the base (even when the battery is fully charged). When the handset is fully charged the display will show the  (full battery) icon.
- After 16 hours, plug the telephone line cord into your BT Freestyle 6100 base and the other end into the wall socket.

Your BT Freestyle 6100 is now ready for use.

Talk/Standby time

Under ideal conditions, fully charged handset batteries should provide up to 10 hours talk time or 100 hours standby on a single charge.


Battery performance

Please note that new NiMH batteries do not reach full capacity until they have been in normal use for several days.

To keep the batteries in the best condition, leave the handset off the charger for a few hours at a time (after the initial 16 hour charge). Running the batteries right down at least once a week will help them last as long as possible.


The charge capacity of rechargeable batteries will reduce with time as they wear out, so reducing the talk/standby time of the handset. Eventually they will need to be replaced. New batteries can be obtained from the BT Freestyle Helpline 0870 605 8047.

Battery low warning


When the battery charge is low the display will show **Battery Low** and an empty battery icon . You will also hear the battery low warning beep. Place the handset back on the base to recharge.

Getting to know your phone

Handset buttons

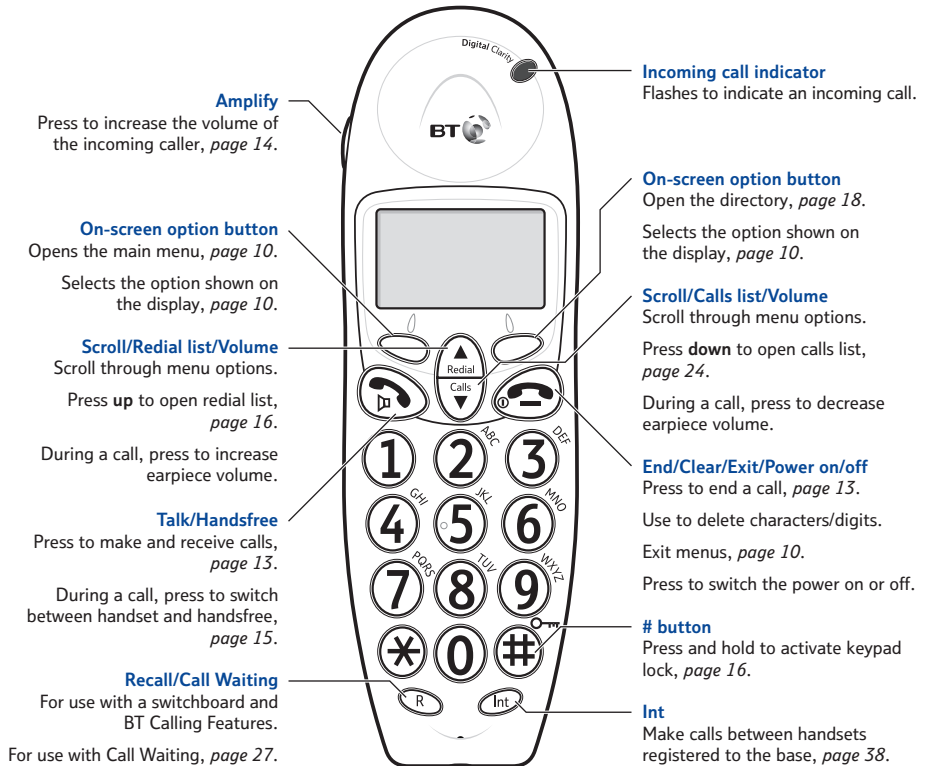

Handset display icons – These are the symbols you will see on your handset’s screen.

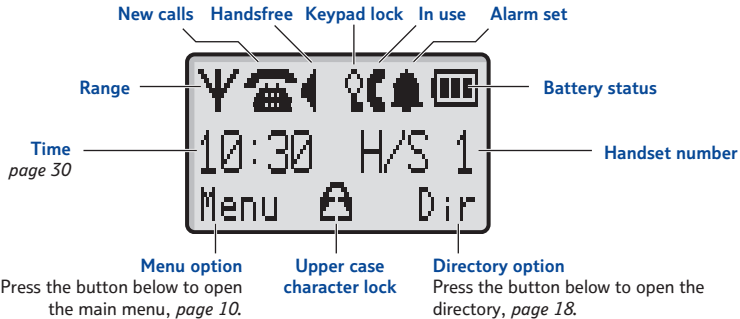

Y Range indicator
Indicates that the handset is registered and you are in range of the base.

Flashes when the base is out of range.

New calls indicator*
Displayed when you have new (unread) entries in the Calls list, *page 24*. The icon will continue to flash until you have viewed all new calls.

Handsfree
Indicates when handsfree is switched on, *page 15*.

Keypad locked
Indicates the keypad is locked, *page 16*.

Alarm set
Indicates an alarm is set, *page 31*.

In use
Displayed when making or receiving a call, *page 13*.

Battery status
Shows the battery charge level.
A ‘scrolling’ battery icon is displayed when the handset is on charge.

 Fully charged.

 Half charged.

 Battery low.

 Empty.

Upper case selected
Displayed when you have upper case character lock on, *page 19*.

* For this feature to work you must subscribe to your network provider’s Caller Display service.

10 Getting to know your phone





Select the option displayed by pressing the button underneath it.

For example, press the left-hand option button to select Menu and open the main menu, or press the right-hand option button to open the directory.

Navigating the menus

Your BT Freestyle 6100 has a menu system which is easy to use. Each menu leads to a list of options. Take a look at the menu map on the following page.


When the handset is in standby, press the **option** button under Menu to open the main menu.

Use the  and  buttons to scroll to the menu option you want. Then select **OK** for further options or confirm the setting displayed.

The option buttons and  and  buttons are also used when viewing the calls list and directory.



Exit or go back one level in the menu

To go to the previous level in the menu, select **Back**.

To cancel an operation and/or return to standby at any time, press .

If no button is pressed for 20 seconds the display will automatically return to standby.

Menu map

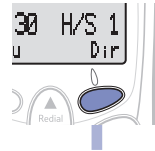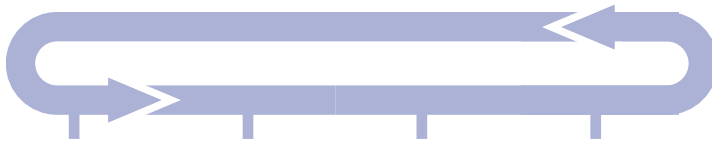

Set Handset

Ring Volume
Ring Melody
Key Beeps
Auto Talk
Language

Set Base

Ring Volume
Ring Melody
Dial Mode
Recall
System PIN
Default

Set Time

Time
Date
Alarm
Time Format

Registration


Register H/S
Select Base
De-register

Directory menu (page 18)

First entry...
Options
New Entry
Show Number
Edit Entry
Set Melody
Delete Entry
Copy Entry
Copy All


12 Getting to know your phone


Base

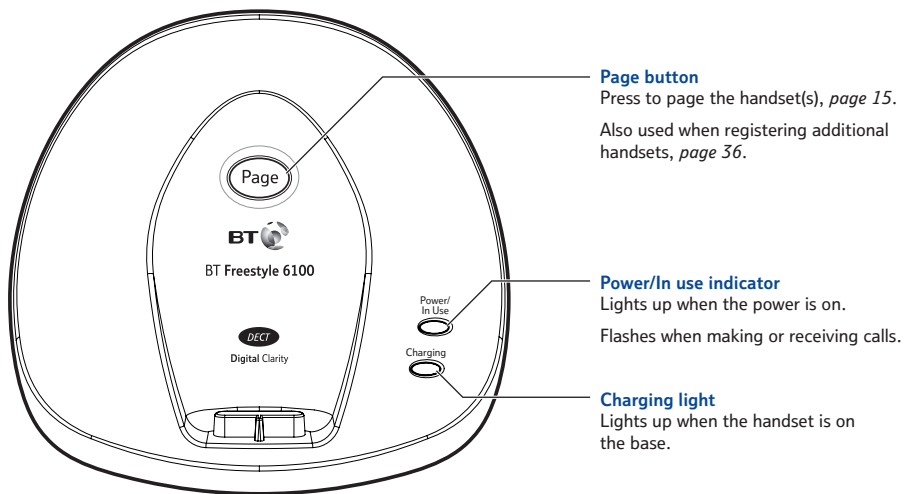


Using the phone

Make an external call


1. Press . When you hear the dialling tone, dial the telephone number.

The green In Use light on the base flashes and the  icon is displayed.

Preparatory dialling


1. Enter the number first. If you make a mistake as you dial, select **Clear** to delete the last digit. Press  to dial the number.

End a call

1. Press  or place the handset back on the base.

Receiving calls

Providing you have subscribed to your network's Caller Display service, the caller's number (or name if stored in the directory) is displayed. See *page 24*.

1. Press  or if the handset is on the base, simply lift it up and speak.


Dialling numbers quickly

Numbers can also be dialled direct from the directory (*page 18*), the dialled numbers list (*page 16*), or the calls list (*page 24*).

Call timer

The duration of your call is shown during and for a short while after your call has ended.

Auto Talk

If you would rather press  to receive a call when the handset is on the base, you need to switch Auto Talk off, see *page 29*.

14 Using the phone





The new earpiece volume level remains set until changed again.

Amplification is switched off automatically at the end of the call.

With amplification on, the earpiece volume can still be increased or decreased accordingly.




Earpiece volume

During a call you can adjust the volume of your caller's voice in the earpiece.

1. During a call, press  or  to increase or decrease the volume. The volume level is shown in the display, i.e. minimum = , maximum = .

Amplify your caller's voice

In addition to the earpiece volume settings, during a call you can amplify the incoming caller's voice.

1. During a call, press , on the side of the handset. The display flashes  and boosts the volume of the incoming caller's voice.
2. Press  again to switch amplification off.

Secrecy



During a call, you can talk to someone nearby without your caller hearing.


1. During a call, select **Secrecy**. The display shows **Secrecy** and flashes. Your caller cannot hear you.
2. Select **Off** to return to your caller.

Switch to handsfree during a call

Handsfree lets you talk to your caller without holding the handset. It also enables other people in the room to listen to your conversation over the loudspeaker.


During a call:

1. Press *and release*  until the call is transferred to the loudspeaker. The display shows the  icon.


Press *and release*  *again* if you want to switch from handsfree back to the handset.

2. Press  to end the call.

Paging

You can use the  button on the base to alert handset users that they are wanted or locate a missing handset.

1. Press *and release*  on the base. All registered handsets ring.

Press *and release*  to stop the handsets ringing, or press any button on the handset.

The paging ring will stop automatically after 30 seconds if no button is pressed.

16 Using the phone

IMPORTANT




Emergency calls cannot be made while the keypad is locked. You will need to unlock the keypad before you can dial out.

If a call is made to a number already in the list, the previous occurrence will be deleted.

If a call is made to a number which is stored in the directory, the name will be displayed instead, see 'Directory', on page 18.

Keypad lock





Lock the keypad to prevent any accidental button presses or dialling of numbers. You can still answer calls while the keypad is locked; the keypad will remain unlocked for the duration of the call.

1. Press *and hold*  to lock the keypad. The display shows **Keypad Locked** and the  icon.
2. To unlock the keypad select **Unlock**, then press  *within 2 seconds*.





Redial

The last 20 phone numbers you have dialled are saved to the redial list. You can select any of the numbers to redial, delete or copy to the directory. Once the list is full and a new call is made, the oldest call is replaced.

Redial a number from the redial list

1. Press  to enter the redial list. The most recently dialled number is displayed.
2. Use  or  to scroll through the list until the number you want to redial is displayed.
3. Press  to redial the number.

Save a number from the redial list to the directory






1. Press . Then scroll  or  to the number you want to save.
2. Select **Options**. **Save Number** is displayed. Select **OK**.
3. Enter **Name** is displayed. Enter a name using the keypad. Then select **Save**.
4. The number you want to save is displayed. Select **Save** to store the number, the display shows **Saved** then the name.
5. Press  to exit.

See 'Entering names' on page 19 for help with entering names.

If you need to edit the number, select **Clear** to delete the digits.



If the memory is full you will not know until you select **Save**.

Delete a number from the redial list

1. Press . Then scroll  or  to the number you want to delete.
2. Select **Options** and scroll  to **Delete Call**. Select **OK**. The display returns to the newest call in redial list.
3. Press  to exit.

If the name is displayed, select **Options** again.

Delete all numbers from the redial list

1. Press  then select **Options** and scroll  to **Delete All Calls**. Select **OK**.
2. The phone emits a confirmation tone and the display shows **EMPTY**, then returns to standby.

Using the directory

Directory full

If the directory is full when you try to add or copy an entry, the display will show **Directory Full**.

If you make a mistake, select **Clear** to delete digits.

You can store up to 100 entries in the handset directory. Each entry contains a name and number. Names can be up to 12 characters long and numbers up to 20 digits.

Add a new directory entry


1. From standby, select **Dir** to open the directory.

If there are already entries stored the first entry is shown. Select **Options**, **New Entry** is displayed. Select **OK**.

If the directory is empty, **Enter Name** is displayed. Select **OK**.

2. **Enter Name** is displayed. Enter a name using the keypad. Then select **Save**. See the following page for help on how to enter names in the directory.
3. **Enter Number** is displayed. Enter the telephone number.

If you subscribe to your network's Caller Display service and want names in your directory displayed instead of the phone numbers, you must store the full telephone number including the area code.

4. Select **Save**. The display shows **Entry Saved**, then the new added entry.
5. Add more entries or press  to exit.

Entering names

To enter names, you use the letters on the keypad.

For example, press **8** for the letter T, or **6** *three times* for the letter Õ. See the character map below.

If the next character you want to enter is on the same button as the last, wait a moment for the cursor to move right.

Character map

Each successive button press displays the characters shown.

Button	Character
0	0 @ &
1	. , : ; ! ? i ÷ ' " 1
2	A B C 2 ?
3	D E F 3 %
4	G H I 4 _
5	J K L 5 -
6	M N O 6 (
7	P Q R S 7 /
8	T U V 8 :
9	W X Y Z 9)
*	* € £ \$ ¥

To change between UPPER and lower case

To change between upper and lower case, press the **ALT** button.

The **A** icon is displayed when upper case is selected. Characters will remain in upper or lower case until changed again.

Even if lower case is selected, the first letter of every word will be displayed as a capital letter.

To insert a space

Press **1** to insert a space.

To delete characters

If you make a mistake, select **Clear** to delete characters.

Quick-search a name

Press the keypad button with the first letter of the name you want. For example, press **R** three times to search for names beginning with R.

View and dial a directory entry






1. Select **Dir** to open the directory. The first directory entry is displayed.
2. Use **▲** and **▼** to scroll alphabetically through the directory and find the entry you want to dial.
3. Press **▶** to dial the displayed entry.

If you wish, you can see the telephone number. Select **Options**, scroll **▼** to **Show Number** and select **OK**.

Edit an entry








1. Select **Dir** to open the directory and scroll **▲** or **▼**, or quick-search, to the entry you want to edit.
2. Select **Options**, then scroll **▼** to **Edit Entry** and select **OK**.
3. Select **Clear** to delete any incorrect name characters, then enter new ones and select **Save** when you have finished. The telephone number is displayed.
4. Select **Clear** to delete any incorrect telephone number digits, then enter new ones and select **Save** to confirm. The display shows **Entry Saved** then shows the edited entry.
5. Press **▶** to exit.

Delete an entry

1. Select **Dir** to open the directory and scroll  or , or quick-search, to the entry you want to delete.
2. Select **Options**, then scroll  or  to **Delete Entry** and select **OK**.
3. The display shows **Delete Entry?**. Select **Yes** to confirm the deletion (or **No** to go back). The display shows **Deleted** and returns to the directory.
4. Press  to exit and return to standby.

Assign a ringer melody to a directory entry

You can assign a different ringer melody to selected entries in your directory, for example, family members or friends. When one of these people call, you will be able to identify them from the different ringer melody.

1. Select **Dir** and scroll  or , or quick-search, to the entry you want to assign a melody.
2. Select **Options**, then scroll  or  to **Set Melody** and select **OK**. The current setting is displayed and will be played (unless set to 'Off').
3. Scroll  or  to hear the choice of melodies available. When you have chosen one, select **OK**. The display shows **Saved** and returns to set melody.
4. Press  to exit.

Choose from melodies 1–10 and 'Off'.







22 Using the directory

If the copy is refused or cannot be completed, the display will show **COPY FAILED**.





If the directory entry is amended and then copied to another handset it does not overwrite the target phone's entry but creates an additional entry.

Copy a directory entry to another handset

If you have more than one handset registered to your Freestyle 6100 base you can copy entries, or the entire directory, between handsets.

1. Select **Dir** to open the directory and scroll  or , or quick-search, to the entry you want to copy.
2. Select **Options**, then scroll  to **COPY Entry** and select **OK**.
3. Scroll  or  to choose the handset to copy the entry to and select **OK**. The display shows **Copying to Handset**, during the transfer.
4. The receiving handset briefly shows **Copying from Handset X** (where X is the handset number that the copied entries are coming from). Once an entry has been successfully copied it shows the name of the entry for a few seconds. The display then returns to standby when the entry has been copied.
5. At the first handset, choose another handset to copy the entry to or press  to exit.

Copy the entire directory to another handset

1. Select **Dir** then scroll  to **Copy All** and select **OK**.
2. Scroll  or  to choose the handset to copy the directory to and select **OK**. The display shows **Copying to Handset x**, during the transfer.
3. The receiving handset briefly shows **Copying from Handset X** (where X is the handset number that the copied entries are coming from). Once an entry has been successfully copied it shows the name of the entry for a few seconds. The display then returns to standby when the directory has been copied.
4. At the first handset, choose another handset to copy the directory to or press  to exit.

When you copy the entire directory to another handset it will add to the entries already stored.

IMPORTANT

If you are trying to copy more entries into the list than there is space for (maximum 100 entries) then the directory entries to be copied will *replace* the existing entries on the destination handset.

BT Calling Features & the Calls list

IMPORTANT

To use Caller Display you must first subscribe to the service from your network provider. A quarterly fee is payable. (Although a quarterly fee is payable with BT as the network provider, other provider's may bill differently).

For more information, call BT free on 0800 800 150.

It may take a couple of seconds for the display to show the telephone number or name for an incoming call. The display will initially display **External Call** followed by the number.

Caller information not available

For some incoming calls, the telephone number of the caller is not available and so cannot be displayed.

In this case some explanatory information will be displayed.

Withheld

The number has been withheld or is unavailable.

Operator

The call has been made via the operator.

Ringsback

Ringsback call.



Caller Display


If you have subscribed to a Caller Display service, your caller's number will be shown on your handset display (provided it is not withheld) prior to answering the call.

If the caller's number matches an entry stored in the directory, the name will be displayed as well.


Calls list





The Calls list stores detail of the last 30 calls in the order they were received. The caller's details are stored in the Calls list whether you answered the call or not. If a call is received when the list is full, the oldest entry will be deleted automatically.


When you have received new calls the  icon will be displayed (flashing on the standby screen). When a new call is received on the Call list, the  icon will flash on the display (in standby mode). 'New calls' are entries in the calls list that have not yet been viewed.

To stop the  icon flashing, you need to view all the new calls.






View and dial an entry in the Calls list

1. Press  to open the Calls list. The most recently received call is displayed. **NEW** will be displayed on the title bar when a call is new (i.e. has not yet been viewed).

2. Use  and  to view other entries in the list.
To see the date and time of the call, select **Options**.
The date and time of the call will be displayed.
3. Press  to dial the displayed entry.
The number will be dialled automatically.
Or, press  to exit the Calls list.

When all new calls in the list have been viewed, the  icon on the standby screen will disappear.






Save a Calls list entry to the directory

1. Press  to open the Calls list. Then scroll  or  to the entry you want to save.
2. Select **Options**. The date and time of the call is displayed.
Select **Options** *again* and then scroll  to **Save Number** and select **OK**.
3. Enter **Name** is displayed. Enter a name using the keypad.
Then select **Save**.
4. The display shows **Entry Saved**. Press  to exit.



See 'Entering names' on [page 19](#) for help entering names in the directory.

If you make a mistake, select **Clear** to delete the last character/s.

Delete a Calls list entry

1. Press . Then scroll  or  to the entry you want to delete.
2. Select **Options**. The display shows the time and date of the most recent call (or the telephone number if it had been displayed as a directory name, in which case select **Options** again).
3. Select **Options** again and scroll  to Delete Call. Select **OK**. The handset gives a confirmation tone as the call is deleted and the display returns to the most recent entry in the list.
4. Press  to exit.

Delete all numbers from the Calls list

1. Press , then select **Options** and scroll  to Delete All Calls.
2. Select **OK**. The handset gives a confirmation tone and the display flashes **EMPTY** before returning to standby.

If the name is displayed, you need to select **Options** again.

Call Waiting



With Call Waiting, during a call, if another caller is trying to reach you, you will hear a soft beep every 5 seconds.

If you have also subscribed to a Caller Display service, the caller's number (or name if stored in the directory) will be displayed for 20 seconds, after this time the display will return to your first caller's details.



Instead of the engaged tone, the second caller will hear an announcement asking them to hold the line.

To use Call Waiting

To answer the second call, without disconnecting from your first caller:

1. Press . The first caller will be put on hold and you will be connected to the second caller.
2. Press  again to return to the first caller, and then press it each time you want to switch between the two callers.

To disconnect the first call:

1. Press  to end the first call. The handset will then ring.
2. Press  and continue your conversation with the second caller.

IMPORTANT

To use Call Waiting you must first subscribe to the service from your network provider. A fee is payable.

For more information on BT Calling Features call BT free on 0800 800 150.

The Call Waiting beep is not audible to the person you are speaking to.

Handset settings

The default ringer volume is 5.




At each volume setting, a one second ringtone sample is played, to demonstrate the volume level.

The default ringer melody is Melody 5.

A sample of each melody is played.







Handset ringer volume

The handset has 5 ringer volume settings from 1 (low) to 5 (high) and Off.

1. Select **Menu**, Set Handset is displayed. Press **OK**.
2. The displays shows Ring Volume. Select **OK**.
3. The current setting is displayed. Use  and  to change the level, then select **OK**. The display shows Saved.
4. Press  to exit.





Handset ringer melody

The handset has 10 ringer melodies to choose from; 5 normal (settings 1–5) and 5 polytones (settings 6–10). You also can set a different melody for internal and external calls.

1. Select **Menu**, the display shows Set Handset. Select **OK**.
2. Scroll  to Ring Melody and select **OK**.
3. Use  or  to choose Internal or External, then select **OK**. The current melody is displayed.
4. Scroll  or  to hear the choice of melodies available. When you have chosen one, select **OK**. The display shows Saved.
5. Press  to exit.


Key beeps





You can set your handset to beep with each button press.

1. Select **Menu**, Set Handset is displayed. Select **OK**.
2. Scroll  to Key Beeps and select **OK**.
3. Use  or  to choose On or Off, then select **OK**.
The display shows Saved.
4. Press  to exit.

The default key beeps setting is On.

Auto talk

When the handset is on the base, you can answer a call just by picking it up. When auto talk is switched off, you will have to press  to answer a call.

1. Select **Menu**, Set Handset is displayed. Select **OK**.
2. Scroll  to Auto Talk and select **OK**.
3. Use  or  to choose On or Off, then select **OK**.
The display shows Saved.
4. Press  to exit.

The default Auto Talk setting is On.

30 Handset settings

Time & date auto-set






If you subscribe to your network's Caller Display service, the date and time are set automatically when your BT Freestyle 6100 receives its first call.

The time is always set in 24-hour clock, regardless of the time format setting.

The default time format is 24-hour. However, you can use the 12-hour clock if you wish.




Handset language

You can change the language shown on the display.





1. Select **Menu**, scroll  to **Set Handset** and select **OK**.
2. Scroll  to **Language** and select **OK**.
3. Use  or  to choose English, Français, Deutsch, etc then select **OK**.
4. Press  to exit.

Time, date and alarm






Set the time

1. Select **Menu**, scroll  or  to **Set Time** and select **OK**.
2. Time is displayed. Select **OK**. The current time format (24 Hr) and time are displayed.
3. Enter the correct time. As new digits are entered they will overwrite the existing time.
4. Select **OK**. The displays shows **Saved**.
5. Press  to exit.

Set the date

1. Select **Menu**, scroll  or  to **Set Time** and select **OK**.
2. Scroll  to **Date** and select **OK**. The current date is displayed.
3. Enter the correct date (day then month). As new digits are entered they will overwrite the existing date.
4. Select **OK**. The display shows **Saved**.
5. Press  to exit.

Set the alarm

1. Select **Menu**, scroll  to **Set Time** and select **OK**.
2. Scroll  to **Alarm** and select **OK**. The current setting is displayed.
3. Use  or  to choose **On** and select **OK**.
4. Enter a new alarm time. As new digits are entered they will overwrite the existing time. Select **OK**. The display shows **Alarm On**.
5. Press  to exit.

If you have more than one handset, you can set a different alarm time on each. The alarm will only go off on the handset on which it was set.

Alarm set

When the alarm is set the  icon is displayed.

The alarm does not repeat, so once the alarm goes off you will need to switch it on again each time if you want the alarm to go off every day. The time of the last alarm is saved.

When the alarm sounds







Press any button to silence the alarm. If no button is pressed, the alarm will stop automatically after 60 seconds.

32 Handset settings








Changing the time format will not only alter the time display but also the format of the call times recorded in the Calls list.

If you have more than one handset, changing the time format will affect *all* handsets.

Switch off an alarm that has been set

1. Select **Menu**, scroll  to **Set Time** and select **OK**.
2. Scroll  or  to **Alarm** and select **OK**. Then use  or  to display **Off** and select **OK**. The displays shows **Alarm Off**.
3. Press  to exit.





Change the time format

1. Select **Menu**, scroll  or  to **Set Time** and select **OK**.
2. Scroll  or  to **Time Format** and select **OK**.
3. Use  or  to choose **12** or **24 Hour** and select **OK**. The displays shows **Saved**.
4. Press  to exit.

Base settings






Base ringer volume

The base has 5 ringer volume settings from 1 (low) to 5 (high) and Off.

1. Select **Menu**, scroll  to **Set Base** and select **OK**.
2. The display shows **Ring Volume**. Select **OK**.
3. The current setting is displayed. Use  and  to change the level, then select **OK**. The display shows **Saved**.
4. Press  to exit.

Base ringer melody

The base has 5 ringer melodies to choose from.

1. Select **Menu**, scroll  to **Set Base** and select **OK**.
2. Scroll  to **Ring Melody** and select **OK**.
3. Scroll  or  to hear the choice of melodies available. When you have chosen one, select **OK**. The display shows **Saved**.
4. Press  to exit.

The default ringer volume is 5.

The base does not ring when the handset is on the base.

A sample of the volume level played.

At each different setting a one second melody sample is played.








34 Base settings

Your BT Freestyle 6100 is set to Tone dialling. This is suitable for most domestic use. It is unlikely you will need to change this setting unless you are connected to a switchboard which requires Pulse dialling.

IMPORTANT



If you change the system PIN, keep a record of the new number by writing in the space provided on *page 47*.


Set the dial mode

1. Select **Menu**, scroll  or  to **Set Base** and select **OK**.
2. Scroll  or  to **Dial Mode** and select **OK**.
3. Use  or  to choose **Tone** or **Pulse**, then select **OK**. **Saved** is briefly displayed.
4. Press  to exit.



Change the system PIN

The system PIN is required when registering additional handsets and bases with your BT Freestyle 6100 (*see page 36*). It acts as a security device to prevent unauthorised changes to your phone system. The default system PIN is **0000**, so you may choose to change this to a more personal number.

1. Select **Menu**, scroll  to **Set Base** and select **OK**.
2. Scroll  to **System PIN** and select **OK**.
3. The display shows **Old PIN**. Enter the current system PIN (default: **0000**). The digits you enter are displayed as underscores (i.e. **_ _ _ _**). Select **OK**.
4. The display shows **New PIN**. Enter your new system PIN, then select **OK**.

5. The display shows **Confirm**. Enter your new system PIN again, then select **OK**. The display will show **System PIN Changed**. If the PIN was entered incorrectly, **New PIN Does Not Match** is displayed and you are taken back to the beginning.
6. Press  to exit.

Restore default settings

1. Select **Menu**, scroll  to **Set Base** and select **OK**.
2. Scroll  to **Default** and select **OK**.
3. Display shows **PIN?** Enter the 4 digit PIN (default: **0000**) and press **OK**.

The handset power switches off and the base will beep then the handset will return to the standby display.

Default settings

Earpiece volume	3
Handset and base ringer volume	5
Handset and base ringer melody	5
PIN code	0000
Handset name	HS1
Handset language	English
Keybeeps	ON
Low battery tone	ON
Out of range tone	ON
Auto talk	ON
Dial mode	Tone
Pause after dialling	3 seconds
Phonebook	Empty
Redial list	Empty
Calls list	Empty

Additional handsets & bases

You can use up to four additional handsets with your BT Freestyle 6100 – all using the same phone line. This allows you to expand your phone system without the need to install telephone extension sockets for each new handset.




Your BT Freestyle 6100 handset can also be registered with up to 4 other bases. You can then select the base you would prefer to use.

Each additional handset is supplied with its own charger and user guide, but the following information will tell you how to register and use an additional handset with your BT Freestyle 6100.

Register a handset to a base

IMPORTANT

Before registration, make sure the handset batteries are fully charged and that you are close to the base.






1. Select **Menu**, scroll  to **Registration** and select **OK**.
2. The display shows **Register H/S**. Select **OK**.
3. The display shows **Base 1 2 3 4**. Enter the base number you want to register the handset to, using the keypad.
4. The display shows **PIN?**. Enter your system PIN (default: **0000**), then select **OK**.
5. *At the base you want to register to, press and hold  for approximately 10 seconds until you hear two confirmation beeps, then *release* .* The display will show **Search X** (X being the number of the base selected) followed by a registration number.

6. Select **OK** to complete registration.





The handset will be automatically assigned the next available handset number, which is shown in the display.

Select a base

If your BT Freestyle 6100 handset is registered to more than one base, you can select which base to use.

1. Select **Menu**, scroll  to **Registration** and select **OK**.
2. Scroll  or  to **Select Base** and select **OK**. The base that your handset is currently connected to is displayed.
3. Scroll  or  through all the bases that the handset is registered to marked with a # symbol. Once you have chosen a base, select **OK**.
4. The display shows **Registered to Base X** (where X is the base number the handset is registered to).

De-register a handset

1. Select **Menu**, scroll  to **Registration** and select **OK**.
2. Scroll  to **De-register** and select **OK**.
3. Enter your system PIN (default: **0000**), then select **OK**.
4. Scroll  or  to choose a handset to de-register. Select **OK**. The display shows **Handset X de-registered**.

You cannot de-register the handset you are using. To de-register this handset, another registered handset must be used.




As you cannot de-register the handset you are using it will not include its own number when in de-registration mode.

Using additional handsets

Make an internal call to another handset

If you have two or more handsets registered to your base, you can make internal calls between handsets.


Two handsets can be holding an internal call while a third is on an external call.

1. Press . The display shows **Handset:** then enter the handset number you want to call (e.g. **1-5**).
2. The receiving handset displays the number of the handset calling, eg. **Handset 1**. Press  to answer the internal call.
3. Press  on either handset to end the call.



Transferring calls

You can transfer an external call to another handset registered to the base.

During your call:

1. Press . Your external caller is put on hold and the display shows **Handset:** then enter the handset number you want to call (e.g. **1-5**).




The  icon flashes to indicate your external caller is on hold.

2. When the receiving handset answers, press the  to transfer the call. Your handset returns to standby. If the receiving handset does not answer, press  to return to the external call.


3-Way conference call

During an external call you can invite another handset to join the conversation.

During your call:

1. Press . Your external caller is put on hold. The display shows **Handset:** then enter the handset number you want to call (e.g. **1-5**).
2. When the receiving handset answers, press *and hold* the  to begin the conference call.
3. Press  on either handset to leave the conference call. The second handset will remain connected to the external caller.

Switch between external and internal calls

When the receiving handset answers, you can press  to switch between the external and internal calls, before transferring.

Help

BT Freestyle Helpline 0870 605 8047

Call the dedicated BT Freestyle Helpline:

- if you are having difficulties using your BT Freestyle 6100
- if you need replacement batteries or mains power lead

Lines open 9am – 5.30pm,
Monday to Friday and
9.30am – 2.30pm Saturday

New rechargeable batteries can be obtained from the BT Freestyle Helpline 0870 605 8047.

BT accepts no responsibility for damage caused to your BT Freestyle handset by using any other type of batteries.

WARNING

Do not immerse batteries in water or throw them into a fire. Dispose of old batteries responsibly; don't discard them with ordinary domestic refuse.

Many common problems are caused by the telephone and power cables being incorrectly connected, not connected at all, or the power being turned off.

Please check that your BT Freestyle 6100 has been correctly set up, see page 6, before ringing the BT Freestyle Helpline.

Replacing the handset batteries

After time, you may find that the handset batteries are running out of charge more quickly. This is a standard sign of wear and the batteries will need replacing. New batteries should be AAA size, Rechargeable Nickel Metal Hydride (NiMH), capacity 550mAh.

1. Press down on the top of the battery compartment cover and slide it off. See illustration on page 7.
2. Remove the old batteries and replace with 2 new ones, then replace the battery compartment cover.

No display

- The batteries may be flat, dead or incorrectly inserted. Recharge or replace the batteries.

Cannot dial out or receive calls

- The batteries may need recharging.
- Has there been a power cut? If so, place the handset back on the base for 10 seconds and try again. If it still does not work disconnect the batteries and mains power for 10 minutes, then reconnect and try again.

You have a dial tone, but the phone will not dial out

- You may need to change the dial mode from tone to pulse, *see page 34*.
- If you are connected to a switchboard, check whether you need to dial an access code.

Handset does not ring

- The ringer volume may be switched off, *see page 28*.
- Make sure the handset is registered to the base, *see page 36*.

Ψ icon is flashing

- Is the handset registered correctly to the base?
See page 36.
- Check that the handset is within range of the base.

icon is flashing

- The batteries are low, place the handset on the base to recharge.

icon not scrolling/Base charging light not lit

- Try cleaning the charging contacts.

You hear the busy tone when you press

- Make sure the handset is in range of the base.
- Another handset may be in use.

No Caller Display information is displayed

- Have you subscribed to a Caller Display service from your network provider, *see page 24*.
- The caller may have withheld their number.
- An exact number match was not found in the Directory. Check that you have stored the full number, including the dialling code.

Cannot register a handset to a base

- You can register a total of 5 handsets to your BT Freestyle 6100 base and you can register your BT Freestyle 6100 handset to up to 4 bases. Check that you have not exceeded these limits.
- Check that you have entered the correct base security PIN (default: **0000**). *See page 34.*
- Check that you are at least one metre away from other electrical equipment to avoid interference when registering.

Base unit does not ring, but the lights are on

- Have you connected the telephone line correctly?
- Is the base ringer set to off? *See page 33.*
- You may have a faulty line or socket. Try using another socket or line.

Buzzing noise on my phone or on other electrical equipment nearby

- Sometimes your BT Freestyle 6100 can interfere with other electrical equipment if it is placed too close. Move it at least one metre away from such appliances.

You can call BT on **151** if you suspect you may have a faulty line.

General information

IMPORTANT

This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

Safety

General

- Only use the power supply included with the product. Using an unauthorised power supply will invalidate your guarantee and may damage the telephone. The item code for the mains power supply is 872260. If you have purchased a BT Freestyle 6100 multiple pack, the item code for the charger mains power adaptor is 021299.
- Only use approved AAA NiMH rechargeable batteries.
- Do not open the handset or base. This could expose you to high voltages or other risks. Contact the BT Freestyle Helpline on 0870 605 8047 for all repairs.
- Radio signals transmitted between the handset and base may cause interference to hearing aids.
- It is recommended that advice from a qualified medical expert be sought before using this product in the vicinity of emergency/intensive care medical equipment.

- It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product.
- Your product may interfere with other electrical equipment, e.g. TV and radio sets, clock/alarms and computers if placed too close. It is recommended that you place your product at least one metre away from such appliances to minimise any risk of interference.
- Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals.

Cleaning

Simply clean the handset and base with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

Environmental

- Do not expose to direct sunlight.
- The product may heat up when the batteries are being recharged. This is normal. However, we recommend that you do not place the product on antique/veneered wood to avoid damage.

46 General information



- Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp conditions, such as bathrooms.
- Do not expose your product to fire, explosive or other hazardous conditions.
- There is a slight chance that your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord for the duration of the storm.

BT Accessories and replacement items

For a full range of accessories and replacement items for BT products, please call 0870 240 5522 or visit www.withandwithoutwires.com.

Guarantee

Your BT Freestyle 6100 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT Freestyle 6100, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is required.
- The equipment is returned to BT or its agent as instructed.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

For your records

Date of purchase:

Place of purchase:

Serial number:

For guarantee purposes proof of purchase is required so please keep your receipt.

Enter your base PIN here:

[/ / /]

(see page 34 for more information)

Within the 12 month guarantee period:

If you experience difficulty using the product, prior to returning it, please read the 'Help' section beginning on *page 40*, or contact the BT Freestyle Helpline on 0870 605 8047, 9am–5.30pm, Monday to Friday and 9.30am–2.30pm Saturday.

In the unlikely event of a defect occurring, please follow the Helpline's instructions for replacement or repair.

Outside of the 12 month guarantee period:

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We recommend that you contact BT's approved repair agent, TecLogic on 01672 564444 or a local qualified repairer.

Returning your phone

If the Helpline is unable to remedy your problem they will ask you to return the product. Where possible, pack the product in its original packaging. Please remember to include all parts, including the line cords, power supply units and the original batteries. (Please note that we cannot take responsibility for goods damaged in transit.) Please obtain and keep proof of posting from the Post Office, or the carrier you use.

Technical information

How many telephones How many phones can you have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your BT Freestyle 6100 has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

Any additional handsets and chargers that you may register have a REN of 0.

- Only use the approved base mains power adaptor supplied, item code: 872260. If you have purchased a BT Freestyle 6100 multiple pack the charger mains power adaptor is item code 021299.
- Only use approved AAA NiMH rechargeable batteries.

Connecting to a switchboard

This product is intended for use within the UK for connection to Public Telephone Network and compatible switchboards, which support tone and pulse dialling and Timed Break Recall. If in doubt please consult your network service provider.

50 Technical information

The stored number may appear like this:


9	P	08706058047
Access code	Pause	Number

The Declaration of Conformance for the BT Freestyle 6100 is published on the website:


<http://www.suncorptech.com/bt>

Access code and entering a pause

With some switchboards, after dialling the access code you may have to wait for a moment while the switchboard picks up an outside line so you will need to enter a pause in the dialling sequence.

1. When storing a number in the directory, at the point you want to insert a pause, press and *hold down* .

Recall

The  (Recall) button is used when connected to certain switchboards (PBXs) and with some BT Calling Features, or equivalent services available via your Network Provider.

R&TTE

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

Declaration of Conformance

Hereby, Suncorp Technologies declares that this BT Freestyle 6100 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Visit us at www.bt.com



Offices worldwide

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2004.
Registered Office: 81 Newgate Street, London EC1A 7AJ.
Registered in England No. 1800000.
BT Freestyle 6100 (06/04) 2-1
Designed and produced by The Art & Design Partnership Ltd.
Printed in China

