



E34 Series

Cordless Phone
Digital 2.4 GHz

Model Family: MD4260

Users Guide

For a copy of a large-print version of this guide, or for product-related questions, please visit us online:

www.motorola.com/cordless

Or contact us at:

1-800-353-2729 U.S.A.

1-800-461-4575 Canada

1-888-390-6456 TTY (Text Telephone)

Copyright © 2006 Motorola, Inc. All rights reserved. No part of this publication may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from Motorola, Inc.

Motorola reserves the right to revise this publication and to make changes in content from time to time without obligation on the part of Motorola to provide notification of such revision or change. Motorola provides this guide without warranty of any kind, either implied or expressed, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Motorola may make improvements or changes in the product(s) described in this manual at any time.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. PhoneWrap is a registered trademark of Motorola, Inc. All other product or service names are the property of their respective owners.

Table of Contents

Important Safety Instructions	viii
Welcome	1
Handset Overview	2
Base Unit Overview	3
MD4260 Display Overview	4
Getting Started	5
Battery Safety Instructions	5
Installing the Battery	6
Installing the Base Unit.....	7
Installing the Mounting Bracket (optional).....	8
Connecting the Base Unit.....	9
Charging the Handset Battery.....	10
Basic Operations	11
Handset Indicators.....	11
Base Unit LEDs	11
Making a Call	12
Answering Calls.....	12

Ending a Call	12
Speakerphone Operation	13
Adjusting the Volume from a Handset or the Base Unit.....	13
Redial Function	13
Mute Function	14
Locate a Misplaced Handset.....	14
Customizing Your Handset	15
Naming Your Handset.....	15
Changing Your Language Setting.....	15
Changing Your Ringer Tone	16
Changing Your Ringer Volume	16
Changing the Key Beep Setting	17
Setting Your Local Area Code	17
Changing the Dialing Method.....	18
Registering a New Handset	18
Using the Phonebook	19
Adding a Phonebook Entry.....	19
Deleting a Phonebook Entry.....	21
Caller ID/Call Waiting ID.....	21

Reviewing Caller ID Records	22
Storing a Caller ID Entry in the Phonebook	22
Dialing from the Caller ID Log.....	23
Deleting a Caller ID Record.....	23
Deleting All Caller ID Records.....	23
Using the VIP Melody Feature	24
Using the Answering Machine	25
Setting Up Your Answering Machine	25
How to Change Your Answering Machine Language Prompts	25
Answering Machine Display Codes	26
Setting the Clock	27
Listen to Messages	28
Using the Room Monitor Feature.....	29
Enabling the Room Monitor Feature	29
Monitoring a Room	29
Using the Intercom Feature	30
Intercom Calls.....	30
Warranty.....	31

Regulatory Information

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by Motorola for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Certification

This product contains a radio transmitter and accordingly has been certified as compliant with 47 CFR Part 15 of the FCC Rules for intentional radiators. Products that contain a radio transmitter are labeled with FCC ID and the FCC logo.

FCC Declaration of Conformity

Motorola Inc., Connected Home Solutions, 101 Tournament Drive, Horsham, PA 19044, 1-215-323-1000, declares that this product complies with 47 CFR Parts 2 and 15 of the FCC rules as a Class B digital device.

Federal Communications Commission (FCC) Part 68 Statement

This Motorola phone complies with Part 68 of the FCC rules and the requirements adopted by the Administrative Council for Terminal Attachments (ACTA). On the bottom of this equipment is the label that contains, among other information, a product identifier in format US: AAAEQ##TXXXX. If requested, this information must be provided to the telephone company.

The Ringer Equivalence Number (REN) is used to determine the number of devices that may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company.

For products approved after July 23, 2001, the REN for this product is part of the identifier that has the format US: AAAEQ##TXXXX. The digits represented by ## are the REN without the decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

This equipment uses the following USOC jack: RJ11C. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

Connection to Party Line Service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information. If this equipment causes harm to the telephone network, the telephone company will notify you in advance that the temporary discontinuance of service may be required. If advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact Motorola, Inc. at 1-877-466-8646. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment from the network until the problem is solved.

This equipment is hearing aid compatible.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of the cordless phone does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or qualified installer.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. THE UNIT MUST NOT BE EXPOSED TO DRIPPING OR SPLASHING. DO NOT PLACE OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ON THE UNIT.

CAUTION: THIS PRODUCT WAS QUALIFIED UNDER TEST CONDITIONS THAT INCLUDED THE USE OF THE SUPPLIED CABLES BETWEEN SYSTEMS COMPONENTS. TO ENSURE REGULATORY AND SAFETY COMPLIANCE, USE ONLY THE PROVIDED POWER AND INTERFACE CABLES AND INSTALL THEM PROPERLY.

CAUTION: INSTALLATION OF THIS PRODUCT MUST BE IN ACCORDANCE WITH NATIONAL WIRING CODES AND CONFORM TO LOCAL REGULATIONS.

CAUTION: DO NOT OPEN THE UNIT. DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE INSTALLATION AND TROUBLESHOOTING INSTRUCTIONS. REFER ALL SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION: CHANGES AND MODIFICATIONS NOT EXPRESSLY APPROVED BY MOTOROLA FOR COMPLIANCE COULD VOID USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

CAUTION: TO REDUCE THE RISK OF FIRE, USE ONLY NO. 26 AWG OR LARGER UL LISTED OR CSA CERTIFIED TELECOMMUNICATION LINE CORD OR NATIONAL EQUIVALENT.

Important Safety Instructions

Read all of the instructions listed here and/or in the user manual before you operate this equipment. Give particular attention to all safety precautions. Retain the instructions for future reference.

- This device must be installed and used in strict accordance with manufacturer's instructions as described in the user documentation that comes with the product.
- Comply with all warning and caution statements in the instructions. Observe all warning and caution symbols that are affixed to this equipment.
- Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool).
- Do not overload outlets or extension cords, as this can result in a risk of fire or electric shock. Overloaded AC outlets, extension cords, frayed power cords, damaged or cracked wire insulation, and broken plugs are dangerous. They may result in a shock or fire hazard.
- Route power supply cords so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords where they are attached to plugs and convenience receptacles, and examine the point where they exit from the product.

- Place this equipment in a location that is close enough to an electrical outlet to accommodate the length of the power cord.
- Place the unit to allow for easy access when disconnecting the power cord of the device from the AC wall outlet.
- Do not connect the plug into an extension cord, receptacle, or other outlet unless the plug can be fully inserted with no part of the blades exposed.
- Place this equipment on a stable surface.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- It is recommended that the customer install an AC surge protector in the AC outlet to which this device is connected. This is to avoid damaging the equipment by local lightning strikes and other electrical surges.
- Do not cover the device, or block the airflow to the device with any other objects. Keep the device away from excessive heat and humidity and keep the device free from vibration and dust.
- Wipe the unit with a clean, dry cloth. Never use cleaning fluid or similar chemicals. Do not spray cleaners directly on the unit or use forced air to remove dust.

- Operate this product only from the type of power source indicated on the product's marking label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating condition.

Welcome

Congratulations on your purchase of a Motorola MD4260 cordless phone. Check the contents listing on the product packaging to ensure that your purchase includes each of the items listed.

Product registration is an important step toward enjoying your new Motorola product. Registering helps facilitate warranty service and permits us to contact you should your Motorola product require an update or other service. Registration is not required for warranty coverage.

To register your product online, visit:


<http://broadbandregistration.motorola.com>

Product registration is not available in Canada.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status.


Handset Overview

1. Volume controls
2. LCD display
3. Talk
4. Menu/Select
5. Change number format
6. Mute/Delete
7. Temporary tone dialing
8. Phonebook
9. Redial
10. Microphone
11. Flash
12. Intercom
13. Insert Pause/Shortcut to ringer volume controls
14. Cancel action
15. Speakerphone
16. Up and down scroll keys

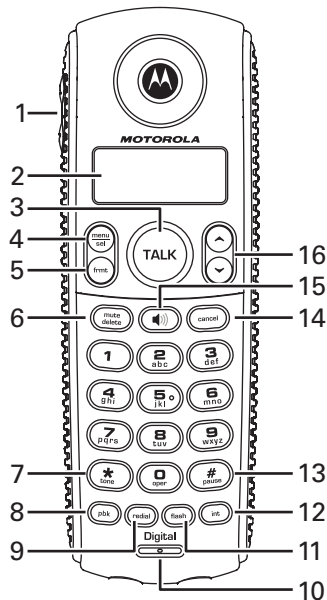


Base Unit Overview

1. Handset cradle
2. Charge/Page LED
3. Page button
4. Speaker
5. Volume controls
6. Set minute
7. Set hour
8. Set or check the day
9. Answer machine on/off
10. Record memo
11. Announcement playback/Record
12. Answering machine playback controls
 - ⏮ Play/Stop message
 - ⏪ Skip backwards/Instructions
 - ⏩ Skip forwards/Change voice language
 - ⏭ Delete message
13. In use LED
14. Display window

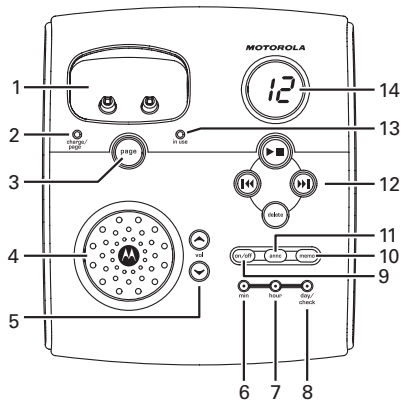

MD4260 Display Overview

1. Date the call was received
2. Time the call was received
3. Caller's phone number
4. Name of caller
5. Order of the call record
6. Indicates a new caller ID record

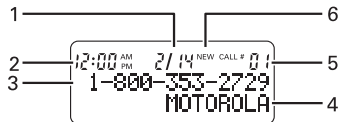

NOTE: Caller ID information is supplied only if you subscribe to the service with your telephone company.


Getting Started

Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury and/or explosion.
- **CAUTION:** There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the battery that came with your phone or an authorized replacement recommended by the manufacturer.
- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.
- The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.


Installing the Battery

1. Remove any stickers or inserts, if present.
2. Remove the battery door by pressing down on the indentation and sliding downward.
3. Plug the battery connector into the receptacle. (Make sure the black wire is on the right.)
4. Insert the battery into the battery compartment.
5. Replace the battery door.

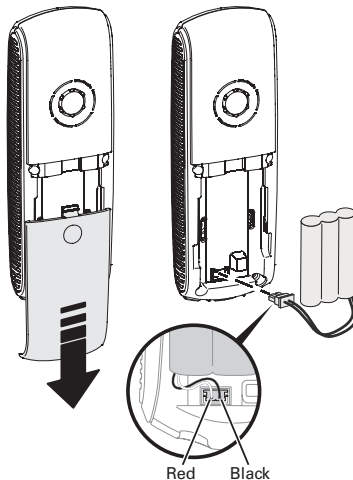




Installing the Base Unit

1. Select a location for your base unit.

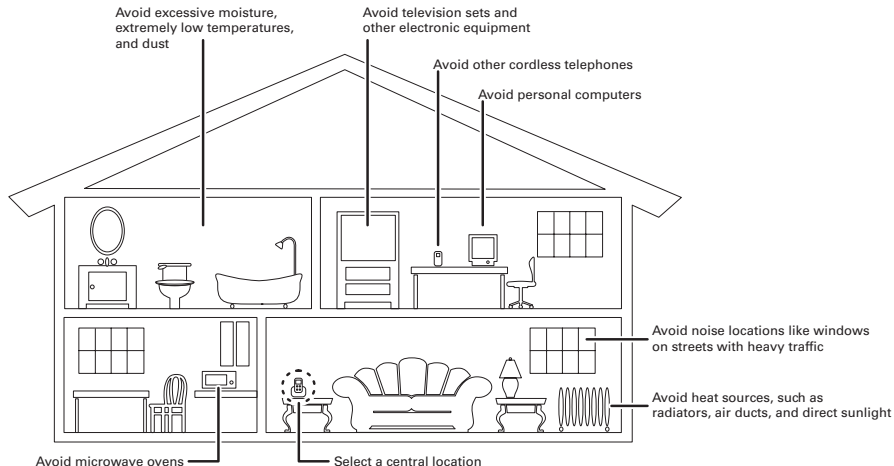

Installing the Mounting Bracket (optional)


1. Press the release button on the bottom of your base unit and push forward on the mounting bracket to remove it from the base unit.
2. Turn the mounting bracket upside down.
3. Align the tabs of the mounting bracket with the slots on the bottom of the base unit.
4. Push the mounting bracket forward, sliding it into place. The mounting bracket clicks into place when seated correctly.

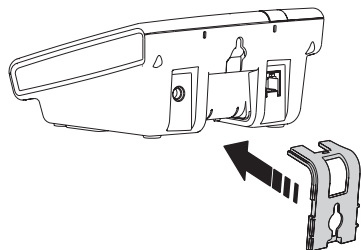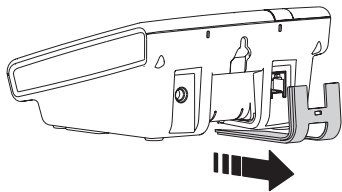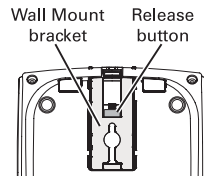

Connecting the Base Unit

1. Connect the phone and power cords to the back of the base unit.
2. Plug the phone cord into a wall jack and the power cord into an electrical outlet.
3. Place the base on a sturdy surface, or mount it to a telephone wall jack.

To wall mount the base unit, align the base unit with the mounting studs on the wall jack. Slide the base unit down on the mounting studs until it locks into place.

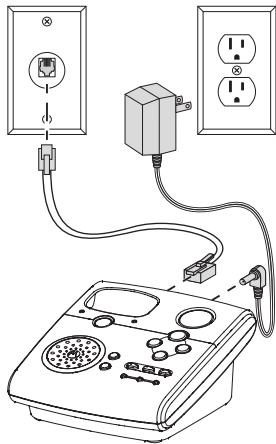

Charging the Handset Battery

A rechargeable battery pack powers your handset. When you place the handset in the base unit, it charges automatically.


The initial battery charge time is 10–12 hours. After the initial charge, a maintenance charge of eight hours should be sufficient. Be sure to place the handset in its base when not in use to ensure maximum daily performance.

If your handset displays a **LOW BATTERY** message, or the handset appears completely inactive (i.e., the LCD is blank and does not activate when you press the keys), charge the handset.

NOTE: When in **LOW BATTERY** mode, the keypad sounds, backlighting, and speakerphone features will not work. The features are fully functional after you recharge the battery.

Basic Operations


Handset Indicators

Indicator	Description
Mute ON	Turns on when the microphone is muted
NEW	Turns on when a new call is received and added to the call log
LOW BATTERY	Handset battery is low and should be charged
	Turns on when the ringer is muted

Base Unit LEDs

LED	Description
in use	The LED is on when the phone is off-hook or when an extension phone is off-hook.
charge/page	The LED is on when the handset is charging in the base. The LED flashes when the base pages any registered handsets.

Making a Call

Press **TALK** on the handset or the  key to use the speakerphone feature. When you hear the dial tone, dial the number.

-OR-

Enter the phone number, and then press **TALK** or . The phone number appears on the display before it is dialed. Press **MUTE/DELETE** to make corrections. Press **CANCEL** to delete the entire number.

Answering Calls

Press **TALK**, or .


If you subscribe to call waiting:

Press **FLASH** to answer the second call. Press **FLASH** again to return to the first call.

Ending a Call

You can end a call by pressing **TALK**, **CANCEL**, or placing the handset in the base unit.


Speakerphone Operation

Your handset has a built-in speakerphone. This feature allows you to have hands-free conversations. To switch between the speakerphone and the handset, press the  key.


Adjusting the Volume from a Handset or the Base Unit

While you are on a call, press the **VOL ▲ ▼** keys on the left side of the handset to adjust the listening volume to a comfortable level. The volume level (**VOL1** through **VOL4**) appears on the display.

Press the **VOL ▲ ▼** keys on the base unit to adjust the volume for the answering machine. The volume level (**L1** through **L8**) appears in the message display window on the base unit.

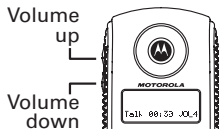

Redial Function

1. Press **REDIAL** to access the redial list.
2. Use the scroll keys to view the last three numbers dialed.
3. Press **TALK** or  to dial the desired number.
4. Press the **CANCEL** key to exit the redial review list without dialing a number.


Mute Function

NOTE: The mute feature is only available during a call.


1. Press **MUTE/DELETE**. **Mute ON** appears on the display.
2. Press **MUTE/DELETE** again to return to normal two-way conversation.

Locate a Misplaced Handset

From the base unit, press the **PAGE** key to locate a misplaced handset. The handset beeps and **Paging From BASE** appears on the display.

To end the page, press **TALK** or  on the handset, or press **PAGE** on the base unit.

NOTE: If you have more than one handset, pressing **CANCEL** on a handset stops the paging for that handset only.

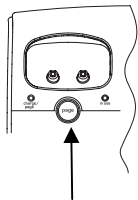

Customizing Your Handset

Naming Your Handset

1. Press **MENU/SEL**.
2. Scroll to and select **Handset Setup**.
3. Scroll to and select **Handset Name**.
4. Use the keypad to enter the new name for your handset (up to 15 characters).
5. Press **MENU/SEL** to save the setting.

Changing Your Language Setting

1. Press **MENU/SEL**.
2. Scroll to and select **Handset Setup**.
3. Scroll to and select **Language**.
4. Press 1 for **ENGLISH (Eng)**, 2 for **FRENCH (Fra)**, or 3 for **SPANISH (Esp)**.
5. Press **MENU/SEL** to save the setting.
6. Press **CANCEL** to return to the standby screen.

NOTE: If you accidentally change the language option, follow the steps below:

1. Press **CANCEL** twice to ensure that you are at the standby menu.
2. Press **MENU/SEL** three times to reach the **Language** menu.
3. Press 1 for **ENGLISH (Eng)**, 2 for **FRENCH (Fra)**, or 3 for **SPANISH (Esp)**.
4. Press **MENU/SEL** to save the setting.
5. Press **CANCEL** to return to the standby screen.

Changing Your Ringer Tone

1. Press **MENU/SEL**.
2. Scroll to and select **Handset Setup**.
3. Scroll to and select **Ringer Tone**.
4. Use the up and down scroll keys to play samples of each tone.
5. Press **MENU/SEL** to save the setting.
6. Press **CANCEL** to return to the standby screen.

Changing Your Ringer Volume

Press the **#/PAUSE** key for quick access to the ringer volume controls.

- OR -

1. Press **MENU/SEL**.
2. Scroll to and select **Handset Setup**.
3. Scroll to and select **Ringer Volume**.
4. Press 1 for **Hi**, 2 for **Low**, or 3 for **Off**.
5. Press **MENU/SEL** to save the new setting.
6. Press **CANCEL** to return to the standby screen.

Changing the Key Beep Setting

1. Press the **MENU/SEL** key.
2. Scroll to and select **Handset Setup**.
3. Scroll to and select **Set Key Beeps**.
4. Press 1 for **On** or 2 for **Off**.
5. Press the **MENU/SEL** key to save the setting.
6. Press **CANCEL** to return to the standby screen.

Setting Your Local Area Code

Most caller ID information lists the 10-digit calling number. If you only need seven digits where you live, you can enter your local area code and the phone will then remove the area code from the received number.

1. Press the **MENU/SEL** key.
2. Scroll to and select **Handset Setup**.
3. Scroll to and select **Area Code**.
4. Enter your three-digit local area code.
5. Press the **MENU/SEL** key to save the setting.
6. Press **CANCEL** to return to the standby screen.

Changing the Dialing Method

1. Press **MENU/SEL**.
2. Scroll to and select **Handset Setup**.
3. Scroll to and select **Set Tone/Pulse**.
4. Press 1 for **Tone** or 2 for **Pulse**.
5. Press **MENU/SEL** to save the setting.
6. Press **CANCEL** to return to the standby screen.

NOTE: When the phone is set for pulse dialing, you may switch to temporary tone dialing during a call by pressing *. Once pressed, tone will be used for rest of the call. After you hang up, the phone will return to pulse dialing for the next call.

Registering a New Handset

You can register up to four handsets to your base unit. The handset included with the base unit is pre-registered. Use the steps below to register new or replacement handsets.

1. Press **MENU/SEL**.
2. Scroll to and select **Handset Setup**.
3. Scroll to and select **Registration. Hold Base Page Key Until Beep** appears on the display.
4. A confirmation message appears when the registration is successful.

Using the Phonebook

Each handset can store up to 50 numbers with names. Each memory location holds up to 20 digits for numbers and 15 characters for the name.

Adding a Phonebook Entry

1. Press **PBK**.
2. Enter a location (01 to 50), or use the scroll keys to find an open location.
3. Press **PBK**. **Enter Name** appears on the display.
4. Enter the contact's name. Use the **MUTE/DELETE** key to make corrections.
5. Press **PBK** to save the name. **Enter Tel Number** appears on the display.
6. Enter the contact's telephone number. Use the **MUTE/DELETE** key to make corrections.
7. Press **PBK** to save the number. The handset returns to the standby screen.

NOTE: The steps for editing a stored number are the same steps for entering a number in memory.

Use the table below to enter names and special characters into the phonebook.

Buttons	Number of Presses			
	1	2	3	4
1	space	_	*	!
2	A	B	C	(
3	D	E	F)
4	G	H	I	\$
5	J	K	L	/
6	M	N	O	;
7	P	Q	R	S
8	T	U	V	?
9	W	X	Y	Z
#	#	P	#	P

NOTE: To add a pause in the number, press the **#/PAUSE** key twice.

Deleting a Phonebook Entry

1. Press **PBK**.
2. Enter the desired location, or scroll to the desired entry.
3. Press **MUTE/DELETE**. **Delete?** appears on the display.
4. Press **MUTE/DELETE** again to delete the entry, or press **CANCEL** to exit the menu without deleting the entry.

Caller ID/Call Waiting ID

Your handset is also capable of displaying caller ID information in conjunction with a call waiting alert signal (**Call Waiting/Caller ID**).

With **Call Waiting/Caller ID**, the caller ID data is displayed so you can decide whether to answer the incoming call or continue with your current conversation. Your system holds up to 40 caller ID entries (up to 15 characters and 20 digits each).

When you receive new caller ID information, your handset shows **NEW** in the first line of the display.

NOTE: You must subscribe to **Caller ID/Call Waiting** service with your local telephone company to use the feature.


Reviewing Caller ID Records

To review caller ID records, press the up or down scroll keys. When your system stores new caller ID records, **NEW** appears on the display. After you review all of the new records, **NEW** disappears from the display.

Storing a Caller ID Entry in the Phonebook

1. Use the scroll keys to access the desired caller ID record.
2. Press the **FRMT** key if you wish to change the dialing format. As you press the key, the display cycles through the available dialing options (1 + area code + number, area code + number, number only, etc.).
3. Press **PBK** to store the displayed number. **Select Memory 01 – 50** appears on the display.
4. Use the keypad to enter a two-digit location from 01 to 50. If the location is occupied, **Replace Entry?** appears on the display. You can press **CANCEL** to return to the CID and enter another location, or press **PBK** to overwrite the entry. When the CID is stored, the system returns you to the standby screen.

Dialing from the Caller ID Log

1. Use the scroll keys to access the entry you wish to dial. If necessary, press **FRMT** repeatedly to change the dialing format (1 + area code + number, area code + number, number only, etc.).
2. Press **TALK** or  to dial the number.

Deleting a Caller ID Record

1. Press the up or down scroll key to access the caller ID records.
2. Scroll to the entry you wish to delete.
3. Press **MUTE/DELETE**. **Delete Call Id?** appears on the display.
4. Press **MUTE/DELETE** to delete the record.

Deleting All Caller ID Records

1. Press the up or down scroll key to access the caller ID records.
2. Press and hold **MUTE/DELETE**. **Delete All?** appears on the display.
3. Press **MUTE/DELETE** to delete all caller ID records.

Using the VIP Melody Feature

You can assign a distinct ringer tone, or VIP Melody, to ten contacts from the phonebook memory.

1. Press **MENU/SEL**.
2. Scroll to and select **Handset Setup**.
3. Scroll to and select **VIP Melody**.
4. Use the up and down scroll keys to view the **VIP Melody** locations. If the location is available, ****EMPTY**** appears on the display. If the location is occupied, the assigned melody and the contact information appear on the display.

NOTE: If you wish to clear a **VIP Melody** location, press **MUTE/DELETE** twice to clear an entry.

5. Press **MENU/SEL** to choose a **VIP Melody** location. **"Select Memory"** appears briefly.
6. Use the up and down scroll keys to view entries in the phonebook memory.
7. Press **MENU/SEL** to store a phonebook entry to a **VIP Melody** location.
8. Use the up and down scroll keys to choose a melody that will play for this **VIP Melody** location. The number of the melody appears on the display, and the melody plays.
9. Press **MENU/SEL** to save the setting.

Using the Answering Machine

Your telephone's integrated answering system uses audible prompts to provide access to the system's features and help you set up the device.

During the initial power up of your answering machine, the system announces, ***“Press review to receive set-up instructions.”***

Setting Up Your Answering Machine

When you press the rewind (⏮) key, the system announces:

Press and hold announcement key to record announcement. Release key to stop recording.

Press announcement key to check announcement.

Press and hold minute or hour key to set time.

Press minute key to set exact minute.

Press and hold day time key to set day.

Press day time key to check day and time.

How to Change Your Answering Machine Language Prompts

To change the language for your system prompts and pre-recorded out-going messages (USA models — English/Spanish prompts, Canada models — English/French prompts):

Press and hold the fast forward (⏭) button. The display reads **En** for English, **SP** for Spanish, or **FR** for French. The system announces the set-up prompt in the selected language.

Answering Machine Display Codes

WINDOW DISPLAYS	CODE INDICATES	DESCRIPTIONS/DIRECTIONS
CL	Clock	Set the clock
0 ~ 59	Number of messages	A flashing number indicates new messages; a steady number indicates the number of old messages. NOTE: You can store approximately 15 minutes of messages, memos, and announcements (maximum of 59 messages).
An	Answer machine	A blinking (An) code indicates that the system is answering a call.
A1	Announcement 1	A1 flashes when the outgoing announcement plays (e.g., if you press the ANNC button, as the outgoing message plays A1 flashes in the display window).
LA	Line access	The LA code appears when they system is accessed remotely. You can access messages from any remote touch-tone phone. The default code is 123.
--	Answer Off	The answering machine is off.
F	Memory full	A blinking (F) code indicates that the memory is full.

Setting the Clock

A flashing “**CL**” in the message window indicates that you must set the correct day and time at the base unit.

1. Press the **DAY/CHECK** button. The system announces the day, hour, minute, and the time of day (e.g., **Monday, 7:42 PM**).
2. Press and hold the **HOURL** button until the system announces the correct hour.
NOTE: Be sure to select the correct time of day (e.g., 3 AM or 3 PM). The system announces the current setting.
3. Press and hold the **MIN** button to change the minute of the hour. The system announces the first two minutes sequentially (01, 02), in increments of five (05, 10, 15, 20). The system announces the current setting.
4. Press and hold the **DAY/CHECK** button to change the day of the week. The system announces the current setting.

Listen to Messages

The display window flashes the number of new messages. If there are no new messages, the total number of old messages appears in the display. The number does not flash.

1. Press the **PLAY** button to review your messages. Before each message or memo plays, the system announces the day and time it was received. While a message plays, the message window displays the number of that message.
2. Press **REPEAT** during playback to hear a message again. If you press **REPEAT** twice in the first two seconds of a message, the system will replay the previous message.
3. Press **FAST FORWARD** during playback to skip to the next message. After playing the last message in a mailbox, the system announces "**End of messages.**"

Using the Room Monitor Feature

Before you can use a handset to monitor a room, ensure that the handset's **ROOM MONITOR** feature is on. You can enable the feature on one or all of your handsets using the steps below.

Enabling the Room Monitor Feature

1. Press **MENU/SEL**.
2. Scroll to and select **Room Monitor**.
3. Scroll to and select **Enable Monitor**.
4. Press 1 for **YES** or 2 for **NO**.
5. Press **MENU/SEL** to save the setting.
6. Press **CANCEL** to return to the standby screen.


Monitoring a Room

1. Place a registered handset (e.g., **HANDSET 2**) in the room you wish to monitor. Make sure the Room Monitor feature is enabled.
2. From a different handset (e.g., **HANDSET 1**), press **MENU/SEL**.
3. Scroll to and select **ROOM MONITOR**. **ENTER (1– 4)** appears.
4. Enter the number (1 through 4) of the handset (**HANDSET-2**) that you placed in the room you wish to monitor. **ROOM MONITOR** appears.
5. Press **TALK** or **CANCEL** to end monitoring.

Using the Intercom Feature

If you have at least two handsets registered to your base unit, you can use the intercom feature. Each handset is named **Handset X**. The X represents the order (1, 2, 3, 4) in which the handset was registered to the base unit.

Intercom Calls

1. When not on a call, press the **INT** key on any handset. **Enter (1-4) Handset** appears on the display.
2. Enter the number of the handset you wish to page (e.g., to call HANDSET 2, press 2).
3. To answer the page, press **INT**, **TALK**, or  on the handset. The screen on both handsets displays **Intercom**.
4. Press **TALK**, **INT**, or **CANCEL** on either handset to end the call.

Warranty

Motorola Limited Warranty for Consumer Products, Accessories, and Software Purchased in the United States or Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its cordless telephones ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories"), and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories, and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories as defined above, unless otherwise provided for below. Length of coverage: one (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.

- **Decorative Accessories and Cases.** Decorative covers, bezels, PhoneWrap® covers and cases. Length of coverage: limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
- **Monaural Headsets.** Ear buds and boom headsets that transmit mono sound through a wired connection. Length of coverage: limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
- **Products and Accessories that are Repaired or Replaced.** Length of coverage: The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.
- **Software.** Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk). Length of coverage: ninety (90) days from the date of purchase.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair, and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered, or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products, Accessories or Software is excluded from coverage.

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.

Who is Covered

This warranty extends to the first end-user purchaser only.

What will Motorola Do?

Motorola, at its option, will repair, or replace any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software, or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games, and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Get Warranty Service or Other Information

In the USA, call

1-800-353-2729

TTY 1-888-390-6456

In Canada, call:

1-800-461-4575

TTY 1-888-390-6456

For accessories and software, please call the telephone number designated above for the product with which they are used. You will receive instructions on how to ship the Products, Accessories, or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, OR REPLACEMENT AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE

PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES, OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.



MOTOROLA

E34 Series

Cordless Phone

Digital 2.4 GHz

Model Family: MD4260

529246-001

04/06