



MOTOROLA

User's Guide

For S801 / S802 / S803 / S804 / S805

DECT 6.0 Cordless Phones with
Answering System

Warning

Use only the power adapters and telephone line cord provided in the box.

Welcome...

to your new Motorola Digital Cordless Phone!

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please call:

US and Canada: 1-888-331-3383

On the Web: www.motorola.com

-
- 100 name and number phonebook.
 - Answering machine with 15 minutes digital recording time.*
 - Caller ID shows you who's calling and you can see details of the last 30 callers in a calls list.**
 - Register up to 5 handsets to a single base.
 - Make internal calls, transfer external calls, hold 3-way conversation between two internal callers and an external caller (for multi-handset pack only).

*The recording time includes the pre-recorded voice menu and outgoing announcements.

**You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made if emergency telephone call is necessary.



This ENERGY STAR[®] program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR[®] label indicating it meets the latest energy efficiency guidelines.

This User's Guide provides you with all the information you need to get the most from your phone.

Before you make your first call you will need to set up your phone. Follow the simple instructions in 'Getting Started', on the next few pages.

IMPORTANT

Only use the telephone line cord supplied.

This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

Got everything?

- 1 x Handset
- 1 x Base
- 1 x Charger (for multi-handset pack only)
- 1 x NiMH rechargeable battery pack
- 1 x Battery door
- 1 x Power adapter for the base
- 1 x Power adapter for the charger (for multi-handset pack only)
- 1 x Telephone line cord
- 1 x Quick start guide
- 1 x User's guide

In multihandset packs, you will find one or more additional handsets, chargers with power adapter units, additional rechargeable battery packs and battery doors.

1. Getting started	6	4.2 Add an Entry.....	20
2. Getting to know your phone	9	4.3 Edit an Entry.....	21
3. Using the phone.....	17	4.4 Delete an Entry.....	21
3.1 Calls.....	17	4.5 Delete all Entries	21
3.1.1 Make a call	17	4.6 View Phonebook Capacity	21
3.1.2 Redial	17	4.7 Store a Phonebook Entry as a One Touch Number.....	21
3.1.3 Dial one touch numbers 1 to 9	17	4.8 Change the Phonebook Entry in a One Touch Number.....	22
3.1.4 Call from the phonebook	17	4.9 Delete a One Touch Number	22
3.1.5 Call from the calls list	17	4.10 Copy Phonebook Entry to Another Handset	22
3.1.6 Call from the redial list	17		
3.1.7 Answer a call	18	5. Caller ID	23
3.1.8 Adjust volume	18	5.1 Calls List.....	23
3.1.9 Mute	18	5.1.1 View the calls list	23
3.1.10 End a call	18	5.1.2 Save a number from the calls list to the phonebook	24
3.2 Intercom.....	18	5.1.3 Delete a calls list entry	24
3.2.1 Call another handset	18	5.1.4 Delete entire calls list	24
3.2.2 Transfer an external call to another handset	19	5.2 Redial	24
3.2.3 Three-party conference call	19	5.2.1 View the redial list	24
3.3 Voicemail.....	19	5.2.2 Copy a redial number to the phonebook	25
3.3.1 Clear voice mail indication	19	5.2.3 Delete a redial list entry	25
4. Phonebook	20	5.2.4 Delete entire redial list	25
4.1 View an Entry	20		



6. Personal Settings	25	8.4 Answering Machine Settings.....	32
6.1 Set Date & Time	25	8.4.1 Set the answer mode	32
6.2 Handset Tones	26	8.4.2 Message alert on/off	32
6.2.1 Set the ringer tone	26	8.4.3 Set the number of rings	32
6.2.2 Set the ringer volume	26	8.4.4 Record a memo	32
6.2.3 Key tone on/off	26	8.4.5 Call screening on/off	33
6.2.4 Battery low tone on/off	26	8.4.6 Remote access	33
6.2.5 No coverage tone on/off	26	8.4.7 Set the remote code	34
6.3 Handset Name	27	9. Default Settings	35
6.4 Set the Display Language	27	10. Help	35
6.5 Set the LCD Contrast	27	11. General Information	37
6.6 Auto Talk On/Off.....	27		
6.7 Registration	27		
7. Advanced Base Settings	28		
7.1 Set the Dial Mode.....	28		
7.2 Set the Flash Time	28		
7.3 Set the Area Code.....	29		
7.4 Reset All Settings.....	29		
8. Using your Answering Machine.....	29		
8.1 Play Messages	29		
8.2 Delete All Messages.....	31		
8.3 Announcement	31		
8.3.1 Record the announcement	31		
8.3.2 Play the announcement	31		

1. Getting started

WARNING

Do not place your phone in the bathroom or other humid areas.

Location

When choosing a location for your new phone, here are some important guidelines you should consider:

- Avoid sources of noise and heat, such as motors, fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- Avoid areas of excessive dust, moisture and low temperature.
- Avoid other cordless telephones or personal computers.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

HANDSET RANGE

Optimal range is reached when there are no other electrical appliances working within the range area. Any obstruction between the base and handset will also reduce the range significantly.

SIGNAL STRENGTH

When out of range of the base, the screen shows Searching.... If you are on a call, the line will hang up. Move back within in range. The handset will automatically re-connect to the base.

Setting up


IMPORTANT

The base must be plugged into the electrical outlet at all times. Do not connect the telephone line cord into the wall jack until the handset is fully charged. Only use the power adapter and telephone line cord supplied with the product.

WHICH POWER ADAPTER


The power adapter with the smaller round pin plug is for the base unit and the power adapter with the bigger round pin plug is for the charger unit.


Connecting the base

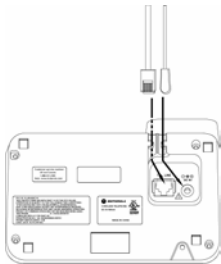



1. Plug the power adapter with smaller pin plug & telephone line cord into the base. Power adapter with bigger pin plug is for charger (for multi-handset pack only).
2. Plug the other end of the power adapter & telephone line cord into the wall jack.
3. Always use the telephone line cord provided in the box.
4. Use only the provided power adapter.

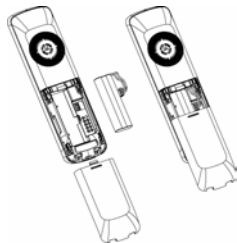Install and charge the handset battery pack



1. Slide out the battery compartment cover.
2. Place the supplied rechargeable battery pack in the battery compartment, with the battery connector plugged in, as shown.
3. Slide the battery compartment cover back.
4. Put the handset on the base to charge for at least 24 hours. When the handset is fully charged the  will indicate that it is fully charged.
5. Use only the rechargeable battery pack provided.

BATTERY LOW WARNING

If the  flashes in the display, you will need to recharge the handset before you can use it again. During charging, the  will scroll in the display.

BATTERY PERFORMANCE

In ideal conditions, a fully charged battery pack should give up to 10 hours talk time or up to 160 hours standby time on a single charge.

Note that new battery packs do not reach full capacity until they have been in normal use for several days.

To keep your battery packs in the best condition, leave the handset off the base for a few hours at a time.


Running the battery packs all the way down at least once a week will help them last as long as possible.

The charge capacity of rechargeable battery packs will reduce with time as they wear out, giving the handset less talk/standby time. Eventually they will need to be replaced.

After charging your handset for the first time, subsequent charging time is about 6-8 hours a day. The battery pack and handset may become warm during charging. This is normal.

2. Getting to know your phone

Overview of your handset

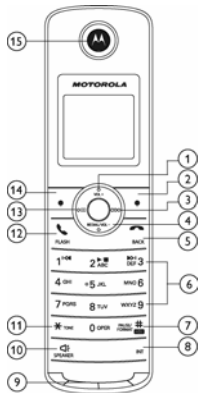

- 1 Scroll up/ Volume up**
 In menu mode: press to scroll up.
 In editing mode: press to move cursor to the left.
 During a call, press to increase volume.
 Calls list/phonebook/redial list entry: press to scroll up the list.
 In answering machine mode: press to increase volume.
- 2 Right soft key (Menu/Select)**
 In idle mode: press to access menu list.
 In menu/editing mode: press to confirm and save the settings.
 During a call: press to hold a call.
 In phonebook/calls list entry: press to access the sub-menu list.
- 3 Right/ Calls list**
 In idle mode/during a call: press to access calls list.
 In editing mode: press to move the cursor to the right.
- 4 Scroll down/ Volume down/ Redial list**
 In idle/pre-dial mode: press to access redial list.
 In menu mode: press to scroll down.
 In editing mode: press to move cursor to the right.
 During a call, press to decrease volume.
 Calls list/phonebook/redial list entry: press to scroll down the list.
 In answering machine mode: press to decrease volume.
- 5 Talk off/ Back**
 In menu/editing mode/phonebook entry: press to exit to previous level.

In pre-dial mode/calls list/redial list entry/answering machine mode: press to exit to idle.

During a call: press to end a call.

6 Alphanumeric keypad

In idle/pre-dial/editing mode/during a call: press to enter characters/numbers. Long press to activate speed dial.

7 #/ Pause/ ABC/ Format

In idle/pre-dial/number editing mode/during a call: Press to insert a "#", press and hold to insert a pause.

In name editing mode: press to toggle ABC/Abc/abc.

In calls list entry: press to toggle Caller ID display format between 7, 8, 10 and 11 digits.

8 Intercom

In idle mode/during a call: press to initiate an intercom call.

9 Microphone

10 Speaker

In idle/menu/pre-dial mode/during a call: press to turn on/off the speakerphone.

Calls List/phonebook/redial list entry: press to make a call with speakerphone.

In answering machine mode: press to toggle the message playback via earpiece/speakerphone.

11 */ Tone

In idle/pre-dial/editing mode: press to insert a ""*"".

During a call: press to switch from pulse to tone dialing

temporarily if pulse mode was selected before. After the call is ended, the dial mode will change back to pulse.

12 Talk on/ Flash

In idle/menu/pre-dial mode: press to make a call.

Calls List/phonebook/redial list entry: press to make a call to the selected entry.

During a call: press to make a flash.

During ringing: press to answer a call.

13 Left/ Phonebook

In idle mode/during a call: press to access the phonebook.

In editing mode: press to move the cursor to the left.

14 Left soft key (Answering machine/Mute/Clear)

In idle mode: press to play the voice prompt of answering machine main menu.

In menu mode: press to exit to previous level.

In pre-dial/editing mode: press to delete one character/digit.

Long press to delete all characters/digits.

During a call: press to mute/unmute the call.

In calls list entry: press to delete the entry.

In phonebook entry: press view entry or add new entry when phonebook is empty.




In answering machine mode: press to delete the current message playback.


15 Earpiece

Handset LCD display





Display icons

-  On when speakerphone is turned on.
-  On when ringer volume is turned off.
-  On when answering machine is turned on. Flashes when new answering machine message is received.

-  On when there is new voice mail not yet listened to. Off when new voice mail has been listened to.

Muted On when a call is muted.


-  Indicates when new call is received. Off when new call has been viewed.

-  Flashes when low battery level is detected, needs charging.


 1/3 battery power level.

 2/3 battery power level.

 Full battery power level.

-  Animation in cycle. Battery is charging.

Overview of the base

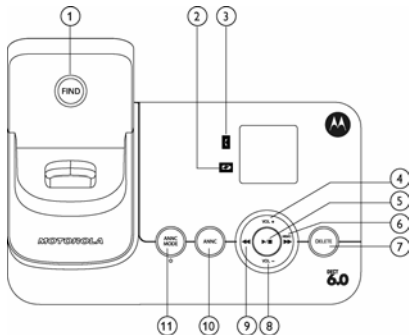

- 1 FIND**
Press to find/page all registered handsets.
- 2 Charging LED - Green**
Steadily ON: When the handset is put into base cradle for charging.

- 3 In Use LED - Red**
Steadily ON: During a call or when an extension phone (another registered handset) or the built-in answering machine is off hook.
Flashing at a rate similar to the incoming ring pattern: During an incoming call.
Flash at a rate of 0.5s on and 0.5s off for 2 minutes: During paging / Registration.
- 4 VOLUME +**
Increase the loudspeaker volume by one level (0 to 8) in idle, during message playback or during call screening.
- 5 PLAY/ STOP**
In message playback mode: Press to playback or stop playing messages.
- 6 SKIP FORWARD/ MEMO**
Press to skip to play the next message.
In Idle: Press and hold to hear a voice prompt for recording a memo and then start to record a memo. Release key to stop recording memo.
- 7 DELETE**
During message playback: Delete the current message.
In Idle: Press and hold to erase all read messages (applicable only when messages in answering machine are all read, new message(s) will not be deleted.)

**8 VOLUME -**

Decrease the loudspeaker volume by one level (0 to 8) in idle, during message playback or during call screening.

9 SKIP BACKWARD

Press twice or press once within 4 seconds, counting from the beginning of date/time stamp, to playback the previous message.

Press once after 4 seconds, counting from the beginning of date/time stamp, to replay current message from the beginning.

10 ANNOUNCE

In Idle: Short press to play the current announcement.

In Idle: Press and hold to hear a voice prompt of how to record the personalized announcement of the current answer mode, release key to stop recording.

11 ANSWER ON/OFF/ ANSWER MODE

Press to toggle answering machine mode between Answer Off, Announce Only and Annc & Record mode.

**2-digit 7-seg
Base display Behavior**

--

Answering machine is OFF.

00

Steadily ON: No voice messages in answering machine.

09

Flash in idle: Indicates the number of answering machine messages and that there is an unread message. (e.g. there are 9 answering machine messages in total. Total number of messages is from 1 to 59.)

Flash during message playing: The selected answering machine message is being played.

Steadily On: All the new messages have been read and there are 9 answering machine messages in total.

F



Flashing: Answering machine memory is full.

LL





Flashing --: Time is not set and there are old voice messages kept in the answering machine memory only (no new voice messages).

- $\equiv \equiv / 09$ Blinking between $\equiv \equiv / 09$: Personalized announcement or memo is being recorded. The numbers (e.g. 09) indicate the total number of messages in answering machine when playing announcement.
- $I n$ Flashing: Indicates an incoming call / recording of an incoming call.
- $R n$ Steadily ON: Represents Announce Only mode.
- $L R$ Flashing: Line Remote access is in progress.
- $L R / 09$ Blinking between $L R / 09$: Remote access is in progress and the numbers (e.g. 09) indicate the total number of messages.
- $L 3$ Steadily ON: Indicates the base speaker volume level is 3. Nine volume levels from L0 to L8 are provided (L0 means ringer off). $L 3$ disappears after 3 seconds.

Paging is a useful way of finding lost handsets.

1. Press  on the base.
- *All handsets ring.*
2. To stop the paging call, press  again, or place the handset on the cradle or press any key on the handset.

Navigating the menus

1. Press .
 2. Press  to scroll through the menu.
 3. Press  to open a sub-menu or validate an option.
- Press  to go back to previous menu level or cancel an action.

If you do not press any button on the handset for 30 seconds the display will automatically return to standby. It will also return to standby when the handset is placed on the base or charger.



Menu map

Main Menu	Date & Time	Phonebook	Setup Handset	Setup Base	Answer Machine	Reset Settings
Sub menu	Set Time Set Date	Add Edit Delete Delete All PB Capacity Speed Dial Copy Phonebook	Ringer Tone Ringer Volume Key Tone Battery Low Tone No Coverage Tone Handset Name Language LCD Contrast Auto Talk Registration	Dial Mode Flash Time Area Code	Answer Mode Announcement Record Memo Message Alert Number of Rings Call Screening Remote Access Remote Code	Clear Voice Mail All Settings

Character map

Uppercase

Key	Character versus key press number							
1	space	1	#	'	,	-	.	&
2	A	B	C	2				
3	D	E	F	3				
4	G	H	I	4				
5	J	K	L	5				
6	M	N	O	6				
7	P	Q	R	S	7			
8	T	U	V	8				
9	W	X	Y	Z	9			
0	0							
*	*	?	!	/	()		@
#	Toggle the letter case - ABC / Abc / abc							




Lowercase

Key	Character versus key press number							
1	space	1	#	'	,	-	.	&
2	a	b	c	2				
3	d	e	f	3				
4	g	h	i	4				
5	j	k	l	5				
6	m	n	o	6				
7	p	q	r	s	7			
8	t	u	v	8				
9	w	x	y	z	9			
0	0							
*	*	?	!	/	()		@
#	Toggle the letter case - ABC / Abc / abc							




3. Using the phone

3.1 Calls



3.1.1 Make a call

1. Press  or .
2. Enter the phone number (maximum 32 digits). If you make a mistake, press  to delete a digit.

3.1.2 Redial

1. Enter the phone number (maximum 32 digits). If you make a mistake, press  to delete a digit.
2. Press  or  to dial the phone number entered.

3.1.3 Dial one touch numbers 1 to 9



1. Press and hold a key from  to  until the number is displayed and dialed.

NOTE

You need to set the one touch number first.



- *If no number is stored, you hear a beep.*

3.1.4 Call from the phonebook

1. Press . The first entry in the phonebook is displayed.
2. Scroll  to the entry you want.

3. Press  or  to dial the number.



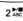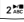

TIPS

Instead of scrolling to browse the phonebook entries, press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing  will show the entries starting with A. Pressing  again will show the entries starting with B, etc.

3.1.5 Call from the calls list





NOTE

You need to subscribe to your network's Caller ID service to be able to see the caller's number in the calls list. See section "5. Caller ID" for more details.



1. Press . The first entry in the calls list is displayed.
2. Scroll  to the entry you want.
3. Press  or  to dial the number.

3.1.6 Call from the redial list

The last five numbers called are saved and can be redialed later.

1. Press . The first entry in the redial list is displayed.
2. Scroll  to the entry you want.
3. Press  or  to dial the number.

3.1.7 Answer a call

1. When the phone rings and flashes in the display, press  or press  to answer the call via the loudspeaker.

WARNING

When the phone is ringing, avoid holding the earpiece too close to your ear as it may damage your hearing. Handsfree activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.


TIPS

If Auto Talk mode is on, simply lift up the handset from its base to answer the call. The default setting is Off.

NOTE



An incoming call has priority over other events. Whenever there is an incoming call, other operations in progress such as phone settings, menu navigation, etc. will be ended.

3.1.8 Adjust volume


1. During a call, press  to adjust the earpiece or loudspeaker volume.
 - *The level is shown in the handset display.*

3.1.9 Mute

Mute the microphone so that you can talk to someone else in the room without your caller hearing you.

1. During a call, press .
 - *The microphone is muted.*
2. Press  again to turn the microphone back on.





3.1.10 End a call

1. During a call, press  or put the handset on the cradle. After you hang up, the duration of your call will display for around 2 seconds.

3.2 Intercom

This feature is only available when there are at least 2 registered handsets. It allows you to make internal calls, transfer external calls from one handset to another and use the conference option.

3.2.1 Call another handset

1. Press .
2. Press  to the handset you want to call.
3. Press  to call the handset.
4. Press  to hang up.

**NOTE**

If the handset is not within the valid operation range, this function may not be available.

3.2.2 Transfer an external call to another handset

1. During an external call, press .
- *Your caller is put on hold.*
2. Press to the handset you want to call.
3. Press to call the handset.
4. When the other handset answers by pressing or , press to transfer the call. If the called handset does not answer, press to talk to your caller again.

3.2.3 Three-party conference call

1. During an external call, press or on the other handset to join the conference call.
2. Press or put the handset to the cradle to hang up.

3.3 Voicemail

Voice Mail Waiting Indication is an indication given to you when a new voice mail message is waiting on the network service provider. This feature is available if you have subscribed to the voicemail service from your network service provider.

3.3.1 Clear voice mail indication

1. Press and to select **Reset Settings**.
2. Press to select **Clear Voice Mail**.
3. Press to select **Yes**.
4. Press to clear voice mail indication.




4. Phonebook

The phonebook memory can store up to 100 names and numbers.

NOTE

Numbers can be up to 24 digits long and names up to 16 characters long. Entries are stored in alphabetical order.

4.1 View an Entry


1. Press .
2. Press  to the entry you want.
3. Press  to view the entry.






NOTE

If the number is more than 16 digits, the phone will display the next page of remaining digits after 2 seconds.

4.2 Add an Entry

1. Press .
2. If the list is empty, Phonebook is Empty will be displayed. Press  to select Add.

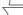
If there are entries in the phonebook, press  to the entry you want. Press  to select Add.



3. Press  and enter the number.
4. Press  and enter the name.
5. Press  and  to select a melody.
6. Press  to save settings.

Entering names

Use the alphanumeric keypad to enter names in the phonebook. For instance to enter the name Paul

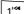
P	Press  once
A	Press  once
U	Press  twice
L	Press  three times

To enter a space, press .










Press  to delete a character or press and hold  to delete all characters.

Enter a pause



If your phone is connected to a switchboard, you may need to enter a pause in a stored number. This gives the switchboard time to get an outside line. A pause is normally stored after the switchboard access code (e.g. 9).

1. When storing a number, press  twice to input a pause and the display will show P. You can then continue storing the phone number.






4.3 Edit an Entry

1. Press .
2. Press  to select the entry you want.
3. Press  and  to select **Edit**.
4. Press  and edit the number.
5. Press  and edit the name.
6. Press  and  to select a melody.
7. Press  to save the entry.






NOTE

Press  to delete a digit/character or press and hold  to delete all digits/characters.





4.4 Delete an Entry

1. Press .
2. Press  to select the entry you want.
3. Press  and  to select **Delete**.
4. Press  to delete the entry.




4.5 Delete all Entries






1. Press .
2. Press  and  to select **Delete All**.
3. Press . **Delete Entire Phonebook?** will be displayed.
4. Press  to delete all the entries.

4.6 View Phonebook Capacity






1. Press .
2. Press  and  to select **PB Capacity**.
3. Press  to view.

4.7 Store a Phonebook Entry as a One Touch Number



1. Press .
2. Press  and  to select **Speed Dial**.

3. Press  and  to select the speed dial key 1 to 9.
4. Press  and  to the entry you want.
5. Press  to save.









4.8 Change the Phonebook Entry in a One Touch Number

1. Follow steps 1 to 3 in “4.7 Store a Phonebook Entry as a One Touch Number”.
2. Press  and the stored number will be displayed.
3. Press  to edit the entry.
4. Press  and  to select the entry you want.
5. Press  to save the entry.

4.9 Delete a One Touch Number

1. Follow steps 1 to 3 in “4.7 Store a Phonebook Entry as a One Touch Number”.
2. Press  and the stored number will be displayed.
3. Press  to delete the stored number.

4.10 Copy Phonebook Entry to Another Handset

1. Press .
2. Press  to select the entry you want.
3. Press  and  to select Copy Phonebook.
4. Press  and  to select another registered handset.
5. Press  to start transferring phonebook entry.
6. Accept Phonebook Entries From Handset X? will be displayed on another handset where X denotes the number of handsets. Press  on another handset to accept.

5. Caller ID

If you have subscribed to Caller ID, and if the identity of the caller is not withheld, the number of the caller will be displayed together with the date and time of the call (if provided by the network).

NOTE

- If the telephone number is not available for incoming calls, the handset will display *Unavailable*.
- If the incoming call is from a withheld telephone number, the handset will display *Private*.
- Information about incoming calls will vary by country and network operator. Some operators may charge a subscription for their Caller ID service.


5.1 Calls List


The calls list contains details of missed and received calls. Details include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.

NOTE


- When the calls list is full, a new call replaces the oldest in the list.
- The received and missed calls log holds details of up to 30 calls.
- If you receive more than one call from the same number, only the most recent call is kept in the calls list. When you have missed calls (incoming calls that you haven't answered) the **NEW** icon will be displayed in the display on all handsets registered to the base. If one handset is used to view the calls log, the icon on the other handsets remains on (For multi-pack use only).

5.1.1 View the calls list

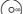1. Press  to enter the calls list.
2. If the list is empty, *Call log is Empty* will be displayed.

If there are entries in the calls list, press  to scroll through the calls list.

NOTE

- When reviewing an entry from the calls list, press  repeatedly to display the number in a different format.



For example, if a caller number is displayed as 888-331-3383, the various formats will be:

331-3383

1-331-3383

888-331-3383

1-888-331-3383

You can choose the desired number format for local and long distance numbers before dialing or saving it into the phonebook.

- The **NEW** icon is removed once the new call has been viewed.

5.1.2 Save a number from the calls list to the phonebook

1. Press to enter the calls list.
2. Press to the entry you want.
3. Press to select **Save to PB**.
4. Press and edit the number.
5. Press and enter the name.
6. Press and to select a melody.
7. Press to save.

5.1.3 Delete a calls list entry

1. Press to enter the calls list.
2. Press to the entry you want.
3. Press to delete the entry.

5.1.4 Delete entire calls list

1. Press to enter the calls list.
2. Press and to select **Delete all**.
3. Press and **Delete All Calls?** will be displayed.
4. Press to confirm and all entries will be deleted.

5.2 Redial

Your phone lets you redial any of the last 5 numbers called. Numbers can be up to 32 digits long.

5.2.1 View the redial list

1. Press to enter the redial list. The last number dialed will be displayed.
2. Scroll through the redial list.



5.2.2 Copy a redial number to the phonebook

1. Press to enter the redial list.
2. Press to select the entry you want.
3. Press to select **Save to PB**.
4. Press and edit the number.
5. Press and enter the name.
6. Press and to select a melody.
7. Press to save.

5.2.3 Delete a redial list entry

1. Press to enter the redial list.
2. Press to select the entry you want.
3. Press to delete the entry.

5.2.4 Delete entire redial list

1. Press to enter the redial list.
2. Press and to select **Delete All**.
3. Press and **Delete All Redial Numbers?** will be displayed.
4. Press to confirm and all entries will be deleted.

6. Personal Settings

6.1 Set Date & Time

Providing you have subscribed to your network's Caller ID service, the date and time is set automatically for all handsets every time a call is received. The date and time is recorded with each answering machine message you receive. If you do not have a Caller ID service you can set the date and time manually.

1. Press to select **Date/Time**.
2. Press and edit the time in 12 hour format. Press to toggle **AM/PM** settings.

TIPS

You can press to move the cursor to toggle the input fields **Hour** and **Minute**.

3. Press and edit the date.

TIPS

You can press to move the cursor to toggle the input fields **Year**, **Month** and **Date**.







4. Press to save the settings.

6.2 Handset Tones








WARNING

When the phone is ringing, avoid holding the earpiece too close to your ear as it may damage your hearing.

6.2.1 Set the ringer tone








1. Press  and  to select **Setup Handset**.
2. Press  to select **Ringer Tone**.
3. Press  and  to select a ringer melody. The current ringer melody is played for around 5 seconds.
4. Press  to save.

6.2.2 Set the ringer volume








1. Press  and  to select **Setup Handset**.
2. Press  and  to select **Ringer Volume**.
3. Press  and  to increase or decrease the volume level. (6 levels are available, including ringer off. The corresponding volume effect will be played while browsing the volume option.)
4. Press  to save.

6.2.3 Key tone on/off








When you press a key on the handset you hear a beep. You can switch these beeps on or off.

1. Press  and  to select **Setup Handset**.
2. Press  and  to select **Key Tone**.
3. Press  and  to turn on/off the key tone.
4. Press  to save.

6.2.4 Battery low tone on/off

1. Press  and  to select **Setup Handset**.
2. Press  and  to select **Battery Low Tone**.
3. Press  and  to turn on/off the battery low tone.
4. Press  to save.

6.2.5 No coverage tone on/off

1. Press  and  to select **Setup Handset**.
2. Press  and  to select **No Coverage Tone**.
3. Press  and  to turn on/off the no coverage tone.
4. Press  to save.



6.3 Handset Name

Personalize your handset with a name or location, for example Peter or Bedroom. Maximum 14 characters.

1. Press and to select Setup Handset.
2. Press and to select Handset Name.
3. Press and enter the handset name. Press to delete a character.
4. Press to save.

6.4 Set the Display Language

You can change the display language. When the menu language is changed, the voice prompt language of answering machine will also be changed accordingly.

1. Press and to select Setup Handset.
2. Press and to select Language.
3. Press and to select the language you want.
4. Press to save.

6.5 Set the LCD Contrast

1. Press and to select Setup Handset.
2. Press and to select LCD Contrast.

3. Press and to increase or decrease the LCD contrast.
4. Press to save.

6.6 Auto Talk On/Off

With auto talk is turned on, you can answer a call just by lifting the handset off the base or charger. If turned off, you will have to press or to answer a call. The default setting is Off.






1. Press and to select Setup Handset.
2. Press and to select Auto Talk.
3. Press and to turn on/off auto talk.
4. Press to save.

6.7 Registration

Up to 5 handsets can be registered to one base. The original handset is pre-registered to use. Additional handsets must be registered to the base before you can use them.

To register an additional handset,







1. Press and to select Setup Handset.
2. Press and to select Registration.

3. Press  and  to select Yes or No.
4. Select Yes and press  to enter the registration procedure as below:
 1. Place the unregistered cordless handset on the charger.
 2. Press and hold  for 4 seconds on base.
 3. Release  once IN USE LED is flashing.
 4. A confirmation tone is generated if registration is successful. Handset X is displayed where X denotes the number of handsets and the phone goes back to idle.


7. Advanced Base Settings

7.1 Set the Dial Mode

The default dialing mode is suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.



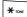

1. Press  and  to select Setup Base.
2. Press  to select Dial Mode.
3. Press  and  to select Tone or Pulse.
4. Press  to save.




NOTE

If pulse mode is selected, press  to switch from pulse to tone dialing temporarily when dialing out. After the call is ended, the dial mode will change back to pulse.








7.2 Set the Flash Time

The default flash time is 600ms. It is unlikely that you should need to change this setting unless advised to do so.

1. Press  and  to select Setup Base.
2. Press  and  to select Flash Time.







3. Press  and  to the flash time you want. (8 options are available: 90, 100, 110, 250, 300, 400, 600 and 700ms)
4. Press  to save.

7.3 Set the Area Code

1. Press  and  to select **Setup Base**.
2. Press  and  to select **Area Code**.
3. Press  and enter the area code (3-digit only). Press  to delete a digit.
4. Press  to save.

7.4 Reset All Settings

All personalized settings will be reset to default. Phonebook entries, calls list and redial list will remain unchanged.



1. Press  and  to select **Reset Settings**.
2. Press  and  to select **All Settings**.
3. Press  to select **Yes**.
4. Press  to reset all settings to default.

8. Using your Answering Machine

The answering machine records unanswered calls when it is activated. It can store up to 59 messages within the maximum recording time of 15 minutes (including the pre-recorded voice menu and outgoing announcements). Each message can be up to 4 minutes long. Your personal outgoing announcements can be up to 1.5 minutes long.

8.1 Play Messages

Through the base:

1. Press .
2. The new messages are played from the loudspeaker on the base in the sequence they are recorded.
3. Press  to increase or decrease the volume during message playback respectively.
4. During message playback, press the keys below to perform the following functions:



Press to stop playing messages or resume playback.



Press once to replay current message from the beginning. Press twice to playback the previous message.



Skip to play the next message.



Delete the current message.



Increase the loudspeaker volume by one level (0 to 8).





Decrease the loudspeaker volume by one level (0 to 8).

NOTE

Ringer will be off when the volume is decreased to level 0.

Through the handset:

1. Press  from idle mode. Voice prompts of the menu list options will play.
2. Press  to play the messages.

3. During message playback, press the keys below to perform the following functions:



Skip to repeat the current message from the beginning. Press twice to playback the previous message.



Stop the current message playback.



Skip to play the next message.



Increase the volume



Decrease the volume.



Delete the current message and the next message will be played.



Exit to idle.



8.2 Delete All Messages

1. Press and hold on base to erase all read messages (applicable only when messages in answering machine are all read, new message(s) will not be deleted.)

NOTE

When answering machine is full, will flash if there are new messages which have not been heard. **Erase Some Answerer Msg** will toggle within 2 seconds with **Memory Full** in idle to alert user to delete some answering machine messages to free up the memory.

8.3 Announcement

This is the message your callers hear on the answering machine. There are two pre-recorded outgoing messages, or you can record your own.

8.3.1 Record the announcement

1. Press and to select **Answer Machine**.
2. Press and to select **Announcement**.
3. Press to select **Record**.
4. Press and to select the answer mode **Answer & Record** or **Announce Only**.

5. Press to start recording after a "beep" sound is heard.
6. Press again to stop recording and save the message. The just saved message is played automatically.

You can also record the announcement by pressing and holding key on base to start recording after a voice prompt and beep sound is heard. Release the key to stop recording and save message.



NOTE

When playing the message, pressing will delete it and the predefined message will be played automatically.

8.3.2 Play the announcement






1. Press and to select **Answer Machine**.
2. Press and to select **Announcement**.
3. Press and to select **Play**.
4. Press and to select the answer mode **Answer & Record** or **Announce Only**.
5. Press and the message will be played.

NOTE

- When playing the message, press  to stop playing.
- When playing the message, pressing  will delete it and the predefined message is played automatically.


8.4 Answering Machine Settings

8.4.1 Set the answer mode

1. Press  and  to select Answer Machine.
2. Press  to select Answer Mode.
3. Press  and  to the answer mode you want. (3 options are available: Answer Off, Annc & Record and Announce Only)








NOTE

Annc & Record invites your callers to leave a message. Announce Only lets callers hear your announcement but they cannot leave a message.







4. Press  to save.

8.4.2 Message alert on/off

If the message alert is turned on, the base will give a short alert beep at the speaker volume set, when there is a new message recorded on the answering machine.

1. Press  and  to select Answer Machine.
2. Press  and  to select Message Alert.
3. Press  and  to turn on/off the message alert.
4. Press  to save.

8.4.3 Set the number of rings

1. Press  and  to select Answer Machine.
2. Press  and  to select Number of Rings.
3. Press  and  to select the number of rings. (4 options are available: Toll Saver, 2 Rings, 4 Rings and 6 Rings)






NOTE

If Toll Saver setting is selected, the answering machine will pick up after two rings if there are new messages, and after four rings if there are no messages.

4. Press  to save.

8.4.4 Record a memo

You can record a memo which is stored on your answering machine and played back like a normal message.

1. Press  and  to select Answer Machine.
2. Press  and  to select Record Memo.
3. Press  to start recording.



4. Press again to stop recording and save the message. The just saved message is played automatically.

You can also record memo by pressing and holding on base to start recording after a voice prompt and beep sound is heard. Release the key to stop recording and save the message.

NOTE

When playing the message, pressing will delete it.

8.4.5 Call screening on/off

Use your handset or base speaker to hear a caller leaving a message. You can then choose to ignore the caller or pick up the call.

Handset screening

1. When the answering machine is recording, the cordless handset displays **Screening?**.
2. Press to listen to the caller through the handset earpiece, the handset displays **Screening**.
3. Press to listen via the handset loudspeaker.

4. Press to stop screening and leave the answering machine to record the message.
5. Press and to talk to the caller and stop recording.

Base screening

The caller is automatically heard through the base speaker at the volume set, but this can be turned off if you want, as follows:

1. Press and to select **Answer Machine**.
2. Press and to select **Call Screening**.
3. Press and to turn on/off call screening.
4. Press to save.

8.4.6 Remote access

Remote access allows you to operate your answering machine and listen to your messages by calling your phone from another phone.

1. Press and to select **Answer Machine**.
2. Press and to select **Remote Access**.
3. Press and to turn on/off remote access.
4. Press to save.



The correct sequence of 3 security PIN digits needs to be detected within 5 seconds before entering remote access mode. Random digits detected prior to the correct 3 digits sequence are ignored, and answering machine recording continues until the complete PIN is detected. There is no system prompt to enter the remote access code.

Press the following keys on your handset to carry out your desired function after entering remote access mode.

Press...	To...
1	Repeat message
2	Play/Stop message
3	Skip forward to the next message
4	Toggle Answer Off/Announce Only/ Announce and Record modes
7	Listen to the Main Menu (for Full Voice prompts only)
0	Delete message

8.4.7 Set the remote code

This is used to change the remote access PIN if necessary.

1. Press and to select **Answer Machine**.
2. Press and to select **Remote Code**.
3. Press and enter the 3-digit remote code.
4. Press to save.




9. Default Settings

Items	Default values
Date & Time	Year: 2009 Date: 01/01 Time: 12:00 AM
Ringer tone	Melody 1
Ringer volume	Level 3
Key tone	On
Battery low tone	On
No coverage tone	On
Handset name	Handset
Language	English
LCD contrast	Level 3
Auto talk	Off
Dial mode	Tone
Flash time	600ms
Answer mode	Annc & Record
Message alert	Off
Number of rings	6 Rings
Remote access	On

10. Help

Charging

The  is not scrolling when the handset is placed on the base

- Bad battery contact - move the handset slightly.
- Dirty contact - Clean the battery contact with a cloth moistened with alcohol.
- Battery is full - no need to charge.

Calls

No dial tone

- No base power - check the connections. Reset the phone: unplug and plug back in the electrical outlet.
- Handset batteries are empty - charge the battery pack for at least 24 hours.
- Handset may be too far from the base - move closer to the base.
- Wrong telephone line cord - use the telephone line cord provided.

Poor audio quality

The base is too close to electrical appliances, reinforced concrete walls or metal doorframes - move the base away from any electrical appliances.

No ring tone

- The ring tone is deactivated.
- Increase the volume.

Caller ID service does not work

Check your subscription with your network operator.

Phonebook

A phonebook entry cannot be stored

The phonebook is full. Delete an entry to free memory.

Display

No display

- Try recharging or replacing the battery pack.
- Reset the telephone base. Unplug the unit's electrical power, then plug it back in.
- If LED is not lit up, then try to unplug the unit's electrical power, then plug it back in.

Registration

When the handset lost its link with the base during a call

- Check the power cord is connected properly into the base.
- Check the power adapter is connected properly into an electrical outlet.
- Move the handset closer to the base.
- Reset the base by unplugging the unit's electrical power. Wait for around 15 seconds and plug it back in again. Allow up to one minute for the handset and the base to synchronize.

Interference

Noise interference on your radio or television

Your base or charger may be too close. Move it as far away as possible.

Answering machine

Answering machine does not record messages

- Switch the answering machine on.



- The memory may be full. If so, you will need to delete some messages.
- Answer mode may be set to **Announce Only**.
- Change the mode to **Annc & Record**.

Cannot access messages remotely

- If wrong remote code is entered a beep is played. You can enter the remote code once again.

Cannot record outgoing message

- The memory may be full. If so, you will need to delete some messages.

Answering machine stops automatically

- The memory may be full. If so, you will need to delete some messages.
- The maximum message length is 4 minutes.

11. General Information

If your product is not working properly....

1. Read this User's Guide or the Quick Start Guide.
2. Visit our website:
www.motorola.com
3. Contact Customer Service in the US and Canada at 1-888-331-3383.

To order a replacement battery, contact customer service or visit our website.

Important safety instructions

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

1. Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
2. Do not use while wet or while standing in water.
3. Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
4. Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
5. Never insert objects of any kind into the product slits as that may result in fire or shock.
6. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
7. Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this user's guide.

8. Do not overload wall outlets and extension cords.
9. Avoid using during an electrical storm. Use a surge protector to protect the equipment.
10. Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

CAUTION

To reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified Telecommunication Line Cord.

Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled into the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.



Installation Guidelines

1. Read and understand all instructions and save them for future reference.
2. Follow all warnings and instructions marked on the product.
3. Do not install this product near a bath tub, sink, or shower.
4. Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
5. Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
6. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
7. Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
8. Use only the power supply that came with this unit. Using other power supplies may damage the unit.
9. Because this phone operates on electricity, you should have at least one phone in your home that could operate without electricity in case the power in your home goes out.
10. To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

CAUTION

To maintain compliance with the FCC's RF exposure guidelines, place the base unit at least 20 cm from nearby persons.

Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

CAUTION

There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the battery pack that came with your phone or an authorized replacement recommended by the manufacturer.

- Keep battery packs out of the reach of children.
- Remove battery packs if storing over 30 days.
- Do not dispose of battery packs in fire, which could result in explosion.
- The rechargeable battery packs that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

SAVE THESE INSTRUCTIONS

Consumer Products and Accessories purchased in the United States or Canada

What Does this Warranty Cover?

Subject to the exclusions and limitations contained below, Binatone Electronics International LTD. warrants the Motorola branded consumer products that it manufactures ("Products") and the Motorola branded or certified accessories sold for use with these Products that it manufactures ("Accessories") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and only applies as follows to new Motorola branded Products and Accessories manufactured by Binatone Electronics International LTD., and purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Who is covered?

This warranty covers only the first consumer purchaser, and is not transferable.

What will BINATONE ELECTRONICS INTERNATIONAL LTD. do?

BINATONE ELECTRONICS INTERNATIONAL LTD., at its sole option, will at no charge repair, replace or refund the purchase price of any Products or Accessories that does not conform to this warranty. Binatone Electronics International LTD. may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts in such repair or replacement and any Products, Accessories or parts removed or being replaced under this warranty become the property of Binatone Electronics International LTD.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES OR CONDITIONS IRRESPECTIVE OF WHETHER THEY ARE IMPOSED BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF

THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL WARRANTIES AND MOTOROLA AND BINATONE ELECTRONICS INTERNATIONAL LTD. MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE ELECTRONICS INTERNATIONAL LTD. BE LIABLE, WHETHER UNDER THIS LIMITED WARRANTY OR IN CONTRACT OR TORT (INCLUDING NEGLIGENCE OR STRICT PRODUCT LIABILITY) OR OTHERWISE FOR DAMAGES OR CLAIMS IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE, SAVINGS OR PROFITS, LOSS OF BUSINESS, LOSS OF PROGRAMS DATA INFORMATION (WHETHER CONFIDENTIAL PROPRIETARY OR PERSONAL IN NATURE OR OTHERWISE) OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES AND BINATONE ELECTRONICS INTERNATIONAL LTD. SHALL UNDER NO CIRCUMSTANCES BE LIABLE FOR ANY CLAIMS OR DEMANDS MADE BY ANY THIRD PARTY OR MADE BY



YOU ON BEHALF OF ANY THIRD PARTY TO THE FULL EXTENT THESE DAMAGES OR CLAIMS MAY BE DISCLAIMED BY LAW.

Some states, countries or jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you in such states, countries or jurisdictions. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one country/jurisdiction to another.

Products or Accessories Covered	Length of Coverage
Consumer Products	One (1) year from the date of purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of purchase by the first consumer purchaser of the accessory.

Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.
---	---

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty. Battery life and the changes in battery capacity with time or use are excluded from this warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper or unreasonable use, operation, storage, misuse or abuse, accident or neglect or other external cause, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) your failure to follow or operation outside the usage parameters stated in the user instructions that came with the Products or Accessories; (c)



contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (d) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (e) other acts or omissions which are not the fault or neglect of Motorola or Binatone Electronics International LTD., are excluded from coverage.

Use of Non-Motorola branded Products and

Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, Binatone Electronics International LTD. or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of

tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

US and Canada: 1-888-331-3383

You will receive instructions on how to ship the Products or Accessories, the shipment of which shall be at your own risk and expense, to a BINATONE ELECTRONICS INTERNATIONAL LTD. Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase of the Products or Accessories showing the date of purchase; (b) a written description of the problem; and, most importantly; (c) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE ELECTRONICS INTERNATIONAL LTD. regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE ELECTRONICS INTERNATIONAL LTD. or representations made by any agent employee or staff of BINATONE ELECTRONICS INTERNATIONAL LTD., that may have been made in connection with the said purchase.

FCC, ACTA and IC regulations

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The corded base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian ICES-003.

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US: AAAEQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with

applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.



If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

- Remain on the line and briefly explain the reason for the call before hanging up.
- Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 0.0. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any

combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This product meets the applicable Industry Canada technical specifications.

RENSEIGNEMENTS RELATIFS AUX RÈGLEMENTS DE LA COMMISSION FÉDÉRALE DES COMMUNICATIONS 'FCC', DU CONSEIL ADMINISTRATIF DES UNITÉS DE CONNEXION 'ACTA' ET D'INDUSTRIE Canada 'IC'

Article 15 des règlements du FCC

Cet appareil a été testé et s'avère conforme aux restrictions relatives aux équipements numériques de classe B, d'après l'article 15 des règlements de la FCC. Ces restrictions ont été instaurées pour offrir une protection raisonnable contre les interférences nuisibles au sein d'une installation résidentielle. Cet appareil génère, utilise et peut émettre des fréquences radio et s'il n'est pas installé selon les instructions, peut nuire aux radiocommunications. Toutefois, rien ne garantit que des parasites ne surviendront pas dans

une installation particulière. Si cet appareil cause des interférences nuisibles à la réception du téléviseur ou de la radio, ce que vous pouvez déterminer en mettant votre appareil en et hors fonction, nous vous invitons à essayer l'une des mesures correctives suivantes :

- Réorientez l'antenne de réception.
- Éloignez l'appareil du composant qui reçoit les ondes.
- Branchez l'appareil dans une prise de courant CA différente de celle du composant qui reçoit les ondes.
- Au besoin, consultez votre marchand électronique ou un technicien spécialisé dans le service des radios/ téléviseurs pour des suggestions supplémentaires.

Toute modification ou changement effectué à cet appareil sans l'accord des parties responsables de l'homologation peut retirer à l'utilisateur son droit d'utiliser l'appareil.

Cet appareil est conforme à l'article 15 de la FCC. Le fonctionnement est soumis aux deux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences nuisibles et; (2) Il doit pouvoir supporter les parasites qu'il reçoit, incluant les parasites pouvant nuire à son fonctionnement. La confidentialité des communications peut ne pas être assurée avec ce téléphone.

Afin de garantir la sécurité des utilisateurs, la FCC a établi les critères relatifs à l'énergie générée par les fréquences radio pouvant être absorbée en toute sécurité par un utilisateur ou par quelqu'un se trouvant à proximité, dépendamment de l'utilisation prévue du produit. Ce produit a été testé et s'avère conforme aux normes de la FCC. Le combiné produit si peu de puissance qu'il n'a pas besoin d'être testé. Il peut être déposé contre l'oreille de l'utilisateur en toute sécurité. Il peut être appuyé en toute sécurité sur l'oreille de l'utilisateur. Le socle doit être installé et utilisé de façon à ce qu'une distance d'environ 20 cm (8 po.) ou plus soit conservée entre celui-ci et les parties du corps de l'utilisateur, à l'exception des mains.

Cet appareil numérique de classe B est conforme aux normes canadiennes ICES-003.

Article 68 de la FCC et exigences de l'ACTA

Cet appareil est conforme à l'article 68 de la réglementation de la Commission fédérale des communications 'FCC' aux États-Unis et aux exigences adoptées par le Conseil d'administration du matériel terminal 'ACTA'. Vous trouverez, sous l'appareil, une étiquette qui contient, entre autres renseignements, une

plaque signalétique dans le format 'US: AAAEQ##TXXXX'. Si on vous le demande, vous devez fournir ce numéro à la compagnie de téléphone. Cette homologation doit vous être fournie par votre compagnie de téléphone locale, sur demande.

La fiche et la prise utilisées pour brancher cet appareil au filage du bâtiment et au réseau téléphonique doivent être conformes avec les règlements de l'article 68 et les exigences techniques adoptées par l'ACTA. Un cordon téléphonique et une fiche modulaire conformes sont fournis avec cet appareil. Celui-ci a été conçu pour être raccordé à une prise modulaire compatible qui est également conforme. Une prise RJ11 doit être utilisée pour le raccord à une ligne simple et une prise RJ14, pour le raccord à deux lignes. Consultez les instructions d'installation du guide d'utilisation.

Le numéro 'REN' sert à déterminer combien de dispositifs téléphoniques peuvent être raccordés à votre ligne téléphonique sans perdre leur capacité de sonner lorsqu'on vous appelle. Le numéro 'REN' de cet appareil est encodé entre le 6e et le 7e caractère après "US:" dans l'identification de l'appareil (par exemple, si les numéros sont 03, le REN sera 3.0). Dans la plupart, mais pas toutes les régions, la

somme de tous les numéros 'REN' devrait être de cinq (5.0) ou moins. Pour plus de détails à ce sujet, nous vous suggérons de communiquer avec votre compagnie de téléphone locale.

Cet appareil ne peut pas être utilisé conjointement avec des lignes partagées. Si vous avez des composants de systèmes d'alarme connectés sur votre ligne téléphonique, assurez-vous que le raccord de cet appareil ne désactive pas votre système d'alarme. Si vous avez des questions se rapportant à ce qui peut désactiver votre système d'alarme, consultez votre compagnie de téléphone ou un installateur qualifié.

Si l'appareil s'avérait défectueux, il doit être immédiatement débranché de la prise modulaire jusqu'à ce que le problème soit corrigé. Cet appareil ne doit être réparé que par son fabricant ou l'un des centres de service autorisés par celui-ci. Pour plus de détails sur les procédures de service, suivez les instructions décrites dans la Garantie limitée.

Si cet appareil nuit au réseau téléphonique, la compagnie de téléphone peut décider d'arrêter temporairement votre service téléphonique. Elle est tenue de vous avertir avant

d'interrompre le service; si elle ne peut pas vous avertir d'avance, elle le fera dès qu'elle le pourra. On vous donnera l'opportunité de rectifier le problème et la compagnie doit vous informer de votre droit de porter plainte à la FCC. Votre compagnie de téléphone peut apporter des modifications à ses installations, ses équipements et ses procédures pouvant altérer le fonctionnement normal de votre appareil. Par contre, elle est tenue de vous avertir lorsque de tels changements sont prévus.

Si cet appareil est doté d'un combiné avec ou sans cordon, celui-ci est compatible avec les appareils auditifs pour malentendants.

Si cet appareil possède des adresses mémoire, vous pouvez y entrer les numéros de téléphone des services d'urgence de votre municipalité (police, incendie et services médicaux). Si vous entrez et testez des numéros d'urgence, veuillez procéder comme suit:

- Demeurez en ligne et expliquez brièvement la raison de votre appel avant de raccrocher.
- Procédez à ceci hors des heures de pointe, tel que tôt le matin ou tard en soirée.

Industrie Canada

Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences nuisibles et; (2) Il doit pouvoir supporter les parasites qu'il reçoit, incluant les parasites pouvant nuire à son fonctionnement.

L'abréviation 'IC' se trouvant avant cette homologation signifie que la certification fut effectuée selon une déclaration de conformité spécifiant que les normes d'Industrie Canada ont été rencontrées.

Le numéro d'équivalence de sonnerie 'REN' assigné à cet appareil est 0.0. Ce numéro attribué à chaque appareil détermine le nombre de dispositifs téléphoniques que l'on peut brancher dans le circuit téléphonique de la maison sans surcharger le système. Le circuit téléphonique peut comporter n'importe quelle combinaison de dispositifs téléphoniques, à la seule condition que la somme du numéro 'REN' n'excède pas cinq.

Cet appareil est conforme aux spécifications techniques d'Industrie Canada.

Technical Specifications

RF frequency band	1921.536 MHz — 1928.448 MHz
Channels	5
Operating temperature	5°C to 45°C
Telephone base voltage (AV voltage, 60Hz)	96 — 130 Vms
Telephone base voltage (Adapter output)	6V DC, 600mA
Handset voltage	2.4V 500mAh Ni-MH battery pack
Charge voltage (Adapter output)	6V AC, 300mA



MOTOROLA



MOTOROLA

Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, and other Motorola trademarks and trade dress are owned by Motorola, Inc. and are used under license from Motorola, Inc. MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2009. All rights reserved.



Version 1.0

Printed in China

